



2012 Softail Models Service Manual

©2011 H-D.
ALL RIGHTS RESERVED
99482-12A

Printed in the U.S.A.

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-4
Safe Operating Maintenance.....	1-4
Shop Practices.....	1-4
Repair Notes.....	1-4
Safety.....	1-4
Removing Parts.....	1-4
Cleaning.....	1-4
Disassembly and Assembly	1-5
Checking Torques on Fasteners.....	1-5
Magnetic Parts Trays	1-5
Repair and Replacement Procedures	1-5
Hardware and Threaded Parts.....	1-5
Threadlocking Agents.....	1-5
Wiring, Hoses and Lines.....	1-5
Instruments and Gauges.....	1-5
Bearings.....	1-5
Bushings.....	1-5
Gaskets	1-5
Lip-Type Seals.....	1-5
O-Rings	1-6
Gears.....	1-6
Shafts	1-6
Part Replacement.....	1-6
Exhaust System Leakage.....	1-6
Cleaning.....	1-6
Part Protection.....	1-6
Cleaning Process.....	1-6
Rust or Corrosion Removal.....	1-6
Bearings.....	1-6
Tool Safety	1-6
Air Tools.....	1-6
Wrenches.....	1-6
Pliers/Cutters/Pry Bars	1-6
Hammers.....	1-7
Punches/Chisels.....	1-7
Screwdrivers.....	1-7
Ratchets and Handles.....	1-7
Sockets.....	1-7
Storage Units.....	1-7

1.3 FUEL AND OIL

Fuel.....	1-8
Gasoline Blends.....	1-8
Engine Lubrication.....	1-8
Winter Lubrication.....	1-9

1.4 BULB REQUIREMENTS

General.....1-10

1.5 MAINTENANCE SCHEDULE

General.....1-11

1.6 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-15
Type of Oil.....	1-15
Checking Oil Level	1-15
Changing Oil and Filter.....	1-15

1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-17
Cleaning and Inspection.....	1-17
Installation.....	1-18
Exhaust System Leak Check.....	1-19

1.8 TIRES AND WHEELS

General.....	1-20
Tires.....	1-20
Tire Replacement.....	1-21
Inspection.....	1-21
When To Replace Tires.....	1-21
Wheel Bearings.....	1-21
Wheel Spokes.....	1-21
Identify Wheel Spoke Groups.....	1-21
Wheel Spoke Adjustment.....	1-22

1.9 PRIMARY CHAINCASE LUBRICANT

General.....	1-23
Changing Primary Chaincase Lubricant.....	1-23

1.10 TRANSMISSION LUBRICANT

Checking Transmission Lubricant.....	1-25
Changing Transmission Lubricant.....	1-25

1.11 CLUTCH

Adjustment.....	1-27
-----------------	------

1.12 DRIVE BELT AND SPROCKETS

General.....	1-29
Cleaning.....	1-29
Inspection	1-29
Sprockets.....	1-29
Drive Belt.....	1-29
Checking Belt Deflection.....	1-30
Adjusting Belt Deflection	1-31

1.13 THROTTLE CABLES

Cable Inspection, Lubrication and Adjustment	1-33
Inspection and Lubrication.....	1-33
Adjustment.....	1-33

1.14 CABLE AND CHASSIS LUBRICATION

General.....	1-35
Cables and Hand Levers.....	1-35
Jiffy Stand.....	1-35
Steering Head Bearings.....	1-35

1.15 BRAKES

Fluid Inspection.....	1-36
Rear Brake Pedal.....	1-36
Pedal Height.....	1-36
Pedal Lubrication.....	1-36
Pedal Pad.....	1-36

1.16 BRAKE PADS AND DISCS

Inspection.....	1-37
Brake Pads.....	1-37
Brake Disc.....	1-37
Brake Pad Replacement.....	1-37
Rear Brake Caliper.....	1-37
Front Brake Caliper.....	1-39

1.17 SPARK PLUGS

Removal.....	1-41
--------------	------

TABLE OF CONTENTS

Inspection.....	1-41	Low Oil Pressure.....	1-60
Cleaning.....	1-41	High Oil Pressure.....	1-60
Installation.....	1-41	Electrical System.....	1-60
Spark Plug Cable Inspection.....	1-42	Alternator Does Not Charge.....	1-60
1.18 STEERING HEAD BEARINGS		Alternator Charge Rate Is Below Normal.....	1-60
Adjustment: FLSTC, FLSTF/B, FLSTN, FLS.....	1-43	Speedometer Operates Erratically.....	1-60
Bearing Adjustment (Fall-away).....	1-43	Transmission.....	1-60
Adjustment: FXST, FXS.....	1-44	Shifts Hard.....	1-60
Bearing Adjustment (Fall-away).....	1-44	Jumps Out Of Gear.....	1-60
Lubrication.....	1-46	Clutch Slips.....	1-60
1.19 CRITICAL FASTENERS		Clutch Drags Or Does Not Release.....	1-60
Inspection.....	1-48	Clutch Chatters.....	1-60
Checking Torques on Fasteners.....	1-48	Handling.....	1-60
1.20 BATTERY MAINTENANCE		Irregularities.....	1-60
General	1-49	Brakes.....	1-60
Cleaning and Inspection.....	1-50	Brake Does Not Hold Normally.....	1-60
Voltmeter Test.....	1-50		
Voltmeter Test.....	1-50	CHASSIS	
Charging Battery.....	1-50		
Safety Precautions.....	1-50	2.1 FASTENER TORQUE VALUES	
Using a Battery Charger.....	1-50	Fastener Torque Values in this Chapter.....	2-1
Disconnection and Removal	1-51		
Storage.....	1-51	2.2 SPECIFICATIONS	
Installation and Connection.....	1-52	Specifications.....	2-4
1.21 HEADLAMP ALIGNMENT		Chassis Specifications.....	2-4
Headlamp Alignment.....	1-54	Tire Specifications.....	2-5
Headlamp Adjustment.....	1-54		
1.22 SUSPENSION ADJUSTMENTS		2.3 VEHICLE IDENTIFICATION NUMBER (V.I.N.)	
Shock Absorbers.....	1-55	Vehicle Identification Number.....	2-8
Calculate Number of Turns.....	1-55		
Adjustment.....	1-55	2.4 FRONT WHEEL	
1.23 STORAGE		Removal.....	2-10
General.....	1-56	Disassembly	2-10
Placing in Storage.....	1-56	Disc Wheel.....	2-10
Removal from Storage.....	1-56	Laced Whee1.....	2-10
1.24 TROUBLESHOOTING		Cleaning and Inspection.....	2-12
General.....	1-58	Assembly.....	2-12
Engine.....	1-58	Disc Wheel.....	2-12
Starter Motor Does Not Operate or Does Not Turn Engine Over	1-58	Laced Wheel.....	2-13
Engine Turns Over But Does Not Start	1-58	Installation.....	2-13
Starts Hard.....	1-58		
Starts But Runs Irregularly or Misses	1-58	2.5 REAR WHEEL	
A Spark Plug Fouls Repeatedly.....	1-59	Removal	2-14
Pre-Ignition or Detonation (Knocks or Pings).....	1-59	Disassembly	2-15
Overheating.....	1-59	Cleaning and Inspection.....	2-15
Valve Train Noise.....	1-59	Assembly.....	2-15
Excessive Vibration.....	1-59	Installation.....	2-16
Check Engine Light Illuminates During Operation.....	1-59		
Lubrication System	1-59	2.6 WHEEL LACING	
Oil Does Not Return To Oil Tank.....	1-59	Wheel Lacing: Angle Flange Hub.....	2-17
Engine Uses Too Much Oil Or Smokes Excessively..	1-59		
Engine Leaks Oil From Cases, Push Rods, Hoses, Etc.....	1-59	2.7 CHECKING AND TRUING WHEELS	
		General.....	2-19
		Checking Wheel Runout.....	2-19
		Checking Lateral Runout.....	2-19
		Checking Radial Runout.....	2-19
		Laced Wheel Rim Offset.....	2-20
		Truing Laced Wheels.....	2-22
		Radial Runout.....	2-22

TABLE OF CONTENTS

Lateral Runout.....	2-22
2.8 SEALED WHEEL BEARINGS	
Inspection.....	2-24
Removal.....	2-24
Installation.....	2-26
2.9 TIRES	
General.....	2-28
Removal.....	2-28
Cleaning, Inspection and Repair.....	2-28
Installation.....	2-29
Tube Type Tires.....	2-29
Tubeless Tires: Cast Wheels.....	2-29
Tubeless Tires: Laced Wheels.....	2-30
Checking Tire Runout.....	2-31
Lateral Runout.....	2-31
Radial Runout.....	2-31
Wheel Balancing.....	2-31
Static vs Dynamic.....	2-31
Weights.....	2-31
2.10 VEHICLE ALIGNMENT	
Axle Alignment.....	2-33
Checking Axle Alignment.....	2-33
Adjusting Axle Alignment.....	2-34
2.11 FRONT BRAKE MASTER CYLINDER	
General.....	2-35
Removal and Disassembly.....	2-35
Cleaning and Inspection.....	2-37
Assembly and Installation.....	2-37
2.12 FRONT BRAKE CALIPER	
Removal.....	2-39
Disassembly	2-39
Cleaning, Inspection and Repair.....	2-41
Assembly.....	2-42
Installation.....	2-43
2.13 REAR BRAKE MASTER CYLINDER	
General.....	2-44
Removal.....	2-44
Disassembly	2-44
Cleaning and Inspection.....	2-45
Assembly.....	2-45
Installation.....	2-46
2.14 REAR BRAKE CALIPER	
Removal.....	2-50
Disassembly	2-50
Cleaning, Inspection and Repair.....	2-52
Assembly.....	2-52
Rear Brake Line Routing.....	2-53
Installation.....	2-53
2.15 BLEEDING BRAKES	
General.....	2-55
Procedure.....	2-55
2.16 FRONT FORK: TELESCOPIC	
General.....	2-57
Replacing Fork Oil.....	2-57
Removal.....	2-58
Disassembly.....	2-58
Cleaning and Inspection.....	2-58
Assembly.....	2-62
Installation.....	2-62
2.17 STEERING HEAD	
Removal.....	2-63
FLSTC, FLSTF/B, FLSTN, FLS Models.....	2-63
FXST Model.....	2-63
FXS Model.....	2-63
Inspection.....	2-64
All Models.....	2-64
Disassembly.....	2-64
Removing Lower Bearings From Fork Stem.....	2-64
Steering Head Bearing Race Removal.....	2-64
Assembly.....	2-65
Installation.....	2-65
FLSTC, FLSTF/B, FLSTN, FLS Models.....	2-65
FXST Models.....	2-65
FXS Models.....	2-66
2.18 BELT GUARD AND DEBRIS DEFLECTOR	
Removal.....	2-67
Belt Guard.....	2-67
Debris Deflector.....	2-67
Installation.....	2-67
Belt Guard.....	2-67
Debris Deflector.....	2-67
2.19 REAR SHOCK ABSORBERS	
General.....	2-68
Removal.....	2-68
Installation.....	2-68
Shock Disposal.....	2-69
2.20 REAR FORK	
Removal.....	2-71
Cleaning and Inspection	2-72
Pivot Bearing Replacement.....	2-72
Installation.....	2-73
2.21 THROTTLE CONTROL	
Removal/Disassembly.....	2-74
Cleaning and Inspection.....	2-74
Assembly/Installation.....	2-74
2.22 CLUTCH CONTROL	
Removal.....	2-76
Installation.....	2-76
2.23 HANDLEBARS: FLSTC, FLSTN, FLS, FXST	
Removal.....	2-78
Installation.....	2-79

TABLE OF CONTENTS

2.24 HANDLEBARS: FLSTF/B		2.35 FORK LOCK	
Removal.....	2-80	Removal.....	2-103
Installation.....	2-81	Installation.....	2-103
2.25 HANDLEBARS: FXS		2.36 SEAT AND STRAP RETENTION NUT	
Removal.....	2-84	Replacement.....	2-104
Installation.....	2-84		
2.26 FRONT FENDER		2.37 SEAT: FLS, FXS, FXST	
Removal.....	2-86	Replacement.....	2-105
Installation.....	2-86	Removal.....	2-105
		Installation.....	2-105
2.27 REAR FENDER: FLSTC		2.38 SEAT: FLSTN, FLSTF, FLSTFB, FLSTC	
Removal.....	2-87	Removal and Installation.....	2-106
Installation.....	2-87		
2.28 REAR FENDER: FLSTF/B		2.39 LUGGAGE RACK: FLSTN	
Removal.....	2-89	Removal and Installation.....	2-107
Installation.....	2-89		
2.29 REAR FENDER: FXST		2.40 SADDLEBAGS: FLSTC	
Removal.....	2-90	Removal.....	2-108
Installation.....	2-90	Installation.....	2-108
2.30 REAR FENDER: FLS, FXS		2.41 WINDSHIELD: FLSTC	
Removal.....	2-92	Removal.....	2-110
Installation.....	2-92	Installation.....	2-110
License Plate Bracket Assembly and Installation: FXS, FLS (all but Domestic and California models).....	2-92		
License Plate Bracket Assembly and Installation: FLS (Domestic and California models).....	2-93		
Fender Installation.....	2-93		
		2.42 SAREE GUARD: INDIA MODELS	
2.31 REAR FENDER: FLSTN		Left Side Removal and Installation.....	2-111
Removal.....	2-95	Removal.....	2-111
Disassembly.....	2-95	Installation.....	2-111
Assembly.....	2-96	Right Side Removal and Installation.....	2-111
Installation.....	2-97	Removal.....	2-111
Installation.....	2-97	Installation.....	2-111
2.32 REAR FENDER WIRE CONDUIT		2.43 FRONT LICENSE PLATE BRACKET	
Installation.....	2-98	Removal and Installation.....	2-112
2.33 FOOTBOARDS AND FOOTRESTS		ENGINE	
Rider Footboards.....	2-99		
Removal.....	2-99	3.1 FASTENER TORQUE VALUES	
Installation.....	2-99	Fastener Torque Values in this Chapter.....	3-1
Rider Footrest.....	2-99		
Removal.....	2-99	3.2 SPECIFICATIONS	
Installation.....	2-99	Specifications.....	3-3
Passenger Footrest.....	2-99		
Removal.....	2-99	3.3 SERVICE WEAR LIMITS	
Installation.....	2-100	General.....	3-5
2.34 JIFFY STAND		3.4 ENGINE OIL FLOW	
Cleaning.....	2-101	Oil Feed.....	3-7
Sensor: HOI Models.....	2-101	Top End.....	3-8
Removal.....	2-102	Bottom End.....	3-9
Installation.....	2-102	Chain Guide Bracket.....	3-11
		Oil Return.....	3-11
		3.5 OIL PUMP OPERATION	
		General.....	3-12
		Operation.....	3-12

TABLE OF CONTENTS

3.6 BREather OPERATION	
General.....	3-13
3.7 OIL PRESSURE	
Oil Pressure Indicator Lamp.....	3-14
Checking Oil Pressure.....	3-14
3.8 TROUBLESHOOTING	
Diagnosing Valve Train Noise.....	3-16
Compression Test.....	3-16
Cylinder Leakdown Test.....	3-16
Diagnosing Smoking Engine or High Oil Consumption.....	3-17
Check Prior To Cylinder Head Removal.....	3-17
Check After Cylinder Head Removal.....	3-17
3.9 HOW TO USE THIS SECTION	
Top End Repair.....	3-18
Bottom End Repair.....	3-18
Typical Symptoms.....	3-18
3.10 TOP END SERVICE	
Engine in Chassis.....	3-19
Engine Removed from Chassis.....	3-20
3.11 CAM COMPARTMENT SERVICE	
Engine in Chassis.....	3-21
Engine Removed From Chassis.....	3-22
3.12 STRIPPING MOTORCYCLE FOR SERVICE	
Procedure.....	3-23
3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE	
Procedure.....	3-24
3.14 REMOVING ENGINE FROM CHASSIS	
Procedure.....	3-25
3.15 INSTALLING ENGINE IN CHASSIS	
Procedure.....	3-26
3.16 TOP END OVERHAUL: DISASSEMBLY	
General.....	3-28
Rocker Covers.....	3-28
Rocker Arm Support Plate.....	3-28
Push Rods, Lifters and Covers.....	3-30
Cylinder Head.....	3-31
Cylinder.....	3-32
Piston.....	3-32
3.17 BREather ASSEMBLY	
Disassembly.....	3-34
Cleaning and Inspection.....	3-34
Assembly.....	3-34
3.18 ROCKER ARM SUPPORT PLATE	
Disassembly.....	3-35
Cleaning and Inspection.....	3-35
Inspection.....	3-35
Rocker Shaft Fit.....	3-35
Rocker Arm Shaft to Bushing.....	3-36
Replace Rocker Arm Bushings.....	3-36
Assembly.....	3-37
3.19 PUSH RODS, LIFTERS AND COVERS	
Disassembly.....	3-38
Cleaning and Inspection.....	3-38
Lifter Inspection.....	3-38
Assembly.....	3-39
3.20 CYLINDER HEAD	
Disassembly.....	3-40
Cleaning.....	3-41
Inspection.....	3-41
Cylinder Head.....	3-41
Valve Guides.....	3-42
Valves.....	3-42
Valve Springs.....	3-42
Tapered Keepers.....	3-42
Valve Seats.....	3-42
Valve Guide Replacement.....	3-42
Removal.....	3-42
Installation.....	3-42
Valve and Seat Refacing.....	3-46
Assembly.....	3-48
3.21 CYLINDER	
Cleaning.....	3-50
Inspection.....	3-50
Deglazing Cylinder.....	3-52
Boring and Honing Cylinder.....	3-52
3.22 PISTON	
Disassembly.....	3-54
Piston Rings.....	3-54
Cleaning.....	3-54
Inspection.....	3-54
Assembly.....	3-56
Checking Piston Ring Gap.....	3-56
Installing Piston Rings.....	3-56
3.23 TOP END OVERHAUL: ASSEMBLY	
General.....	3-58
Piston.....	3-58
Cylinder.....	3-59
Cylinder Head.....	3-61
Push Rods, Lifters and Covers	3-65
Rocker Arm Support Plate.....	3-66
Breather and Rocker Cover.....	3-67
3.24 CAM COMPARTMENT AND COMPONENTS	
Cam Support Plate and Cover Removal.....	3-68
Prepare Engine.....	3-68
Cam Chain and Sprockets Removal.....	3-68
Cam Support Plate Removal.....	3-69
Cam Support Plate Cleaning and Inspection.....	3-70
Oil Pressure Valve.....	3-70
Cam Support Plate.....	3-70

TABLE OF CONTENTS

Camshafts.....	3-70	Chain Tensioner Guides.....	3-98
Removal.....	3-70	Balance Shaft Support.....	3-98
Installation.....	3-71	Balance Chain.....	3-99
Oil Pressure Relief Valve.....	3-72		
Removal.....	3-72		
Inspection.....	3-72		
Installation.....	3-73		
Cam Needle Bearings.....	3-73		
Removal.....	3-73		
Installation.....	3-74		
Cam Support Plate and Cover Installation.....	3-76		
3.25 OIL PUMP			
Removal.....	3-80	Removal and Disassembly.....	3-106
Cleaning and Inspection.....	3-80	Oil Tank.....	3-106
Installation.....	3-81	Oil Line Fittings/Retainers.....	3-108
3.26 CRANKCASE DISASSEMBLY AND REPAIR			
Crankcase Disassembly.....	3-82	Installation.....	3-109
Counterbalancer Assembly.....	3-82		
Cleaning and Inspection.....	3-84		
Right Crankcase Half.....	3-85		
Chain Guide Screen.....	3-85		
Main Bearing Removal.....	3-85		
Main Bearing Installation.....	3-86		
Piston Jets Removal	3-86		
Piston Jets Installation.....	3-86		
Left Crankcase Half.....	3-87		
Main Bearing Removal.....	3-87		
Main Bearing Installation.....	3-88		
Sprocket Shaft Bearing Inner Race.....	3-88		
Removal.....	3-88		
Installation.....	3-89		
Cylinder Studs.....	3-91		
Removal.....	3-91		
Installation.....	3-91		
Pipe Plugs and Oil Fittings.....	3-91		
Removal/Installation.....	3-91		
3.27 FLYWHEEL AND CONNECTING RODS			
General.....	3-92		
Symptoms.....	3-92		
No Oil Pressure.....	3-92		
Vibration.....	3-92		
Inspection.....	3-92		
Measuring Crankshaft Run-Out.....	3-93		
Crankshaft Installed.....	3-93		
Crankshaft Removed.....	3-93		
3.28 COUNTERBALANCER ASSEMBLY REPAIR			
Cleaning, Inspection, and Repair.....	3-95		
General.....	3-95		
Balance Shaft Removal.....	3-95		
Bearing Removal.....	3-96		
Balance Shaft Installation.....	3-96		
Balance Shaft Support Bearings Removal.....	3-97		
Balance Shaft Support Bearings Installation.....	3-97		
Front and Rear Balance Sprockets.....	3-98		
Hydraulic Tensioners.....	3-98		
3.29 CRANKCASE ASSEMBLY			
Counterbalancer Assembly Installation.....	3-100		
Crankcase.....	3-103		
3.30 OIL TANK			
Removal and Disassembly.....	3-106		
Oil Tank.....	3-106		
Oil Line Fittings/Retainers.....	3-108		
Installation.....	3-109		
FUEL SYSTEM			
4.1 FASTENER TORQUE VALUES			
Fastener Torque Values in this Chapter.....	4-1		
4.2 SPECIFICATIONS: FUEL SYSTEM			
Specifications.....	4-3		
4.3 AIR CLEANER ASSEMBLY			
Removal.....	4-4		
Installation.....	A-4		
Backplate Assembly: HDI Models.....	4-5		
4.4 FUEL SUPPLY LINE			
Purging Fuel Supply Line.....	4-6		
Disconnecting Fuel Supply Line.....	4-6		
4.5 FUEL PRESSURE TEST			
General.....	4-7		
Testing.....	4-7		
4.6 FUEL TANK			
General.....	A-9		
Removal.....	A-9		
Cleaning and Inspection.....	A-10		
Installation.....	4-11		
4.7 CONSOLE: FXS MODEL			
Removal.....	4-12		
Installation.....	4-12		
4.8 THROTTLE POSITION SENSOR (TPS)			
General.....	4-13		
Removal.....	4-13		
Installation.....	4-13		
4.9 INTAKE AIR TEMPERATURE SENSOR (IAT)			
General.....	4-14		
Removal.....	4-14		
Installation.....	4-14		
4.10 ENGINE TEMPERATURE SENSOR (ET)			
General.....	4-15		
Removal.....	4-15		

TABLE OF CONTENTS

Installation.....	4-15
4.11 INDUCTION MODULE	
Removal.....	4-16
Installation.....	4-17
4.12 IDLE AIR CONTROL (IAC)	
General.....	4-18
Removal.....	4-18
Installation	4-18
4.13 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)	
General.....	4-19
Removal	4-19
Installation.....	4-19
4.14 OXYGEN SENSOR	
General.....	4-20
Removal	4-20
Front 02 Sensor.....	4-20
Rear 02 Sensor.....	4-20
Installation.....	4-20
Front 02 Sensor.....	4-20
Rear 02 Sensor.....	4-20
4.15 FUEL INJECTORS	
General	4-22
Removal	4-22
Installation.....	4-22
4.16 FUEL PUMP AND FUEL GAUGE SENDING UNIT	
General.....	4-24
Removal	4-24
Vapor Valve.....	4-25
Disassembly and Assembly.....	4-26
Fuel Filter.....	4-26
Regulator	4-26
Inlet sock.....	4-27
Fuel Pump.....	4-27
Installation.....	4-28
4.17 EXHAUST SYSTEM: FXST, FLSTC	
Mufflers.....	4-29
Removal.....	4-29
Assembly.....	4-29
System.....	4-29
Removal.....	4-29
Installation.....	4-29
4.18 EXHAUST SYSTEM: FLSTF, FLSTFB, FLSTN, FLS, FXS	
Mufflers.....	4-31
Removal.....	4-31
Assembly.....	4-31
System.....	4-31
Removal.....	4-31
Installation.....	4-31
4.191 INTAKE LEAK TEST	
General.....	4-33
Leak Tester.....	4-33
Parts List.....	4-33
Tester Assembly.....	4-33
Tester Adjustment.....	4-33
Procedure.....	4-33
4.20 EVAPORATIVE EMISSIONS CONTROL SYSTEM	
General.....	4-35
Charcoal Canister.....	4-36
Removal.....	4-36
Installation.....	4-36
Purge Solenoid.....	4-36
Removal.....	4-36
Installation.....	4-36
Hose Routing/Replacement.....	4-36
Fuel Tank Vent Hose.....	4-36
Purge Solenoid-to-Induction Module Tube.....	4-36
Charcoal Canister-to-Purge Solenoid Tube.....	4-37
Vent Tube-to-Charcoal Canister Tube.....	4-37
DRIVE	
5.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	5-1
5.2 SPECIFICATIONS: DRIVE	
Specifications.....	5-2
5.3 PRIMARY CHAINCASE COVER	
General.....	5-3
Removal.....	5-3
Installation.....	5-3
5.4 DRIVE COMPONENTS	
Removal.....	5-4
Installation	5-6
5.5 PRIMARY CHAINCASE HOUSING	
Removal.....	5-9
Inspection.....	5-9
Mainshaft Bearing and Lip Seal.....	5-9
Removal.....	5-9
Installation	5-9
Mainshaft Bearing Inner Race	5-10
Removal...	5-10
Installation.....	5-10
Installation.....	5-11
5.6 CLUTCH	
Removal and Installation.....	5-13
Clutch Pack Only.....	5-13
Partial Disassembly.....	5-13
Cleaning And Inspection.....	5-13
Assembly	5-14
Clutch Pack and Bearing.....	5-15
Complete Disassembly.....	5-15
Assembly.....	5-16

TABLE OF CONTENTS

5.7 TRANSMISSION SPROCKET	
Removal.....	5-18
Cleaning and Inspection.....	S-19
Installation.....	5-19
5.8 DRIVE BELT	
Removal.....	5-21
Inspection.....	5-21
Installation.....	5-21
TRANSMISSION	
6.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	6-1
6.2 SPECIFICATIONS: TRANSMISSION	
Specifications.....	6-2
Service Wear Limits.....	6-2
6.3 TRANSMISSION	
Power Flow.....	6-3
Neutral.....	6-3
1st Gear.....	6-3
2nd Gear.....	6-3
3rd Gear.....	6-3
4th Gear.....	6-3
5th Gear.....	6-3
6th Gear.....	6-3
6.4 SHIFTER	
Adjustment	6-5
Shifter Rod.....	6-5
Shift Lever Replacement.....	6-5
6.5 CLUTCH RELEASE COVER	
Removal and Disassembly.....	6-7
Cleaning and Inspection.....	6-7
Assembly and Installation.....	6-8
6.6 TRANSMISSION ASSEMBLY	
Removal.....	6-9
Disassembly.....	6-10
Shifter Cam/Shifter Forks.....	6-10
Mainshaft.....	6-12
Countershaft.....	6-15
Removing Bearing Housing Bearings.....	6-16
Cleaning and Inspection.....	6-17
Assembly.....	6-17
Installing Bearing Housing Bearings.....	6-17
Countershaft.....	6-17
Mainshaft.....	6-18
Shifter Cam/Shifter Forks.....	6-18
Installation.....	6-20
6.7 MAIN DRIVE GEAR AND BEARING	
Removal.....	6-22
Cleaning and Inspection.....	6-23
Needle Bearing Replacement.....	6-24
Installation.....	6-25
Installing Main Drive Gear Bearing.....	6-25
Installing Main Drive Gear.....	6-26
Installing Main Drive Gear Large Seal.....	6-26
6.8 TRANSMISSION CASE	
Removal.....	6-29
Installation.....	6-29
Disassembly.....	6-30
Shifter Arm Assembly.....	6-30
Cleaning and Inspection.....	6-30
Assembly	6-31
Countershaft Needle Bearing Replacement.....	6-31
Shifter Pawl Lever Assembly.....	6-31
ELECTRICAL	
7.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	7-1
7.2 SPECIFICATIONS: ELECTRICAL	
Specifications.....	7-3
7.3 ELECTRICAL PANEL	
General.....	7-4
Removal.....	7-4
Installation.....	7-5
7.4 ELECTRONIC CONTROL MODULE (ECM)	
General.....	7-6
Removal.....	7-6
Installation.....	7-6
7.5 BODY CONTROL MODULE (BCM)	
General.....	7-7
BCM Configuration.....	7-7
Removal.....	7-7
Installation.....	7-7
7.6 H-DSSS ACTUATION	
Sidecar Configuration.....	7-9
Actuation.....	7-9
Fob Assignment.....	7-9
7.7 PERSONAL IDENTIFICATION NUMBER (PIN)	
General.....	7-10
Changing the Pin.....	7-10
Modifying an Existing Pin.....	7-10
7.8 HD-SSS MAINTENANCE	
Fob Battery.....	7-12
Battery Replacement Schedule.....	7-12
Battery Replacement.....	7-12
Smart Siren (If Installed).....	7-12
Battery Replacement Schedule.....	7-12
Battery Replacement.....	7-12
7.9 SECURITY SIREN	
Removal.....	7-13
Installation.....	7-13

TABLE OF CONTENTS

7.10 VOLTAGE REGULATOR	
Disassembly.....	7-14
Installation.....	7-14
7.11 FUSES	
Removal.....	7-15
Installation.....	7-15
7.12 IGNITION AND LIGHT SWITCH	
General.....	7-16
Removal and Installation: All But FXS.....	7-16
Removal and Installation: FXS.....	7-17
7.13 BATTERY CABLES	
Routing Procedure.....	7-18
7.14 STARTER	
General.....	7-20
Removal.....	7-20
Drive Assembly	7-20
Disassembly.....	7-20
Inspection.....	7-21
Assembly.....	7-21
Solenoid.....	7-22
Cover and Plunger Removal.....	7-22
Short Post Contact: Starter.....	7-22
Long Post Contact: Battery Positive.....	7-22
Plunger and Cover Installation.....	7-23
Installation.....	7-23
7.15 HEADLAMP	
General.....	7-24
Headlamp Assembly Removal and Installation.....	7-24
Removal.....	7-24
Installation.....	7-24
Bulb Removal and Installation.....	7-24
FXST, FXS Models.....	7-25
FLSTC, FLSTF/B, FLSTN and FLS Models.....	7-25
7.16 TAIL LAMP: ALL BUT FLSTN	
General.....	7-27
Bulb Replacement.....	7-27
Base Replacement.....	7-27
7.17 TAIL LAMP: FLSTN	
Bulb Replacement.....	7-29
Tail Lamp Replacement.....	7-29
7.18 AUXILIARY LAMPS: FLSTC, FLSTN	
Auxiliary Lamp Bulb.....	7-31
Removal.....	7-31
Installation.....	7-31
FLSTC Models.....	7-31
Auxiliary Lamp Bracket Removal.....	7-31
Auxiliary Lamp Bracket Installation.....	7-32
Auxiliary Lamp Housing Removal.....	7-32
Auxiliary Lamp Housing Installation.....	7-32
FLSTN Models.....	7-34
Auxiliary Lamp Bracket Removal.....	7-34
Auxiliary Lamp Bracket Installation.....	7-34
Auxiliary Lamp Housing Removal.....	7-35
Auxiliary Lamp Housing Installation.....	7-35
7.19 TURN SIGNALS AND RUNNING LIGHTS	
Bulb Replacement: Bullet Style.....	7-38
Bulb Replacement: Flat Lens Style.....	7-38
Lamp Replacement.....	7-38
All Models.....	7-38
Front Turn Signals: All But FLSTC, FLSTN.....	7-39
Front Turn Signals: FLSTC, FLSTN.....	7-40
Rear Turn Signals: All But FLSTN, FXS.....	7-40
Rear Turn Signals: FLS, FXS.....	7-40
Rear Turn Signals: FLSTN.....	7-42
7.20 CRANK POSITION SENSOR (CKP)	
General.....	7-44
Removal.....	7-44
Installation.....	7-44
7.21 AUTOMATIC COMPRESSION RELEASE (ACR)	
General.....	7-45
Removal.....	7-45
Installation.....	7-45
7.22 IGNITION COIL	
Removal.....	7-47
All Except FXS.....	7-47
FXS.....	7-47
Installation.....	7-47
All Except FXS.....	7-47
FXS.....	7-47
7.23 SPARK PLUG CABLES	
General.....	7-49
Removal.....	7-49
Installation.....	7-49
7.24 ALTERNATOR	
Removal.....	7-50
Cleaning and Inspection.....	7-50
Installation.....	7-50
7.25 FUEL GAUGE	
General.....	7-51
Removal.....	7-51
Installation	7-51
7.26 SPEEDOMETER: ALL BUT FXS	
Removal.....	7-53
Installation.....	7-53
7.27 SPEEDOMETER: FXS	
Removal.....	7-54
Installation.....	7-54
7.28 VEHICLE SPEED SENSOR (VSS)	
General.....	7-56
Removal.....	7-56

TABLE OF CONTENTS

Installation.....	7-56
7.29 INDICATOR LAMPS: ALL BUT FXS	
General.....	7-57
Removal.....	7-57
Installation.....	7-57
7.30 INDICATOR LAMPS: FXS	
General.....	7-58
Removal.....	7-58
Installation.....	7-58
7.31 NEUTRAL SWITCH	
General	7-60
Removal.....	7-60
Installation.....	7-60
7.32 OIL PRESSURE SWITCH	
General.....	7-61
Removal.....	7-61
Installation.....	7-61
7.33 REAR STOPLIGHT SWITCH	
General.....	7-62
Removal.....	7-62
Installation.....	7-62
7.34 HORN	
Inspection.....	7-63
Removal and Installation: All But FXS.....	7-63
Removal and Installation: FXS.....	7-64
7.35 ACTIVE EXHAUST	
General.....	7-65
Removal.....	7-65
Repair.....	7-65
Installation.....	7-65
7.36 MAIN WIRING HARNESS	
Removal.....	7-66
Installation.....	7-67
7.37 HANDLEBAR CONTROL MODULES	
General.....	7-69
Repair Procedures.....	7-69
7.38 RIGHT HANDLEBAR CONTROL MODULE	
Removal.....	7-70
Installation.....	7-71
Front Brake Switch Replacement.....	7-72
7.39 LEFT HANDLEBAR CONTROL MODULE	
Removal.....	7-73
Installation.....	7-73
Clutch Switch Replacement.....	7-74

APPENDIX A CONNECTOR REPAIR

A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTORS

Autofuse Unsealed Connector Repair.....	A-1
General.....	A-1
Disassembly.....	A-1
Assembly.....	A-1

A.2 BOSCH COMPACT 1.1M CONNECTOR

Bosch Compact 1.1M Connector.....	A-2
General.....	A-2
Housings.....	A-2
Removing Socket Terminal.....	A-2
Installing Socket Terminal.....	A-2

A.3 DELPHI 100W MICRO-PACK SEALED CONNECTOR

Delphi 100W Micro-Pack Sealed Connector Repair.....	A-3
General	A-3
Separating Socket Housing From ECM.....	A-3
Mating Socket Housing To ECM.....	A-3
Removing Socket Terminal.....	A-3
Installing Socket Terminal.....	A-3
Crimping Terminals.....	A-4

A.4 DELPHI 150 METRI-PACK SEALED CONNECTORS

Delphi 150 Metri-Pack Sealed Connector Repair.....	A-5
General	A-5
Separating Pin and Socket Housings.....	A-5
Mating Pin and Socket Housings.....	A-5
Removing Socket Terminal.....	A-5
Inserting Socket Terminal.....	A-5

A.5 DELPHI 280 METRI-PACK UNSEALED CONNECTORS

Fuse Block Repair.....	A-7
Removing Socket Terminals.....	A-7
Installing Socket Terminals.....	A-7
Crimping Terminals.....	A-7

A.6 DELPHI 480 METRI-PACK UNSEALED CONNECTORS

Delphi 480 Metri-Pack Unsealed Connector Repair.....	A-8
General	A-8
Separating Pin and Socket Housings.....	A-8
Mating Pin and Socket Housings.....	A-8
Removing Socket Terminals.....	A-8
Installing Socket Terminals.....	A-8

A.7 DELPHI 630 METRI-PACK UNSEALED CONNECTORS

Delphi 630 Metri-Pack Unsealed Connector Repair.....	A-9
Separating Pin and Socket Housings.....	A-9
Mating Pin and Socket Housings.....	A-9
Removing Socket Terminal.....	A-9
Installing Socket Terminal.....	A-9

TABLE OF CONTENTS

A.8 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING	Preparing Wire Leads for Crimping.....A-24 Crimping Terminal to Lead.....A-24 Inspecting Crimps.....A-24
Delphi 800 Metri-Pack Sealed Main Fuse Housing Repair.....A-10 Removing Socket Terminals.....A-10 Installing Socket Terminals.....A-10	
A.9 DELPHI METRI-PACK TERMINAL REPAIR	
Metri-Pack Terminal Crimps.....A-11 Matching Terminal To Crimper.....A-11 Preparing Wire Lead.....A-11 Crimping Wire Core.....A-11 Crimping Insulation/Seal.....A-11 Inspecting Crimps.....A-12	
A.10 DELPHI MICRO 64 SEALED CONNECTORS	
Delphi Micro 64 Sealed Connector Repair.....A-13 General.....A-13 Separating Pin and Socket Housings.....A-13 Mating Pin and Socket Housings.....A-13 Removing Terminal.....A-13 Installing Terminal.....A-14 Preparing Wire Leads for Crimping.....A-14 Crimping Terminals.....A-14 Inspecting Crimps.....A-14	
A.11 DELPHI GT 150 SEALED CONNECTORS	
Delphi GT 150 Sealed Connector Repair.....A-16 General.....A-16 Separating Pin and Socket Housings.....A-16 Mating Pin and Socket Housings.....A-16 Removing Socket Terminals.....A-16 Installing Socket Terminals.....A-16	
A.12 DELPHI GT 280 SEALED 73-TERMINAL ECM CONNECTOR	
Delphi GT 280 Sealed 73-Terminal ECM Connector.....A-18 Separating Socket Housing From ECM.....A-18 Mating Socket Housing To ECM.....A-18 Socket Terminal.....A-18 ECM Ground Terminal.....A-18	
A.13 DEUTSCH DT SEALED CONNECTORS	
Deutsch DT Sealed Connector Repair.....A-20 General.....A-20 Separating Pin and Socket Housings.....A-20 Mating Pin and Socket Housings.....A-20 Removing Socket Terminals.....A-20 Installing Socket Terminals.....A-20 Removing Pin Terminals.....A-21 Installing Pin Terminals.....A-22 Crimping Terminals.....A-22	
A.14 DEUTSCH DT SEALED TERMINAL REPAIR	
Deutsch DT Sealed Terminal Crimps.....A-24	
Preparing Wire Leads for Crimping.....A-24 Crimping Terminal to Lead.....A-24 Inspecting Crimps.....A-24	
A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR	
Deutsch DTM Sealed Mini Terminal Crimps.....A-25 Preparing Wire Leads for Crimping.....A-25 Crimping a Mini Terminal to Wire Lead.....A-25 Inspecting Crimps.....A-25	
A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR	
Deutsch DTM Sealed Solid Barrel Terminal Crimps.....A-26 Preparing Wire Leads For Crimping.....A-26 Adjusting Crimper ToolA-26 Crimping a Barrel Contact To Wire LeadA-26 Inspecting Crimps.....A-26	
A.17 JAE MX19 SEALED CONNECTORS	
JAE MX19 Sealed Connectors.....A-28 Connector Housings.....A-28 Removing Terminals.....A-28 Installing Terminals.....A-28 Crimping Terminals.....A-28	
A.18 MOLEX CMC SEALED CONNECTORS	
Molex CMC Sealed Connectors.....A-29 Separating the Connector.....A-29 Removing Terminals.....A-29 Installing Terminals.....A-29 Crimping Terminals.....A-30	
A.19 MOLEX MX 150 SEALED CONNECTORS	
Molex MX 150 Sealed Connector Repair.....A-31 Separating Pin and Socket Housings.....A-31 Mating Pin and Socket Housings.....A-31 Removing Terminals.....A-31 Installing Terminals.....A-31 Crimp Terminal to Lead.....A-32 Prepare Lead.....A-32 Prepare Tool.....A-32 Position Terminal in the Punch/Die.....A-33 Insert Stripped Lead.....A-33 Crimp Terminal to Lead.....A-33 Inspect Crimp.....A-34	
A.20 TYCO 070 MULTILOCK UNSEALED CONNECTOR	
Tyco 070 Multilock Unsealed Connector Repair.....A-35 General.....A-35 Separating Pin and Socket Housings.....A-35 Mating Pin and Socket Housings.....A-35 Removing Terminals from Housing.....A-35 Inserting Terminals into Housing.....A-36 Preparing Wire Leads for Crimping.....A-36 Crimping Terminals to Leads.....A-37 Inspecting Crimped Terminals.....A-38	

TABLE OF CONTENTS

A.21 TYCO GET 64 SEALED CONNECTOR

Tyco GET 64 Sealed Connector.....	A-39
General.....	A-39
Housings.....	A-39
Removing Socket Terminals.....	A-39
Installing Socket Terminals.....	A-39
Crimping Terminals.....	A-40

A.22 TYCO MCP SEALED CONNECTOR

Tyco MCP Sealed Connector.....	A-41
General.....	A-41
Housing.....	A-41
Removing the Large Terminals.....	A-41
Removing the Small Terminals.....	A-41
Installing Terminals.....	A-42
Crimping Terminals.....	A-42

A.23 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-43
General.....	A-43
Preparing Wire Leads.....	A-43
Splicing Wire Leads.....	A-43
Inspecting Seals.....	A-43

APPENDIX B WIRING

8.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

8.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-4
Wire Color Codes.....	B-4
Wiring Diagram Symbols.....	B-4
2012 Softail Wiring Diagrams.....	B-6

APPENDIX C ABS

C.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	C-1
---	-----

C.2 ELECTRONIC CONTROL UNIT (ECU)

Removal.....	C-2
Installation.....	C-2

C.3 HYDRAULIC CONTROL UNIT (HCU)

Front Hydraulic Control Unit (HCU).....	C-4
Removal.....	C-4
Installation.....	C-4

Rear Hydraulic Control Unit (HCU).....	C-5
Removal.....	C-5
Installation.....	C-5

C.4 WHEEL SPEED SENSORS

Front Wheel Speed Sensor.....	C-7
Removal.....	C-7
Installation.....	C-8
Rear Wheel Speed Sensor.....	C-8
Removal	C-8
Installation.....	C-9

C.5 ABS BRAKE LINES

Front Master Cylinder to Front HCU.....	C-10
Removal.....	C-10
Installation.....	C-10
HCU to Front Brake Caliper.....	C-11
Removal.....	C-11
Installation.....	C-11
Rear Master Cylinder to Rear HCU.....	C-12
Removal.....	C-12
Installation.....	C-13
Rear HCU to Rear Brake Caliper.....	C-14
Removal.....	C-14
Installation.....	C-14

APPENDIX D CONVERSIONS

D.1 METRIC CONVERSION

Conversion Table.....	D-1
-----------------------	-----

D.2 FLUID CONVERSIONS

United States System.....	D-2
Metric System.....	D-2
British Imperial System.....	D-2

D.3 TORQUE CONVERSIONS

United States System.....	D-3
Metric System	D-3

APPENDIX E GLOSSARY

E.1 GLOSSARY

Acronyms and Abbreviations.....	E-1
---------------------------------	-----

REFERENCE MATERIAL

TOOLS.....I

TORQUE VALUES.....IX

INDEX.....XXI

SUBJECT	PAGE NO.
1.1 FASTENER TORQUE VALUES.....	1-1
1.2 GENERAL.....	1-4
1.3 FUEL AND OIL.....	1-8
1.4 BULB REQUIREMENTS.....	1-10
1.5 MAINTENANCE SCHEDULE.....	1-11
1.6 ENGINE OIL AND FILTER.....	1-15
1.7 AIR CLEANER AND EXHAUST SYSTEM.....	1-17
1.8 TIRES AND WHEELS.....	1-20
1.9 PRIMARY CHAINCASE LUBRICANT.....	1-23
1.10 TRANSMISSION LUBRICANT.....	1-25
1.11 CLUTCH.....	1-27
1.12 DRIVE BELT AND SPROCKETS.....	1-29
1.13 THROTTLE CABLES.....	1-33
1.14 CABLE AND CHASSIS LUBRICATION.....	1-35
1.15 BRAKES.....	1-36
1.16 BRAKE PADS AND DISCS.....	1-37
1.17 SPARK PLUGS.....	1-41
1.18 STEERING HEAD BEARINGS.....	1-43
1.19 CRITICAL FASTENERS.....	1-48
1.20 BATTERY MAINTENANCE	1-49
1.21 HEADLAMP ALIGNMENT.....	1-54
1.22 SUSPENSION ADJUSTMENTS.....	1-55
1.23 STORAGE.....	1-56
1.24 TROUBLESHOOTING.....	1-58

NOTES

FASTENER TORQUE VALUES

1.1

FASTENER TORQUE VALUES IN THIS CHAPTER

The table below lists torque values for all fasteners presented in this chapter.

FASTENER	TORQUE VALUE	NOTES
Adjuster screw locknut	72-120 in-lbs	8.1-13.6 Nm 1.11 CLUTCH, Adjustment
Air cleaner bracket screws	40-60 in-lbs	4.5-6.8 Nm 1.7 AIR CLEANER AND EXHAUST SYSTEM, Installation
Air cleaner cover bracket screw	40-60 in-lbs	4.5-6.8 Nm 1.5 MAINTENANCE SCHEDULE, General
Air cleaner cover screw	36-60 in-lbs	4.1-6.8 Nm 1.5 MAINTENANCE SCHEDULE, General
Air cleaner cover screw	36-60 in-lbs	4.1-6.8 Nm 1.7 AIR CLEANER AND EXHAUST SYSTEM, Installation
Battery cable to battery fasteners	60-72 in-lbs	6.8-8.1 Nm 1.20 BATTERY MAINTENANCE, Installation and Connection
Battery cable to battery fasteners	60-72 in-lbs	6.8-8.1 Nm 1.20 BATTERY MAINTENANCE, Installation and Connection
Battery terminal fastener	60-72 in-lbs	6.8-8.1 Nm 1.5 MAINTENANCE SCHEDULE, General
Brake bridge bolt/pad pin, front caliper	15-16 ft-lbs	20.3-22.6 Nm 1.16 BRAKE PADS AND DISCS, Brake Pad Replacement
Cable adjuster jamnut	120 in-lbs	13.6 Nm 1.11 CLUTCH, Adjustment
Chrome aluminum laced wheel spoke nipple	55 in-lbs	6.2 Nm 1.5 MAINTENANCE SCHEDULE, General
Clutch adjustment screw locknut	72-120 in-lbs	8-14 Nm 1.5 MAINTENANCE SCHEDULE, General
Clutch cover screws	84-108 in-lbs	9.5-12.2 Nm 1.11 CLUTCH, Adjustment
Clutch inspection cover fastener torque	84-108 in-lbs	10-12 Nm 1.5 MAINTENANCE SCHEDULE, General
Clutch inspection cover screw	84-108 in-lbs	9.5-12.2 Nm 1.9 PRIMARY CHAINCASE LUBRICANT, Changing Primary Chaincase Lubricant/Torque sequence
Drain plug	14-21 ft-lbs	19.0-28.5 Nm 1.6 ENGINE OIL AND FILTER, Changing Oil and Filter
Engine oil drain plug	14-21 ft-lbs	19-28 Nm 1.5 MAINTENANCE SCHEDULE, General
Fork stem nut	70-80 ft-lbs	94.9-108.4 Nm 1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Fork stem nut	70-80 ft-lbs	94.9-108.4 Nm 1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Fork stem nut	70-80 ft-lbs	94.9-108.4 Nm 1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Fork stem nut	70-80 ft-lbs	94.9-108.4 Nm 1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Front caliper mounting bolt	28-38 ft-lbs	38.0-51.5 Nm 1.16 BRAKE PADS AND DISCS, Brake Pad Replacement
Front caliper mounting bolt	28-38 ft-lbs	38.0-51.5 Nm 1.16 BRAKE PADS AND DISCS, Brake Pad Replacement
Hand control module housing screws	35-45 in-lbs	4.0-5.1 Nm 1.13 THROTTLE CABLES, Cable Inspection, Lubrication and Adjustment
Handlebar clamp screw torque	12-15 ft-lbs	16.3-20.3 Nm 1.5 MAINTENANCE SCHEDULE, General
Handlebar switch housing screw	35-45 in-lbs	4-5 Nm 1.5 MAINTENANCE SCHEDULE, General
Headlamp horizontal adjustment fastener	30-35 ft-lbs	40.7-47.5 Nm 1.21 HEADLAMP ALIGNMENT, Headlamp Adjustment

FASTENER	TORQUE VALUE		NOTES
Headlamp vertical adjusting bolt: all but FXS	35-45 ft-lbs	47.5-61.0 Nm	1.21 HEADLAMP ALIGNMENT, Headlamp Adjustment/All but FXS
Headlamp vertical adjusting bolt: FXS	30-35 ft-lbs	40.7-47.5 Nm	1.21 HEADLAMP ALIGNMENT, Headlamp Adjustment/FXS
Lower fork bracket pinch bolt: FXS	144-192 in-lbs	16.3-21.7 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Lower fork bracket pinch bolt: FXS	144-192 in-lbs	16.3-21.7 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Lower fork bracket pinch bolt: FXS	144-192 in-lbs	16.3-21.7 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Lower fork bracket pinch bolt: FXS	144-192 in-lbs	16.3-21.7 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Lower fork bracket pinch bolt: FXST	55-60 ft-lbs	74.6-81.4 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Lower fork bracket pinch bolt: FXST	55-60 ft-lbs	74.6-81.4 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FXST, FXS
Lower fork stem pinch bolts	55-60 ft-lbs	74.6-81.4 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FLSTC, FLSTF/B, FLSTN, FLS
Lower fork stem pinch bolts: FLSTC, FLSTF/B, FLSTN	55-60 ft-lbs	74.6-81.4 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FLSTC, FLSTF/B, FLSTN, FLS
Master cylinder cover screw torque: front	12-15 in-lbs	1.4-1.7 Nm	1.5 MAINTENANCE SCHEDULE, General
Master cylinder cover screw torque: rear	6-8 in-lbs	0.7-0.9 Nm	1.5 MAINTENANCE SCHEDULE, General
Master cylinder reservoir cover screws: front cover	12-15 in-lbs	1.4-1.7 Nm	1.16 BRAKE PADS AND DISCS, Brake Pad Replacement
Master cylinder reservoir cover screws: rear cover	6-8 in-lbs	0.7-0.9 Nm	1.16 BRAKE PADS AND DISCS, Brake Pad Replacement
Pad pin, rear caliper	80-120 in-lbs	9.0-13.6 Nm	1.16 BRAKE PADS AND DISCS, Brake Pad Replacement
Primary chaincase drain plug	14-21 ft-lbs	19-28 Nm	1.5 MAINTENANCE SCHEDULE, General
Primary chaincase drain plug	14-21 ft-lbs	19.0-28.5 Nm	1.9 PRIMARY CHAINCASE LUBRICANT, Changing Primary Chaincase Lubricant
Rear axle nut	95-105 ft-lbs	128.8-142.4 Nm	1.12 DRIVE BELT AND SPROCKETS, Adjusting Belt Deflection
Rear caliper fasteners	16-20 ft-lbs	21.7-27.1 Nm	1.16 BRAKE PADS AND DISCS, Brake Pad Replacement
Spark plug	12-18 ft-lbs	16-24 Nm	1.5 MAINTENANCE SCHEDULE, General
Spark plug	12-18 ft-lbs	16.3-24.4 Nm	1.17 SPARK PLUGS, Installation
Spoke nipple	55 in-lbs	6.2 Nm	1.8 TIRES AND WHEELS, Wheel Spokes
Starter nut	70-90 in-lbs	7.9-10.2 Nm	1.20 BATTERY MAINTENANCE, Installation and Connection
Steel laced wheel spoke nipple	55 in-lbs	6.2 Nm	1.5 MAINTENANCE SCHEDULE, General
Transmission dipstick	25-75 in-lbs	2.8-8.5 Nm	1.10 TRANSMISSION LUBRICANT, Checking Transmission Lubricant
Transmission drain plug	14-21 ft-lbs	19-28 Nm	1.5 MAINTENANCE SCHEDULE, General
Transmission drain plug	14-21 ft-lbs	19.0-28.5 Nm	1.10 TRANSMISSION LUBRICANT, Changing Transmission Lubricant
Transmission filler plug/dipstick	25-75 in-lbs	2.8-8.5 Nm	1.10 TRANSMISSION LUBRICANT, Changing Transmission Lubricant
Transmission filler plug torque	25-75 in-lbs	3-9 Nm	1.5 MAINTENANCE SCHEDULE, General
Upper fork stem pinch bolt	25-30 ft-lbs	33.9-40.7 Nm	1.18 STEERING HEAD BEARINGS, Adjustment: FLSTC, FLSTF/B, FLSTN, FLS

Thank you so much for reading.

**Please click the “Buy Now!”
button below to download the
complete manual.**

Buy Now



After you pay.

**You can download the most
perfect and complete manual in
the world immediately.**

Our support email:

ebooklibonline@outlook.com