



2013 Harley-Davidson Dyna Models Service Manual

99481-13A

©2013 H-D.

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Disposal and Recycling.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip-Type Seals.....	1-5
O-Rings.....	1-5
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Cleaning.....	1-5
Part Protection.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry Bars.....	1-6
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 FUEL AND OIL

Fuel.....	1-7
Gasoline Blends.....	1-7
Engine Lubrication.....	1-7
Winter Lubrication.....	1-8

1.4 BULB REQUIREMENTS

General.....	1-9
--------------	-----

1.5 MAINTENANCE SCHEDULE

General.....	1-10
Disposal and Recycling.....	1-10

1.6 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-14
Type of Oil.....	1-14
Checking with Cold Engine.....	1-14
Checking with Warm Engine.....	1-14
Changing Oil and Filter.....	1-15

1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-17
Installation.....	1-17
Exhaust System Leak Check.....	1-18
Exhaust System Leakage.....	1-18

1.8 TIRES AND WHEELS

Tires.....	1-19
Tire Replacement.....	1-19
Dunlop.....	1-20
Michelin.....	1-20
Wheel Bearings.....	1-21
Wheel Spokes.....	1-21
Identify Wheel Spoke Groups.....	1-21
Wheel Spoke Adjustment.....	1-21

1.9 PRIMARY CHAINCASE LUBRICANT

General.....	1-23
Changing Primary Chaincase Lubricant.....	1-23

1.10 TRANSMISSION LUBRICANT

Checking Transmission Lubricant.....	1-25
Changing Transmission Lubricant.....	1-25

1.11 CLUTCH

Adjustment.....	1-27
-----------------	------

1.12 DRIVE BELT AND SPROCKETS

General.....	1-29
Cleaning.....	1-29
Inspection.....	1-29
Sprockets.....	1-29
Drive Belt.....	1-29
Checking Belt Deflection.....	1-30
Adjusting Belt Deflection.....	1-32

1.13 THROTTLE CABLES

Cable Inspection, Lubrication and Adjustment.....	1-33
Inspection and Lubrication.....	1-33
Adjustment.....	1-33

1.14 CABLE AND CHASSIS LUBRICATION

General.....	1-35
Cables and Hand Levers.....	1-35
Jiffy Stand.....	1-35

1.15 BRAKES

Fluid Inspection.....	1-36
Rear Pedal Height.....	1-36
Brake Lines Inspection.....	1-36

1.16 BRAKE PADS AND DISCS

Inspection.....	1-38
Brake Pads.....	1-38
Brake Disc.....	1-38
Brake Pad Replacement.....	1-39
Rear Brake Caliper.....	1-39
Front Brake Caliper.....	1-39

1.17 SPARK PLUGS

Inspection.....	1-41
Spark Plug Cable Inspection.....	1-41

TABLE OF CONTENTS

1.18 STEERING HEAD BEARINGS	
Adjustment.....	1-43
Bearing Adjustment (Fall-Away).....	1-43
Lubrication.....	1-44
1.19 CRITICAL FASTENERS	
Inspection.....	1-45
Checking Fastener Torque.....	1-45
1.20 BATTERY MAINTENANCE	
General.....	1-46
Cleaning and Inspection.....	1-47
Voltmeter Test.....	1-47
Voltmeter Test.....	1-47
Charging Battery.....	1-47
Safety Precautions.....	1-47
Using a Battery Charger.....	1-47
Disconnection and Removal.....	1-48
Storage.....	1-49
Installation and Connection.....	1-49
1.21 ENGINE MOUNTS	
Inspection.....	1-50
1.22 HEADLAMP ALIGNMENT	
Headlamp Alignment.....	1-51
Adjustment: All Models Except FLD.....	1-51
Adjustment: FLD Models.....	1-52
1.23 SUSPENSION ADJUSTMENTS	
Shock Absorber Preload Adjustment.....	1-53
1.24 STORAGE	
General.....	1-54
Placing in Storage.....	1-54
Removal from Storage.....	1-54
1.25 TROUBLESHOOTING	
General.....	1-55
Engine.....	1-55
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-55
Engine Turns Over But Does Not Start.....	1-55
Starts Hard.....	1-55
Starts But Runs Irregularly or Misses.....	1-55
Spark Plug Fouls Repeatedly.....	1-55
Pre-Ignition or Detonation (Knocks or Pings).....	1-55
Overheating.....	1-56
Valve Train Noise.....	1-56
Excessive Vibration.....	1-56
Check Engine Light Illuminates During Operation.....	1-56
Lubrication System.....	1-56
Oil Does Not Return To Oil Pan.....	1-56
Engine Uses Too Much Oil Or Smokes Excessively.....	1-56
Engine Leaks Oil From Cases, Pushrods, Hoses, Etc.....	1-56
Low Oil Pressure.....	1-56
High Oil Pressure.....	1-56
Electrical System.....	1-56
Alternator Does Not Charge.....	1-56
Alternator Charge Rate Is Below Normal.....	1-56
Speedometer Operates Erratically.....	1-57
Transmission.....	1-57
Shifts Hard.....	1-57
Jumps Out Of Gear.....	1-57
Clutch Slips.....	1-57
Clutch Drags Or Does Not Release.....	1-57
Clutch Chatters.....	1-57
Handling.....	1-57
Irregularities.....	1-57
Brakes.....	1-57
Brake Does Not Hold Normally.....	1-57
CHASSIS	
2.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	2-1
2.2 SPECIFICATIONS	
Specifications.....	2-6
Chassis Specifications.....	2-6
Tire Specifications.....	2-7
2.3 VEHICLE IDENTIFICATION NUMBER (VIN)	
Vehicle Identification Number.....	2-9
2.4 FRONT WHEEL	
Removal.....	2-11
Disassembly.....	2-11
Cast Wheel.....	2-11
Cast Wheel, Dual Brakes.....	2-12
Laced Wheel.....	2-12
Cleaning and Inspection.....	2-16
Assembly.....	2-16
Cast Wheel.....	2-16
Laced Wheel.....	2-16
Installation.....	2-16
2.5 REAR WHEEL	
Removal.....	2-19
Disassembly.....	2-19
Cleaning and Inspection.....	2-21
Assembly.....	2-22
Installation.....	2-22
2.6 SEALED WHEEL BEARINGS	
Inspection.....	2-24
Removal.....	2-24
Installation.....	2-26
2.7 WHEEL LACING	
Wheel Lacing: Angle Flange Hub.....	2-28
Wheel Lacing: Straight Flange Hub, Single Hole Circle.....	2-29
Wheel Lacing: Straight Flange Hub, Dual Hole Circle.....	2-31
2.8 CHECKING AND TRUING WHEELS	
General.....	2-33
Checking Wheel Runout.....	2-33
Checking Radial Runout.....	2-33
Checking Lateral Runout.....	2-33

TABLE OF CONTENTS

Laced Wheel Rim Offset.....	2-34	Installation.....	2-76
Truing Laced Wheels.....	2-37		
Radial Runout.....	2-37	2.17 STEERING HEAD	
Lateral Runout.....	2-37	Removal: All But FLD.....	2-77
		Removal: FLD.....	2-77
		Inspection.....	2-78
		Disassembly.....	2-78
		Steering Head Bearing Race Removal	2-78
2.9 VEHICLE ALIGNMENT		Assembly.....	2-78
Inspection.....	2-39	Installation: All but FLD.....	2-78
		Installation: FLD.....	2-79
2.10 FRONT BRAKE MASTER CYLINDER			
General.....	2-41	2.18 BELT GUARD	
Removal and Disassembly.....	2-41	Removal.....	2-81
Cleaning and Inspection.....	2-43	Installation.....	2-81
Assembly and Installation.....	2-43		
2.11 FRONT BRAKE CALIPER		2.19 DEBRIS DEFLECTOR	
Removal.....	2-45	Removal.....	2-82
Disassembly.....	2-45	Installation.....	2-82
Cleaning, Inspection and Repair.....	2-47		
Assembly.....	2-48	2.20 THROTTLE CONTROL	
Installation.....	2-49	Removal/Disassembly.....	2-83
2.12 REAR BRAKE MASTER CYLINDER		Cleaning and Inspection.....	2-83
General.....	2-51	Assembly/Installation.....	2-83
Removal.....	2-51	Throttle Cable Routing.....	2-83
Disassembly.....	2-53		
Cleaning and Inspection.....	2-54	2.21 REAR SHOCK ABSORBERS	
Assembly.....	2-54	General.....	2-85
Installation.....	2-54	Removal.....	2-85
2.13 REAR BRAKE CALIPER		Inspection.....	2-85
Removal.....	2-56	Installation.....	2-85
Disassembly.....	2-56		
Cleaning, Inspection and Repair.....	2-58	2.22 REAR FORK	
Assembly.....	2-59	Removal.....	2-86
Installation.....	2-59	Disassembly.....	2-86
2.14 BLEEDING BRAKES		Cleaning and Inspection.....	2-87
General.....	2-61	Assembly.....	2-87
Procedure.....	2-61	Installation.....	2-87
2.15 TIRES			
General.....	2-63	2.23 CLUTCH CONTROL	
Removal.....	2-63	Removal.....	2-88
Cleaning, Inspection and Repair.....	2-63	Installation.....	2-88
Installation.....	2-64		
Tube Type Tires.....	2-64	2.24 HANDLEBARS: FXDC, FXDL AND FLD	
Tubeless Tires.....	2-64	Removal.....	2-90
Checking Tire Runout.....	2-65	All Models.....	2-90
Lateral Runout.....	2-65	FXDC Models.....	2-90
Radial Runout.....	2-65	FXDL Models.....	2-90
Wheel Balancing.....	2-66	FLD Models.....	2-91
Static vs Dynamic.....	2-66	Installation.....	2-92
Weights.....	2-66	FXDC Models.....	2-92
2.16 FRONT FORK		FXDL Models.....	2-92
Removal.....	2-67	FLD Models.....	2-92
Disassembly.....	2-67	All Models.....	2-93
Disassembly: Cartridge Fork (FLD, Left Side).....	2-70	Left Hand Grip.....	2-93
Cleaning and Inspection.....	2-72	Removal.....	2-93
Assembly.....	2-72	Installation.....	2-93
Assembly: Cartridge Fork (FLD, Left Side).....	2-73		

TABLE OF CONTENTS

2.25 HANDLEBARS: FXDB/P/A, FXDF AND FWDWG	Removal.....	2-94
	FXDB/P/A.....	2-94
	FXDF and FWDWG.....	2-95
	Installation.....	2-96
2.26 FRONT FENDER	Removal.....	2-99
	Installation.....	2-99
2.27 REAR FENDER	General.....	2-100
	Removal.....	2-100
	Tail Lamp/Turn Signal Harness Routing.....	2-100
	Installation.....	2-100
	FXDF.....	2-103
	Removal.....	2-103
	Installation.....	2-103
	FXDC and FXDL.....	2-103
	Removal.....	2-103
	Installation.....	2-103
	FXDB.....	2-104
	Removal.....	2-104
	Installation.....	2-104
	FXDWG.....	2-106
	Removal.....	2-106
	Sissy Bar.....	2-106
	Installation.....	2-106
	FLD.....	2-107
	Removal.....	2-107
	Disassembly.....	2-107
	Assembly.....	2-107
	Installation.....	2-107
2.28 SEAT	Removal.....	2-109
	Seat and Seat Strap Removal: All But FWDWG.....	2-109
	Seat and Seat Strap Removal: FWDWG.....	2-109
	Installation.....	2-111
	Seat and Seat Strap: All But FWDWG.....	2-111
	Seat and Seat Strap: FWDWG.....	2-111
2.29 FOOTBOARDS AND FOOTRESTS	Rider Footboards.....	2-112
	Removal.....	2-112
	Disassembly.....	2-112
	Assembly.....	2-112
	Installation.....	2-112
	Rider Footrests: Mid Controls.....	2-113
	Removal.....	2-113
	Installation.....	2-113
	Rider Footrests: Forward Controls.....	2-114
	Removal.....	2-114
	Installation.....	2-114
	Passenger Footrests: All models except FXDF).....	2-114
	Removal.....	2-114
	Installation.....	2-114
2.30 HEADLAMP NACELLE: FLD	Upper and lower nacelle: FLD.....	2-116
	Removal.....	2-116
	Installation.....	2-116
2.31 WINDSHIELD: FLD	Windshield.....	2-117
	Removal.....	2-117
	Installation.....	2-117
	Windshield Window.....	2-117
	Removal.....	2-117
	Installation.....	2-119
2.32 SADDLEBAGS: FLD	Saddlebags: FLD Model.....	2-120
	Removal.....	2-120
	Installation.....	2-120
	Saddlebags.....	2-121
	Disassembly.....	2-121
	Assembly.....	2-121
	Saddlebag Lid.....	2-122
	Saddlebag Lid Seal.....	2-122
	Disassembly.....	2-123
	Assembly.....	2-123
2.33 JIFFY STAND	Cleaning.....	2-125
	Jiffy Stand Sensor: HDI Models.....	2-127
	Removal.....	2-127
	Installation.....	2-127
2.34 ENGINE MOUNTS	Removal.....	2-129
	Front Isolator.....	2-129
	Rear Isolator.....	2-129
	Installation.....	2-129
	Front Isolator.....	2-129
	Rear Isolator.....	2-129
2.35 SAREE GUARD: INDIA MODELS	Replacement.....	2-131
	Removal.....	2-131
	Installation.....	2-131
2.36 MEDALLIONS, SERIALIZED BADGES AND TANK EMBLEMS	Removal.....	2-132
	Installation.....	2-132
ENGINE		
3.1 FASTENER TORQUE VALUES	Fastener Torque Values in this Chapter.....	3-1
3.2 SPECIFICATIONS	Specifications.....	3-3
3.3 SERVICE WEAR LIMITS	General.....	3-5
3.4 ENGINE OIL FLOW	Oil Feed.....	3-7

TABLE OF CONTENTS

Top End.....	3-7
Bottom End.....	3-9
Oil Return.....	3-11
3.5 OIL PUMP OPERATION	
General.....	3-13
Operation.....	3-13
3.6 BREather OPERATION	
General.....	3-15
3.7 OIL PRESSURE	
Oil Pressure Indicator Lamp.....	3-16
Checking Oil Pressure.....	3-16
3.8 TROUBLESHOOTING	
Diagnosing Valve Train Noise.....	3-18
Compression Test.....	3-18
Cylinder Leakdown Test.....	3-18
Diagnosing Smoking Engine or High Oil Consumption.....	3-19
Check Prior To Cylinder Head Removal.....	3-19
Check After Cylinder Head Removal.....	3-19
3.9 HOW TO USE THIS SECTION	
Top End Repair.....	3-20
Bottom End Repair.....	3-20
Typical Symptoms.....	3-20
3.10 TOP END SERVICE	
Engine in Chassis.....	3-21
Engine Removed from Chassis.....	3-22
3.11 CAM COMPARTMENT SERVICE	
Engine in Chassis.....	3-23
Engine Removed From Chassis.....	3-24
3.12 STRIPPING MOTORCYCLE FOR SERVICE	
Procedure.....	3-25
3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE	
Procedure.....	3-26
3.14 REMOVING ENGINE FROM CHASSIS	
Procedure.....	3-27
3.15 INSTALLING ENGINE IN CHASSIS	
Procedure.....	3-28
3.16 TOP END OVERHAUL: DISASSEMBLY	
General.....	3-30
Rocker Covers.....	3-30
Rocker Arm Support Plate.....	3-30
Pushrods, Lifters and Covers.....	3-32
Cylinder Head.....	3-32
Cylinder.....	3-33
Piston.....	3-34
3.17 BREather ASSEMBLY	
Disassembly.....	3-36
Cleaning and Inspection.....	3-36
Assembly.....	3-36
3.18 ROCKER ARM SUPPORT PLATE	
Disassembly.....	3-37
Cleaning and Inspection.....	3-37
Inspection.....	3-37
Rocker Shaft Fit.....	3-37
Rocker Arm Shaft to Bushing.....	3-38
Replace Rocker Arm Bushings.....	3-38
Assembly.....	3-39
3.19 PUSHRODS, LIFTERS AND COVERS	
Disassembly.....	3-40
Cleaning and General Inspection.....	3-40
Lifter Inspection.....	3-41
Assembly.....	3-41
3.20 CYLINDER HEAD	
Disassembly.....	3-42
Cleaning.....	3-43
Inspection.....	3-43
Cylinder Head.....	3-43
Valve Guides.....	3-44
Valves.....	3-44
Valve Springs.....	3-44
Tapered Keepers.....	3-44
Valve Seats.....	3-44
Valve Guide Replacement.....	3-44
Removal.....	3-44
Installation.....	3-45
Valve and Seat Refacing.....	3-48
Assembly.....	3-50
3.21 CYLINDER	
Cleaning.....	3-52
Inspection.....	3-52
Deglazing Cylinder.....	3-54
Boring and Honing Cylinder.....	3-54
3.22 PISTON	
Disassembly.....	3-56
Piston Rings.....	3-56
Cleaning.....	3-56
Inspection.....	3-56
Assembly.....	3-58
Checking Piston Ring Gap.....	3-58
Installing Piston Rings.....	3-58
3.23 TOP END OVERHAUL: ASSEMBLY	
General.....	3-60
Piston.....	3-60
Cylinder.....	3-61
Cylinder Head.....	3-63
Pushrods, Lifters and Covers.....	3-67
Rocker Arm Support Plate.....	3-68
Breather and Rocker Cover.....	3-69

TABLE OF CONTENTS

3.24 CAM COMPARTMENT AND COMPONENTS	
Cam Support Plate and Cover Removal.....	3-70
Prepare Engine.....	3-70
Cam Chain and Sprockets Removal.....	3-70
Cam Support Plate Removal.....	3-71
Cam Support Plate Cleaning and Inspection.....	3-72
Oil Pressure Valve.....	3-72
Cam Support Plate.....	3-72
Camshafts.....	3-73
Removal.....	3-73
Installation.....	3-73
Oil Pressure Relief Valve.....	3-75
Removal.....	3-75
Inspection.....	3-75
Installation.....	3-75
Cam Needle Bearings.....	3-75
Removal.....	3-75
Installation.....	3-77
Cam Support Plate and Cover Installation.....	3-78
3.25 OIL PUMP	
Removal.....	3-82
Cleaning and Inspection.....	3-82
Installation.....	3-83
3.26 CRANKCASE DISASSEMBLY AND REPAIR	
Crankcase Disassembly.....	3-84
Cleaning and Inspection.....	3-84
Right Crankcase Half.....	3-85
Main Bearing Removal.....	3-85
Main Bearing Installation.....	3-85
Piston Jets Removal.....	3-86
Piston Jets Installation.....	3-86
Left Crankcase Half.....	3-86
Main Bearing Removal.....	3-86
Main Bearing Installation.....	3-87
Sprocket Shaft Bearing Inner Race.....	3-88
Removal.....	3-88
Installation.....	3-89
Cylinder Studs.....	3-91
Removal.....	3-91
Installation.....	3-91
Pipe Plug and Oil Fittings.....	3-92
Removal.....	3-92
Installation.....	3-92
3.27 FLYWHEEL AND CONNECTING RODS	
General.....	3-93
Symptoms.....	3-93
No Oil Pressure.....	3-93
Vibration.....	3-93
Inspection.....	3-93
Measuring Crankshaft Runout.....	3-93
Crankshaft Installed.....	3-93
Crankshaft Removed.....	3-94
3.28 CRANKCASE ASSEMBLY	
Crankcase Assembly.....	3-96
3.29 OIL PAN	
Removal.....	3-98
Installation.....	3-98
FUEL SYSTEM	
4.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	4-1
4.2 SPECIFICATIONS: FUEL SYSTEM	
Specifications.....	4-3
4.3 AIR CLEANER ASSEMBLY	
Removal.....	4-4
Installation.....	4-6
Backplate Assembly: HDI Models.....	4-7
4.4 FUEL TANK	
General.....	4-8
Removal.....	4-8
Cleaning and Inspection.....	4-9
Installation.....	4-10
Vapor Valve.....	4-10
4.5 THROTTLE POSITION SENSOR (TPS)	
General.....	4-11
Removal.....	4-11
Installation.....	4-11
4.6 INTAKE AIR TEMPERATURE SENSOR (IAT)	
General.....	4-12
Removal.....	4-12
Installation.....	4-12
4.7 ENGINE TEMPERATURE SENSOR (ET)	
General.....	4-13
Removal.....	4-13
Installation.....	4-14
4.8 INDUCTION MODULE	
Removal.....	4-15
Installation.....	4-16
4.9 IDLE AIR CONTROL (IAC)	
General.....	4-17
Removal.....	4-17
Installation.....	4-17
4.10 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)	
General.....	4-18
Removal.....	4-18
Installation.....	4-18
4.11 OXYGEN SENSOR	
General.....	4-19
Removal.....	4-19
Installation.....	4-19

TABLE OF CONTENTS

4.12 FUEL INJECTORS	Installation.....	5-7
General.....	4-20	
Removal.....	4-20	
Installation.....	4-20	
4.13 FUEL PUMP		
General.....	4-22	
Removal.....	4-22	
Disassembly and Assembly.....	4-24	
Fuel Filter.....	4-24	
Regulator.....	4-24	
Inlet Sock.....	4-25	
Fuel Pump.....	4-26	
Installation.....	4-26	
4.14 FUEL PRESSURE TEST		
General.....	4-29	
Testing.....	4-29	
4.15 EXHAUST SYSTEM		
Removal: FXDB, FXDC and FXDL.....	4-31	
Disassembly: FXDB/P/A, FXDC and FXDL.....	4-33	
Assembly: FXDB/P/A, FXDC and FXDL.....	4-33	
Installation: FXDB/P/A, FXDC and FXDL.....	4-33	
Removal: FXDF and FXDWG.....	4-34	
Installation: FXDF and FXDWG.....	4-37	
Removal: FLD.....	4-38	
Installation: FLD.....	4-40	
4.16 INTAKE LEAK TEST		
General.....	4-41	
Leak Tester.....	4-41	
Parts List.....	4-41	
Tester Assembly.....	4-41	
Tester Adjustment.....	4-41	
Procedure.....	4-41	
4.17 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)		
General.....	4-43	
Charcoal Canister.....	4-45	
Removal.....	4-45	
Installation.....	4-45	
DRIVE		
5.1 FASTENER TORQUE VALUES		
Fastener Torque Values in this Chapter.....	5-1	
5.2 SPECIFICATIONS: DRIVE		
Specifications.....	5-2	
5.3 PRIMARY CHAINCASE COVER		
General.....	5-3	
Removal.....	5-3	
Installation.....	5-3	
5.4 DRIVE COMPONENTS		
Removal.....	5-5	
5.5 PRIMARY CHAINCASE HOUSING		
Removal.....	5-10	
Inspection.....	5-10	
Mainshaft Bearing and Seal.....	5-10	
Removal.....	5-10	
Installation.....	5-11	
Mainshaft Bearing Inner Race.....	5-11	
Removal.....	5-11	
Installation.....	5-12	
Shifter Shaft Bushing.....	5-12	
Installation.....	5-13	
5.6 CLUTCH		
Removal and Installation.....	5-15	
Clutch Pack Only.....	5-15	
Partial Disassembly.....	5-15	
Cleaning And Inspection.....	5-15	
Assembly.....	5-16	
Clutch Pack and Bearing.....	5-17	
Complete Disassembly.....	5-17	
Assembly.....	5-18	
5.7 TRANSMISSION SPROCKET		
Removal.....	5-20	
Cleaning and Inspection.....	5-21	
Installation.....	5-21	
5.8 DRIVE BELT		
Removal.....	5-23	
Installation.....	5-23	
TRANSMISSION		
6.1 FASTENER TORQUE VALUES		
Fastener Torque Values in this Chapter.....	6-1	
6.2 SPECIFICATIONS: TRANSMISSION		
Specifications.....	6-2	
Service Wear Limits.....	6-2	
6.3 TRANSMISSION		
Power Flow.....	6-4	
Neutral.....	6-4	
First Gear.....	6-4	
Second Gear.....	6-4	
Third Gear.....	6-4	
Fourth Gear.....	6-4	
Fifth Gear.....	6-4	
Sixth Gear.....	6-4	
6.4 SHIFTER LINKAGE		
Adjustment.....	6-6	
Forward Control Shifter Adjustment.....	6-6	
Mid Control Shifter Adjustment.....	6-6	
6.5 CLUTCH RELEASE COVER		
Removal and Disassembly.....	6-7	
Cleaning and Inspection.....	6-7	

TABLE OF CONTENTS

Assembly and Installation.....	6-8
6.6 TRANSMISSION ASSEMBLY	
Removal.....	6-9
Disassembly.....	6-10
Shifter Cam/Shifter Forks.....	6-10
Mainshaft.....	6-12
Countershaft.....	6-14
Removing Bearing Housing Bearings.....	6-15
Cleaning and Inspection.....	6-16
Assembly.....	6-16
Installing Bearing Housing Bearings.....	6-16
Countershaft.....	6-16
Mainshaft.....	6-17
Shifter Cam/Shifter Forks.....	6-17
Installation.....	6-19
6.7 MAIN DRIVE GEAR AND BEARING	
Removal.....	6-21
Cleaning and Inspection.....	6-22
Needle Bearing Replacement.....	6-23
Installation.....	6-24
Installing Main Drive Gear Bearing.....	6-24
Installing Main Drive Gear.....	6-25
Installing Main Drive Gear Large Seal.....	6-25
6.8 TRANSMISSION CASE	
Removal.....	6-28
Installation.....	6-28
Disassembly.....	6-29
Shifter Arm Assembly.....	6-29
Cleaning and Inspection.....	6-29
Assembly.....	6-30
Countershaft Needle Bearing Replacement.....	6-30
Shifter Pawl Lever Assembly.....	6-30
ELECTRICAL	
7.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	7-1
7.2 SPECIFICATIONS: ELECTRICAL	
Specifications.....	7-3
7.3 ELECTRICAL CADDY	
Removal.....	7-4
Installation.....	7-6
7.4 ELECTRONIC CONTROL MODULE (ECM)	
General.....	7-7
Replacement.....	7-7
Removal.....	7-7
Installation.....	7-7
7.5 BODY CONTROL MODULE (BCM)	
General.....	7-8
Removal.....	7-8
Installation.....	7-9
7.6 SECURITY SIREN	
Removal.....	7-10
Installation.....	7-10
7.7 SPARK PLUG CABLES	
Removal.....	7-11
Installation.....	7-11
7.8 FUSES	
General.....	7-12
Replacement.....	7-12
7.9 IGNITION SWITCH/FORK LOCK	
General.....	7-13
FXDL Models.....	7-13
Removal.....	7-13
Installation.....	7-15
FXDC, FXDF, FXDWG, FLD, FXDB/P/A Models: Ignition Switch Only.....	7-16
7.10 BATTERY TRAY AND BATTERY CABLES	
Battery Tray.....	7-18
Removal.....	7-18
Installation.....	7-18
Battery Cables.....	7-19
Routing.....	7-19
7.11 STARTER	
General.....	7-21
Removal.....	7-21
Drive Assembly.....	7-21
Disassembly.....	7-21
Inspection.....	7-22
Assembly.....	7-22
Solenoid.....	7-22
Cover and Plunger Removal.....	7-22
Short Post Contact: Starter.....	7-23
Long Post Contact: Battery Positive.....	7-23
Plunger and Cover Installation.....	7-24
Installation.....	7-24
7.12 HEADLAMP	
General.....	7-25
Bulb Removal: Except For FLD.....	7-25
Single Bulb Headlamp.....	7-25
Dual Bulb Headlamp.....	7-26
Bulb Installation: Except FLD.....	7-27
Headlamp Assembly Removal: Except FLD.....	7-27
Headlamp Assembly Installation: Except FLD.....	7-27
Headlamp: FLD Models.....	7-27
Removal.....	7-27
Bulb Replacement.....	7-28
Installation.....	7-29
7.13 TAIL LAMP	
General.....	7-30
Tail Lamp Bulb Replacement: Standard Style.....	7-30
Base Replacement: All But FXDB/P/A and FXDWG.....	7-30
Base Replacement: FXDWG/HDI and Canada.....	7-32

TABLE OF CONTENTS

7.14 TURN SIGNALS

Turn Signal Bulb Replacement: Bullet Style.....	7-34
Front Lamp Housing Replacement: All Except FLD.....	7-34
Rear Lamp Housing Replacement: All Except FLD.....	7-36
Front Turn Signal Lamps: FLD.....	7-38
Removal.....	7-38
Installation.....	7-38
Rear Turn Signal Lamps and Bracket: FLD.....	7-39
Removal.....	7-39
Installation.....	7-39
Rear Turn Signal Reflector/Isolator Repair: FLD.....	7-39
Removal.....	7-39
Installation.....	7-40

7.15 CRANK POSITION SENSOR (CKP)

General.....	7-41
Removal.....	7-41
Installation.....	7-41

7.16 AUTOMATIC COMPRESSION RELEASE (ACR)

General.....	7-42
Removal.....	7-42
Installation.....	7-42

7.17 VOLTAGE REGULATOR

Removal.....	7-44
Installation.....	7-44

7.18 ALTERNATOR

Removal.....	7-45
Cleaning and Inspection.....	7-45
Installation.....	7-45

7.19 FUEL GAUGE

General.....	7-46
Removal.....	7-46

7.20 FUEL GAUGE SENDER

Removal.....	7-47
Installation.....	7-48

7.21 INSTRUMENTS: FXDC, FXDF AND FLD

Speedometer.....	7-50
Removal.....	7-50
Installation.....	7-50

7.22 INSTRUMENTS: FXDB/P/A, FXDL AND FXDWG

Removal.....	7-51
General.....	7-51
Speedometer.....	7-51
Tachometer: FXDL Only.....	7-51
Installation.....	7-53
General.....	7-53
Speedometer.....	7-53
Tachometer: FXDL Only.....	7-53

7.23 VEHICLE SPEED SENSOR (VSS)

General.....	7-55
Removal.....	7-55
Installation.....	7-55

7.24 INDICATOR LAMPS

General.....	7-56
Removal.....	7-56
FXDC, FXDF and FLD Models.....	7-56
FXDB/P/A and FXDWG Models.....	7-56
FXDL Models.....	7-57
Installation.....	7-57
FXDC, FXDF and FLD Models.....	7-57
FXDB/P/A and FXDWG.....	7-57
FXDL Models.....	7-57

7.25 NEUTRAL SWITCH

General.....	7-58
Removal.....	7-58
Installation.....	7-58

7.26 OIL PRESSURE SWITCH

General.....	7-59
Removal.....	7-59
Installation.....	7-59

7.27 REAR STOPLAMP SWITCH

General.....	7-60
Removal.....	7-60
Installation.....	7-60

7.28 HORN

Inspection.....	7-61
Replacement.....	7-61

7.29 ACTIVE EXHAUST

General.....	7-62
Removal.....	7-62
Repair.....	7-62
Installation.....	7-62

7.30 MAIN WIRING HARNESS

General.....	7-64
Removal.....	7-64
Installation.....	7-66

7.31 HANDLEBAR CONTROL MODULES

General.....	7-70
Repair Procedures.....	7-70

7.32 LEFT HANDLEBAR CONTROL MODULE

Removal.....	7-71
Clutch Switch Replacement.....	7-71
Installation.....	7-72

7.33 RIGHT HANDLEBAR CONTROL MODULE

Removal.....	7-74
Front Brake Switch Replacement.....	7-75
Installation.....	7-75

TABLE OF CONTENTS

7.34 H-DSSS MAINTENANCE	Crimping Terminals.....A-7
Fob Battery.....7-77	
Battery Replacement Schedule.....7-77	
Battery Replacement.....7-77	
Smart Siren (If Installed).....7-77	
Battery Replacement Schedule.....7-77	
Battery Replacement.....7-77	
7.35 PERSONAL IDENTIFICATION NUMBER (PIN)	
General.....7-78	
Changing the PIN.....7-78	
Modifying an Existing PIN.....7-78	
7.36 H-DSSS ACTUATION	
Sidecar Configuration.....7-80	
Actuation.....7-80	
Fob Assignment.....7-80	
APPENDIX A CONNECTOR REPAIR	
A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTORS	
Autofuse Unsealed Connector Repair.....A-1	
General.....A-1	
Disassembly.....A-1	
Assembly.....A-1	
A.2 BOSCH COMPACT 1.1M CONNECTOR	
Bosch Compact 1.1M Connector.....A-2	
General.....A-2	
Housings.....A-2	
Removing Socket Terminal.....A-2	
Installing Socket Terminal.....A-2	
A.3 DELPHI 100W MICRO-PACK SEALED CONNECTOR	
Delphi 100W Micro-Pack Sealed Connector Repair.....A-3	
General.....A-3	
Separating Socket Housing From ECM.....A-3	
Mating Socket Housing To ECM.....A-3	
Removing Socket Terminal.....A-3	
Installing Socket Terminal.....A-3	
Crimping Terminals.....A-4	
A.4 DELPHI 150 METRI-PACK SEALED CONNECTORS	
Delphi 150 Metri-Pack Sealed Connector Repair.....A-5	
General.....A-5	
Separating Pin and Socket Housings.....A-5	
Mating Pin and Socket Housings.....A-5	
Removing Socket Terminal.....A-5	
Inserting Socket Terminal.....A-5	
A.5 DELPHI 280 METRI-PACK UNSEALED CONNECTORS	
Fuse Block Repair.....A-7	
Removing Socket Terminals.....A-7	
Installing Socket Terminals.....A-7	
A.6 DELPHI 480 METRI-PACK UNSEALED CONNECTORS	
Delphi 480 Metri-Pack Unsealed Connector Repair.....A-8	
General.....A-8	
Separating Pin and Socket Housings.....A-8	
Mating Pin and Socket Housings.....A-8	
Removing Socket Terminals.....A-8	
Installing Socket Terminals.....A-8	
A.7 DELPHI 630 METRI-PACK UNSEALED CONNECTORS	
Delphi 630 Metri-Pack Unsealed Connector Repair.....A-9	
Separating Pin and Socket Housings.....A-9	
Mating Pin and Socket Housings.....A-9	
Removing Socket Terminal.....A-9	
Installing Socket Terminal.....A-9	
A.8 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING	
Delphi 800 Metri-Pack Sealed Main Fuse Housing Repair.....A-10	
Removing Socket Terminals.....A-10	
Installing Socket Terminals.....A-10	
A.9 DELPHI METRI-PACK TERMINAL REPAIR	
Metri-Pack Terminal Crimps.....A-11	
Matching Terminal To Crimper.....A-11	
Preparing Wire Lead.....A-11	
Crimping Wire Core.....A-11	
Crimping Insulation/Seal.....A-11	
Inspecting Crimps.....A-12	
A.10 DELPHI MICRO-64 SEALED CONNECTORS	
Delphi Micro 64 Sealed Connector Repair.....A-13	
General.....A-13	
Separating Pin and Socket Housings.....A-13	
Mating Pin and Socket Housings.....A-13	
Removing Terminal.....A-13	
Installing Terminal.....A-14	
Preparing Wire Leads for Crimping.....A-14	
Crimping Terminals.....A-14	
Inspecting Crimps.....A-14	
A.11 DELPHI GT 150 SEALED CONNECTORS	
Delphi GT 150 Sealed Connector Repair.....A-16	
General.....A-16	
Separating Pin and Socket Housings.....A-16	
Mating Pin and Socket Housings.....A-16	
Removing Socket Terminals.....A-16	
Installing Socket Terminals.....A-16	
A.12 DELPHI GT 280 SEALED 73-TERMINAL ECM CONNECTOR	
Delphi GT 280 Sealed 73-Terminal ECM Connector.....A-18	

TABLE OF CONTENTS

Separating Socket Housing From ECM.....	A-18
Mating Socket Housing To ECM.....	A-18
Socket Terminal.....	A-18
ECM Ground Terminal.....	A-18
A.13 DEUTSCH DT SEALED CONNECTORS	
Deutsch DT Sealed Connector Repair.....	A-20
General.....	A-20
Separating Pin and Socket Housings.....	A-20
Mating Pin and Socket Housings.....	A-20
Removing Socket Terminals.....	A-20
Installing Socket Terminals.....	A-20
Removing Pin Terminals.....	A-22
Installing Pin Terminals.....	A-22
Crimping Terminals.....	A-23
A.14 DEUTSCH DT SEALED TERMINAL REPAIR	
Deutsch DT Sealed Terminal Crimps.....	A-24
Preparing Wire Leads for Crimping.....	A-24
Crimping Terminal to Lead.....	A-24
Inspecting Crimps.....	A-24
A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR	
Deutsch DTM Sealed Mini Terminal Crimps.....	A-25
Preparing Wire Leads for Crimping.....	A-25
Crimping a Mini Terminal to Wire Lead.....	A-25
Inspecting Crimps.....	A-25
A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR	
Deutsch DTM Sealed Solid Barrel Terminal Crimps.....	A-26
Preparing Wire Leads For Crimping.....	A-26
Adjusting Crimper Tool.....	A-26
Crimping a Barrel Contact To Wire Lead.....	A-26
Inspecting Crimps.....	A-26
A.17 JAE MX19 SEALED CONNECTORS	
JAE MX19 Sealed Connectors.....	A-28
Connector Housings.....	A-28
Removing Terminals.....	A-28
Installing Terminals.....	A-28
Crimping Terminals.....	A-28
A.18 MOLEX CMC SEALED CONNECTORS	
Moolex CMC Sealed Connectors.....	A-29
Separating the Connector.....	A-29
Removing Terminals.....	A-29
Installing Terminals.....	A-29
Crimping Terminals.....	A-30
A.19 MOLEX MX 150 SEALED CONNECTORS	
Moolex MX 150 Sealed Connector Repair.....	A-31
Separating Pin and Socket Housings.....	A-31
Mating Pin and Socket Housings.....	A-31
Removing Terminals.....	A-31
Installing Terminals.....	A-31
Crimp Terminal to Lead.....	A-32
Prepare Lead.....	A-32
Prepare Tool.....	A-32
Position Terminal in the Punch/Die.....	A-33
Insert Stripped Lead.....	A-33
Crimp Terminal to Lead.....	A-34
Inspect Crimp.....	A-34
A.20 TYCO 070 MULTILOCK UNSEALED CONNECTOR	
Tyco 070 Multilock Unsealed Connector Repair.....	A-35
General.....	A-35
Separating Pin and Socket Housings.....	A-35
Mating Pin and Socket Housings.....	A-35
Removing Terminals from Housing.....	A-35
Inserting Terminals into Housing.....	A-36
Preparing Wire Leads for Crimping.....	A-36
Crimping Terminals to Leads.....	A-37
Inspecting Crimped Terminals.....	A-38
A.21 TYCO GET 64 SEALED CONNECTOR	
Tyco GET 64 Sealed Connector.....	A-39
General.....	A-39
Housings.....	A-39
Removing Socket Terminals.....	A-39
Installing Socket Terminals.....	A-39
Crimping Terminals.....	A-40
A.22 TYCO MCP SEALED CONNECTOR	
Tyco MCP Sealed Connector.....	A-41
General.....	A-41
Housing.....	A-41
Removing the Large Terminals.....	A-41
Removing the Small Terminals.....	A-41
Installing Terminals.....	A-42
Crimping Terminals.....	A-42
A.23 SEALED SPLICE CONNECTORS	
Sealed Splice Connector Repair.....	A-43
General.....	A-43
Preparing Wire Leads.....	A-43
Splicing Wire Leads.....	A-43
Inspecting Seals.....	A-43
APPENDIX B WIRING	
B.1 CONNECTORS	
Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1
B.2 WIRING DIAGRAMS	
Wiring Diagram Information.....	B-4
Wire Color Codes.....	B-4
Wiring Diagram Symbols.....	B-4
2013 Dyna Wiring Diagrams.....	B-6

TABLE OF CONTENTS

APPENDIX C ABS

C.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....C-1

C.2 ABS MODULE

General.....C-2

Electro Hydraulic Control Unit (EHCU).....C-2

 Removal.....C-2

 Installation.....C-3

C.3 WHEEL SPEED SENSORS

Front Wheel Speed Sensor (WSS).....C-5

 Removal.....C-5

 Installation.....C-6

Rear Wheel Speed Sensor (WSS).....C-6

 Removal.....C-6

 Installation.....C-7

C.4 ABS BRAKE LINES

Front Master Cylinder to Front Caliper Line Assembly.....C-9

 Removal.....C-9

 Installation.....C-9

Front ABS Lines.....C-9

 Removal.....C-9

 Installation.....C-11

Rear Master Cylinder to ABS Module.....C-11

 Removal.....C-11

 Installation.....C-12

ABS Module to Rear Brake Caliper.....C-12

Removal.....C-12
Installation.....C-13

APPENDIX D CONVERSIONS

D.1 LENGTH CONVERSION

Conversion Table.....D-1

D.2 FLUID CONVERSION

United States System.....D-2

Metric System.....D-2

British Imperial System.....D-2

D.3 TORQUE CONVERSION

United States System.....D-3

Metric System.....D-3

APPENDIX E GLOSSARY

E.1 GLOSSARY

Acronyms and Abbreviations.....E-1

REFERENCE MATERIAL

TOOLS.....I

TORQUE VALUES.....IX

INDEX.....XXIII

Thank you so much for reading.

**Please click the “Buy Now!”
button below to download the
complete manual.**

Buy Now



After you pay.

**You can download the most
perfect and complete manual in
the world immediately.**

Our support email:

ebooklibonline@outlook.com