



2014 Harley-Davidson Dyna Models Service Manual

©2013 H-D.
ALL RIGHTS RESERVED
99481-14

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Disposal and Recycling.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip-Type Seals.....	1-4
O-Rings.....	1-5
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Cleaning.....	1-5
Protecting Rubber Parts.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry Bars.....	1-5
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 FUEL AND OIL

Fuel.....	1-7
Gasoline Blends.....	1-7
Engine Lubrication.....	1-7
Winter Lubrication.....	1-8

1.4 BULB REQUIREMENTS

General.....1-9

1.5 MAINTENANCE SCHEDULE

General.....1-10

1.6 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-16
Type of Oil.....	1-16
Checking with Cold Engine.....	1-16
Checking with Warm Engine.....	1-16
Changing Oil and Filter.....	1-17

1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-19
Installation.....	1-19
Exhaust System Leak Check.....	1-20
Exhaust System Leakage.....	1-20

1.8 TIRES AND WHEELS

Tires.....	1-21
Tire Replacement.....	1-21
Dunlop.....	1-22
Michelin.....	1-22
Wheel Bearings.....	1-23
Wheel Spokes.....	1-23
Identify Wheel Spoke Groups.....	1-23
Wheel Spoke Adjustment.....	1-23

1.9 PRIMARY CHAINCASE LUBRICANT

General.....	1-25
Changing Primary Chaincase Lubricant.....	1-25

1.10 TRANSMISSION LUBRICANT

Checking Transmission Lubricant.....	1-27
Changing Transmission Lubricant.....	1-27

1.11 CLUTCH

Adjustment.....	1-29
-----------------	------

1.12 DRIVE BELT AND SPROCKETS

General.....	1-31
Cleaning.....	1-31
Inspection.....	1-31
Sprockets.....	1-31
Drive Belt.....	1-31
Checking Drive Belt Deflection.....	1-32
Adjusting Belt Deflection.....	1-34

1.13 THROTTLE CABLES

Cable Inspection, Lubrication and Adjustment.....	1-35
Inspection and Lubrication.....	1-35
Adjustment.....	1-35

1.14 CABLE AND CHASSIS LUBRICATION

General.....	1-37
Cables and Hand Levers.....	1-37
Jiffy Stand.....	1-37

1.15 BRAKES

Fluid Inspection.....	1-38
Rear Pedal Height.....	1-38
Brake Lines Inspection.....	1-38

1.16 BRAKE PADS AND DISCS

Inspection.....	1-40
Brake Pads.....	1-40
Brake Disc.....	1-40
Brake Pad Replacement.....	1-41
Rear Brake Caliper.....	1-41
Front Brake Caliper.....	1-41

1.17 SPARK PLUGS

Inspection.....	1-43
Spark Plug Cable Inspection.....	1-43

TABLE OF CONTENTS

1.18 STEERING HEAD BEARINGS

Adjustment.....	1-45
Bearing Adjustment (Fall-Away).....	1-45
Lubrication.....	1-46

1.19 BATTERY MAINTENANCE

General.....	1-47
Cleaning and Inspection.....	1-48
Voltmeter Test.....	1-48
Voltmeter Test.....	1-48
Charging Battery.....	1-48
Safety Precautions.....	1-48
Using a Battery Charger.....	1-48
Disconnection and Removal.....	1-49
Storage.....	1-50
Installation and Connection.....	1-50

1.20 ENGINE MOUNTS

Inspection.....	1-51
-----------------	------

1.21 HEADLAMP ALIGNMENT

Headlamp Alignment.....	1-52
Adjustment: All Models Except FLD.....	1-52
Adjustment: FLD Models.....	1-53

1.22 SUSPENSION ADJUSTMENTS

Shock Absorber Preload Adjustment.....	1-54
----------------------------------------	------

1.23 STORAGE

General.....	1-55
Placing in Storage.....	1-55
Removal from Storage.....	1-55

1.24 TROUBLESHOOTING

General.....	1-56
Engine.....	1-56
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-56
Engine Turns Over But Does Not Start.....	1-56
Starts Hard.....	1-56
Starts But Runs Irregularly or Misses.....	1-56
Spark Plug Fouls Repeatedly.....	1-56
Pre-Ignition or Detonation (Knocks or Pings).....	1-56
Overheating.....	1-56
Valve Train Noise.....	1-57
Excessive Vibration.....	1-57
Check Engine Light Illuminates During Operation.....	1-57
Lubrication System.....	1-57
Oil Does Not Return To Oil Pan.....	1-57
Engine Uses Too Much Oil Or Smokes Excessively..	1-57
Engine Leaks Oil From Cases, Pushrods, Hoses, Etc.....	1-57
Low Oil Pressure.....	1-57
High Oil Pressure.....	1-57
Electrical System.....	1-57
Alternator Does Not Charge.....	1-57
Alternator Charge Rate Is Below Normal.....	1-57
Speedometer Operates Erratically.....	1-57
Transmission.....	1-58
Shifts Hard.....	1-58
Jumps Out Of Gear.....	1-58

Clutch Slips.....	1-58
Clutch Drags Or Does Not Release.....	1-58
Clutch Chatters.....	1-58
Handling.....	1-58
Irregularities.....	1-58
Brakes.....	1-58
Brake Does Not Hold Normally.....	1-58

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---------------------------------------------	-----

2.2 SPECIFICATIONS

Specifications.....	2-6
Chassis Specifications.....	2-6
Tire Specifications.....	2-7

2.3 VEHICLE IDENTIFICATION NUMBER (VIN)

Vehicle Identification Number.....	2-9
------------------------------------	-----

2.4 FRONT WHEEL

Removal.....	2-11
Disassembly.....	2-11
Cast Wheel.....	2-11
Cast Wheel, Dual Brakes.....	2-12
Laced Wheel.....	2-12
Cleaning and Inspection.....	2-15
Assembly.....	2-16
Cast Wheel.....	2-16
Laced Wheel.....	2-16
Installation.....	2-16

2.5 REAR WHEEL

Removal.....	2-18
Disassembly.....	2-18
Cleaning and Inspection.....	2-20
Assembly.....	2-21
Installation.....	2-21

2.6 SEALED WHEEL BEARINGS

Inspection.....	2-23
Removal.....	2-23
Installation.....	2-24

2.7 WHEEL LACING

Wheel Lacing: Angle Flange Hub.....	2-26
Wheel Lacing: Straight Flange Hub, Single Hole Circle...	2-27
Wheel Lacing: Straight Flange Hub, Dual Hole Circle.....	2-29

2.8 CHECKING AND TRUING WHEELS

General.....	2-31
Checking Wheel Runout.....	2-31
Checking Radial Runout.....	2-31
Checking Lateral Runout.....	2-31
Laced Wheel Rim Offset.....	2-32
Truing Laced Wheels.....	2-35
Radial Runout.....	2-35
Lateral Runout.....	2-35

2.9 VEHICLE ALIGNMENT

Inspection.....2-37

2.10 FRONT BRAKE MASTER CYLINDER

General.....2-39
Removal and Disassembly.....2-39
Cleaning and Inspection.....2-41
Assembly and Installation.....2-41

2.11 FRONT BRAKE CALIPER

Removal.....2-43
Disassembly.....2-43
Cleaning, Inspection and Repair.....2-45
Assembly.....2-46
Installation.....2-47

2.12 REAR BRAKE MASTER CYLINDER

General.....2-48
Removal.....2-48
Disassembly.....2-50
Cleaning and Inspection.....2-51
Assembly.....2-51
Installation.....2-51

2.13 REAR BRAKE CALIPER

Removal.....2-53
Disassembly.....2-53
Cleaning, Inspection and Repair.....2-55
Assembly.....2-55
Installation.....2-56

2.14 BLEEDING BRAKES

General.....2-57
Procedure.....2-57

2.15 TIRES

General.....2-59
Removal.....2-59
Cleaning, Inspection and Repair.....2-59
Installation.....2-60
 Tube Type Tires.....2-60
 Tubeless Tires.....2-60
Checking Tire Runout.....2-61
 Lateral Runout.....2-61
 Radial Runout.....2-61
Wheel Balancing.....2-61
 Static vs Dynamic.....2-61
 Weights.....2-61

2.16 FRONT FORK

Fork Oil Leak Check.....2-63
 Fork Oil Seals.....2-63
 Oil Leak Check.....2-63
Removal.....2-63
Disassembly.....2-63
Disassembly: Cartridge Fork (FLD, Left Side).....2-66
Assembly.....2-68
Cleaning and Inspection.....2-69
Assembly: Cartridge Fork (FLD, Left Side).....2-69
Installation.....2-71

2.17 STEERING HEAD

Removal: All But FLD.....2-73
Removal: FLD.....2-73
Inspection.....2-74
Disassembly.....2-74
 Steering Head Bearing Race Removal.....2-74
Assembly.....2-74
Installation: All but FLD.....2-74
Installation: FLD.....2-75

2.18 BELT GUARD

Removal.....2-77
Installation.....2-77

2.19 DEBRIS DEFLECTOR

Removal.....2-78
Installation.....2-78

2.20 THROTTLE CONTROL

Removal/Disassembly.....2-79
Cleaning and Inspection.....2-79
Assembly/Installation.....2-79
Throttle Cable Routing.....2-79

2.21 REAR SHOCK ABSORBERS

General.....2-81
Removal.....2-81
Inspection.....2-81
Installation.....2-81

2.22 REAR FORK

Removal.....2-82
Disassembly.....2-82
Cleaning and Inspection.....2-83
Assembly.....2-83
Installation.....2-83

2.23 CLUTCH CONTROL

Removal.....2-84
Installation.....2-84

2.24 HANDLEBARS: FXDC AND FLD

Removal.....2-86
 All Models.....2-86
 FXDC Models.....2-86
 FLD Models.....2-86
Installation.....2-87
 FXDC Models.....2-87
 FLD Models.....2-88
 All Models.....2-88
Left Hand Grip.....2-88
 Removal.....2-88
 Installation.....2-88

2.25 HANDLEBARS: FXDB/P, FXDF AND FXDWG

Removal.....2-89
 FXDB/P.....2-89
 FXDF and FXDWG.....2-90
Installation.....2-91

TABLE OF CONTENTS

2.26 FRONT FENDER		
Removal.....	2-94	
Installation.....	2-94	
2.27 REAR FENDER		
General.....	2-95	
Removal.....	2-95	
Tail Lamp/Turn Signal Harness Routing.....	2-95	
Installation.....	2-95	
FXDC.....	2-97	
Removal.....	2-97	
Installation.....	2-97	
FXDB.....	2-97	
Removal.....	2-97	
Installation.....	2-97	
FXDWG.....	2-98	
Removal.....	2-98	
Sissy Bar.....	2-99	
Installation.....	2-99	
FLD.....	2-100	
Removal.....	2-100	
Disassembly.....	2-100	
Assembly.....	2-100	
Installation.....	2-100	
FXDF.....	2-101	
Removal.....	2-101	
Installation.....	2-101	
2.28 SEAT		
Removal.....	2-103	
Seat and Seat Strap Removal: All But FXDWG.....	2-103	
Seat and Seat Strap Removal: FXDWG.....	2-103	
Installation.....	2-104	
Seat and Seat Strap: All But FXDWG.....	2-104	
Seat and Seat Strap: FXDWG.....	2-104	
2.29 FOOTBOARDS AND FOOTRESTS		
Rider Footboards.....	2-106	
Removal.....	2-106	
Disassembly.....	2-106	
Assembly.....	2-106	
Installation.....	2-106	
Rider Footrests: Mid Controls.....	2-107	
Removal.....	2-107	
Installation.....	2-107	
Rider Footrests: Forward Controls.....	2-108	
Removal.....	2-108	
Installation.....	2-108	
Passenger Footrests: All models except FXDF.....	2-108	
Removal.....	2-108	
Installation.....	2-108	
2.30 HEADLAMP NACELLE: FLD		
Upper and lower nacelle: FLD.....	2-110	
Removal.....	2-110	
Installation.....	2-110	
2.31 WINDSHIELD: FLD		
Windshield.....	2-111	
Removal.....	2-111	
Installation.....	2-111	
Windshield Window.....	2-111	
Removal.....	2-111	
Installation.....	2-113	
2.32 SADDLEBAGS: FLD		
Saddlebags: FLD Model.....	2-114	
Removal.....	2-114	
Installation.....	2-114	
Saddlebags.....	2-115	
Disassembly.....	2-115	
Assembly.....	2-115	
Saddlebag Lid.....	2-116	
Saddlebag Lid Seal.....	2-116	
Disassembly.....	2-117	
Assembly.....	2-117	
2.33 JIFFY STAND		
Cleaning.....	2-119	
Jiffy Stand Sensor: HDI Models.....	2-121	
Removal.....	2-121	
Installation.....	2-121	
2.34 FORK LOCK		
Removal.....	2-123	
Installation.....	2-123	
2.35 ENGINE MOUNTS		
Removal.....	2-125	
Front Isolator.....	2-125	
Rear Isolator.....	2-125	
Installation.....	2-125	
Front Isolator.....	2-125	
Rear Isolator.....	2-125	
2.36 SAREE GUARD: INDIA MODELS		
Replacement.....	2-127	
Removal.....	2-127	
Installation.....	2-127	
2.37 MEDALLIONS, SERIALIZED BADGES AND TANK EMBLEMS		
Removal.....	2-128	
Installation.....	2-128	
ENGINE		
3.1 FASTENER TORQUE VALUES		
Fastener Torque Values in this Chapter.....	3-1	
3.2 SPECIFICATIONS		
Specifications.....	3-3	
3.3 SERVICE WEAR LIMITS		
General.....	3-5	
3.4 ENGINE OIL FLOW		
Oil Feed.....	3-7	
Top End.....	3-7	
Bottom End.....	3-9	
Oil Return.....	3-11	

3.5 OIL PUMP OPERATION

General.....3-12
 Operation.....3-12

3.6 BREATHER OPERATION

General.....3-14

3.7 OIL PRESSURE

Oil Pressure Indicator Lamp.....3-15
 Checking Oil Pressure.....3-15

3.8 TROUBLESHOOTING

Diagnosing Valve Train Noise.....3-17
 Compression Test.....3-17
 Cylinder Leakdown Test.....3-17
 Diagnosing Smoking Engine or High Oil Consumption.....3-18
 Check Prior to Cylinder Head Removal.....3-18
 Check After Cylinder Head Removal.....3-18

3.9 HOW TO USE THIS SECTION

Top End Repair.....3-19
 Bottom End Repair.....3-19
 Typical Symptoms.....3-19

3.10 TOP END SERVICE

Engine in Chassis.....3-20
 Engine Removed from Chassis.....3-21

3.11 CAM COMPARTMENT SERVICE

Engine in Chassis.....3-22
 Engine Removed From Chassis.....3-23

3.12 STRIPPING MOTORCYCLE FOR SERVICE

Procedure.....3-24

3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE

Procedure.....3-25

3.14 REMOVING ENGINE FROM CHASSIS

Procedure.....3-26

3.15 INSTALLING ENGINE IN CHASSIS

Procedure.....3-27

3.16 TOP END OVERHAUL: DISASSEMBLY

General.....3-29
 Rocker Covers.....3-29
 Rocker Arm Support Plate.....3-29
 Pushrods, Lifters and Covers.....3-31
 Cylinder Head.....3-31
 Cylinder.....3-32
 Piston.....3-33

3.17 BREATHER ASSEMBLY

Disassembly.....3-35
 Cleaning and Inspection.....3-35
 Assembly.....3-35

3.18 ROCKER ARM SUPPORT PLATE

Disassembly.....3-36
 Cleaning and Inspection.....3-36
 Inspection.....3-36
 Rocker Shaft Fit.....3-36
 Rocker Arm Shaft to Bushing.....3-37
 Replace Rocker Arm Bushings.....3-37
 Assembly.....3-38

3.19 PUSHRODS, LIFTERS AND COVERS

Disassembly.....3-39
 Cleaning and General Inspection.....3-39
 Lifter Inspection.....3-39
 Assembly.....3-40

3.20 CYLINDER HEAD

Disassembly.....3-41
 Cleaning.....3-42
 Inspection.....3-42
 Cylinder Head.....3-42
 Valve Guides.....3-43
 Valves.....3-43
 Valve Springs.....3-43
 Tapered Keepers.....3-43
 Valve Seats.....3-43
 Valve Guide Replacement.....3-43
 Removal.....3-43
 Installation.....3-44
 Valve and Seat Refacing.....3-47
 Assembly.....3-49

3.21 CYLINDER

Cleaning.....3-51
 Inspection.....3-51
 Deglazing Cylinder.....3-53
 Boring and Honing Cylinder.....3-53

3.22 PISTON

Disassembly.....3-55
 Piston Rings.....3-55
 Cleaning.....3-55
 Inspection.....3-55
 Assembly.....3-57
 Checking Piston Ring Gap.....3-57
 Installing Piston Rings.....3-57

3.23 TOP END OVERHAUL: ASSEMBLY

General.....3-59
 Piston.....3-59
 Cylinder.....3-60
 Cylinder Head.....3-62
 Pushrods, Lifters and Covers.....3-66
 Rocker Arm Support Plate.....3-67
 Breather and Rocker Cover.....3-68

3.24 CAM COMPARTMENT AND COMPONENTS

Cam Support Plate and Cover Removal.....3-69
 Prepare Engine.....3-69
 Cam Chain and Sprockets Removal.....3-69

TABLE OF CONTENTS

Cam Support Plate Removal.....	3-70
Cam Support Plate Cleaning and Inspection.....	3-71
Oil Pressure Valve.....	3-71
Cam Support Plate.....	3-71
Camshafts.....	3-71
Removal.....	3-71
Installation.....	3-72
Oil Pressure Relief Valve.....	3-73
Removal.....	3-73
Inspection.....	3-73
Installation.....	3-74
Cam Needle Bearings.....	3-74
Removal.....	3-74
Installation.....	3-75
Cam Support Plate and Cover Installation.....	3-77

3.25 OIL PUMP

Removal.....	3-81
Cleaning and Inspection.....	3-81
Installation.....	3-82

3.26 CRANKCASE DISASSEMBLY AND REPAIR

Crankcase Disassembly.....	3-83
Cleaning and Inspection.....	3-83
Right Crankcase Half.....	3-84
Main Bearing Removal.....	3-84
Main Bearing Installation.....	3-84
Piston Jets Removal.....	3-85
Piston Jets Installation.....	3-85
Left Crankcase Half.....	3-85
Main Bearing Removal.....	3-85
Main Bearing Installation.....	3-86
Sprocket Shaft Bearing Inner Race.....	3-87
Removal.....	3-87
Installation.....	3-88
Cylinder Studs.....	3-90
Removal.....	3-90
Installation.....	3-90
Pipe Plug and Oil Fittings.....	3-90
Removal.....	3-90
Installation.....	3-90

3.27 FLYWHEEL AND CONNECTING RODS

General.....	3-91
Symptoms.....	3-91
No Oil Pressure.....	3-91
Vibration.....	3-91
Inspection.....	3-91
Measuring Crankshaft Runout.....	3-91
Crankshaft Installed.....	3-91
Crankshaft Removed.....	3-92

3.28 CRANKCASE ASSEMBLY

Crankcase Assembly.....	3-93
-------------------------	------

3.29 OIL PAN

Removal.....	3-95
Installation.....	3-95

FUEL SYSTEM

4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	4-1
---------------------------------------------	-----

4.2 SPECIFICATIONS: FUEL SYSTEM

Specifications.....	4-3
---------------------	-----

4.3 AIR CLEANER ASSEMBLY

Removal.....	4-4
Installation.....	4-6
Backplate Assembly: HDI Models.....	4-6

4.4 FUEL TANK

General.....	4-8
Removal.....	4-8
Cleaning and Inspection.....	4-9
Installation.....	4-10
Vapor Valve.....	4-10

4.5 THROTTLE POSITION SENSOR (TPS)

General.....	4-11
Removal.....	4-11
Installation.....	4-11

4.6 INTAKE AIR TEMPERATURE SENSOR (IAT)

General.....	4-12
Removal.....	4-12
Installation.....	4-12

4.7 ENGINE TEMPERATURE SENSOR (ET)

General.....	4-13
Removal.....	4-13
Installation.....	4-14

4.8 INDUCTION MODULE

Removal.....	4-15
Installation.....	4-16

4.9 IDLE AIR CONTROL (IAC)

General.....	4-17
Removal.....	4-17
Installation.....	4-17

4.10 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)

General.....	4-18
Removal.....	4-18
Installation.....	4-18

4.11 OXYGEN SENSOR

General.....	4-19
Removal.....	4-19
Installation.....	4-19

4.12 FUEL INJECTORS

General.....	4-20
--------------	------

Removal.....4-20
 Installation.....4-20

4.13 FUEL PUMP

General.....4-22
 Removal.....4-22
 Disassembly and Assembly.....4-24
 Fuel Filter.....4-24
 Regulator.....4-24
 Inlet Sock.....4-25
 Fuel Pump.....4-26
 Installation.....4-26

4.14 FUEL PRESSURE TEST

General.....4-29
 Testing.....4-29

4.15 EXHAUST SYSTEM

Removal: FXDB and FXDC.....4-31
 Disassembly: FXDB/P and FXDC.....4-32
 Assembly: FXDB/P and FXDC.....4-33
 Installation: FXDB/P and FXDC.....4-33
 Removal: FXDF and FXDWG.....4-34
 Installation: FXDF and FXDWG.....4-36
 Removal: FLD.....4-37
 Installation: FLD.....4-39

4.16 INTAKE LEAK TEST

General.....4-40
 Leak Tester.....4-40
 Parts List.....4-40
 Tester Assembly.....4-40
 Tester Adjustment.....4-40
 Procedure.....4-40

4.17 EVAPORATIVE EMISSIONS CONTROL (CA MODELS)

General.....4-42
 Charcoal Canister.....4-44
 Removal.....4-44
 Installation.....4-44

DRIVE

5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....5-1

5.2 SPECIFICATIONS: DRIVE

Specifications.....5-2

5.3 PRIMARY CHAINCASE COVER

General.....5-3
 Removal.....5-3
 Installation.....5-3

5.4 DRIVE COMPONENTS

Removal.....5-5
 Installation.....5-7

5.5 PRIMARY CHAINCASE HOUSING

Removal.....5-10
 Inspection.....5-10
 Mainshaft Bearing and Seal.....5-10
 Removal.....5-10
 Installation.....5-11
 Mainshaft Bearing Inner Race.....5-11
 Removal.....5-11
 Installation.....5-12
 Shifter Shaft Bushing.....5-12
 Installation.....5-13

5.6 CLUTCH

Removal and Installation.....5-15
 Clutch Pack Only.....5-15
 Partial Disassembly.....5-15
 Cleaning And Inspection.....5-15
 Assembly.....5-16
 Clutch Pack and Bearing.....5-17
 Complete Disassembly.....5-17
 Assembly.....5-18

5.7 TRANSMISSION SPROCKET

Removal.....5-20
 Cleaning and Inspection.....5-21
 Installation.....5-21

5.8 DRIVE BELT

Removal.....5-23
 Installation.....5-23

TRANSMISSION

6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....6-1

6.2 SPECIFICATIONS: TRANSMISSION

Specifications.....6-2
 Service Wear Limits.....6-2

6.3 TRANSMISSION

Power Flow.....6-3
 Neutral.....6-3
 First Gear.....6-3
 Second Gear.....6-3
 Third Gear.....6-3
 Fourth Gear.....6-3
 Fifth Gear.....6-3
 Sixth Gear.....6-3

6.4 SHIFTER LINKAGE

Adjustment.....6-5
 Forward Control Shifter Adjustment.....6-5
 Mid Control Shifter Adjustment.....6-5

6.5 CLUTCH RELEASE COVER

Removal and Disassembly.....6-6
 Cleaning and Inspection.....6-6
 Assembly and Installation.....6-7

TABLE OF CONTENTS

6.6 TRANSMISSION ASSEMBLY

Removal.....	6-8
Disassembly.....	6-9
Shifter Cam/Shifter Forks.....	6-9
Mainshaft.....	6-11
Countershaft.....	6-13
Removing Bearing Housing Bearings.....	6-14
Cleaning and Inspection.....	6-15
Assembly.....	6-15
Installing Bearing Housing Bearings.....	6-15
Countershaft.....	6-15
Mainshaft.....	6-16
Shifter Cam/Shifter Forks.....	6-16
Installation.....	6-18

6.7 MAIN DRIVE GEAR AND BEARING

Removal.....	6-20
Cleaning and Inspection.....	6-21
Needle Bearing Replacement.....	6-22
Installation.....	6-23
Installing Main Drive Gear Bearing.....	6-23
Installing Main Drive Gear.....	6-24
Installing Main Drive Gear Large Seal.....	6-24

6.8 TRANSMISSION CASE

Removal.....	6-27
Installation.....	6-27
Disassembly.....	6-28
Shifter Arm Assembly.....	6-28
Cleaning and Inspection.....	6-28
Assembly.....	6-29
Countershaft Needle Bearing Replacement.....	6-29
Shifter Pawl Lever Assembly.....	6-29

ELECTRICAL

7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	7-1
---------------------------------------------	-----

7.2 SPECIFICATIONS: ELECTRICAL

Specifications.....	7-3
---------------------	-----

7.3 ELECTRICAL CADDY

Removal.....	7-4
Installation.....	7-6

7.4 ELECTRONIC CONTROL MODULE (ECM)

General.....	7-7
Replacement.....	7-7
Removal.....	7-7
Installation.....	7-7

7.5 BODY CONTROL MODULE (BCM)

General.....	7-8
Removal.....	7-8
Installation.....	7-9

7.6 SECURITY SIREN

Removal.....	7-10
Installation.....	7-10

7.7 SPARK PLUG CABLES

Removal.....	7-11
Installation.....	7-11

7.8 FUSES

General.....	7-12
Replacement.....	7-12

7.9 IGNITION SWITCH

Removal.....	7-13
Installation.....	7-14

7.10 BATTERY TRAY AND BATTERY CABLES

Battery Tray.....	7-15
Removal.....	7-15
Installation.....	7-15
Battery Cables.....	7-16
Routing.....	7-16

7.11 STARTER

General.....	7-18
Removal.....	7-18
Drive Assembly.....	7-18
Disassembly.....	7-18
Inspection.....	7-19
Assembly.....	7-19
Solenoid.....	7-19
Cover and Plunger Removal.....	7-19
Short Post Contact: Starter.....	7-20
Long Post Contact: Battery Positive.....	7-20
Plunger and Cover Installation.....	7-21
Installation.....	7-21

7.12 HEADLAMP

General.....	7-22
Bulb Removal: Except For FLD.....	7-22
Single Bulb Headlamp.....	7-22
Dual Bulb Headlamp.....	7-23
Bulb Installation: Except FLD.....	7-24
Headlamp Assembly Removal: Except FLD.....	7-24
Headlamp Assembly Installation: Except FLD.....	7-24
Headlamp: FLD Models.....	7-24
Removal.....	7-24
Bulb Replacement.....	7-25
Installation.....	7-26

7.13 TAIL LAMP

General.....	7-27
Tail Lamp Bulb Replacement: FLD and FXDC Models.....	7-27
Base Replacement: FLD and FXDC Models.....	7-27
Base Replacement: FXDWG/HDI and Canada.....	7-29
Tail Lamp Replacement: FXDF Models.....	7-30
Tail Lamp Removal.....	7-30
Tail Lamp Installation.....	7-30
License Plate Lamp Replacement.....	7-30

7.14 TURN SIGNALS

Turn Signal Bulb Replacement: Bullet Style.....	7-32
Front Lamp Housing Replacement: All Except FLD.....	7-32

TABLE OF CONTENTS

Rear Lamp Housing Replacement: All Except FLD.....	7-34	FXDB/P, FXDWG and FXDF Models.....	7-53
Front Turn Signal Lamps: FLD.....	7-36	7.25 NEUTRAL SWITCH	
Removal.....	7-36	General.....	7-54
Installation.....	7-36	Removal.....	7-54
Rear Turn Signal Lamps and Bracket: FLD.....	7-37	Installation.....	7-54
Removal.....	7-37	7.26 OIL PRESSURE SWITCH	
Installation.....	7-37	General.....	7-55
Rear Turn Signal Reflector/Isolator Repair: FLD.....	7-37	Removal.....	7-55
Removal.....	7-37	Installation.....	7-55
Installation.....	7-38	7.27 REAR STOPLAMP SWITCH	
7.15 CRANK POSITION SENSOR (CKP)		General.....	7-56
General.....	7-39	Removal.....	7-56
Removal.....	7-39	Installation.....	7-56
Installation.....	7-39	7.28 HORN	
7.16 AUTOMATIC COMPRESSION RELEASE (ACR)		Inspection.....	7-57
General.....	7-40	Replacement.....	7-57
Removal.....	7-40	7.29 ACTIVE EXHAUST	
Installation.....	7-40	General.....	7-58
7.17 VOLTAGE REGULATOR		Removal.....	7-58
Removal.....	7-42	Repair.....	7-58
Installation.....	7-42	Installation.....	7-58
7.18 ALTERNATOR		7.30 MAIN WIRING HARNESS	
Removal.....	7-43	General.....	7-60
Cleaning and Inspection.....	7-43	Removal.....	7-60
Installation.....	7-43	Installation.....	7-62
7.19 FUEL GAUGE		7.31 HANDLEBAR CONTROL MODULES	
General.....	7-44	General.....	7-66
Removal.....	7-44	Repair Procedures.....	7-66
7.20 FUEL GAUGE SENDER		7.32 LEFT HANDLEBAR CONTROL MODULE	
Removal.....	7-45	Removal.....	7-67
Installation.....	7-46	Clutch Switch Replacement.....	7-67
7.21 INSTRUMENTS: FXDC, FXDF AND FLD		Installation.....	7-68
Speedometer.....	7-48	7.33 RIGHT HANDLEBAR CONTROL MODULE	
Removal.....	7-48	Removal.....	7-70
Installation.....	7-48	Front Brake Switch Replacement.....	7-71
7.22 INSTRUMENTS: FXDB/P AND FXDWG		Installation.....	7-71
Removal.....	7-49	7.34 H-DSSS MAINTENANCE	
Installation.....	7-49	Fob Battery.....	7-73
7.23 VEHICLE SPEED SENSOR (VSS)		Battery Replacement Schedule.....	7-73
General.....	7-51	Battery Replacement.....	7-73
Removal.....	7-51	Smart Siren (If Installed).....	7-73
Installation.....	7-51	Battery Replacement Schedule.....	7-73
7.24 INDICATOR LAMPS		Battery Replacement.....	7-73
General.....	7-52	7.35 PERSONAL IDENTIFICATION NUMBER (PIN)	
Removal.....	7-52	General.....	7-74
FXDC and FLD Models.....	7-52	Changing The PIN.....	7-74
FXDB/P, FXDWG and FXDF Models.....	7-52	Modifying an Existing PIN.....	7-74
Installation.....	7-53		
FXDC and FLD Models.....	7-53		

TABLE OF CONTENTS

7.36 H-DSSS ACTUATION

Sidecar Configuration.....	7-76
Actuation.....	7-76
Fob Assignment.....	7-76

APPENDIX A CONNECTOR REPAIR

A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTORS

Autofuse Unsealed Connector Repair.....	A-1
General.....	A-1
Disassembly.....	A-1
Assembly.....	A-1

A.2 BOSCH COMPACT 1.1M CONNECTOR

Bosch Compact 1.1M Connector.....	A-2
General.....	A-2
Housings.....	A-2
Removing Socket Terminal.....	A-2
Installing Socket Terminal.....	A-2

A.3 BOSCH BTC SEALED CONNECTOR

Bosch BTC Sealed Connector Repair.....	A-3
Plugging and Unplugging Connector.....	A-3
Removing and Installing Connector Cover.....	A-3
Removing and Installing Wire Terminals.....	A-4
Crimping Terminals to Leads.....	A-5

A.4 DELPHI 100W MICRO-PACK SEALED CONNECTOR

Delphi 100W Micro-Pack Sealed Connector Repair.....	A-6
General.....	A-6
Separating Socket Housing From ECM.....	A-6
Mating Socket Housing To ECM.....	A-6
Removing Socket Terminal.....	A-6
Installing Socket Terminal.....	A-6
Crimping Terminals.....	A-7

A.5 DELPHI 150 METRI-PACK SEALED CONNECTORS

Delphi 150 Metri-Pack Sealed Connector Repair.....	A-8
General.....	A-8
Separating Pin and Socket Housings.....	A-8
Mating Pin and Socket Housings.....	A-8
Removing Socket Terminal.....	A-8
Inserting Socket Terminal.....	A-8

A.6 DELPHI 280 METRI-PACK UNSEALED CONNECTORS

Fuse Block Repair.....	A-10
Removing Socket Terminals.....	A-10
Installing Socket Terminals.....	A-10
Crimping Terminals.....	A-10

A.7 DELPHI 480 METRI-PACK UNSEALED CONNECTORS

Delphi 480 Metri-Pack Unsealed Connector Repair.....	A-11
General.....	A-11
Separating Pin and Socket Housings.....	A-11

Mating Pin and Socket Housings.....	A-11
Removing Socket Terminals.....	A-11
Installing Socket Terminals.....	A-11

A.8 DELPHI 630 METRI-PACK UNSEALED CONNECTORS

Delphi 630 Metri-Pack Unsealed Connector Repair.....	A-12
Separating Pin and Socket Housings.....	A-12
Mating Pin and Socket Housings.....	A-12
Removing Socket Terminal.....	A-12
Installing Socket Terminal.....	A-12

A.9 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING

Delphi 800 Metri-Pack Sealed Main Fuse Housing Repair.....	A-13
Removing Socket Terminals.....	A-13
Installing Socket Terminals.....	A-13

A.10 DELPHI METRI-PACK TERMINAL REPAIR

Metri-Pack Terminal Crimps.....	A-14
Matching Terminal To Crimper.....	A-14
Preparing Wire Lead.....	A-14
Crimping Wire Core.....	A-14
Crimping Insulation/Seal.....	A-15
Inspecting Crimps.....	A-15

A.11 DELPHI MICRO-64 SEALED CONNECTORS

Delphi Micro 64 Sealed Connector Repair.....	A-16
General.....	A-16
Separating Pin and Socket Housings.....	A-16
Mating Pin and Socket Housings.....	A-16
Removing Terminal.....	A-16
Installing Terminal.....	A-17
Preparing Wire Leads for Crimping.....	A-17
Crimping Terminals.....	A-17
Inspecting Crimps.....	A-17

A.12 DELPHI GT 150 SEALED CONNECTORS

Delphi GT 150 Sealed Connector Repair.....	A-19
General.....	A-19
Separating Pin and Socket Housings.....	A-19
Mating Pin and Socket Housings.....	A-19
Removing Socket Terminals.....	A-19
Installing Socket Terminals.....	A-19

A.13 DEUTSCH DT SEALED CONNECTORS

Deutsch DT Sealed Connector Repair.....	A-21
General.....	A-21
Separating Pin and Socket Housings.....	A-21
Mating Pin and Socket Housings.....	A-21
Removing Socket Terminals.....	A-21
Installing Socket Terminals.....	A-21
Removing Pin Terminals.....	A-22
Installing Pin Terminals.....	A-23
Crimping Terminals.....	A-23

A.14 DEUTSCH DT SEALED TERMINAL REPAIR

Deutsch DT Sealed Terminal Crimps.....A-25
 Preparing Wire Leads for Crimping.....A-25
 Crimping Terminal to Lead.....A-25
 Inspecting Crimps.....A-25

A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR

Deutsch DTM Sealed Mini Terminal Crimps.....A-26
 Preparing Wire Leads for Crimping.....A-26
 Crimping a Mini Terminal to Wire Lead.....A-26
 Inspecting Crimps.....A-26

A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR

Deutsch DTM Sealed Solid Barrel Terminal Crimps.....A-27
 Preparing Wire Leads For Crimping.....A-27
 Adjusting Crimper Tool.....A-27
 Crimping a Barrel Contact To Wire Lead.....A-27
 Inspecting Crimps.....A-27

A.17 JAE MX19 SEALED CONNECTORS

JAE MX19 Sealed Connectors.....A-29
 Connector Housings.....A-29
 Removing Terminals.....A-29
 Installing Terminals.....A-29
 Crimping Terminals.....A-29

A.18 MOLEX CMC SEALED CONNECTORS

Molex CMC Sealed Connectors.....A-30
 Separating the Connector.....A-30
 Removing Terminals.....A-30
 Installing Terminals.....A-30
 Crimping Terminals.....A-31

A.19 MOLEX MX 150 SEALED CONNECTORS

Molex MX 150 Sealed Connector Repair.....A-32
 Separating Pin and Socket Housings.....A-32
 Mating Pin and Socket Housings.....A-32
 Removing Terminals.....A-32
 Installing Terminals.....A-32
 Crimp Terminal to Lead.....A-33
 Prepare Lead.....A-33
 Prepare Tool.....A-33
 Position Terminal in the Punch/Die.....A-34
 Insert Stripped Lead.....A-34
 Crimp Terminal to Lead.....A-34
 Inspect Crimp.....A-35

A.20 TYCO 040 MULTILOCK UNSEALED CONNECTOR

Tyco 040 Multilock Unsealed Connector Repair.....A-36
 General.....A-36
 Separating Pin and Socket Housings.....A-36
 Mating Pin and Socket Housings.....A-36
 Removing Terminals from Housing.....A-36
 Inserting Terminals into Housing.....A-37

Crimping Terminals to Leads.....A-37
 Inspecting Crimped Terminals.....A-37

A.21 TYCO 070 MULTILOCK UNSEALED CONNECTOR

Tyco 070 Multilock Unsealed Connector Repair.....A-38
 General.....A-38
 Separating Pin and Socket Housings.....A-38
 Mating Pin and Socket Housings.....A-38
 Removing Terminals from Housing.....A-38
 Inserting Terminals into Housing.....A-39
 Crimping Terminals to Leads.....A-40
 Inspecting Crimped Terminals.....A-40

A.22 TYCO GET 64 SEALED CONNECTOR

Tyco GET 64 Sealed Connector Repair.....A-41
 General.....A-41
 Housings.....A-41
 Removing Socket Terminals.....A-41
 Installing Socket Terminals.....A-42
 Crimping Terminals.....A-42

A.23 TYCO MCP SEALED CONNECTOR

Tyco MCP Sealed Connector.....A-43
 General.....A-43
 Housing.....A-43
 Removing the Large Terminals.....A-43
 Removing the Small Terminals.....A-43
 Installing Terminals.....A-44
 Crimping Terminals.....A-44

A.24 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....A-45
 General.....A-45
 Preparing Wire Leads.....A-45
 Splicing Wire Leads.....A-45
 Inspecting Seals.....A-45

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....B-1
 Function/Location.....B-1
 Place and Color.....B-1
 Connector Number.....B-1
 Repair Instructions.....B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....B-4
 Wire Color Codes.....B-4
 Wiring Diagram Symbols.....B-4
 2014 Dyna Wiring Diagrams.....B-6

APPENDIX C ABS

C.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....C-1

C.2 ABS MODULE

General.....C-2

TABLE OF CONTENTS

Electro Hydraulic Control Unit (EHCU).....	C-2
Removal.....	C-2
Installation.....	C-4

C.3 WHEEL SPEED SENSORS

Front Wheel Speed Sensor (WSS).....	C-5
Removal.....	C-5
Installation.....	C-5
Rear Wheel Speed Sensor (WSS).....	C-6
Removal.....	C-6
Installation.....	C-7

C.4 ABS BRAKE LINES

Front Master Cylinder to Front Caliper Line Assembly.....	C-9
Removal.....	C-9
Installation.....	C-9
Front ABS Lines.....	C-9
Removal.....	C-9
Installation.....	C-11
Rear Master Cylinder to ABS Module.....	C-12
Removal.....	C-12
Installation.....	C-12
ABS Module to Rear Brake Caliper.....	C-13
Removal.....	C-13
Installation.....	C-13

APPENDIX D REFERENCE

D.1 LENGTH CONVERSION

Conversion Table.....	D-1
-----------------------	-----

D.2 FLUID CONVERSION

United States System.....	D-2
Metric System.....	D-2
British Imperial System.....	D-2

D.3 TORQUE CONVERSION

United States System.....	D-3
Metric System.....	D-3

D.4 GLOSSARY

Acronyms and Abbreviations.....	D-4
---------------------------------	-----

REFERENCE MATERIAL

TOOLS.....	I
TORQUE VALUES.....	IX
INDEX.....	XXIII

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com