



2014 Harley-Davidson Touring Models Service Manual

©2013 H-D.
ALL RIGHTS RESERVED
99483-14

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Disposal and Recycling.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip-Type Seals.....	1-4
O-Rings.....	1-5
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Cleaning.....	1-5
Protecting Rubber Parts.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry Bars.....	1-5
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 FUEL AND OIL

Fuel.....	1-7
Gasoline Blends.....	1-7
Engine Lubrication.....	1-7
Winter Lubrication.....	1-8

1.4 BULB REQUIREMENTS

General.....	1-9
--------------	-----

1.5 MAINTENANCE SCHEDULE

General.....	1-10
--------------	------

1.6 ENGINE OIL AND FILTER

Engine Oil Level.....	1-15
Oil Level Cold Check.....	1-15
Oil Level Hot Check.....	1-15
Changing Oil and Oil Filter.....	1-16

1.7 AIR CLEANER AND EXHAUST SYSTEM

Air Filter.....	1-18
Removal.....	1-18
Installation.....	1-18
Exhaust System Leak Check.....	1-18
Exhaust System Leakage.....	1-19

1.8 COOLANT

Cooling System.....	1-20
Checking Coolant Level.....	1-20
Clean Radiators.....	1-20
Drain and Fill Cooling System.....	1-21
Drain System.....	1-21
Fill System.....	1-21

1.9 TIRES AND WHEELS

General.....	1-23
Tires.....	1-23
Tire Replacement.....	1-24
Inspection.....	1-24
When To Replace Tires.....	1-24
Wheel Bearings.....	1-24
Wheel Spokes.....	1-25
Identify Wheel Spoke Groups.....	1-25
Wheel Spoke Adjustment.....	1-25

1.10 PRIMARY CHAINCASE LUBRICANT

General.....	1-27
Changing Primary Chaincase Lubricant.....	1-27

1.11 TRANSMISSION LUBRICANT

Checking Transmission Lubricant.....	1-29
Changing Transmission Lubricant.....	1-29

1.12 CLUTCH CABLE: ROAD KING

Adjustment.....	1-31
-----------------	------

1.13 HYDRAULIC CLUTCH FLUID

General.....	1-32
Fluid Inspection.....	1-32

1.14 DRIVE BELT AND SPROCKETS

General.....	1-33
Cleaning.....	1-33
Inspection.....	1-33
Sprockets.....	1-33
Drive Belt.....	1-33
Checking Drive Belt Deflection.....	1-34
Setting Belt Deflection.....	1-36
Adjustment.....	1-36
Assembly.....	1-37

1.15 REAR SPROCKET ISOLATOR

Inspection.....	1-38
-----------------	------

1.16 CABLE AND CHASSIS LUBRICATION

Chassis Lubrication.....	1-39
--------------------------	------

1.17 BRAKES

Fluid Inspection.....	1-40
Brake Fluid Replacement.....	1-40
Brake Lines Inspection.....	1-41

TABLE OF CONTENTS

1.18 BRAKE PADS AND DISCS	
Inspection.....	1-42
Brake Pads.....	1-42
Brake Disc Thickness.....	1-42
Brake Disc Lateral Runout.....	1-42
Brake Pad Replacement.....	1-42
Rear Brake Caliper.....	1-42
Front Brake Calipers.....	1-44
1.19 SPARK PLUGS	
Removal.....	1-46
Inspection.....	1-46
Cleaning.....	1-46
Installation.....	1-46
Spark Plug Cable Inspection.....	1-47
1.20 STEERING HEAD BEARINGS	
Checking Swing-Back.....	1-48
Measure Swing-Back.....	1-48
Adjusting Swing-Back.....	1-49
Inspection and Lubrication.....	1-50
1.21 REAR SUSPENSION ADJUSTMENTS	
Air Suspension.....	1-51
Manual Suspension Preload.....	1-52
1.22 BATTERY MAINTENANCE	
General.....	1-54
Cleaning and Inspection.....	1-55
Battery.....	1-55
Disconnection and Removal.....	1-55
Installation and Connection.....	1-55
Voltmeter Test.....	1-56
Voltmeter Test.....	1-56
Battery Tender Connector.....	1-56
Charging Battery.....	1-57
Safety Precautions.....	1-57
Using a Battery Charger.....	1-57
Storage.....	1-58
1.23 HEADLAMP ALIGNMENT	
Checking Headlamp Alignment.....	1-59
Headlamp Adjustment.....	1-59
Auxiliary/Fog Lamp Alignment.....	1-60
1.24 ENGINE MOUNTS	
Inspection.....	1-62
General.....	1-62
Front Engine Mount.....	1-62
1.25 STORAGE	
General.....	1-63
Placing in Storage.....	1-63
Removal from Storage.....	1-63
1.26 TROUBLESHOOTING	
General.....	1-65
Engine.....	1-65
Starter Motor Does Not Operate or Does Not Turn Engine Over	1-65
Engine Turns Over But Does Not Start	1-65
Starts Hard.....	1-65
Starts But Runs Irregularly or Misses	1-65
A Spark Plug Fouls Repeatedly.....	1-66
Pre-Ignition or Detonation (Knocks or Pings).....	1-66
Overheating.....	1-66
Valve Train Noise.....	1-66
Excessive Vibration.....	1-66
Check Engine Light Illuminates During Operation.....	1-66
Lubrication System.....	1-66
Oil Does Not Return To Oil Reservoir.....	1-66
Engine Uses Too Much Oil Or Smokes Excessively.....	1-66
Engine Leaks Oil From Cases, Pushrods, Hoses, Etc.....	1-67
Low Oil Pressure.....	1-67
High Oil Pressure.....	1-67
Electrical System.....	1-67
Alternator Does Not Charge.....	1-67
Alternator Charge Rate Is Below Normal.....	1-67
Speedometer Operates Erratically.....	1-67
Transmission.....	1-67
Shifts Hard.....	1-67
Jumps Out Of Gear.....	1-67
Clutch Slips.....	1-67
Clutch Drags Or Does Not Release.....	1-67
Clutch Chatters.....	1-67
Handling.....	1-67
Irregularities.....	1-67
Brakes.....	1-68
Brake Does Not Hold Normally.....	1-68
CHASSIS	
2.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	2-1
2.2 SPECIFICATIONS	
Specifications.....	2-8
Chassis Specifications.....	2-8
Tire Specifications.....	2-9
2.3 VEHICLE IDENTIFICATION NUMBER (VIN)	
Vehicle Identification Number (VIN).....	2-11
General.....	2-11
Location.....	2-11
Abbreviated VIN.....	2-11
2.4 FRONT WHEEL	
Removal.....	2-13
Cleaning and Inspection.....	2-13
Installation.....	2-14
2.5 REAR WHEEL	
Removal.....	2-15
Cleaning and Inspection.....	2-16
Installation.....	2-16
2.6 REAR WHEEL COMPENSATOR	
Isolator Replacement.....	2-19
Removal.....	2-19

TABLE OF CONTENTS

Installation.....	2-19
Sprocket Bearing Replacement.....	2-19
Removal.....	2-19
Installation.....	2-19
2.7 WHEEL LACING: FRONT RIM	
Wheel Lacing: Angle Flange Hub.....	2-21
2.8 WHEEL LACING: 16 INCH REAR RIM	
Wheel Lacing: 16 In. Rear Wheel.....	2-23
2.9 CHECKING AND TRUING WHEELS	
General.....	2-26
Checking Wheel Runout.....	2-26
Checking Radial Runout.....	2-26
Checking Lateral Runout.....	2-26
Laced Wheel Rim Offset.....	2-27
Truing Laced Wheels.....	2-28
Radial Runout.....	2-28
Lateral Runout.....	2-29
2.10 SEALED WHEEL BEARINGS	
Inspection.....	2-30
Removal.....	2-30
Installation.....	2-31
2.11 TIRES	
General.....	2-33
Removal.....	2-33
Cleaning, Inspection and Repair.....	2-33
Installation.....	2-34
Tube Type Tires.....	2-34
Tubeless Tires: Cast Wheels.....	2-34
Checking Tire Runout.....	2-35
Lateral Runout.....	2-35
Radial Runout.....	2-35
Wheel Balancing.....	2-35
Static vs Dynamic.....	2-35
Weights.....	2-35
2.12 FRONT BRAKE MASTER CYLINDER	
General.....	2-37
Removal and Disassembly.....	2-37
Removal.....	2-37
Disassembly.....	2-37
Cleaning and Inspection.....	2-38
Assembly and Installation.....	2-39
Assembly.....	2-39
Installation.....	2-39
2.13 FRONT BRAKE CALIPER	
Removal.....	2-40
Installation.....	2-40
2.14 REAR BRAKE MASTER CYLINDER	
General.....	2-41
Removal and Disassembly.....	2-41
Removal.....	2-41
Disassembly.....	2-41
Cleaning and Inspection.....	2-42
Assembly and Installation.....	2-43
Assembly.....	2-43
Installation.....	2-43
2.15 REAR BRAKE CALIPER	
Removal.....	2-44
Installation.....	2-44
2.16 BRAKE LINES	
Front Brake Line: Non-ABS Equipped.....	2-45
Removal.....	2-45
Installation.....	2-46
Rear Brake Line: Non-ABS Equipped.....	2-46
Removal.....	2-46
Installation.....	2-47
Brake Line: Front Master Cylinder to ABS Module.....	2-49
Removal.....	2-49
Front Line Routing.....	2-50
Installation.....	2-50
Brake Line: ABS Module to Front Caliper.....	2-51
Removal.....	2-51
Installation.....	2-52
Brake Line: Rear Master Cylinder to ABS Module.....	2-52
Removal.....	2-52
Installation.....	2-53
Brake Line: ABS Module to Rear Caliper.....	2-55
Removal.....	2-55
Installation.....	2-55
2.17 ABS MODULE	
Reflex™ Linked Brakes with ABS Operation.....	2-56
ABS Module.....	2-56
Removal.....	2-56
Installation.....	2-57
2.18 BLEEDING BRAKES	
General.....	2-58
Procedure.....	2-58
2.19 FRONT FORK	
Fork Oil Leak Check.....	2-60
Fork Oil Seals.....	2-60
Oil Leak Check.....	2-60
Removal.....	2-60
Disassembly.....	2-61
Cleaning and Inspection.....	2-62
Assembly.....	2-63
Filling and Final Assembly.....	2-63
Installation.....	2-64
2.20 STEERING HEAD BEARINGS	
Steering Stem Removal.....	2-66
Removal.....	2-66
Disassembly.....	2-66
Steering Stem Installation.....	2-66
Assembly.....	2-66
Installation.....	2-67
Upper Fork Bracket.....	2-67
Removal.....	2-67
Installation.....	2-68

TABLE OF CONTENTS

2.21 REAR SUSPENSION	
Shock Absorber Removal.....	2-70
Cleaning and Inspection.....	2-70
Shock Absorber Installation.....	2-70
Air Shock Repair.....	2-71
Air Lines.....	2-71
Check for Leaks.....	2-71
Fittings.....	2-71
Air Valve Assembly.....	2-71
Air Tubes.....	2-71
Manual Adjust Shock Repair.....	2-72
2.22 REAR FORK	
Removal.....	2-73
Disassembly and Assembly.....	2-73
Bearing Removal.....	2-73
Bearing Installation.....	2-74
Pivot Shaft/Mount Disassembly.....	2-74
Installation.....	2-75
2.23 CLUTCH CABLE	
Removal.....	2-76
Installation.....	2-76
2.24 CLUTCH MASTER CYLINDER AND RESERVOIR	
Removal.....	2-78
Disassembly.....	2-79
Cleaning and Inspection.....	2-79
Assembly.....	2-80
Installation.....	2-80
2.25 HYDRAULIC CLUTCH HAND LEVER	
Removal.....	2-82
Installation.....	2-82
2.26 CLUTCH FLUID LINE	
Replacement.....	2-83
Removal.....	2-83
Installation.....	2-83
2.27 BLEEDING CLUTCH CONTROL SYSTEM	
Drain and Fill.....	2-85
Drain.....	2-85
Fill.....	2-85
Bleed Fluid Line and Secondary Clutch Actuator.....	2-86
2.28 HANDLEBARS	
Adjustment.....	2-87
Removal.....	2-87
Installation.....	2-89
Left Hand Grip.....	2-90
Removal.....	2-90
Installation.....	2-90
Right Hand Grip.....	2-90
Removal.....	2-90
Installation.....	2-90
Rubber Mounts.....	2-91
Heated Hand Grips.....	2-91
Remove Left Hand Grip.....	2-91
Install Left Hand Grip.....	2-92
Remove Right Hand Grip.....	2-92
Install Right Hand Grip.....	2-92
2.29 MIRRORS	
All Models Except FLHX/S.....	2-93
Removal.....	2-93
Installation.....	2-93
FLHX/S.....	2-93
Removal.....	2-93
Installation.....	2-93
2.30 SEAT	
Seat.....	2-94
Removal.....	2-94
Installation.....	2-94
Seat Retention Nut Replacement.....	2-94
Seat Bumper.....	2-95
2.31 SADDLEBAGS	
Removal.....	2-96
Installation.....	2-96
2.32 SADDLEBAG SERVICE	
Saddlebag Repair.....	2-97
Lock.....	2-97
Strikes.....	2-97
Cover.....	2-97
Cover Seal.....	2-98
Hinge.....	2-98
Latch Assembly.....	2-98
Saddlebag Support.....	2-99
Removal.....	2-99
Installation.....	2-99
2.33 TOUR-PAK	
Removal and Installation.....	2-101
Removal.....	2-101
Installation.....	2-101
Tour-Pak Support.....	2-101
Removal.....	2-101
Installation.....	2-102
Disassembly/Assembly.....	2-102
2.34 TOUR-PAK SERVICE	
Tour-Pak Liner.....	2-103
Removal.....	2-103
Installation.....	2-103
Tour-Pak Seal.....	2-103
Inspection.....	2-103
Replacement.....	2-103
Tour-Pak Lock.....	2-103
Removal.....	2-103
Installation.....	2-103
Hinges.....	2-104
Removal.....	2-104
Installation.....	2-104
Latch Handle and Catch.....	2-104
Removal.....	2-104
Installation.....	2-104

Tether.....	2-104	Installation.....	2-120
Removal.....	2-104	Media Compartment.....	2-121
Installation.....	2-104	Removal.....	2-121
Luggage Rack.....	2-105	Installation.....	2-121
Ground Plate.....	2-105	Cable Replacement.....	2-121
Removal.....	2-105	Cover Replacement.....	2-121
Installation.....	2-105	Latch Replacement.....	2-121
2.35 TOUR-PAK BACKREST			
Passenger Backrest.....	2-107	2.40 AIR DEFLECTORS	
Removal.....	2-107	Fairing Air Deflectors.....	2-123
Installation.....	2-107	Removal.....	2-123
Rubber Isolators.....	2-107	Installation.....	2-123
Removal.....	2-107	Mid-Frame Air Deflectors.....	2-123
Installation.....	2-107	Removal.....	2-123
Passenger Backrest Flap.....	2-107	Installation.....	2-123
Removal.....	2-107	2.41 WINDSHIELD: ROAD KING MODELS	
Installation.....	2-107	Windshield.....	2-124
2.36 FAIRING LOWERS AND ENGINE GUARD			
Fairing Lower: Air Cooled.....	2-108	Removal.....	2-124
Removal.....	2-108	Installation.....	2-124
Installation.....	2-108	Windshield Window.....	2-124
Disassembly.....	2-108	Removal.....	2-124
Assembly.....	2-110	Installation.....	2-125
Fairing Lower: Twin-Cooled.....	2-110	2.42 HEADLAMP NACELLE: ROAD KING MODELS	
Removal.....	2-110	Removal.....	2-127
Installation.....	2-111	Installation.....	2-127
Repair.....	2-111	2.43 FRONT FENDER	
Engine Guard.....	2-111	Removal.....	2-129
Removal.....	2-111	Repair.....	2-130
Installation.....	2-112	Installation.....	2-130
2.37 UPPER FAIRING AND WINDSHIELD			
Outer Fairing and Windshield.....	2-113	2.44 REAR FENDER	
Removal.....	2-113	Removal.....	2-132
Installation.....	2-113	Fender Repair.....	2-133
Fairing Seal.....	2-113	Mounting Hardware.....	2-133
Fairing Vent Bezel.....	2-113	Stud Plate.....	2-133
2.38 DASH PANEL			
Dash Panel.....	2-115	Lights and Harnesses.....	2-133
Removal.....	2-115	Installation.....	2-133
Installation.....	2-115	2.45 REAR FASCIA	
2.39 INNER FAIRING			
Rotate Inner Fairing.....	2-116	Removal.....	2-135
Inner Fairing Assembly Removal and Installation.....	2-116	Installation.....	2-135
Removal.....	2-116	Stud Plate.....	2-135
Installation.....	2-117	Removal.....	2-135
Inner Fairing Shell Replacement.....	2-118	Installation.....	2-135
Removal.....	2-118	Rear Fascia Lamp.....	2-135
Installation.....	2-118	2.46 REAR FRAME	
Fairing Vent.....	2-119	Rear Frame.....	2-136
Cleaning.....	2-119	Removal.....	2-136
Removal.....	2-119	Installation.....	2-137
Installation.....	2-119	Thread Repair.....	2-137
Vent Repair.....	2-120	2.47 FOOTBOARDS AND FOOTRESTS	
Upper Support Bracket.....	2-120	Rider Footboards.....	2-138
Removal.....	2-120	Removal.....	2-138

TABLE OF CONTENTS

Assembly.....	2-139
Passenger Footboard.....	2-139
Removal.....	2-139
Disassembly.....	2-139
Assembly.....	2-139
Installation.....	2-139
Passenger Footrest: FLHX/S.....	2-139
Removal.....	2-139
Disassembly.....	2-140
Assembly.....	2-140
Installation.....	2-140
2.48 JIFFY STAND	
General.....	2-141
Leg Removal.....	2-141
Leg Installation.....	2-141
Jiffy Stand Bracket.....	2-142
Removal.....	2-142
Installation.....	2-142
Jiffy Stand Interlock Sensor.....	2-142
Removal.....	2-142
Installation.....	2-143
2.49 FRONT ENGINE MOUNT	
Removal.....	2-144
Installation.....	2-144
2.50 MEDALLIONS, SERIALIZED BADGES AND TANK EMBLEMS	
Removal.....	2-146
Installation.....	2-146
ENGINE	
3.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	3-1
3.2 SPECIFICATIONS	
Specifications.....	3-3
3.3 SERVICE WEAR LIMITS	
General.....	3-5
3.4 ENGINE OIL FLOW	
Oil Feed.....	3-7
Top End.....	3-7
Bottom End.....	3-9
Oil Return.....	3-11
Oil Cooler Operation.....	3-11
3.5 OIL PUMP OPERATION	
General.....	3-12
Operation.....	3-12
3.6 BREATHER OPERATION	
General.....	3-14
3.7 OIL PRESSURE	
Oil Pressure Indicator Lamp.....	3-15
Checking Oil Pressure.....	3-15
3.8 TROUBLESHOOTING	
Diagnosing Valve Train Noise.....	3-17
Compression Test.....	3-17
Cylinder Leakdown Test.....	3-18
Diagnosing Smoking Engine or High Oil Consumption.....	3-18
Check Prior to Cylinder Head Removal.....	3-18
Check After Cylinder Head Removal.....	3-18
3.9 OIL COOLER	
Removal.....	3-19
Installation.....	3-19
3.10 OIL COOLER ADAPTER	
Removal.....	3-20
Disassembly.....	3-20
Assembly.....	3-20
Installation.....	3-20
3.11 HOW TO USE THIS SECTION	
Top End Repair.....	3-21
Bottom End Repair.....	3-21
Typical Symptoms.....	3-21
3.12 TOP END SERVICE	
Engine in Chassis.....	3-22
Engine Removed from Chassis.....	3-23
3.13 CAM COMPARTMENT SERVICE	
Engine in Chassis.....	3-24
Engine Removed From Chassis.....	3-25
3.14 STRIPPING MOTORCYCLE FOR SERVICE	
Procedure.....	3-26
Cam Compartment Service Only.....	3-26
Top End Service.....	3-26
3.15 ASSEMBLING MOTORCYCLE AFTER SERVICE	
Procedure.....	3-27
After Top End Service.....	3-27
After Cam Compartment Service.....	3-27
3.16 REMOVING ENGINE FROM CHASSIS	
Procedure.....	3-28
3.17 INSTALLING ENGINE IN CHASSIS	
Procedure.....	3-29
3.18 TOP END OVERHAUL: DISASSEMBLY	
General.....	3-30
Rocker Covers.....	3-30
Rocker Arm Support Plate.....	3-30
Pushrods, Lifters and Covers.....	3-32
Cylinder Head.....	3-32
Cylinder.....	3-33
Piston.....	3-34

3.19 BREATHER ASSEMBLY	
Disassembly.....	3-36
Cleaning and Inspection.....	3-36
Assembly.....	3-36
3.20 ROCKER ARM SUPPORT PLATE	
Disassembly.....	3-37
Cleaning and Inspection.....	3-37
Inspection.....	3-37
Rocker Shaft Fit.....	3-37
Rocker Arm Shaft to Bushing.....	3-38
Replace Rocker Arm Bushings.....	3-38
Assembly.....	3-39
3.21 PUSHRODS, LIFTERS AND COVERS	
Disassembly.....	3-40
Cleaning and General Inspection.....	3-40
Lifter Inspection.....	3-40
Assembly.....	3-41
3.22 CYLINDER HEAD	
Disassembly.....	3-42
Cleaning.....	3-43
Inspection.....	3-43
Cylinder Head.....	3-43
Valve Guides.....	3-44
Valves.....	3-44
Valve Springs.....	3-44
Tapered Keepers.....	3-44
Valve Seats.....	3-44
Valve Guide Replacement.....	3-44
Removal.....	3-44
Installation.....	3-45
Valve and Seat Refacing.....	3-48
Assembly.....	3-50
3.23 CYLINDER	
Cleaning.....	3-52
Inspection.....	3-52
Deglazing Cylinder.....	3-54
Boring and Honing Cylinder.....	3-54
3.24 PISTON	
Disassembly.....	3-56
Piston Rings.....	3-56
Cleaning.....	3-56
Inspection.....	3-56
Assembly.....	3-58
Checking Piston Ring Gap.....	3-58
Installing Piston Rings.....	3-58
3.25 TOP END OVERHAUL: ASSEMBLY	
General.....	3-60
Piston.....	3-60
Cylinder.....	3-61
Cylinder Head.....	3-63
Pushrods, Lifters and Covers.....	3-67
Rocker Arm Support Plate.....	3-68
Breather and Rocker Cover.....	3-69
Twin-Cooled Engine.....	3-69
3.26 CAM COMPARTMENT AND COMPONENTS	
Cam Support Plate and Cover Removal.....	3-70
Prepare Engine.....	3-70
Cam Chain and Sprockets Removal.....	3-70
Cam Support Plate Removal.....	3-71
Cam Support Plate Cleaning and Inspection.....	3-72
Oil Pressure Valve.....	3-72
Cam Support Plate.....	3-72
Camshafts.....	3-72
Removal.....	3-72
Installation.....	3-73
Oil Pressure Relief Valve.....	3-74
Removal.....	3-74
Inspection.....	3-74
Installation.....	3-75
Cam Needle Bearings.....	3-75
Removal.....	3-75
Installation.....	3-76
Cam Support Plate and Cover Installation.....	3-78
3.27 OIL PUMP	
Removal.....	3-82
Cleaning and Inspection.....	3-82
Installation.....	3-83
3.28 CRANKCASE DISASSEMBLY AND REPAIR	
Crankcase Disassembly.....	3-84
Cleaning and Inspection.....	3-84
Right Crankcase Half.....	3-85
Main Bearing Removal.....	3-85
Main Bearing Installation.....	3-85
Piston Jets Removal.....	3-86
Piston Jets Installation.....	3-86
Left Crankcase Half.....	3-86
Main Bearing Removal.....	3-86
Main Bearing Installation.....	3-87
Sprocket Shaft Bearing Inner Race.....	3-88
Removal.....	3-88
Installation.....	3-89
Cylinder Studs.....	3-91
Removal.....	3-91
Installation.....	3-91
Pipe Plug and Oil Fittings.....	3-91
Removal.....	3-91
Installation.....	3-91
3.29 FLYWHEEL AND CONNECTING RODS	
General.....	3-92
Symptoms.....	3-92
No Oil Pressure.....	3-92
Vibration.....	3-92
Inspection.....	3-92
Measuring Crankshaft Runout.....	3-92
Crankshaft Installed.....	3-92
Crankshaft Removed.....	3-93
3.30 CRANKCASE ASSEMBLY	
Crankcase Assembly.....	3-94

TABLE OF CONTENTS

3.31 OIL PAN	Installation.....	4-16
Removal.....		3-96
Installation.....		3-96
FUEL SYSTEM		
4.1 FASTENER TORQUE VALUES		
Fastener Torque Values in this Chapter.....		4-1
4.2 SPECIFICATIONS: FUEL SYSTEM		
Specifications.....		4-2
4.3 FUEL PRESSURE TEST		
General.....		4-3
Testing.....		4-3
4.4 INTAKE LEAK TEST		
General.....		4-5
Leak Tester.....		4-5
Parts List.....		4-5
Tester Assembly.....		4-5
Tester Adjustment.....		4-5
Procedure.....		4-5
4.5 AIR CLEANER ASSEMBLY		
Removal.....		4-7
Installation.....		4-8
Air Cleaner Repair.....		4-8
Insert: With Screw Access.....		4-8
Insert: Without Screw Access.....		4-8
Snorkel.....		4-8
4.6 FUEL TANK		
Console.....		4-9
Removal.....		4-9
Installation.....		4-9
Fuel Door.....		4-9
Door Replacement.....		4-9
Lock Replacement.....		4-9
Removal.....		4-9
Purge and Disconnect Fuel Line.....		4-9
Remove Tank.....		4-9
Installation.....		4-10
Vent Tube: Models Without EVAP System.....		4-10
Removal.....		4-10
Installation.....		4-11
Fuel Supply Check Valve/Tube.....		4-11
Removal.....		4-11
Installation.....		4-11
4.7 FUEL TANK TOP PLATE		
Removal.....		4-13
Installation.....		4-14
4.8 FUEL FILTER		
Removal.....		4-15
Installation.....		4-15
4.9 FUEL PRESSURE REGULATOR		
Removal.....		4-16
4.10 FUEL LEVEL SENDER	Removal.....	4-17
Installation.....		4-17
4.11 TWIST GRIP SENSOR (TGS)		
Removal.....		4-18
Installation.....		4-19
Twist Grip Sensor Jumper Harness.....		4-20
Removal.....		4-20
Installation.....		4-20
4.12 THROTTLE CONTROL ACTUATOR (TCA)		
General.....		4-21
4.13 INDUCTION MODULE		
Removal.....		4-22
Installation.....		4-23
4.14 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE SENSOR (TMAP)		
Removal.....		4-24
Installation.....		4-24
4.15 HEATED OXYGEN SENSORS (HO2)		
Removal.....		4-25
Installation.....		4-26
4.16 FUEL INJECTORS		
General.....		4-27
Removal.....		4-27
Installation.....		4-27
4.17 FUEL PUMP		
General.....		4-29
Removal.....		4-29
Installation.....		4-29
Fuel Pump and Fuel Level Sender Wire Harness.....		4-30
Removal.....		4-30
Installation.....		4-30
4.18 EXHAUST SYSTEM		
Mufflers.....		4-31
Removal.....		4-31
Installation.....		4-31
System Removal.....		4-31
System Installation.....		4-33
4.19 ACTIVE EXHAUST: HDI		
Exhaust Valve Actuator.....		4-34
Removal.....		4-34
Installation.....		4-34
Exhaust Valve Actuator Cable.....		4-34
Removal.....		4-34
Installation.....		4-34
Active Exhaust Valve.....		4-35
General.....		4-35

4.20 EVAPORATIVE EMISSIONS CONTROL SYSTEM	5.7 HYDRAULIC CLUTCH RELEASE BEARING AND PUSHROD
General.....	5-19
Vapor Valve.....	5-19
Fuel Vapor Vent Tube.....	5-19
Removal.....	5-19
Installation.....	5-19
Canister-to-Solenoid Tube.....	5-19
Removal.....	5-19
Installation.....	5-19
Solenoid-to-Induction Module Tube.....	5-19
Removal.....	5-19
Installation.....	5-19
Purge Solenoid.....	5-19
Removal.....	5-19
Installation.....	5-19
Charcoal Canister.....	5-19
Removal.....	5-19
Installation.....	5-19
DRIVE	
5.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	5-1
5.2 SPECIFICATIONS: DRIVE	
Specifications.....	5-2
5.3 PRIMARY CHAINCASE COVER	
Removal.....	5-3
Installation.....	5-3
5.4 DRIVE COMPONENTS	
Removal.....	5-5
Installation.....	5-7
5.5 PRIMARY CHAINCASE HOUSING	
Removal.....	5-10
Inspection.....	5-10
Mainshaft Bearing and Seal.....	5-10
Removal.....	5-10
Installation.....	5-10
Mainshaft Bearing Inner Race.....	5-11
Removal.....	5-11
Installation.....	5-11
Shifter Shaft Bushings.....	5-12
Installation.....	5-12
5.6 CLUTCH	
Removal and Installation.....	5-14
Clutch Pack Only.....	5-14
Partial Disassembly.....	5-14
Cleaning And Inspection.....	5-14
Assembly.....	5-15
Clutch Pack and Bearing.....	5-16
Complete Disassembly.....	5-16
Assembly.....	5-17
5.8 TRANSMISSION SPROCKET	
Removal.....	5-21
Cleaning and Inspection.....	5-21
Installation.....	5-21
5.9 DRIVE BELT	
Removal and Adjustment.....	5-23
Adjustment.....	5-23
Removal.....	5-23
Installation.....	5-23
TRANSMISSION	
6.1 FASTENER TORQUE VALUES	
Fastener Torque Values in this Chapter.....	6-1
6.2 SPECIFICATIONS: TRANSMISSION	
Specifications.....	6-2
Service Wear Limits.....	6-2
6.3 TRANSMISSION	
Power Flow.....	6-3
Neutral.....	6-3
First Gear.....	6-3
Second Gear.....	6-3
Third Gear.....	6-3
Fourth Gear.....	6-3
Fifth Gear.....	6-3
Sixth Gear.....	6-3
6.4 SHIFTER LINKAGE	
Shifter Rod Adjustment.....	6-5
Heel-Toe Shift Levers.....	6-5
Removal.....	6-5
Repair.....	6-5
Installation.....	6-5
Shifter Rod Lever, Front.....	6-5
Removal.....	6-5
Installation.....	6-5
6.5 CLUTCH RELEASE COVER: CABLE CLUTCH	
Removal and Disassembly.....	6-7
Cleaning and Inspection.....	6-7
Assembly and Installation.....	6-8
6.6 TRANSMISSION SIDE COVERS: HYDRAULIC CLUTCH	
Removal.....	6-9
Installation.....	6-9

TABLE OF CONTENTS

6.7 SECONDARY CLUTCH ACTUATOR	Installation.....	7-7
Replacement.....		
6.8 TRANSMISSION ASSEMBLY		
Removal.....	6-11	
Disassembly.....	6-12	
Shifter Cam/Shifter Forks.....	6-12	
Mainshaft.....	6-14	
Countershaft.....	6-16	
Removing Bearing Housing Bearings.....	6-17	
Cleaning and Inspection.....	6-18	
Assembly.....	6-18	
Installing Bearing Housing Bearings.....	6-18	
Countershaft.....	6-18	
Mainshaft.....	6-19	
Shifter Cam/Shifter Forks.....	6-19	
Installation.....	6-21	
6.9 MAIN DRIVE GEAR AND BEARING		
Removal.....	6-23	
Cleaning and Inspection.....	6-24	
Needle Bearing Replacement.....	6-25	
Mainshaft Seal Replacement.....	6-26	
Installation.....	6-27	
Installing Main Drive Gear Bearing.....	6-27	
Installing Main Drive Gear.....	6-27	
Installing Main Drive Gear Large Seal.....	6-28	
6.10 TRANSMISSION CASE		
Removal.....	6-30	
Installation.....	6-30	
Disassembly.....	6-31	
Shifter Arm Assembly.....	6-31	
Cleaning and Inspection.....	6-31	
Assembly.....	6-32	
Countershaft Needle Bearing Replacement.....	6-32	
Shifter Pawl Lever Assembly.....	6-32	
ELECTRICAL		
7.1 FASTENER TORQUE VALUES		
Fastener Torque Values in this Chapter.....	7-1	
7.2 SPECIFICATIONS: ELECTRICAL		
Specifications.....	7-5	
7.3 SYSTEM FUSES AND RELAYS		
Main Fuse.....	7-6	
Removal.....	7-6	
Installation.....	7-6	
System Fuses and Relays.....	7-6	
Removal.....	7-6	
Installation.....	7-6	
Fuse Blocks.....	7-6	
Main Fuse Holder.....	7-6	
System Fuse Block.....	7-6	
7.4 ELECTRONIC CONTROL MODULE (ECM)		
ECM.....	7-7	
Removal.....	7-7	
7.5 BODY CONTROL MODULE (BCM)		
Removal.....	7-8	
Installation.....	7-8	
7.6 ELECTRICAL CADDIES		
Top Caddy.....	7-9	
Removal.....	7-9	
Installation.....	7-9	
Left Side Caddy.....	7-9	
Removal.....	7-9	
Installation.....	7-10	
Right Side Caddy.....	7-10	
Removal.....	7-10	
Installation.....	7-10	
Battery Tray.....	7-11	
Removal.....	7-11	
Installation.....	7-11	
7.7 IGNITION COIL		
Removal.....	7-12	
Installation.....	7-12	
7.8 STARTER		
General.....	7-13	
Removal.....	7-13	
Drive Assembly.....	7-13	
Disassembly.....	7-13	
Inspection.....	7-13	
Assembly.....	7-14	
Solenoid.....	7-14	
Cover and Plunger Removal.....	7-14	
Short Post Contact: Starter.....	7-14	
Long Post Contact: Battery Positive.....	7-15	
Plunger and Cover Installation.....	7-15	
Installation.....	7-15	
7.9 HEADLAMP		
Headlamp.....	7-17	
Removal.....	7-17	
Installation.....	7-17	
Bulb Replacement: Halogen Type.....	7-17	
Bulb Replacement: LED Type.....	7-17	
7.10 AUXILIARY/FOG LAMPS AND BRACKETS		
Auxiliary/Fog Lamp Bulb Replacement.....	7-18	
Removal.....	7-18	
Installation.....	7-18	
Auxiliary/Fog Lamp Housing.....	7-18	
Removal.....	7-18	
Installation.....	7-19	
Turn Signal/Auxiliary/Fog Lamp Bracket.....	7-19	
Removal.....	7-19	
Installation.....	7-20	
Adjustment.....	7-20	
7.11 REAR LIGHTING		
Tail Lamp Bulb Replacement.....	7-21	
Removal.....	7-21	

Installation.....	7-21
Circuit Board/Chrome Base.....	7-21
Removal.....	7-21
Installation.....	7-22
Rear Fender Lights Harness: all except FLHX/S.....	7-22
Removal.....	7-22
Installation.....	7-23
Rear Fascia Lamp.....	7-24
Removal.....	7-24
Installation.....	7-24
Rear Fender Lights Harness: FLHX/S.....	7-24
Removal.....	7-24
Installation.....	7-24
7.12 FENDER TIP LAMPS	
Front Fender Tip Lamp.....	7-26
Removal.....	7-26
Installation.....	7-26
Rear Fender Tip Lamp.....	7-27
Removal.....	7-27
Installation.....	7-27
7.13 TOUR-PAK LIGHTS	
Tour-Pak Side Lamps/Trim Strips.....	7-28
Removal.....	7-28
Installation.....	7-28
Tour-Pak Lights Harness.....	7-28
Removal.....	7-28
Installation.....	7-28
Wrap-Around Lamp (if equipped).....	7-30
Removal.....	7-30
Repair.....	7-30
Installation.....	7-30
7.14 TURN SIGNAL LAMPS	
Turn Signal Bulb Replacement: Bullet Style.....	7-31
Turn Signal Bulb Replacement: Flat Lens Style.....	7-31
Front Turn Signal Lamp.....	7-31
Removal: Flat Lens Style.....	7-31
Installation: Flat Lens Style.....	7-32
Removal: Bullet Style, Fork Mounted.....	7-32
Installation: Bullet Style, Fork Mounted.....	7-33
Rear Turn Signal Lamp.....	7-34
Removal: All but FLHX/S.....	7-34
Installation: All but FLHX/S.....	7-34
Removal: FLHX/S.....	7-35
Installation: FLHX/S.....	7-35
Lamp Repair.....	7-36
Rear Turn Signal Lamps Bracket.....	7-36
Removal: All but FLHX/S.....	7-36
Installation: All but FLHX/S.....	7-36
Removal: FLHX/S.....	7-37
Installation: FLHX/S.....	7-38
7.15 IGNITION SWITCH AND FORK LOCK	
Fairing Models.....	7-39
Removal.....	7-39
Installation.....	7-40
Road King Models.....	7-40
Ignition/Light Key Switch: Removal.....	7-40
Ignition/Light Key Switch: Installation.....	7-40
Fork Lock: Removal.....	7-41
Fork Lock: Installation.....	7-41
7.16 DASH PANEL SWITCHES	
Removal.....	7-42
Installation.....	7-42
7.17 CRANKSHAFT POSITION SENSOR (CKP)	
General.....	7-43
Removal.....	7-43
Installation.....	7-43
7.18 ENGINE TEMPERATURE SENSOR (ET)	
Removal.....	7-44
Installation.....	7-44
7.19 AUTOMATIC COMPRESSION RELEASE (ACR)	
General.....	7-45
Removal.....	7-45
Installation.....	7-46
7.20 VOLTAGE REGULATOR	
Removal.....	7-47
Installation.....	7-47
7.21 ALTERNATOR	
Removal.....	7-49
Cleaning and Inspection.....	7-49
Installation.....	7-50
7.22 VEHICLE SPEED SENSOR (VSS)	
VSS.....	7-51
Removal.....	7-51
Installation.....	7-51
7.23 WHEEL SPEED SENSORS	
Front Wheel Speed Sensor (WSS).....	7-52
Removal.....	7-52
Installation.....	7-52
Rear Wheel Speed Sensor.....	7-53
Removal.....	7-53
Installation.....	7-53
7.24 NEUTRAL SWITCH	
Removal.....	7-54
Installation.....	7-54
7.25 OIL PRESSURE SWITCH OR SENDER	
Removal.....	7-55
Installation.....	7-55
7.26 STOP LAMP SWITCHES	
Front Stop Lamp Switch.....	7-56
Removal/Installation.....	7-56
Rear Stop Lamp Switch.....	7-56
Removal.....	7-56
Installation.....	7-56

TABLE OF CONTENTS

7.27 HORN

Inspection.....	7-57
Removal.....	7-57
Installation.....	7-57

7.28 FAIRING POWER OUTLET

Troubleshooting.....	7-59
Removal.....	7-59
Installation.....	7-59

7.29 GAUGES AND INSTRUMENTS: FAIRING MODELS

2-Inch Diameter Gauges.....	7-60
Removal.....	7-60
Installation.....	7-60
Speedometer/Tachometer Instrument Cluster.....	7-60
Removal.....	7-60
Installation.....	7-60

7.30 GAUGES AND INSTRUMENTS: ROAD KING MODELS

Fuel Gauge.....	7-61
Removal.....	7-61
Installation.....	7-61
Speedometer.....	7-61
Removal.....	7-61
Installation.....	7-62

7.31 INDICATOR LAMPS: ROAD KING MODELS

Indicator Lamps.....	7-63
Removal.....	7-63
Installation.....	7-63

7.32 BOOM! BOX INFOTAINMENT SYSTEM

Radio Face Protective Film.....	7-64
Replacement.....	7-64
Radio.....	7-64
Removal.....	7-64
Installation.....	7-64
CB Module.....	7-66
Removal.....	7-66
Installation.....	7-66
CB Module Bracket.....	7-66
Front Fairing Speakers.....	7-66
Removal.....	7-66
Installation.....	7-67
Speaker Grille.....	7-67
Rear Speaker Enclosures.....	7-67
Removal.....	7-67
Installation.....	7-68
Disassembly.....	7-68
Assembly.....	7-68
Passenger Audio Controls.....	7-69
Front Headset Connector.....	7-69
Removal.....	7-69
Installation.....	7-69

7.33 ANTENNA CABLES

Removal.....	7-70
--------------	------

Main Cable.....	7-70
Cable Extension: Models with Tour-Pak.....	7-70
Cable Extension: FLHX/S.....	7-70
Installation.....	7-70
Main Cable.....	7-70
Cable Extension: Models with Tour-Pak.....	7-71
Cable Extension: FLHX/S.....	7-71

7.34 WIRE TROUGH

Removal.....	7-73
Installation.....	7-74

7.35 MAIN WIRING HARNESS

Removal: All Models (Part 1).....	7-75
Removal: Road King Models (Part 2).....	7-75
Removal: Fairing Models (Part 2).....	7-75
Removal: All Models (Part 3).....	7-77
Installation: All Models (Part 1).....	7-78
Installation: Road King Models (Part 2).....	7-80
Installation: Fairing Models (Part 2).....	7-80
Installation: All Models (Part 3).....	7-81

7.36 FAIRING HARNESS

Harness Service.....	7-82
Removal.....	7-82
Repair.....	7-82
Installation.....	7-83

7.37 HANDLEBAR SWITCH PACKS

Removal.....	7-84
Handlebar Controls.....	7-84
Installation.....	7-85
Right Handlebar Controls.....	7-85
Left Handlebar Controls.....	7-86
Switch Pack Harness.....	7-87
Removal.....	7-87
Installation.....	7-87
Handlebar Switch Caps.....	7-88

7.38 HFSM MAINTENANCE

General.....	7-89
Fob Battery.....	7-89
Battery Replacement Schedule.....	7-89
Battery Replacement.....	7-89
Smart Siren (If Installed).....	7-89
Battery Replacement Schedule.....	7-89
Battery Replacement.....	7-89
HFSM Antenna.....	7-89
Removal.....	7-89
Installation.....	7-90

7.39 PERSONAL IDENTIFICATION NUMBER (PIN)

General.....	7-91
Changing The PIN.....	7-91
Modifying an Existing PIN.....	7-91

7.40 H-DSSS ACTUATION

Sidecar Configuration.....	7-92
Actuation.....	7-92
Fob Assignment.....	7-92

7.41 SECURITY SIREN	Removing Socket Terminals.....	A-11
Removal.....	Installing Socket Terminals.....	A-11
Installation.....		
APPENDIX A CONNECTOR REPAIR		
A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTORS		
Autofuse Unsealed Connector Repair.....	A-1	
General.....	A-1	
Disassembly.....	A-1	
Assembly.....	A-1	
A.2 BOSCH COMPACT 1.1M CONNECTOR		
Bosch Compact 1.1M Connector.....	A-2	
General.....	A-2	
Housings.....	A-2	
Removing Socket Terminal.....	A-2	
Installing Socket Terminal.....	A-2	
A.3 BOSCH BTC SEALED CONNECTOR		
Bosch BTC Sealed Connector Repair.....	A-3	
Plugging and Unplugging Connector.....	A-3	
Removing and Installing Connector Cover.....	A-3	
Removing and Installing Wire Terminals.....	A-4	
Crimping Terminals to Leads.....	A-5	
A.4 DELPHI 100W MICRO-PACK SEALED CONNECTOR		
Delphi 100W Micro-Pack Sealed Connector Repair.....	A-6	
General.....	A-6	
Separating Socket Housing From ECM.....	A-6	
Mating Socket Housing To ECM.....	A-6	
Removing Socket Terminal.....	A-6	
Installing Socket Terminal.....	A-6	
Crimping Terminals.....	A-7	
A.5 DELPHI 150 METRI-PACK SEALED CONNECTORS		
Delphi 150 Metri-Pack Sealed Connector Repair.....	A-8	
General.....	A-8	
Separating Pin and Socket Housings.....	A-8	
Mating Pin and Socket Housings.....	A-8	
Removing Socket Terminal.....	A-8	
Inserting Socket Terminal.....	A-8	
A.6 DELPHI 280 METRI-PACK UNSEALED CONNECTORS		
Fuse Block Repair.....	A-10	
Removing Socket Terminals.....	A-10	
Installing Socket Terminals.....	A-10	
Crimping Terminals.....	A-10	
A.7 DELPHI 480 METRI-PACK UNSEALED CONNECTORS		
Delphi 480 Metri-Pack Unsealed Connector Repair.....	A-11	
General.....	A-11	
Separating Pin and Socket Housings.....	A-11	
Mating Pin and Socket Housings.....	A-11	
A.8 DELPHI 630 METRI-PACK UNSEALED CONNECTORS	Delphi 630 Metri-Pack Unsealed Connector Repair.....	A-12
	Separating Pin and Socket Housings.....	A-12
	Mating Pin and Socket Housings.....	A-12
	Removing Socket Terminal.....	A-12
	Installing Socket Terminal.....	A-12
A.9 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING	Delphi 800 Metri-Pack Sealed Main Fuse Housing Repair.....	A-13
	Removing Socket Terminals.....	A-13
	Installing Socket Terminals.....	A-13
A.10 DELPHI METRI-PACK TERMINAL REPAIR	Metri-Pack Terminal Crimps.....	A-14
	Matching Terminal To Crimper.....	A-14
	Preparing Wire Lead.....	A-14
	Crimping Wire Core.....	A-14
	Crimping Insulation/Seal.....	A-15
	Inspecting Crimps.....	A-15
A.11 DELPHI MICRO 64 SEALED CONNECTORS	Delphi Micro 64 Sealed Connector Repair.....	A-16
	General.....	A-16
	Separating Pin and Socket Housings.....	A-16
	Mating Pin and Socket Housings.....	A-16
	Removing Terminal.....	A-16
	Installing Terminal.....	A-17
	Preparing Wire Leads for Crimping.....	A-17
	Crimping Terminals.....	A-17
	Inspecting Crimps.....	A-17
A.12 DELPHI GT 150 SEALED CONNECTORS	Delphi GT 150 Sealed Connector Repair.....	A-19
	General.....	A-19
	Separating Pin and Socket Housings.....	A-19
	Mating Pin and Socket Housings.....	A-19
	Removing Socket Terminals.....	A-19
	Installing Socket Terminals.....	A-19
A.13 DEUTSCH DT SEALED CONNECTORS	Deutsch DT Sealed Connector Repair.....	A-21
	General.....	A-21
	Separating Pin and Socket Housings.....	A-21
	Mating Pin and Socket Housings.....	A-21
	Removing Socket Terminals.....	A-21
	Installing Socket Terminals.....	A-21
	Removing Pin Terminals.....	A-22
	Installing Pin Terminals.....	A-23
	Crimping Terminals.....	A-23

TABLE OF CONTENTS

A.14 DEUTSCH DT SEALED TERMINAL REPAIR	Crimping Terminals to Leads.....	A-37
Deutsch DT Sealed Terminal Crimps.....	Inspecting Crimped Terminals.....	A-37
Preparing Wire Leads for Crimping.....		
Crimping Terminal to Lead.....		A-25
Inspecting Crimps.....		A-25
A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR		
Deutsch DTM Sealed Mini Terminal Crimps.....		A-26
Preparing Wire Leads for Crimping.....		A-26
Crimping a Mini Terminal to Wire Lead.....		A-26
Inspecting Crimps.....		A-26
A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR		
Deutsch DTM Sealed Solid Barrel Terminal Crimps.....		A-27
Preparing Wire Leads For Crimping.....		A-27
Adjusting Crimper Tool.....		A-27
Crimping a Barrel Contact To Wire Lead.....		A-27
Inspecting Crimps.....		A-27
A.17 JAE MX19 SEALED CONNECTORS		
JAE MX19 Sealed Connectors.....		A-29
Connector Housings.....		A-29
Removing Terminals.....		A-29
Installing Terminals.....		A-29
Crimping Terminals.....		A-29
A.18 MOLEX CMC SEALED CONNECTORS		
Molex CMC Sealed Connectors.....		A-30
Separating the Connector.....		A-30
Removing Terminals.....		A-30
Installing Terminals.....		A-30
Crimping Terminals.....		A-31
A.19 MOLEX MX 150 SEALED CONNECTORS		
Molex MX 150 Sealed Connector Repair.....		A-32
Separating Pin and Socket Housings.....		A-32
Mating Pin and Socket Housings.....		A-32
Removing Terminals.....		A-32
Installing Terminals.....		A-32
Crimp Terminal to Lead.....		A-33
Prepare Lead.....		A-33
Prepare Tool.....		A-33
Position Terminal in the Punch/Die.....		A-34
Insert Stripped Lead.....		A-34
Crimp Terminal to Lead.....		A-34
Inspect Crimp.....		A-35
A.20 TYCO 040 MULTILOCK UNSEALED CONNECTOR		
Tyco 040 Multilock Unsealed Connector Repair.....		A-36
General.....		A-36
Separating Pin and Socket Housings.....		A-36
Mating Pin and Socket Housings.....		A-36
Removing Terminals from Housing.....		A-36
Inserting Terminals into Housing.....		A-37
A.21 TYCO 070 MULTILOCK UNSEALED CONNECTOR		
Tyco 070 Multilock Unsealed Connector Repair.....		A-38
General.....		A-38
Separating Pin and Socket Housings.....		A-38
Mating Pin and Socket Housings.....		A-38
Removing Terminals from Housing.....		A-38
Inserting Terminals into Housing.....		A-39
Crimping Terminals to Leads.....		A-40
Inspecting Crimped Terminals.....		A-40
A.22 TYCO GET 64 SEALED CONNECTOR		
Tyco GET 64 Sealed Connector Repair.....		A-41
General.....		A-41
Housings.....		A-41
Removing Socket Terminals.....		A-41
Installing Socket Terminals.....		A-42
Crimping Terminals.....		A-42
A.23 TYCO MCP SEALED CONNECTOR		
Tyco MCP Sealed Connector.....		A-43
General.....		A-43
Housing.....		A-43
Removing the Large Terminals.....		A-43
Removing the Small Terminals.....		A-43
Installing Terminals.....		A-44
Crimping Terminals.....		A-44
A.24 SEALED SPLICE CONNECTORS		
Sealed Splice Connector Repair.....		A-45
General.....		A-45
Preparing Wire Leads.....		A-45
Splicing Wire Leads.....		A-45
Inspecting Seals.....		A-45
APPENDIX B WIRING		
B.1 CONNECTORS		
Connector Locations.....		B-1
Function/Location.....		B-1
Place and Color.....		B-1
Connector Number.....		B-1
Repair Instructions.....		B-1
B.2 WIRING DIAGRAMS		
Wiring Diagram Information.....		B-6
Wire Color Codes.....		B-6
Wiring Diagram Symbols.....		B-6
2014 Touring Wiring Diagrams.....		B-8
APPENDIX C COOLING SYSTEM		
C.1 FASTENER TORQUE VALUES		
Fastener Torque Values in this Chapter.....		C-1
C.2 SPECIFICATIONS: COOLING SYSTEM		
General.....		C-2

TABLE OF CONTENTS

C.3 COOLING SYSTEM OPERATION	
Operation.....	C-3
C.4 TESTING AND DIAGNOSTICS	
Troubleshooting.....	C-4
Low Engine Temperature.....	C-4
High Engine Temperature.....	C-4
Coolant Leaks.....	C-4
Pressure Cap Test.....	C-4
System Pressure Test.....	C-4
Leak Detection Dye Test.....	C-5
C.5 COOLING SYSTEM REPAIR	
Crimp Clamps.....	C-6
Removal.....	C-6
Installation.....	C-6
Upper Coolant Line Removal.....	C-6
Hose and Manifold Removal.....	C-6
Cylinder Head Coolant Lines and Adapters.....	C-6
Upper Coolant Line Installation.....	C-7
Cylinder Head Coolant Lines and Adapters.....	C-7
Hose and Manifold Installation.....	C-7
Coolant Down Tubes.....	C-8
Removal.....	C-8
Installation.....	C-8
Horizontal Coolant Tube.....	C-8
Removal.....	C-8
Installation.....	C-8
Radiator.....	C-9
Removal.....	C-9
Installation.....	C-9
Coolant Distribution Components.....	C-9
Coolant Pump/Thermostat Removal.....	C-9
Coolant Pump/Thermostat Installation.....	C-10
Coolant Temperature Sensor.....	C-11
Cooling Fan.....	C-12
Removal.....	C-12
Installation.....	C-12
APPENDIX D REFERENCE	
D.1 METRIC CONVERSION	
Conversion Table.....	D-1
D.2 FLUID CONVERSION	
United States System.....	D-2
Metric System.....	D-2
British Imperial System.....	D-2
D.3 TORQUE CONVERSION	
United States System.....	D-3
Metric System.....	D-3
D.4 GLOSSARY	
Acronyms and Abbreviations.....	D-4
REFERENCE MATERIAL	
TOOLS.....	I
TORQUE VALUES.....	IX
INDEX.....	XXV

Thank you so much for reading.

**Please click the “Buy Now!”
button below to download the
complete manual.**

Buy Now



After you pay.

**You can download the most
perfect and complete manual in
the world immediately.**

Our support email:

ebooklibonline@outlook.com