



# DYNA<sup>®</sup> MODELS

2015 HARLEY-DAVIDSON<sup>®</sup> SERVICE MANUAL



# 2015 Harley-Davidson Dyna Models Service Manual

©2014 H-D.  
ALL RIGHTS RESERVED  
99481-15

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE  
<http://www.harley-davidson.com>

# MAINTENANCE

## 1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

## 1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Disposal and Recycling.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip-Type Seals.....	1-4
O-Rings.....	1-5
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Cleaning.....	1-5
Protecting Rubber Parts.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry Bars.....	1-5
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

## 1.3 FUEL AND OIL

Fuel.....	1-7
Gasoline Blends.....	1-7
Engine Lubrication.....	1-7
Winter Lubrication.....	1-8

## 1.4 BULB REQUIREMENTS

General.....1-9

## 1.5 MAINTENANCE SCHEDULE

General.....1-10

## 1.6 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-15
Type of Oil.....	1-15
Checking with Cold Engine.....	1-15
Checking with Warm Engine.....	1-15
Changing Oil and Filter.....	1-16

## 1.7 AIR CLEANER AND EXHAUST SYSTEM

Removal.....	1-18
Installation.....	1-18
Exhaust System Leak Check.....	1-19
Exhaust System Leakage.....	1-19

## 1.8 TIRES AND WHEELS

Tires.....	1-20
Tire Replacement.....	1-20
Dunlop.....	1-21
Michelin.....	1-21
Wheel Bearings.....	1-22
Wheel Spokes.....	1-22
Identify Wheel Spoke Groups.....	1-22
Wheel Spoke Adjustment.....	1-22

## 1.9 PRIMARY CHAINCASE LUBRICANT

General.....	1-24
Changing Primary Chaincase Lubricant.....	1-24

## 1.10 TRANSMISSION LUBRICANT

Checking Transmission Lubricant.....	1-26
Changing Transmission Lubricant.....	1-26

## 1.11 CLUTCH

Adjustment.....	1-28
-----------------	------

## 1.12 DRIVE BELT AND SPROCKETS

General.....	1-30
Cleaning.....	1-30
Inspection.....	1-30
Sprockets.....	1-30
Drive Belt.....	1-30
Checking Drive Belt Deflection.....	1-31
Adjusting Belt Deflection.....	1-33

## 1.13 THROTTLE CABLES

Cable Inspection and Lubrication.....	1-34
Cable Adjustment.....	1-34
Operation.....	1-34
Adjustment.....	1-34

## 1.14 CABLE AND CHASSIS LUBRICATION

General.....	1-36
Cables and Hand Levers.....	1-36
Jiffy Stand.....	1-36

## 1.15 BRAKES

Fluid Inspection.....	1-37
Rear Pedal Height.....	1-37
Brake Lines Inspection.....	1-37

## 1.16 BRAKE PADS AND DISCS

Inspection.....	1-39
Brake Pads.....	1-39
Brake Disc.....	1-39
Brake Pad Replacement.....	1-40
Rear Brake Caliper.....	1-40
Front Brake Caliper.....	1-40

## 1.17 SPARK PLUGS

Inspection.....	1-42
Spark Plug Cable Inspection.....	1-42

# TABLE OF CONTENTS

## 1.18 STEERING HEAD BEARINGS

Adjustment.....	1-44
Bearing Adjustment (Measurement).....	1-44
Bearing Adjustment (Fall-Away).....	1-44
Lubrication.....	1-45

## 1.19 BATTERY MAINTENANCE

General.....	1-46
Cleaning and Inspection.....	1-47
Voltmeter Test.....	1-47
Charging Battery.....	1-47
Safety Precautions.....	1-47
Using a Battery Charger.....	1-47
Disconnection and Removal.....	1-48
Storage.....	1-49
Installation and Connection.....	1-49

## 1.20 ENGINE MOUNTS

Inspection.....	1-50
-----------------	------

## 1.21 HEADLAMP ALIGNMENT

Headlamp Alignment.....	1-51
Adjustment: All Models Except FLD and FXDL.....	1-51
Adjustment: FLD Models.....	1-52
Headlamp Adjustment: FXDL Model.....	1-52

## 1.22 SUSPENSION ADJUSTMENTS

Shock Absorber Preload Adjustment.....	1-54
--	------

## 1.23 STORAGE

General.....	1-55
Placing in Storage.....	1-55
Removal from Storage.....	1-55

## 1.24 TROUBLESHOOTING

General.....	1-56
Engine.....	1-56
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-56
Engine Turns Over But Does Not Start.....	1-56
Starts Hard.....	1-56
Starts But Runs Irregularly or Misses.....	1-56
Spark Plug Fouls Repeatedly.....	1-56
Pre-Ignition or Detonation (Knocks or Pings).....	1-56
Overheating.....	1-56
Valve Train Noise.....	1-57
Excessive Vibration.....	1-57
Check Engine Light Illuminates During Operation.....	1-57
Lubrication System.....	1-57
Oil Does Not Return To Oil Pan.....	1-57
Engine Uses Too Much Oil Or Smokes Excessively.....	1-57
Engine Leaks Oil From Cases, Pushrods, Hoses, Etc.....	1-57
Low Oil Pressure.....	1-57
High Oil Pressure.....	1-57
Electrical System.....	1-57
Alternator Does Not Charge.....	1-57
Alternator Charge Rate Is Below Normal.....	1-57
Speedometer Operates Erratically.....	1-57
Transmission.....	1-58
Shifts Hard.....	1-58

Jumps Out Of Gear.....	1-58
Clutch Slips.....	1-58
Clutch Drags Or Does Not Release.....	1-58
Clutch Chatters.....	1-58
Handling.....	1-58
Irregularities.....	1-58
Brakes.....	1-58
Brake Does Not Hold Normally.....	1-58

## CHASSIS

### 2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

### 2.2 SPECIFICATIONS

Specifications.....	2-6
Chassis Specifications.....	2-6
Tire Specifications.....	2-7

### 2.3 VEHICLE IDENTIFICATION NUMBER (VIN)

Vehicle Identification Number.....	2-9
------------------------------------	-----

### 2.4 FRONT WHEEL

Removal.....	2-11
Disassembly.....	2-11
Cast Wheel.....	2-11
Cast Wheel, Dual Brakes.....	2-11
Laced Wheel.....	2-11
Cleaning and Inspection.....	2-15
Assembly.....	2-16
Cast Wheel.....	2-16
Laced Wheel.....	2-16
Installation.....	2-16

### 2.5 REAR WHEEL

Removal.....	2-18
Disassembly.....	2-18
Cleaning and Inspection.....	2-19
Assembly.....	2-20
Installation.....	2-20

### 2.6 SEALED WHEEL BEARINGS

Inspection.....	2-22
Removal.....	2-22
Installation.....	2-24

### 2.7 WHEEL LACING

Wheel Lacing: Angle Flange Hub.....	2-26
Wheel Lacing: Straight Flange Hub, Single Hole Circle.....	2-27
Wheel Lacing: Straight Flange Hub, Dual Hole Circle.....	2-29

### 2.8 CHECKING AND TRUING WHEELS

General.....	2-31
Checking Wheel Runout.....	2-31
Checking Radial Runout.....	2-31
Checking Lateral Runout.....	2-31
Laced Wheel Rim Offset.....	2-32
Truing Laced Wheels.....	2-35
Radial Runout.....	2-35

Lateral Runout.....	2-35	Tube Type Tires.....	2-70
<b>2.9 VEHICLE ALIGNMENT</b>		Tubeless Tires.....	2-70
Inspection.....	2-37	Checking Tire Runout.....	2-71
<b>2.10 FRONT BRAKE MASTER CYLINDER</b>		Lateral Runout.....	2-71
General.....	2-39	Radial Runout.....	2-71
Removal and Disassembly.....	2-39	Wheel Balancing.....	2-71
Cleaning and Inspection.....	2-41	Static vs Dynamic.....	2-71
Assembly and Installation.....	2-41	Weights.....	2-71
<b>2.11 FRONT BRAKE CALIPER</b>		<b>2.18 FRONT FORK</b>	
Removal.....	2-43	Fork Oil Leak Check.....	2-73
Disassembly.....	2-43	Fork Oil Seals.....	2-73
Cleaning, Inspection and Repair.....	2-45	Oil Leak Check.....	2-73
Assembly.....	2-46	Removal.....	2-73
Installation.....	2-47	Disassembly.....	2-73
<b>2.12 REAR BRAKE MASTER CYLINDER</b>		Disassembly: Cartridge Fork (FLD, Left Side).....	2-76
Removal.....	2-48	Assembly.....	2-78
Disassembly.....	2-50	Cleaning and Inspection.....	2-79
Cleaning and Inspection.....	2-51	Assembly: Cartridge Fork (FLD, Left Side).....	2-79
Assembly.....	2-51	Installation.....	2-81
Installation.....	2-51	<b>2.19 STEERING HEAD</b>	
<b>2.13 REAR BRAKE CALIPER</b>		Removal: All But FLD.....	2-83
Removal.....	2-53	Removal: FLD.....	2-83
Disassembly.....	2-53	Inspection.....	2-84
Cleaning, Inspection and Repair.....	2-55	Disassembly.....	2-84
Assembly.....	2-55	Steering Head Bearing Race Removal .....	2-84
Installation.....	2-56	Assembly.....	2-84
<b>2.14 BRAKE LINES</b>		Installation: All but FLD.....	2-84
Front Master Cylinder to Front Caliper Line Assembly.....	2-57	Installation: FLD.....	2-85
Removal.....	2-57	<b>2.20 BELT GUARD</b>	
Installation.....	2-57	Removal.....	2-87
Front ABS Lines.....	2-57	Installation.....	2-87
Removal.....	2-57	<b>2.21 DEBRIS DEFLECTOR</b>	
Installation.....	2-59	Removal.....	2-88
Rear Master Cylinder to ABS Module.....	2-60	Installation.....	2-88
Removal.....	2-60	<b>2.22 THROTTLE CONTROL</b>	
Installation.....	2-60	Removal/Disassembly.....	2-89
ABS Module to Rear Brake Caliper.....	2-62	Cleaning and Inspection.....	2-89
Removal.....	2-62	Assembly/Installation.....	2-89
Installation.....	2-62	Throttle Cable Routing.....	2-89
<b>2.15 ABS MODULE</b>		<b>2.23 REAR SHOCK ABSORBERS</b>	
General.....	2-64	General.....	2-91
Electro Hydraulic Control Unit (EHCUC).....	2-64	Removal.....	2-91
Removal.....	2-64	Inspection.....	2-91
Installation.....	2-66	Installation.....	2-91
<b>2.16 BLEEDING BRAKES</b>		<b>2.24 REAR FORK</b>	
General.....	2-67	Removal.....	2-92
Procedure.....	2-67	Disassembly.....	2-92
<b>2.17 TIRES</b>		Cleaning and Inspection.....	2-93
General.....	2-69	Assembly.....	2-93
Removal.....	2-69	Installation.....	2-93
Cleaning, Inspection and Repair.....	2-69	<b>2.25 CLUTCH CONTROL</b>	
Installation.....	2-70	Removal.....	2-94
		Installation.....	2-94

# TABLE OF CONTENTS

## 2.26 HANDLEBARS:FLD

Removal.....	2-96
Installation.....	2-96
Left Hand Grip.....	2-97
Removal.....	2-97
Installation.....	2-97

## 2.27 HANDLEBARS: FXDB/B/P, FXDF AND FXDWG

Removal.....	2-98
FXDB/B/P.....	2-98
FXDF and FXDWG.....	2-99
Installation.....	2-100

## 2.28 HANDLEBARS: FXDL

Removal.....	2-103
Installation.....	2-103
Handlebar and Riser Adjustment.....	2-105

## 2.29 FRONT FENDER

Removal.....	2-106
Installation.....	2-106

## 2.30 REAR FENDER

General.....	2-107
Removal.....	2-107
Tail Lamp/Turn Signal Harness Routing.....	2-107
Installation.....	2-107
FXDL.....	2-110
Removal.....	2-110
Installation.....	2-110
FXDB.....	2-110
Removal.....	2-110
Installation.....	2-110
FXDWG.....	2-111
Removal.....	2-111
Sissy Bar.....	2-112
Installation.....	2-112
FLD.....	2-113
Removal.....	2-113
Disassembly.....	2-113
Assembly.....	2-113
Installation.....	2-113
FXDF.....	2-114
Removal.....	2-114
Installation.....	2-114

## 2.31 SEAT

Removal.....	2-116
Seat and Seat Strap Removal: All But FXDWG.....	2-116
Seat and Seat Strap Removal: FXDWG.....	2-116
Installation.....	2-117
Seat and Seat Strap: All But FXDWG.....	2-117
Seat and Seat Strap: FXDWG.....	2-117
Lumbar Pad: FXDL Models.....	2-118
Removal.....	2-118
Installation.....	2-118

## 2.32 FOOTBOARDS AND FOOTRESTS

Rider Footboards.....	2-119
-----------------------	-------

Removal.....	2-119
Disassembly.....	2-119
Assembly.....	2-119
Installation.....	2-119
Rider Footrests: Mid Controls.....	2-120
Removal.....	2-120
Installation.....	2-120
Rider Footrests: Forward Controls.....	2-121
Removal.....	2-121
Installation.....	2-121
Passenger Footrests: All models except FXDF.....	2-121
Removal.....	2-121
Installation.....	2-121

## 2.33 HEADLAMP NACELLE: FLD

Upper and lower nacelle: FLD.....	2-123
Removal.....	2-123
Installation.....	2-123

## 2.34 WINDSHIELD: FLD

Windshield.....	2-124
Removal.....	2-124
Installation.....	2-124
Windshield Window.....	2-124
Removal.....	2-124
Installation.....	2-126

## 2.35 SADDLEBAGS: FLD

Saddlebags: FLD Model.....	2-127
Removal.....	2-127
Installation.....	2-127
Saddlebags.....	2-128
Disassembly.....	2-128
Assembly.....	2-128
Saddlebag Lid.....	2-129
Saddlebag Lid Seal.....	2-129
Disassembly.....	2-130
Assembly.....	2-130

## 2.36 JIFFY STAND

Cleaning.....	2-132
Jiffy Stand Sensor: HDI Models.....	2-134
Removal.....	2-134
Installation.....	2-134

## 2.37 FORK LOCK

Removal.....	2-136
Installation.....	2-136

## 2.38 ENGINE MOUNTS

Removal.....	2-138
Front Isolator.....	2-138
Rear Isolator.....	2-138
Installation.....	2-138
Front Isolator.....	2-138
Rear Isolator.....	2-138

## 2.39 SAREE GUARD: INDIA MODELS

Replacement.....	2-140
Removal.....	2-140
Installation.....	2-140

**2.40 MEDALLIONS, BADGES AND TANK EMBLEMS**

Removal.....2-141  
 Installation.....2-141

**ENGINE**

**3.1 FASTENER TORQUE VALUES**

Fastener Torque Values in this Chapter.....3-1

**3.2 SPECIFICATIONS**

Specifications.....3-3

**3.3 SERVICE WEAR LIMITS**

General.....3-5

**3.4 ENGINE OIL FLOW**

Oil Feed.....3-7  
 Top End.....3-7  
 Bottom End.....3-9  
 Oil Return.....3-11

**3.5 OIL PUMP OPERATION**

General.....3-12  
 Operation.....3-12

**3.6 BREATHER OPERATION**

General.....3-14

**3.7 OIL PRESSURE**

Oil Pressure Indicator Lamp.....3-15  
 Checking Oil Pressure.....3-15

**3.8 TROUBLESHOOTING**

Diagnosing Valve Train Noise.....3-17  
 Compression Test.....3-17  
 Cylinder Leakdown Test.....3-17  
 Diagnosing Smoking Engine or High Oil Consumption.....3-18  
     Check Prior to Cylinder Head Removal.....3-18  
     Check After Cylinder Head Removal.....3-18

**3.9 HOW TO USE THIS SECTION**

Top End Repair.....3-19  
 Bottom End Repair.....3-19  
 Typical Symptoms.....3-19

**3.10 TOP END SERVICE**

Engine in Chassis.....3-20  
 Engine Removed from Chassis.....3-21

**3.11 CAM COMPARTMENT SERVICE**

Engine in Chassis.....3-22  
 Engine Removed From Chassis.....3-23

**3.12 STRIPPING MOTORCYCLE FOR SERVICE**

Procedure.....3-24

**3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE**

Procedure.....3-25

**3.14 REMOVING ENGINE FROM CHASSIS**

Procedure.....3-26

**3.15 INSTALLING ENGINE IN CHASSIS**

Procedure.....3-27

**3.16 TOP END OVERHAUL: DISASSEMBLY**

General.....3-29  
 Rocker Covers.....3-29  
 Rocker Arm Support Plate.....3-29  
 Pushrods, Lifters and Covers.....3-31  
 Cylinder Head.....3-31  
 Cylinder.....3-32  
 Piston.....3-33

**3.17 BREATHER ASSEMBLY**

Disassembly.....3-35  
 Cleaning and Inspection.....3-35  
 Assembly.....3-35

**3.18 ROCKER ARM SUPPORT PLATE**

Disassembly.....3-36  
 Cleaning and Inspection.....3-36  
     Inspection.....3-36  
     Rocker Shaft Fit.....3-36  
     Rocker Arm Shaft to Bushing.....3-37  
     Replace Rocker Arm Bushings.....3-37  
 Assembly.....3-38

**3.19 PUSHRODS, LIFTERS AND COVERS**

Disassembly.....3-39  
 Cleaning and General Inspection.....3-39  
 Lifter Inspection.....3-39  
 Assembly.....3-40

**3.20 CYLINDER HEAD**

Disassembly.....3-41  
 Cleaning.....3-42  
 Inspection.....3-42  
     Cylinder Head.....3-42  
     Valve Guides.....3-43  
     Valves.....3-43  
     Valve Springs.....3-43  
     Tapered Keepers.....3-43  
     Valve Seats.....3-43  
 Valve Guide Replacement.....3-43  
     Removal.....3-43  
     Installation.....3-44  
 Valve and Seat Refacing.....3-47  
 Assembly.....3-49

**3.21 CYLINDER**

Cleaning.....3-51  
 Inspection.....3-51  
 Deglazing Cylinder.....3-53  
 Boring and Honing Cylinder.....3-53



# TABLE OF CONTENTS

## 3.22 PISTON

Disassembly.....	3-55
Piston Rings.....	3-55
Cleaning.....	3-55
Inspection.....	3-55
Assembly.....	3-57
Checking Piston Ring Gap.....	3-57
Installing Piston Rings.....	3-57

## 3.23 TOP END OVERHAUL: ASSEMBLY

General.....	3-59
Piston.....	3-59
Cylinder.....	3-60
Cylinder Head.....	3-62
Pushrods, Lifters and Covers.....	3-66
Rocker Arm Support Plate.....	3-67
Breather and Rocker Cover.....	3-68

## 3.24 CAM COMPARTMENT AND COMPONENTS

Cam Support Plate and Cover Removal.....	3-69
Prepare Engine.....	3-69
Cam Chain and Sprockets Removal.....	3-69
Cam Support Plate Removal.....	3-70
Cam Support Plate Cleaning and Inspection.....	3-71
Oil Pressure Valve.....	3-71
Cam Support Plate.....	3-71
Camshafts.....	3-71
Removal.....	3-71
Installation.....	3-72
Oil Pressure Relief Valve.....	3-73
Removal.....	3-73
Inspection.....	3-73
Installation.....	3-74
Cam Needle Bearings.....	3-74
Removal.....	3-74
Installation.....	3-75
Cam Support Plate and Cover Installation.....	3-77

## 3.25 OIL PUMP

Removal.....	3-81
Cleaning and Inspection.....	3-81
Installation.....	3-82

## 3.26 CRANKCASE DISASSEMBLY AND REPAIR

Crankcase Disassembly.....	3-83
Cleaning and Inspection.....	3-83
Right Crankcase Half.....	3-84
Main Bearing Removal.....	3-84
Main Bearing Installation.....	3-84
Piston Jets Removal.....	3-85
Piston Jets Installation.....	3-85
Left Crankcase Half.....	3-85
Main Bearing Removal.....	3-85
Main Bearing Installation.....	3-86
Sprocket Shaft Bearing Inner Race.....	3-87
Removal.....	3-87
Installation.....	3-88
Cylinder Studs.....	3-90
Removal.....	3-90

Installation.....	3-90
Pipe Plug and Oil Fittings.....	3-90
Removal.....	3-90
Installation.....	3-90

## 3.27 FLYWHEEL AND CONNECTING RODS

General.....	3-91
Symptoms.....	3-91
No Oil Pressure.....	3-91
Vibration.....	3-91
Inspection.....	3-91
Measuring Crankshaft Runout.....	3-91
Crankshaft Installed.....	3-91
Crankshaft Removed.....	3-92

## 3.28 CRANKCASE ASSEMBLY

Crankcase Assembly.....	3-93
-------------------------	------

## 3.29 OIL PAN

Removal.....	3-95
Installation.....	3-95

## FUEL SYSTEM

### 4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	4-1
---	-----

### 4.2 SPECIFICATIONS: FUEL SYSTEM

Specifications.....	4-3
---------------------	-----

### 4.3 AIR CLEANER ASSEMBLY

Removal.....	4-4
Installation.....	4-6
Backplate Assembly: HDI Models.....	4-6

### 4.4 FUEL TANK

General.....	4-8
Removal.....	4-8
Cleaning and Inspection.....	4-9
Installation.....	4-10
Vapor Valve.....	4-10

### 4.5 THROTTLE POSITION SENSOR (TPS)

General.....	4-11
Removal.....	4-11
Installation.....	4-11

### 4.6 INTAKE AIR TEMPERATURE SENSOR (IAT)

General.....	4-12
Removal.....	4-12
Installation.....	4-12

### 4.7 ENGINE TEMPERATURE SENSOR (ET)

General.....	4-13
Removal.....	4-13
Installation.....	4-14



# TABLE OF CONTENTS

## 4.8 INDUCTION MODULE

Removal.....	4-15
Installation.....	4-16

## 4.9 IDLE AIR CONTROL (IAC)

General.....	4-17
Removal.....	4-17
Installation.....	4-17

## 4.10 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)

General.....	4-18
Removal.....	4-18
Installation.....	4-18

## 4.11 OXYGEN SENSOR

General.....	4-19
Removal.....	4-19
Installation.....	4-19

## 4.12 FUEL INJECTORS

General.....	4-20
Removal.....	4-20
Installation.....	4-20

## 4.13 FUEL PUMP

General.....	4-22
Removal.....	4-22
Disassembly and Assembly.....	4-24
Fuel Filter.....	4-24
Regulator.....	4-24
Inlet Sock.....	4-25
Fuel Pump.....	4-26
Installation.....	4-26

## 4.14 FUEL PRESSURE TEST

General.....	4-29
Testing.....	4-29

## 4.15 EXHAUST SYSTEM

Removal: FXDB.....	4-31
Disassembly: FXDB/B/P.....	4-32
Assembly: FXDB/B/P.....	4-33
Installation: FXDB/B/P.....	4-33
Removal: FXDF and FXDWG.....	4-34
Installation: FXDF and FXDWG.....	4-36
Removal: FLD.....	4-37
Installation: FLD.....	4-39
Removal: FXDL.....	4-39
Installation: FXDL.....	4-41

## 4.16 INTAKE LEAK TEST

General.....	4-42
Leak Tester.....	4-42
Parts List.....	4-42
Tester Assembly.....	4-42
Tester Adjustment.....	4-42
Procedure.....	4-42

## 4.17 EVAPORATIVE EMISSIONS CONTROL

General.....	4-44
Charcoal Canister.....	4-46
Removal.....	4-46
Installation.....	4-46

## DRIVE

### 5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	5-1
---	-----

### 5.2 SPECIFICATIONS: DRIVE

Specifications.....	5-2
---------------------	-----

### 5.3 PRIMARY CHAINCASE COVER

General.....	5-3
Removal.....	5-3
Installation.....	5-3

### 5.4 DRIVE COMPONENTS

Removal.....	5-5
Installation.....	5-7

### 5.5 PRIMARY CHAINCASE HOUSING

Removal.....	5-10
Inspection.....	5-10
Mainshaft Bearing and Seal.....	5-10
Removal.....	5-10
Installation.....	5-11
Mainshaft Bearing Inner Race.....	5-11
Removal.....	5-11
Installation.....	5-12
Shifter Shaft Bushing.....	5-12
Installation.....	5-13

### 5.6 CLUTCH

Removal and Installation.....	5-15
Clutch Pack Only.....	5-15
Partial Disassembly.....	5-15
Cleaning And Inspection.....	5-15
Assembly.....	5-16
Clutch Pack and Bearing.....	5-17
Complete Disassembly.....	5-17
Assembly.....	5-18

### 5.7 TRANSMISSION SPROCKET

Removal.....	5-20
Cleaning and Inspection.....	5-21
Installation.....	5-21

### 5.8 DRIVE BELT

Removal.....	5-23
Installation.....	5-23

## TRANSMISSION

### 6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	6-1
---	-----

# TABLE OF CONTENTS

## 6.2 SPECIFICATIONS: TRANSMISSION

Specifications.....	6-2
Service Wear Limits.....	6-2

## 6.3 TRANSMISSION

Power Flow.....	6-3
Neutral.....	6-3
First Gear.....	6-3
Second Gear.....	6-3
Third Gear.....	6-3
Fourth Gear.....	6-3
Fifth Gear.....	6-3
Sixth Gear.....	6-3

## 6.4 SHIFTER LINKAGE

Adjustment.....	6-5
Forward Control Shifter Adjustment.....	6-5
Mid Control Shifter Adjustment.....	6-5

## 6.5 CLUTCH RELEASE COVER

Removal and Disassembly.....	6-6
Cleaning and Inspection.....	6-6
Assembly and Installation.....	6-7

## 6.6 TRANSMISSION ASSEMBLY

Removal.....	6-8
Disassembly.....	6-9
Shifter Cam/Shifter Forks.....	6-9
Mainshaft.....	6-11
Countershaft.....	6-13
Removing Bearing Housing Bearings.....	6-14
Cleaning and Inspection.....	6-15
Assembly.....	6-15
Installing Bearing Housing Bearings.....	6-15
Countershaft.....	6-15
Mainshaft.....	6-16
Shifter Cam/Shifter Forks.....	6-16
Installation.....	6-18

## 6.7 MAIN DRIVE GEAR AND BEARING

Removal.....	6-20
Cleaning and Inspection.....	6-21
Needle Bearing Replacement.....	6-22
Installation.....	6-23
Installing Main Drive Gear Bearing.....	6-23
Installing Main Drive Gear.....	6-24
Installing Main Drive Gear Large Seal.....	6-24

## 6.8 TRANSMISSION CASE

Removal.....	6-27
Installation.....	6-27
Disassembly.....	6-28
Shifter Arm Assembly.....	6-28
Cleaning and Inspection.....	6-28
Assembly.....	6-29
Countershaft Needle Bearing Replacement.....	6-29
Shifter Pawl Lever Assembly.....	6-29

## ELECTRICAL

### 7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	7-1
---	-----

### 7.2 SPECIFICATIONS: ELECTRICAL

Specifications.....	7-4
---------------------	-----

### 7.3 ELECTRICAL CADDY

Removal.....	7-5
Installation.....	7-7

### 7.4 ELECTRONIC CONTROL MODULE (ECM)

General.....	7-8
Replacement.....	7-8
Removal.....	7-8
Installation.....	7-8

### 7.5 BODY CONTROL MODULE (BCM)

General.....	7-9
Removal.....	7-9
Installation.....	7-10

### 7.6 SECURITY SIREN

Removal.....	7-11
Installation.....	7-11

### 7.7 SPARK PLUG CABLES

Removal.....	7-12
Installation.....	7-12

### 7.8 FUSES

General.....	7-13
Replacement.....	7-13

### 7.9 IGNITION SWITCH

Removal.....	7-14
All but FXDL.....	7-14
FXDL.....	7-15
Installation.....	7-16
All but FXDL.....	7-16
FXDL.....	7-16

### 7.10 BATTERY TRAY AND BATTERY CABLES

Battery Tray.....	7-17
Removal.....	7-17
Installation.....	7-17
Battery Cables.....	7-18
Routing.....	7-18

### 7.11 STARTER

General.....	7-20
Removal.....	7-20
Drive Assembly.....	7-20
Disassembly.....	7-20
Inspection.....	7-21
Assembly.....	7-21
Solenoid.....	7-21

Cover and Plunger Removal.....7-21  
 Short Post Contact: Starter.....7-22  
 Long Post Contact: Battery Positive.....7-22  
 Plunger and Cover Installation.....7-23  
 Installation.....7-23

**7.12 HEADLAMP**

General.....7-24  
 Bulb Removal: Except For FLD.....7-24  
     Single Bulb Headlamp.....7-24  
     Dual Bulb Headlamp.....7-25  
 Bulb Installation: Except FLD.....7-26  
 Headlamp Assembly: Except FLD.....7-26  
     Removal.....7-26  
     Installation.....7-26  
 Headlamp Assembly: FXDL Models.....7-26  
     Removal.....7-26  
     Installation.....7-26  
 Headlamp Visor: FXDL Models.....7-27  
     Removal.....7-27  
     Installation.....7-27  
 Headlamp: FLD Models.....7-28  
     Removal.....7-28  
     Bulb Replacement.....7-29  
     Installation.....7-30

**7.13 TAIL LAMP**

General.....7-31  
 Tail Lamp Bulb Replacement: FLD and FXDL Models.....7-31  
 Base Replacement: FLD and FXDL Models.....7-31  
 Base Replacement: FXDWG/HDI and Canada.....7-33  
 Tail Lamp Replacement: FXDF Models.....7-34  
     Tail Lamp Removal.....7-34  
     Tail Lamp Installation.....7-34  
     License Plate Lamp Replacement.....7-34

**7.14 TURN SIGNALS**

Turn Signal Bulb Replacement: Bullet Style.....7-36  
 Front Lamp Housing Replacement: All Except FLD.....7-36  
 Rear Lamp Housing Replacement: All Except FLD.....7-38  
 Front Turn Signal Lamps: FLD.....7-40  
     Removal.....7-40  
     Installation.....7-40  
 Rear Turn Signal Lamps and Bracket: FLD.....7-41  
     Removal.....7-41  
     Installation.....7-41  
 Rear Turn Signal Reflector/Isolator Repair: FLD.....7-41  
     Removal.....7-41  
     Installation.....7-42

**7.15 CRANK POSITION SENSOR (CKP)**

General.....7-43  
 Removal.....7-43  
 Installation.....7-43

**7.16 AUTOMATIC COMPRESSION RELEASE (ACR)**

General.....7-44  
 Removal.....7-44  
 Installation.....7-44

**7.17 VOLTAGE REGULATOR**

Removal.....7-46  
 Installation.....7-46

**7.18 ALTERNATOR**

Removal.....7-47  
 Cleaning and Inspection.....7-47  
 Installation.....7-47

**7.19 FUEL GAUGE**

General.....7-48  
 Removal.....7-48

**7.20 FUEL GAUGE SENDER**

Removal.....7-49  
 Installation.....7-50

**7.21 INSTRUMENTS: FXDF AND FLD**

Speedometer.....7-52  
     Removal.....7-52  
     Installation.....7-52

**7.22 INSTRUMENTS: FXDB/B/P AND FXDWG**

Removal.....7-53  
 Installation.....7-53

**7.23 INSTRUMENTS: FXDL**

Removal.....7-55  
 Installation.....7-55

**7.24 VEHICLE SPEED SENSOR (VSS)**

General.....7-57  
 Removal.....7-57  
 Installation.....7-57

**7.25 WHEEL SPEED SENSORS**

Front Wheel Speed Sensor (WSS).....7-58  
     Removal.....7-58  
     Installation.....7-58  
 Rear Wheel Speed Sensor (WSS).....7-59  
     Removal.....7-59  
     Installation.....7-60

**7.26 INDICATOR LAMPS**

Removal.....7-62  
     FLD Models.....7-62  
     FXDB/B/P, FXDWG and FXDF Models.....7-62  
 Installation.....7-63  
     FLD Models.....7-63  
     FXDB/B/P, FXDWG and FXDF Models.....7-63

**7.27 NEUTRAL SWITCH**

General.....7-64  
 Removal.....7-64  
 Installation.....7-64

**7.28 OIL PRESSURE SWITCH**

General.....7-65  
 Removal.....7-65  
 Installation.....7-65

# TABLE OF CONTENTS

## 7.29 REAR STOPLAMP SWITCH

General.....	7-66
Removal.....	7-66
Installation.....	7-66

## 7.30 HORN

Inspection.....	7-67
Replacement: All Except FXDL.....	7-67
Replacement: FXDL.....	7-68

## 7.31 ACTIVE EXHAUST

General.....	7-69
Removal.....	7-69
Repair.....	7-69
Installation.....	7-69

## 7.32 MAIN WIRING HARNESS

General.....	7-71
Removal.....	7-71
Installation.....	7-73

## 7.33 HANDLEBAR CONTROL MODULES

General.....	7-77
Repair Procedures.....	7-77

## 7.34 LEFT HANDLEBAR CONTROL MODULE

Removal.....	7-78
Clutch Switch Replacement.....	7-78
Installation.....	7-78

## 7.35 RIGHT HANDLEBAR CONTROL MODULE

Removal.....	7-80
Front Brake Switch Replacement.....	7-81
Installation.....	7-81

## 7.36 H-DSSS MAINTENANCE

Fob Battery.....	7-83
Battery Replacement Schedule.....	7-83
Battery Replacement.....	7-83
Smart Siren (If Installed).....	7-83
Battery Replacement Schedule.....	7-83
Battery Replacement.....	7-83

## 7.37 PERSONAL IDENTIFICATION NUMBER (PIN)

General.....	7-84
Changing The PIN.....	7-84
Modifying an Existing PIN.....	7-84

## 7.38 H-DSSS ACTUATION

Sidecar Configuration.....	7-86
Actuation.....	7-86
Fob Assignment.....	7-86

# APPENDIX A CONNECTOR REPAIR

## A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTORS

Autofuse Unsealed Connector Repair.....	A-1
General.....	A-1
Disassembly.....	A-1
Assembly.....	A-1

## A.2 BOSCH COMPACT 1.1M CONNECTOR

Bosch Compact 1.1M Connector.....	A-2
General.....	A-2
Housings.....	A-2
Removing Socket Terminal.....	A-2
Installing Socket Terminal.....	A-2

## A.3 BOSCH BTC SEALED CONNECTOR

Bosch BTC Sealed Connector Repair.....	A-3
Plugging and Unplugging Connector.....	A-3
Removing and Installing Connector Cover.....	A-3
Removing and Installing Wire Terminals.....	A-4
Crimping Terminals to Leads.....	A-5

## A.4 DELPHI 100W MICRO-PACK SEALED CONNECTOR

Delphi 100W Micro-Pack Sealed Connector Repair.....	A-6
General.....	A-6
Separating Socket Housing From ECM.....	A-6
Mating Socket Housing To ECM.....	A-6
Removing Socket Terminal.....	A-6
Installing Socket Terminal.....	A-6
Crimping Terminals.....	A-7

## A.5 DELPHI 150 METRI-PACK SEALED CONNECTORS

Delphi 150 Metri-Pack Sealed Connector Repair.....	A-8
General.....	A-8
Separating Pin and Socket Housings.....	A-8
Mating Pin and Socket Housings.....	A-8
Removing Socket Terminal.....	A-8
Inserting Socket Terminal.....	A-8

## A.6 DELPHI 280 METRI-PACK UNSEALED CONNECTORS

Fuse Block Repair.....	A-10
Removing Socket Terminals.....	A-10
Installing Socket Terminals.....	A-10
Crimping Terminals.....	A-10

## A.7 DELPHI 480 METRI-PACK UNSEALED CONNECTORS

Delphi 480 Metri-Pack Unsealed Connector Repair.....	A-11
General.....	A-11
Separating Pin and Socket Housings.....	A-11
Mating Pin and Socket Housings.....	A-11
Removing Socket Terminals.....	A-11
Installing Socket Terminals.....	A-11

**A.8 DELPHI 630 METRI-PACK UNSEALED CONNECTORS**

Delphi 630 Metri-Pack Unsealed Connector Repair.....A-12  
 Separating Pin and Socket Housings.....A-12  
 Mating Pin and Socket Housings.....A-12  
 Removing Socket Terminal.....A-12  
 Installing Socket Terminal.....A-12

**A.9 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING**

Delphi 800 Metri-Pack Sealed Main Fuse Housing Repair.....A-13  
 Removing Socket Terminals.....A-13  
 Installing Socket Terminals.....A-13

**A.10 DELPHI METRI-PACK TERMINAL REPAIR**

Metri-Pack Terminal Crimps.....A-14  
 Matching Terminal To Crimper.....A-14  
 Preparing Wire Lead.....A-14  
 Crimping Wire Core.....A-14  
 Crimping Insulation/Seal.....A-15  
 Inspecting Crimps.....A-15

**A.11 DELPHI MICRO-64 SEALED CONNECTORS**

Delphi Micro 64 Sealed Connector Repair.....A-16  
 General.....A-16  
 Separating Pin and Socket Housings.....A-16  
 Mating Pin and Socket Housings.....A-16  
 Removing Terminal.....A-16  
 Installing Terminal.....A-17  
 Preparing Wire Leads for Crimping.....A-17  
 Crimping Terminals.....A-17  
 Inspecting Crimps.....A-17

**A.12 DELPHI GT 150 SEALED CONNECTORS**

Delphi GT 150 Sealed Connector Repair.....A-19  
 General.....A-19  
 Separating Pin and Socket Housings.....A-19  
 Mating Pin and Socket Housings.....A-19  
 Removing Socket Terminals.....A-19  
 Installing Socket Terminals.....A-19

**A.13 DEUTSCH DT SEALED CONNECTORS**

Deutsch DT Sealed Connector Repair.....A-21  
 General.....A-21  
 Separating Pin and Socket Housings.....A-21  
 Mating Pin and Socket Housings.....A-21  
 Removing Socket Terminals.....A-21  
 Installing Socket Terminals.....A-21  
 Removing Pin Terminals.....A-22  
 Installing Pin Terminals.....A-23  
 Crimping Terminals.....A-23

**A.14 DEUTSCH DT SEALED TERMINAL REPAIR**

Deutsch DT Sealed Terminal Crimps.....A-25

Preparing Wire Leads for Crimping.....A-25  
 Crimping Terminal to Lead.....A-25  
 Inspecting Crimps.....A-25

**A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR**

Deutsch DTM Sealed Mini Terminal Crimps.....A-26  
 Preparing Wire Leads for Crimping.....A-26  
 Crimping a Mini Terminal to Wire Lead.....A-26  
 Inspecting Crimps.....A-26

**A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR**

Deutsch DTM Sealed Solid Barrel Terminal Crimps.....A-27  
 Preparing Wire Leads For Crimping.....A-27  
 Adjusting Crimper Tool.....A-27  
 Crimping a Barrel Contact To Wire Lead.....A-27  
 Inspecting Crimps.....A-27

**A.17 JAE MX19 SEALED CONNECTORS**

JAE MX19 Sealed Connectors.....A-29  
 Connector Housings.....A-29  
 Removing Terminals.....A-29  
 Installing Terminals.....A-29  
 Crimping Terminals.....A-29

**A.18 MOLEX CMC SEALED CONNECTORS**

Molex CMC Sealed Connectors.....A-30  
 Separating the Connector.....A-30  
 Removing Terminals.....A-30  
 Installing Terminals.....A-30  
 Crimping Terminals.....A-31

**A.19 MOLEX MX 150 SEALED CONNECTORS**

Molex MX 150 Sealed Connector Repair.....A-32  
 Separating Pin and Socket Housings.....A-32  
 Mating Pin and Socket Housings.....A-32  
 Removing Terminals.....A-32  
 Installing Terminals.....A-32  
 Crimp Terminal to Lead.....A-33  
 Prepare Lead.....A-33  
 Prepare Tool.....A-33  
 Position Terminal in the Punch/Die.....A-34  
 Insert Stripped Lead.....A-34  
 Crimp Terminal to Lead.....A-34  
 Inspect Crimp.....A-35

**A.20 TYCO 040 MULTILOCK UNSEALED CONNECTOR**

Tyco 040 Multilock Unsealed Connector Repair.....A-36  
 General.....A-36  
 Separating Pin and Socket Housings.....A-36  
 Mating Pin and Socket Housings.....A-36  
 Removing Terminals from Housing.....A-36  
 Inserting Terminals into Housing.....A-37  
 Crimping Terminals to Leads.....A-37  
 Inspecting Crimped Terminals.....A-37

# TABLE OF CONTENTS

## A.21 TYCO 070 MULTILOCK UNSEALED CONNECTOR

Tyco 070 Multilock Unsealed Connector Repair.....	A-38
General.....	A-38
Separating Pin and Socket Housings.....	A-38
Mating Pin and Socket Housings.....	A-38
Removing Terminals from Housing.....	A-38
Inserting Terminals into Housing.....	A-39
Crimping Terminals to Leads.....	A-40
Inspecting Crimped Terminals.....	A-40

## A.22 TYCO GET 64 SEALED CONNECTOR

Tyco GET 64 Sealed Connector Repair.....	A-41
General.....	A-41
Housings.....	A-41
Removing Socket Terminals.....	A-41
Installing Socket Terminals.....	A-42
Crimping Terminals.....	A-42

## A.23 TYCO MCP SEALED CONNECTOR

Tyco MCP Sealed Connector.....	A-43
General.....	A-43
Housing.....	A-43
Removing the Large Terminals.....	A-43
Removing the Small Terminals.....	A-43
Installing Terminals.....	A-44
Crimping Terminals.....	A-44

## A.24 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-45
General.....	A-45
Preparing Wire Leads.....	A-45
Splicing Wire Leads.....	A-45
Inspecting Seals.....	A-45

## APPENDIX B WIRING

### B.1 CONNECTORS

Connector Locations.....	B-1
--------------------------	-----

Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

### B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-4
Wire Color Codes.....	B-4
Wiring Diagram Symbols.....	B-4
2015 Dyna Wiring Diagrams.....	B-6

## APPENDIX C REFERENCE

### C.1 LENGTH CONVERSION

Conversion Table.....	C-1
-----------------------	-----

### C.2 FLUID CONVERSION

United States System.....	C-2
Metric System.....	C-2
British Imperial System.....	C-2

### C.3 TORQUE CONVERSION

United States System.....	C-3
Metric System.....	C-3

### C.4 GLOSSARY

Acronyms and Abbreviations.....	C-4
---------------------------------	-----

## REFERENCE MATERIAL

TOOLS.....	I
------------	---

TORQUE VALUES.....	IX
--------------------	----

INDEX.....	XXIII
------------	-------

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)