



2015 Harley-Davidson Touring Models Service Manual

©2014 H-D.
ALL RIGHTS RESERVED
99483-15

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	1-1
---	-----

1.2 GENERAL

Servicing a New Motorcycle.....	1-3
Safe Operating Maintenance.....	1-3
Shop Practices.....	1-3
Repair Notes.....	1-3
Safety.....	1-3
Removing Parts.....	1-3
Cleaning.....	1-3
Disassembly and Assembly.....	1-4
Checking Torques on Fasteners.....	1-4
Magnetic Parts Trays.....	1-4
Repair and Replacement Procedures.....	1-4
Hardware and Threaded Parts.....	1-4
Threadlocking Agents.....	1-4
Wiring, Hoses and Lines.....	1-4
Instruments and Gauges.....	1-4
Bearings.....	1-4
Bushings.....	1-4
Gaskets.....	1-4
Lip-Type Seals.....	1-4
O-Rings.....	1-5
Gears.....	1-5
Shafts.....	1-5
Part Replacement.....	1-5
Disposal and Recycling.....	1-5
Cleaning.....	1-5
Protecting Rubber Parts.....	1-5
Cleaning Process.....	1-5
Rust or Corrosion Removal.....	1-5
Bearings.....	1-5
Tool Safety.....	1-5
Air Tools.....	1-5
Wrenches.....	1-5
Pliers/Cutters/Pry Bars.....	1-6
Hammers.....	1-6
Punches/Chisels.....	1-6
Screwdrivers.....	1-6
Ratchets and Handles.....	1-6
Sockets.....	1-6
Storage Units.....	1-6

1.3 FUEL AND OIL

Fuel.....	1-7
Gasoline Blends.....	1-7
Engine Lubrication.....	1-7
Winter Lubrication.....	1-8

1.4 BULB REQUIREMENTS

General.....	1-9
--------------	-----

1.5 MAINTENANCE SCHEDULE

General.....	1-10
--------------	------

1.6 ENGINE OIL AND FILTER

Engine Oil Level.....	1-15
Oil Level Cold Check.....	1-15
Oil Level Hot Check.....	1-15
Changing Oil and Oil Filter.....	1-16

1.7 AIR CLEANER AND EXHAUST SYSTEM

Air Filter.....	1-18
Removal.....	1-18
Installation.....	1-18
Exhaust System Leak Check.....	1-18
Exhaust System Leakage.....	1-19

1.8 COOLANT

Cooling System.....	1-20
Checking Coolant Level.....	1-20
Clean Radiators.....	1-20
Drain and Fill Cooling System.....	1-21
Drain System.....	1-21
Power Fill and Bleed.....	1-21
Manual Fill and Bleed.....	1-22

1.9 TIRES AND WHEELS

General.....	1-23
Tires.....	1-23
Tire Replacement.....	1-24
Inspection.....	1-24
When To Replace Tires.....	1-24
Wheel Bearings.....	1-24
Wheel Spokes.....	1-25
Identify Wheel Spoke Groups.....	1-25
Wheel Spoke Adjustment.....	1-25

1.10 PRIMARY CHAINCASE LUBRICANT

General.....	1-27
Changing Primary Chaincase Lubricant.....	1-27

1.11 TRANSMISSION LUBRICANT

Checking Transmission Lubricant.....	1-29
Changing Transmission Lubricant.....	1-29

1.12 CLUTCH CABLE: ROAD KING

Adjustment.....	1-31
-----------------	------

1.13 HYDRAULIC CLUTCH FLUID

General.....	1-32
Fluid Inspection.....	1-32

1.14 DRIVE BELT AND SPROCKETS

General.....	1-33
Cleaning.....	1-33
Inspection.....	1-33
Sprockets.....	1-33
Drive Belt.....	1-33
Checking Drive Belt Deflection.....	1-34
Setting Belt Deflection.....	1-36
Adjustment.....	1-36
Assembly.....	1-37

1.15 REAR SPROCKET ISOLATOR

Inspection.....	1-38
-----------------	------

1.16 CABLE AND CHASSIS LUBRICATION

Chassis Lubrication.....	1-39
--------------------------	------

1.17 BRAKES

Fluid Inspection.....	1-40
Brake Fluid Replacement.....	1-40
Brake Lines Inspection.....	1-41

TABLE OF CONTENTS

1.18 BRAKE PADS AND DISCS

Inspection.....	1-42
Brake Pads.....	1-42
Brake Disc Thickness.....	1-42
Brake Disc Lateral Runout.....	1-42
Brake Pad Replacement.....	1-42
Rear Brake Caliper.....	1-42
Front Brake Calipers.....	1-44

1.19 SPARK PLUGS

Removal.....	1-46
Inspection.....	1-46
Cleaning.....	1-46
Installation.....	1-46

1.20 STEERING HEAD BEARINGS

Checking Swing-Back.....	1-48
Measure Swing-Back.....	1-48
Adjusting Swing-Back.....	1-49
Inspection and Lubrication.....	1-50

1.21 REAR SUSPENSION ADJUSTMENTS

Air Suspension.....	1-51
Manual Suspension Preload.....	1-52

1.22 BATTERY MAINTENANCE

General.....	1-54
Cleaning and Inspection.....	1-55
Battery.....	1-55
Disconnection and Removal.....	1-55
Installation and Connection.....	1-55
Voltmeter Test.....	1-56
Battery Tender Connector.....	1-56
Charging Battery.....	1-57
Safety Precautions.....	1-57
Using a Battery Charger.....	1-57
Storage.....	1-58

1.23 HEADLAMP ALIGNMENT

Checking Headlamp Alignment.....	1-59
Headlamp Adjustment.....	1-59
Auxiliary/Fog Lamp Adjustment.....	1-60

1.24 ENGINE MOUNTS

Inspection.....	1-62
General.....	1-62
Front Engine Mount.....	1-62

1.25 STORAGE

General.....	1-63
Placing in Storage.....	1-63
Removal from Storage.....	1-63

1.26 TROUBLESHOOTING

General.....	1-65
Engine.....	1-65
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-65
Engine Turns Over But Does Not Start.....	1-65
Starts Hard.....	1-65

Starts But Runs Irregularly or Misses.....	1-65
A Spark Plug Fouls Repeatedly.....	1-66
Pre-Ignition or Detonation (Knocks or Pings).....	1-66
Overheating.....	1-66
Valve Train Noise.....	1-66
Excessive Vibration.....	1-66
Check Engine Light Illuminates During Operation.....	1-66
Lubrication System.....	1-66
Oil Does Not Return To Oil Reservoir.....	1-66
Engine Uses Too Much Oil Or Smokes Excessively.....	1-66
Engine Leaks Oil From Cases, Pushrods, Hoses, Etc.....	1-67
Low Oil Pressure.....	1-67
High Oil Pressure.....	1-67
Electrical System.....	1-67
Alternator Does Not Charge.....	1-67
Alternator Charge Rate Is Below Normal.....	1-67
Speedometer Operates Erratically.....	1-67
Transmission.....	1-67
Shifts Hard.....	1-67
Jumps Out Of Gear.....	1-67
Clutch Slips.....	1-67
Clutch Drags Or Does Not Release.....	1-67
Clutch Chatters.....	1-67
Handling.....	1-67
Irregularities.....	1-67
Brakes.....	1-68
Brake Does Not Hold Normally.....	1-68

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

2.2 SPECIFICATIONS

Specifications.....	2-10
Chassis Specifications.....	2-10
Tire Specifications.....	2-12

2.3 VEHICLE IDENTIFICATION NUMBER (VIN)

Vehicle Identification Number (VIN).....	2-14
General.....	2-14
Location.....	2-14
Abbreviated VIN.....	2-14

2.4 FRONT WHEEL

Removal.....	2-16
Brake Disc Removal.....	2-16
Cleaning and Inspection.....	2-16
Installation.....	2-17
Brake Disc Installation.....	2-17
Wheel Installation.....	2-17

2.5 REAR WHEEL

Removal.....	2-18
Cleaning and Inspection.....	2-19
Installation.....	2-19

2.6 REAR WHEEL COMPENSATOR

Isolator Replacement.....	2-22
---------------------------	------

TABLE OF CONTENTS

Removal.....	2-22	Assembly and Installation.....	2-46
Installation.....	2-22	Assembly.....	2-46
Sprocket Bearing Replacement.....	2-22	Installation.....	2-46
Removal.....	2-22		
Installation.....	2-22		
2.7 WHEEL LACING: FRONT RIM		2.15 REAR BRAKE CALIPER	
Wheel Lacing: Angle Flange Hub.....	2-24	Removal.....	2-47
2.8 WHEEL LACING: 16 INCH REAR RIM		Installation.....	2-47
Wheel Lacing: 16 In. Rear Wheel.....	2-26		
2.9 CHECKING AND TRUING WHEELS		2.16 BRAKE LINES	
General.....	2-29	Front Brake Line: Non-ABS Equipped.....	2-48
Checking Wheel Runout.....	2-29	Removal.....	2-48
Checking Radial Runout.....	2-29	Installation.....	2-49
Checking Lateral Runout.....	2-29	Rear Brake Line: Non-ABS Equipped.....	2-49
Laced Wheel Rim Offset.....	2-30	Removal.....	2-49
Truing Laced Wheels.....	2-31	Installation.....	2-50
Radial Runout.....	2-31	Brake Line: Front Master Cylinder to ABS Module.....	2-52
Lateral Runout.....	2-32	Removal.....	2-52
		Front Line Routing.....	2-53
		Installation.....	2-53
		Brake Line: ABS Module to Front Caliper.....	2-54
		Removal.....	2-54
		Installation.....	2-55
		Brake Line: Rear Master Cylinder to ABS Module.....	2-56
		Removal.....	2-56
		Installation.....	2-56
		Brake Line: ABS Module to Rear Caliper.....	2-59
		Removal.....	2-59
		Installation.....	2-59
2.10 SEALED WHEEL BEARINGS		2.17 ABS MODULE	
Inspection.....	2-33	Reflex™ Linked Brakes with ABS Operation.....	2-60
Removal.....	2-33	ABS Module.....	2-60
Installation.....	2-35	Removal.....	2-60
		Installation.....	2-61
2.11 TIRES		2.18 BLEEDING BRAKES	
General.....	2-36	General.....	2-62
Removal.....	2-36	Procedure.....	2-62
Cleaning, Inspection and Repair.....	2-36		
Installation.....	2-37	2.19 FRONT FORK	
Tube Type Tires.....	2-37	Fork Oil Leak Check.....	2-64
Tubeless Tires: Cast Wheels.....	2-37	Fork Oil Seals.....	2-64
Checking Tire Runout.....	2-38	Oil Leak Check.....	2-64
Lateral Runout.....	2-38	Removal.....	2-64
Radial Runout.....	2-38	Installation.....	2-65
Wheel Balancing.....	2-38	Disassembly: All Except Cartridge Fork (Low Models, Left Side).....	2-66
Static vs Dynamic.....	2-38	Disassembly: Cartridge Fork (Low Models, Left Side).....	2-68
Weights.....	2-38	Cleaning and Inspection.....	2-70
		Assembly: All Except Low Models, Left Side.....	2-71
		Filling and Final Assembly.....	2-71
		Assembly: Cartridge Fork (Low Models, Left Side).....	2-72
		Filling and Final Assembly.....	2-73
2.12 FRONT BRAKE MASTER CYLINDER		2.20 STEERING HEAD BEARINGS	
General.....	2-40	Steering Stem Removal.....	2-75
Removal and Disassembly.....	2-40	Removal.....	2-75
Removal.....	2-40	Disassembly.....	2-75
Disassembly.....	2-40	Steering Stem Installation.....	2-76
Cleaning and Inspection.....	2-41	Assembly.....	2-76
Assembly and Installation.....	2-42	Installation.....	2-76
Assembly.....	2-42		
Installation.....	2-42		
2.13 FRONT BRAKE CALIPER			
Removal.....	2-43		
Installation.....	2-43		
2.14 REAR BRAKE MASTER CYLINDER			
General.....	2-44		
Removal and Disassembly.....	2-44		
Removal.....	2-44		
Disassembly.....	2-44		
Cleaning and Inspection.....	2-45		

TABLE OF CONTENTS

Upper Fork Bracket.....	2-77
Removal.....	2-77
Installation.....	2-77

2.21 REAR SUSPENSION

Shock Absorber Removal.....	2-79
Cleaning and Inspection.....	2-79
Shock Absorber Installation.....	2-79
Air Shock Absorber Repair.....	2-80
Air Lines.....	2-80
Check for Leaks.....	2-80
Fittings.....	2-80
Air Valve Assembly.....	2-80
Air Tubes.....	2-80
Manual Adjust Shock Absorber Repair.....	2-81

2.22 REAR FORK

Removal.....	2-82
Disassembly and Assembly.....	2-82
Bearing Removal.....	2-82
Bearing Installation.....	2-83
Pivot Shaft/Mount Disassembly.....	2-83
Installation.....	2-84

2.23 CLUTCH CABLE

Removal.....	2-85
Installation.....	2-85

2.24 CLUTCH MASTER CYLINDER AND RESERVOIR

Removal.....	2-87
Disassembly.....	2-87
Cleaning and Inspection.....	2-88
Assembly.....	2-88
Installation.....	2-89

2.25 HYDRAULIC CLUTCH HAND LEVER

Removal.....	2-90
Installation.....	2-90

2.26 CLUTCH FLUID LINE

Replacement.....	2-91
Removal.....	2-91
Installation.....	2-91
Validate Repair.....	2-92

2.27 BLEEDING CLUTCH CONTROL SYSTEM

Drain and Fill.....	2-94
Drain.....	2-94
Fill.....	2-94
Bleed Fluid Line and Secondary Clutch Actuator.....	2-95

2.28 HANDLEBAR

Adjustment.....	2-96
Removal.....	2-97
Installation.....	2-99
Disassembly, FLTR Models.....	2-100
Assembly, FLTR Models.....	2-100
Pull Wire Leads.....	2-100

Left Hand Grip.....	2-101
Removal.....	2-101
Installation.....	2-101
Right Hand Grip.....	2-101
Removal.....	2-101
Installation.....	2-101
Rubber Mounts.....	2-101
Heated Hand Grips.....	2-102
Remove Left Hand Grip.....	2-102
Install Left Hand Grip.....	2-102
Remove Right Hand Grip.....	2-103
Install Right Hand Grip.....	2-103

2.29 MIRRORS

All Models Except FLHX/S.....	2-104
Removal.....	2-104
Installation.....	2-104
FLHX/S.....	2-104
Removal.....	2-104
Installation.....	2-104

2.30 SEAT

Seat.....	2-105
Removal.....	2-105
Installation.....	2-105
Seat Retention Nut Replacement.....	2-106
Seat Bumper.....	2-106

2.31 SADDLEBAGS

Removal.....	2-107
Installation.....	2-107

2.32 SADDLEBAG SERVICE

Saddlebag Repair.....	2-108
Lock.....	2-108
Strikes.....	2-108
Cover.....	2-108
Cover Seal.....	2-109
Hinge.....	2-109
Latch Assembly.....	2-109
Saddlebag Support.....	2-110
Removal.....	2-110
Installation.....	2-110

2.33 TOUR-PAK

Removal and Installation.....	2-112
Removal.....	2-112
Installation.....	2-112
Tour-Pak Support.....	2-112
Removal.....	2-112
Installation.....	2-113
Disassembly/Assembly.....	2-113

2.34 TOUR-PAK SERVICE

Tour-Pak Liner.....	2-114
Removal.....	2-114
Installation.....	2-114
Tour-Pak Seal.....	2-114
Inspection.....	2-114
Replacement.....	2-114
Tour-Pak Lock.....	2-114

TABLE OF CONTENTS

Removal.....	2-114	Inner Fairing Assembly Removal and Installation.....	2-127
Installation.....	2-114	Removal.....	2-127
Hinges.....	2-115	Installation.....	2-128
Removal.....	2-115	Inner Fairing Shell Replacement.....	2-129
Installation.....	2-115	Removal.....	2-129
Latch Handle and Catch.....	2-115	Installation.....	2-129
Removal.....	2-115	Fairing Vent.....	2-130
Installation.....	2-115	Cleaning.....	2-130
Tether.....	2-115	Removal.....	2-130
Removal.....	2-115	Installation.....	2-130
Installation.....	2-115	Vent Repair.....	2-131
Luggage Rack.....	2-116	Upper Support Bracket.....	2-131
Ground Plate.....	2-116	Removal.....	2-131
Removal.....	2-116	Installation.....	2-132
Installation.....	2-116	Media Compartment.....	2-132
		Removal.....	2-132
		Installation.....	2-132
		Cable Replacement.....	2-132
		Cover Replacement.....	2-133
		Latch Replacement.....	2-133
2.35 TOUR-PAK BACKREST		2.40 INSTRUMENT BEZEL: FRAME MOUNTED FAIRING MODELS	
Passenger Backrest.....	2-118	Instrument Bezel.....	2-134
Removal.....	2-118	Removal.....	2-134
Installation.....	2-118	Installation.....	2-134
Rubber Isolators.....	2-118		
Removal.....	2-118	2.41 INSTRUMENT NACELLE: FRAME MOUNTED FAIRING MODELS	
Installation.....	2-118	Instrument Nacelle.....	2-135
Passenger Backrest Flap.....	2-118	Removal.....	2-135
Removal.....	2-118	Installation.....	2-135
Installation.....	2-118		
		2.42 OUTER FAIRING AND WINDSHIELD: FRAME MOUNTED FAIRING MODELS	
2.36 FAIRING LOWERS AND ENGINE GUARD		Windshield.....	2-136
Fairing Lower: Air Cooled.....	2-119	Removal.....	2-136
Removal.....	2-119	Installation.....	2-136
Installation.....	2-119	Top Air Duct.....	2-136
Disassembly.....	2-119	Removal.....	2-136
Assembly.....	2-121	Installation.....	2-136
Fairing Lower: Twin-Cooled.....	2-121	Cleaning Air Duct.....	2-136
Removal.....	2-121	Button Mechanism Repair.....	2-136
Installation.....	2-122	Outer Fairing.....	2-138
Repair.....	2-122	Removal.....	2-138
Engine Guard.....	2-123	Installation.....	2-138
Removal.....	2-123		
Installation.....	2-123	2.43 INNER FAIRING: FRAME MOUNTED FAIRING MODELS	
		Removal.....	2-140
2.37 OUTER FAIRING AND WINDSHIELD: FORK MOUNTED FAIRING MODELS		Inner Fairing Assembly.....	2-140
Outer Fairing and Windshield.....	2-124	Fairing Mounting Bracket.....	2-141
Removal.....	2-124	Installation.....	2-142
Installation.....	2-124	Fairing Mounting Bracket.....	2-142
Fairing Seal.....	2-124	Inner Fairing Assembly.....	2-142
Headlamp Mount.....	2-124	Fairing Air Duct.....	2-142
Fairing Vent Bezel.....	2-125	Removal.....	2-142
		Installation.....	2-142
		Air Duct Repair.....	2-143
		Inner Fairing Shell Replacement.....	2-143
		Removal.....	2-143
2.38 DASH PANEL: FORK MOUNTED FAIRING MODELS			
Dash Panel.....	2-126		
Removal.....	2-126		
Installation.....	2-126		
2.39 INNER FAIRING: FORK MOUNTED FAIRING MODELS			
Rotate Inner Fairing.....	2-127		

TABLE OF CONTENTS

Installation.....	2-144
Radio Support Bracket.....	2-144
Removal.....	2-144
Installation.....	2-145

2.44 STORAGE COMPARTMENTS: FRAME MOUNTED FAIRING MODELS

Storage Compartment, Door and Hinge.....	2-147
Storage Compartment Door Replacement.....	2-147
Storage Compartment Removal.....	2-147
Storage Compartment Installation.....	2-147
Storage Compartment Door/Hinge Removal.....	2-147
Storage Compartment Door/Hinge Installation.....	2-147
Storage Compartment Media Cable.....	2-148

2.45 AIR DEFLECTORS

Fairing Air Deflectors.....	2-149
Removal: Fork Mounted Fairing Models.....	2-149
Installation: Fork Mounted Fairing Models.....	2-149
Removal: Frame Mounted Fairing Models.....	2-149
Installation: Frame Mounted Fairing Models.....	2-149
Mid-Frame Air Deflectors.....	2-149
Removal.....	2-149
Installation.....	2-149

2.46 WINDSHIELD: ROAD KING MODELS

Windshield.....	2-151
Removal.....	2-151
Installation.....	2-151
Windshield Window.....	2-151
Removal.....	2-151
Installation.....	2-152

2.47 HEADLAMP NACELLE: ROAD KING MODELS

Removal.....	2-154
Installation.....	2-155

2.48 FRONT FENDER

Removal.....	2-156
Repair.....	2-157
Installation.....	2-157

2.49 REAR FENDER

Removal.....	2-159
Fender Repair.....	2-160
Mounting Hardware.....	2-160
Stud Plate.....	2-160
Lights and Harnesses.....	2-160
Installation.....	2-160

2.50 REAR FASCIA

Removal.....	2-162
Installation.....	2-162
Stud Plate.....	2-162
Removal.....	2-162
Installation.....	2-162
Rear Fascia Lamp.....	2-162

2.51 REAR FRAME

Rear Frame.....	2-163
Removal.....	2-163
Installation.....	2-164
Thread Repair.....	2-164

2.52 FOOTBOARDS AND FOOTRESTS

Rider Footboards.....	2-165
Removal.....	2-165
Installation.....	2-165
Disassembly.....	2-165
Assembly.....	2-166
Passenger Footboard.....	2-166
Removal.....	2-166
Disassembly.....	2-166
Assembly.....	2-166
Installation.....	2-166
Passenger Footrest: FLHX/S and FLTRX/S.....	2-167
Removal.....	2-167
Disassembly.....	2-167
Assembly.....	2-167
Installation.....	2-167
Passenger Footrest: Low Models.....	2-167
Removal.....	2-167
Disassembly.....	2-167
Assembly.....	2-168
Installation.....	2-168
Pad Replacement and Adjustment.....	2-168

2.53 JIFFY STAND

General.....	2-169
Leg Removal.....	2-169
Leg Installation.....	2-169
Jiffy Stand Bracket.....	2-170
Removal.....	2-170
Installation.....	2-170
Jiffy Stand Interlock Sensor.....	2-170
Removal.....	2-170
Installation.....	2-171

2.54 FRONT ENGINE MOUNT

Removal.....	2-172
Installation.....	2-172
Stabilizer Link.....	2-173
Removal.....	2-173
Installation.....	2-173
Stabilizer Link Bracket.....	2-173

2.55 MEDALLIONS, BADGES AND TANK EMBLEMS

Removal.....	2-175
Installation.....	2-175

ENGINE

3.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	3-1
---	-----

3.2 SPECIFICATIONS

Specifications.....	3-3
---------------------	-----

3.3 SERVICE WEAR LIMITS		3.15 ASSEMBLING MOTORCYCLE AFTER SERVICE	
General.....	3-5	Procedure.....	3-27
3.4 ENGINE OIL FLOW		After Top End Service.....	3-27
Oil Feed.....	3-7	After Cam Compartment Service.....	3-27
Top End.....	3-7	3.16 REMOVING ENGINE FROM CHASSIS	
Bottom End.....	3-9	Procedure.....	3-28
Oil Return.....	3-11	3.17 INSTALLING ENGINE IN CHASSIS	
Oil Cooler Operation.....	3-11	Procedure.....	3-29
3.5 OIL PUMP OPERATION		3.18 TOP END OVERHAUL: DISASSEMBLY	
General.....	3-12	General.....	3-30
Operation.....	3-12	Rocker Covers.....	3-30
3.6 BREATHER OPERATION		Rocker Arm Support Plate.....	3-30
General.....	3-14	Pushrods, Lifters and Covers.....	3-32
3.7 OIL PRESSURE		Cylinder Head.....	3-32
Oil Pressure Indicator Lamp.....	3-15	Cylinder.....	3-33
Checking Oil Pressure.....	3-15	Piston.....	3-34
3.8 TROUBLESHOOTING		3.19 BREATHER ASSEMBLY	
Diagnosing Valve Train Noise.....	3-17	Disassembly.....	3-36
Compression Test.....	3-17	Cleaning and Inspection.....	3-36
Cylinder Leakdown Test.....	3-18	Assembly.....	3-36
Diagnosing Smoking Engine or High Oil Consumption.....	3-18	3.20 ROCKER ARM SUPPORT PLATE	
Check Prior to Cylinder Head Removal.....	3-18	Disassembly.....	3-37
Check After Cylinder Head Removal.....	3-18	Cleaning and Inspection.....	3-37
3.9 OIL COOLER		Inspection.....	3-37
Removal.....	3-19	Rocker Shaft Fit.....	3-37
Installation.....	3-19	Rocker Arm Shaft to Bushing.....	3-38
3.10 OIL COOLER ADAPTER		Replace Rocker Arm Bushings.....	3-38
Removal.....	3-20	Assembly.....	3-39
Disassembly.....	3-20	3.21 PUSHRODS, LIFTERS AND COVERS	
Assembly.....	3-20	Disassembly.....	3-40
Installation.....	3-20	Cleaning and General Inspection.....	3-40
3.11 HOW TO USE THIS SECTION		Lifter Inspection.....	3-40
Top End Repair.....	3-21	Assembly.....	3-41
Bottom End Repair.....	3-21	3.22 CYLINDER HEAD	
Typical Symptoms.....	3-21	Disassembly.....	3-42
3.12 TOP END SERVICE		Cleaning.....	3-43
Engine in Chassis.....	3-22	Inspection.....	3-43
Engine Removed from Chassis.....	3-23	Cylinder Head.....	3-43
3.13 CAM COMPARTMENT SERVICE		Valve Guides.....	3-44
Engine in Chassis.....	3-24	Valves.....	3-44
Engine Removed From Chassis.....	3-25	Valve Springs.....	3-44
3.14 STRIPPING MOTORCYCLE FOR SERVICE		Tapered Keepers.....	3-44
Procedure.....	3-26	Valve Seats.....	3-44
Cam Compartment Service Only.....	3-26	Valve Guide Replacement.....	3-44
Top End Service.....	3-26	Removal.....	3-44
		Installation.....	3-45
		Valve and Seat Refacing.....	3-48
		Assembly.....	3-50
		3.23 CYLINDER	
		Cleaning.....	3-52
		Inspection.....	3-52

TABLE OF CONTENTS

Deglazing Cylinder.....	3-54
Boring and Honing Cylinder.....	3-54

3.24 PISTON

Disassembly.....	3-56
Piston Rings.....	3-56
Cleaning.....	3-56
Inspection.....	3-56
Assembly.....	3-58
Checking Piston Ring Gap.....	3-58
Installing Piston Rings.....	3-58

3.25 TOP END OVERHAUL: ASSEMBLY

General.....	3-60
Piston.....	3-60
Cylinder.....	3-61
Cylinder Head.....	3-63
Pushrods, Lifters and Covers.....	3-67
Rocker Arm Support Plate.....	3-68
Breather and Rocker Cover.....	3-69
Twin-Cooled Engine.....	3-69

3.26 CAM COMPARTMENT AND COMPONENTS

Cam Support Plate and Cover Removal.....	3-70
Prepare Engine.....	3-70
Cam Chain and Sprockets Removal.....	3-70
Cam Support Plate Removal.....	3-71
Cam Support Plate Cleaning and Inspection.....	3-72
Oil Pressure Valve.....	3-72
Cam Support Plate.....	3-72
Camshafts.....	3-72
Removal.....	3-72
Installation.....	3-73
Oil Pressure Relief Valve.....	3-74
Removal.....	3-74
Inspection.....	3-74
Installation.....	3-75
Cam Needle Bearings.....	3-75
Removal.....	3-75
Installation.....	3-76
Cam Support Plate and Cover Installation.....	3-78

3.27 OIL PUMP

Removal.....	3-82
Cleaning and Inspection.....	3-82
Installation.....	3-83

3.28 CRANKCASE DISASSEMBLY AND REPAIR

Crankcase Disassembly.....	3-84
Cleaning and Inspection.....	3-84
Right Crankcase Half.....	3-85
Main Bearing Removal.....	3-85
Main Bearing Installation.....	3-85
Piston Jets Removal.....	3-86
Piston Jets Installation.....	3-86
Left Crankcase Half.....	3-86
Main Bearing Removal.....	3-86
Main Bearing Installation.....	3-87
Sprocket Shaft Bearing Inner Race.....	3-88

Removal.....	3-88
Installation.....	3-89
Cylinder Studs.....	3-91
Removal.....	3-91
Installation.....	3-91
Pipe Plug and Oil Fittings.....	3-91
Removal.....	3-91
Installation.....	3-91

3.29 FLYWHEEL AND CONNECTING RODS

General.....	3-92
Symptoms.....	3-92
No Oil Pressure.....	3-92
Vibration.....	3-92
Inspection.....	3-92
Measuring Crankshaft Runout.....	3-92
Crankshaft Installed.....	3-92
Crankshaft Removed.....	3-93

3.30 CRANKCASE ASSEMBLY

Crankcase Assembly.....	3-94
-------------------------	------

3.31 OIL PAN

Removal.....	3-96
Installation.....	3-96

FUEL SYSTEM

4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	4-1
---	-----

4.2 SPECIFICATIONS: FUEL SYSTEM

Specifications.....	4-2
---------------------	-----

4.3 FUEL PRESSURE TEST

General.....	4-3
Testing.....	4-3

4.4 INTAKE LEAK TEST

General.....	4-5
Leak Tester.....	4-5
Parts List.....	4-5
Tester Assembly.....	4-5
Tester Adjustment.....	4-5
Procedure.....	4-5

4.5 AIR CLEANER ASSEMBLY

Removal.....	4-7
Installation.....	4-8
Air Cleaner Repair.....	4-8
Insert: With Screw Access.....	4-8
Insert: Without Screw Access.....	4-8
Snorkel.....	4-8

4.6 FUEL TANK

Console.....	4-9
Removal.....	4-9
Installation.....	4-9
Fuel Door.....	4-9
Door Replacement.....	4-9

Lock Replacement.....	4-9	Installation.....	4-30
Removal.....	4-9	Fuel Pump and Fuel Level Sender Wire Harness.....	4-31
Purge and Disconnect Fuel Line.....	4-9	Removal.....	4-31
Remove Tank.....	4-9	Installation.....	4-31
Installation.....	4-10		
Vent Tube: Models Without EVAP System.....	4-10	4.18 EXHAUST SYSTEM	
Removal.....	4-10	Mufflers.....	4-32
Installation.....	4-11	Removal.....	4-32
Fuel Supply Check Valve/Tube.....	4-11	Installation.....	4-32
Removal.....	4-11	System Removal.....	4-32
Installation.....	4-11	System Installation.....	4-34
4.7 FUEL TANK TOP PLATE		4.19 ACTIVE EXHAUST: HDI	
Removal.....	4-13	Exhaust Valve Actuator.....	4-35
Installation.....	4-14	Removal.....	4-35
		Installation.....	4-35
4.8 FUEL FILTER		Exhaust Valve Actuator Cable.....	4-35
Removal.....	4-15	Removal.....	4-35
Installation.....	4-15	Installation.....	4-35
		Active Exhaust Valve.....	4-36
4.9 FUEL PRESSURE REGULATOR		General.....	4-36
Removal.....	4-16		
Installation.....	4-16	4.20 EVAPORATIVE EMISSIONS CONTROL SYSTEM	
		General.....	4-37
4.10 FUEL LEVEL SENDER		Vapor Valve.....	4-37
Removal.....	4-17	Fuel Vapor Vent Tube.....	4-38
Installation.....	4-17	Removal.....	4-38
		Installation.....	4-38
4.11 TWIST GRIP SENSOR (TGS)		Canister-to-Solenoid Tube.....	4-38
Removal.....	4-18	Removal.....	4-38
Installation.....	4-19	Installation.....	4-38
Twist Grip Sensor Jumper Harness.....	4-20	Solenoid-to-Induction Module Tube.....	4-38
Removal.....	4-20	Removal.....	4-38
Installation.....	4-20	Installation.....	4-38
		Purge Solenoid.....	4-38
4.12 THROTTLE CONTROL ACTUATOR (TCA)		Removal.....	4-38
General.....	4-22	Installation.....	4-39
		Charcoal Canister.....	4-39
4.13 INDUCTION MODULE		Removal.....	4-39
Removal.....	4-23	Installation.....	4-39
Installation.....	4-24		
		DRIVE	
4.14 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE SENSOR (TMAP)		5.1 FASTENER TORQUE VALUES	
Removal.....	4-25	Fastener Torque Values in this Chapter.....	5-1
Installation.....	4-25		
		5.2 SPECIFICATIONS: DRIVE	
4.15 HEATED OXYGEN SENSORS (HO2)		Specifications.....	5-2
Removal.....	4-26		
Installation.....	4-27	5.3 PRIMARY CHAINCASE COVER	
		Removal.....	5-3
4.16 FUEL INJECTORS		Installation.....	5-3
General.....	4-28		
Removal.....	4-28	5.4 DRIVE COMPONENTS	
Installation.....	4-28	Removal.....	5-5
		Installation.....	5-7
4.17 FUEL PUMP			
General.....	4-30	5.5 PRIMARY CHAINCASE HOUSING	
Removal.....	4-30	Removal.....	5-10

TABLE OF CONTENTS

Inspection.....	5-10
Mainshaft Bearing and Seal.....	5-10
Removal.....	5-10
Installation.....	5-10
Mainshaft Bearing Inner Race.....	5-11
Removal.....	5-11
Installation.....	5-11
Shifter Shaft Bushings.....	5-12
Installation.....	5-12

5.6 CLUTCH: CONVENTIONAL

Clutch Identification.....	5-14
Removal and Installation.....	5-14
Clutch Pack Only.....	5-14
Partial Disassembly.....	5-14
Cleaning And Inspection.....	5-14
Assembly.....	5-15
Clutch Pack and Bearing.....	5-16
Complete Disassembly.....	5-16
Assembly.....	5-17

5.7 CLUTCH: ASSIST AND SLIP

Clutch Identification.....	5-19
Clutch Pack Only.....	5-19
Partial Disassembly.....	5-19
Cleaning And Inspection.....	5-19
Assembly.....	5-19

5.8 HYDRAULIC CLUTCH RELEASE BEARING AND PUSHROD

Removal.....	5-22
Installation.....	5-22
Measure Release Plate Movement.....	5-22
Install Clutch Inspection Cover.....	5-22

5.9 TRANSMISSION SPROCKET

Removal.....	5-24
Cleaning and Inspection.....	5-24
Installation.....	5-24

5.10 DRIVE BELT

Removal and Adjustment.....	5-26
Adjustment.....	5-26
Removal.....	5-26
Installation.....	5-26

TRANSMISSION

6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	6-1
---	-----

6.2 SPECIFICATIONS: TRANSMISSION

Specifications.....	6-3
Service Wear Limits.....	6-3

6.3 TRANSMISSION

Power Flow.....	6-4
Neutral.....	6-4
First Gear.....	6-4
Second Gear.....	6-4

Third Gear.....	6-4
Fourth Gear.....	6-4
Fifth Gear.....	6-4
Sixth Gear.....	6-4

6.4 SHIFTER LINKAGE

Shifter Rod Adjustment.....	6-6
Heel-Toe Shift Levers.....	6-6
Removal.....	6-6
Repair.....	6-6
Installation.....	6-6
Shifter Rod Lever, Front.....	6-6
Removal.....	6-6
Installation.....	6-6

6.5 CLUTCH RELEASE COVER: CABLE CLUTCH

Removal and Disassembly.....	6-8
Cleaning and Inspection.....	6-8
Assembly and Installation.....	6-9

6.6 TRANSMISSION SIDE COVERS: HYDRAULIC CLUTCH

Removal.....	6-10
Installation.....	6-10

6.7 SECONDARY CLUTCH ACTUATOR

Replacement.....	6-11
Validate Repair.....	6-11

6.8 TRANSMISSION ASSEMBLY

Removal.....	6-13
Disassembly.....	6-14
Shifter Cam/Shifter Forks.....	6-14
Mainshaft.....	6-16
Countershaft.....	6-18
Removing Bearing Housing Bearings.....	6-19
Cleaning and Inspection.....	6-20
Assembly.....	6-20
Installing Bearing Housing Bearings.....	6-20
Countershaft.....	6-20
Mainshaft.....	6-21
Shifter Cam/Shifter Forks.....	6-21
Installation.....	6-23

6.9 MAIN DRIVE GEAR AND BEARING

Removal.....	6-25
Cleaning and Inspection.....	6-26
Needle Bearing Replacement.....	6-27
Mainshaft Seal Replacement.....	6-28
Installation.....	6-29
Installing Main Drive Gear Bearing.....	6-29
Installing Main Drive Gear.....	6-29
Installing Main Drive Gear Large Seal.....	6-30

6.10 TRANSMISSION CASE

Removal.....	6-32
Installation.....	6-32
Disassembly.....	6-33
Shifter Arm Assembly.....	6-33
Cleaning and Inspection.....	6-33

TABLE OF CONTENTS

Assembly.....	6-34
Countershaft Needle Bearing Replacement.....	6-34
Shifter Pawl Lever Assembly.....	6-34

ELECTRICAL

7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	7-1
---	-----

7.2 SPECIFICATIONS: ELECTRICAL

Specifications.....	7-5
---------------------	-----

7.3 SYSTEM FUSES AND RELAYS

Main Fuse.....	7-6
Removal.....	7-6
Installation.....	7-6
System Fuses and Relays.....	7-6
Removal.....	7-6
Installation.....	7-6
Fuse Blocks.....	7-6
Main Fuse Holder.....	7-6
System Fuse Block.....	7-6

7.4 ELECTRONIC CONTROL MODULE (ECM)

ECM.....	7-7
Removal.....	7-7
Installation.....	7-7

7.5 BODY CONTROL MODULE (BCM)

Removal.....	7-8
Installation.....	7-8

7.6 ELECTRICAL CADDIES

Fairing and Steering Head Caddies.....	7-9
Top Caddy.....	7-9
Removal.....	7-9
Installation.....	7-9
Left Side Caddy.....	7-9
Removal.....	7-9
Installation.....	7-10
Right Side Caddy.....	7-10
Removal.....	7-10
Installation.....	7-11
Battery Tray.....	7-11
Removal.....	7-11
Installation.....	7-11

7.7 IGNITION COIL

Spark Plug Cable Inspection.....	7-13
Removal.....	7-13
Installation.....	7-13

7.8 STARTER

General.....	7-15
Removal.....	7-15
Drive Assembly.....	7-15
Disassembly.....	7-15
Inspection.....	7-15
Assembly.....	7-16
Solenoid.....	7-16

Cover and Plunger Removal.....	7-16
Short Post Contact: Starter.....	7-16
Long Post Contact: Battery Positive.....	7-17
Plunger and Cover Installation.....	7-17
Installation.....	7-17

7.9 HEADLAMP

Headlamp: All But FLTR Models.....	7-19
Removal.....	7-19
Installation.....	7-19
Bulb Replacement: Halogen Type.....	7-19
Bulb Replacement: LED Type.....	7-19
Headlamp: FLTR Models.....	7-19
Removal.....	7-19
Installation.....	7-20

7.10 AUXILIARY/FOG LAMPS AND BRACKETS

Auxiliary/Fog Lamp Bulb Replacement.....	7-21
Removal.....	7-21
Installation.....	7-21
Auxiliary/Fog Lamp Housing.....	7-21
Removal.....	7-21
Installation.....	7-22
Turn Signal/Auxiliary/Fog Lamp Bracket.....	7-22
Removal.....	7-22
Installation.....	7-23
Adjustment.....	7-23

7.11 REAR LIGHTING

Tail Lamp Bulb Replacement.....	7-24
Removal.....	7-24
Installation.....	7-24
Tail Lamp Base.....	7-24
Removal.....	7-24
Installation.....	7-25
Rear Fender Lights Harness: all except FLHX/S, FLTRX/S.....	7-25
Removal.....	7-25
Installation.....	7-26
Rear Fascia Lamp.....	7-27
Removal.....	7-27
Installation.....	7-27
Rear Fender Lights Harness: FLHX/S, FLTRX/S.....	7-27
Removal.....	7-27
Installation.....	7-27

7.12 FENDER TIP LAMPS

Front Fender Tip Lamp.....	7-29
Removal.....	7-29
Installation.....	7-29
Rear Fender Tip Lamp.....	7-30
Removal.....	7-30
Installation.....	7-30

7.13 TOUR-PAK LIGHTS

Tour-Pak Side Lamps/Trim Strips.....	7-31
Removal.....	7-31
Installation.....	7-31
Tour-Pak Lights Harness.....	7-31
Removal.....	7-31

TABLE OF CONTENTS

Installation.....	7-31
Wrap-Around Lamp (if equipped).....	7-33
Removal.....	7-33
Repair.....	7-33
Installation.....	7-33

7.14 TURN SIGNAL LAMPS

Turn Signal Bulb Replacement: Bullet Style.....	7-34
Turn Signal Bulb Replacement: Flat Lens Style.....	7-34
Front Turn Signal Lamp.....	7-34
Removal: Flat Lens Style.....	7-34
Installation: Flat Lens Style.....	7-35
Removal: Bullet Style, Fork Mounted.....	7-35
Installation: Bullet Style, Fork Mounted.....	7-36
Removal: Bullet Style, Fairing Mounted.....	7-37
Installation: Bullet Style, Fairing Mounted.....	7-37
Rear Turn Signal Lamp.....	7-38
Removal: All but FLHX/S, FLTRX/S.....	7-38
Installation: All but FLHX/S, FLTRX/S.....	7-38
Removal: FLHX/S, FLTRX/S.....	7-39
Installation: FLHX/S, FLTRX/S.....	7-39
Lamp Repair.....	7-40
Rear Turn Signal Lamps Bracket.....	7-40
Removal: All but FLHX/S, FLTRX/S.....	7-40
Installation: All but FLHX/S, FLTRX/S.....	7-40
Removal: FLHX/S, FLTRX/S.....	7-41
Installation: FLHX/S, FLTRX/S.....	7-42

7.15 IGNITION SWITCH AND FORK LOCK

Fairing Models.....	7-43
Removal.....	7-43
Installation.....	7-44
Road King Models.....	7-44
Ignition/Light Key Switch: Removal.....	7-44
Ignition/Light Key Switch: Installation.....	7-45
Fork Lock: Removal.....	7-45
Fork Lock: Installation.....	7-45

7.16 ACCESSORY SWITCHES

Fork Mounted Fairing Models.....	7-46
Removal.....	7-46
Installation.....	7-46
Frame Mounted Fairing Models.....	7-46
Removal.....	7-46
Installation.....	7-47
Nacelle Switches.....	7-47
Removal.....	7-47
Installation.....	7-47

7.17 CRANKSHAFT POSITION SENSOR (CKP)

General.....	7-48
Removal.....	7-48
Installation.....	7-48

7.18 ENGINE TEMPERATURE SENSOR (ET)

Removal.....	7-49
Installation.....	7-49

7.19 AUTOMATIC COMPRESSION RELEASE (ACR)

General.....	7-50
Removal.....	7-50
Installation.....	7-51

7.20 VOLTAGE REGULATOR

Removal.....	7-52
Installation.....	7-52

7.21 ALTERNATOR

Removal.....	7-54
Cleaning and Inspection.....	7-54
Installation.....	7-55

7.22 VEHICLE SPEED SENSOR (VSS)

VSS.....	7-56
Removal.....	7-56
Installation.....	7-56

7.23 WHEEL SPEED SENSORS

Front Wheel Speed Sensor (WSS).....	7-57
Removal.....	7-57
Installation.....	7-57
Rear Wheel Speed Sensor.....	7-58
Removal.....	7-58
Installation.....	7-58

7.24 NEUTRAL SWITCH

Removal.....	7-59
Installation.....	7-59

7.25 OIL PRESSURE SWITCH OR SENDER

Removal.....	7-60
Installation.....	7-60

7.26 STOP LAMP SWITCHES

Front Stop Lamp Switch.....	7-61
Removal/Installation.....	7-61
Rear Stop Lamp Switch.....	7-61
Removal.....	7-61
Installation.....	7-61

7.27 HORN

Inspection.....	7-62
Removal.....	7-62
Installation.....	7-62

7.28 FAIRING POWER OUTLET

Troubleshooting.....	7-64
Removal.....	7-64
Installation.....	7-64

7.29 GAUGES AND INSTRUMENTS: FAIRING MODELS

2-Inch Diameter Gauges.....	7-65
Removal.....	7-65
Installation.....	7-65

Speedometer/Tachometer Instrument Cluster: Fork Mounted Fairing.....7-65
 Removal.....7-65
 Installation.....7-65
 Speedometer/Tachometer Instrument Cluster: Frame Mounted Fairing.....7-66
 Removal.....7-66
 Installation.....7-66

7.30 GAUGES AND INSTRUMENTS: ROAD KING MODELS

Fuel Gauge.....7-67
 Removal.....7-67
 Installation.....7-67
 Speedometer.....7-67
 Removal.....7-67
 Installation.....7-68

7.31 INDICATOR LAMPS: ROAD KING MODELS

Indicator Lamps.....7-69
 Removal.....7-69
 Installation.....7-69

7.32 BOOM! BOX INFOTAINMENT SYSTEM

Radio Face Protective Film.....7-70
 Replacement.....7-70
 Radio: Fork Mounted Fairing.....7-70
 Removal.....7-70
 Installation.....7-70
 CB Module: Fork Mounted Fairing.....7-71
 Removal.....7-71
 Installation.....7-71
 CB Module Bracket.....7-72
 Front Fairing Speakers: Fork Mounted Fairing.....7-72
 Removal.....7-72
 Installation.....7-72
 Speaker Grille.....7-72
 Radio: Frame Mounted Fairing.....7-73
 Removal.....7-73
 Installation.....7-73
 Front Fairing Speaker and Enclosure: Frame Mounted Fairing.....7-74
 Speaker Grille.....7-74
 Speaker Only.....7-74
 Speaker Enclosure Removal.....7-75
 Speaker Enclosure Installation.....7-75
 Rear Speaker Enclosures.....7-75
 Removal.....7-75
 Installation.....7-76
 Disassembly.....7-76
 Assembly.....7-76
 Passenger Audio Controls.....7-77
 Rider Headset Connector.....7-77
 Removal.....7-77
 Installation.....7-77

7.33 ANTENNA CABLES

Removal.....7-78
 Main Cable.....7-78
 Cable Extension: Models with Tour-Pak.....7-78

Cable Extension: FLHX/S, FLTRX/S.....7-78
 Installation.....7-78
 Main Cable.....7-78
 Cable Extension: Models with Tour-Pak.....7-79
 Cable Extension: FLHX/S, FLTRX/S.....7-79

7.34 WIRE TROUGH

Removal.....7-81
 Installation.....7-82

7.35 MAIN WIRING HARNESS

Ambient Air Temperature Sensor.....7-83
 Removal: All Models (Part 1).....7-83
 Removal: Road King Models (Part 2).....7-83
 Removal: Fork Mounted Fairing Models (Part 2).....7-84
 Removal: Frame Mounted Fairing Models (Part 2).....7-85
 Removal: All Models (Part 3).....7-86
 Installation: All Models (Part 1).....7-88
 Installation: Road King Models (Part 2).....7-90
 Installation: Fork Mounted Fairing Models (Part 2).....7-90
 Installation: Frame Mounted Fairing Models (Part 2).....7-91
 Installation: All Models (Part 3).....7-91

7.36 FAIRING HARNESS

Harness Service: Fork Mounted Fairing.....7-92
 Removal.....7-92
 Repair.....7-92
 Installation.....7-93
 Harness Service: Frame Mounted Fairing.....7-93
 Removal.....7-93
 Installation.....7-94

7.37 HANDLEBAR SWITCH PACKS

Removal.....7-95
 Handlebar Controls.....7-95
 Installation.....7-96
 Right Handlebar Controls.....7-96
 Left Handlebar Controls.....7-97
 Switch Pack Harness.....7-98
 Removal.....7-98
 Installation.....7-99
 Handlebar Switch Caps.....7-99

7.38 HFISM MAINTENANCE

General.....7-101
 Fob Battery.....7-101
 Battery Replacement Schedule.....7-101
 Battery Replacement.....7-101
 Smart Siren (If Installed).....7-101
 Battery Replacement Schedule.....7-101
 Battery Replacement.....7-101
 HFISM Antenna.....7-101
 Removal.....7-101
 Installation.....7-102

7.39 PERSONAL IDENTIFICATION NUMBER (PIN)

General.....7-103
 Changing The PIN.....7-103
 Modifying an Existing PIN.....7-103

TABLE OF CONTENTS

7.40 H-DSSS ACTUATION

Sidecar Configuration.....	7-104
Actuation.....	7-104
Fob Assignment.....	7-104

7.41 SECURITY SIREN

Removal.....	7-105
Installation.....	7-105

APPENDIX A CONNECTOR REPAIR

A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTORS

Autofuse Unsealed Connector Repair.....	A-1
General.....	A-1
Disassembly.....	A-1
Assembly.....	A-1

A.2 BOSCH COMPACT 1.1M CONNECTOR

Bosch Compact 1.1M Connector.....	A-2
General.....	A-2
Housings.....	A-2
Removing Socket Terminal.....	A-2
Installing Socket Terminal.....	A-2

A.3 BOSCH BTC SEALED CONNECTOR

Bosch BTC Sealed Connector Repair.....	A-3
Plugging and Unplugging Connector.....	A-3
Removing and Installing Connector Cover.....	A-3
Removing and Installing Wire Terminals.....	A-4
Crimping Terminals to Leads.....	A-5

A.4 DELPHI 100W MICRO-PACK SEALED CONNECTOR

Delphi 100W Micro-Pack Sealed Connector Repair.....	A-6
General.....	A-6
Separating Socket Housing From ECM.....	A-6
Mating Socket Housing To ECM.....	A-6
Removing Socket Terminal.....	A-6
Installing Socket Terminal.....	A-6
Crimping Terminals.....	A-7

A.5 DELPHI 150 METRI-PACK SEALED CONNECTORS

Delphi 150 Metri-Pack Sealed Connector Repair.....	A-8
General.....	A-8
Separating Pin and Socket Housings.....	A-8
Mating Pin and Socket Housings.....	A-8
Removing Socket Terminal.....	A-8
Inserting Socket Terminal.....	A-8

A.6 DELPHI 280 METRI-PACK UNSEALED CONNECTORS

Fuse Block Repair.....	A-10
Removing Socket Terminals.....	A-10
Installing Socket Terminals.....	A-10
Crimping Terminals.....	A-10

A.7 DELPHI 480 METRI-PACK UNSEALED CONNECTORS

Delphi 480 Metri-Pack Unsealed Connector Repair.....	A-11
General.....	A-11
Separating Pin and Socket Housings.....	A-11
Mating Pin and Socket Housings.....	A-11
Removing Socket Terminals.....	A-11
Installing Socket Terminals.....	A-11

A.8 DELPHI 630 METRI-PACK UNSEALED CONNECTORS

Delphi 630 Metri-Pack Unsealed Connector Repair.....	A-12
Separating Pin and Socket Housings.....	A-12
Mating Pin and Socket Housings.....	A-12
Removing Socket Terminal.....	A-12
Installing Socket Terminal.....	A-12

A.9 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING

Delphi 800 Metri-Pack Sealed Main Fuse Housing Repair.....	A-13
Removing Socket Terminals.....	A-13
Installing Socket Terminals.....	A-13

A.10 DELPHI METRI-PACK TERMINAL REPAIR

Metri-Pack Terminal Crimps.....	A-14
Matching Terminal To Crimper.....	A-14
Preparing Wire Lead.....	A-14
Crimping Wire Core.....	A-14
Crimping Insulation/Seal.....	A-15
Inspecting Crimps.....	A-15

A.11 DELPHI MICRO 64 SEALED CONNECTORS

Delphi Micro 64 Sealed Connector Repair.....	A-16
General.....	A-16
Separating Pin and Socket Housings.....	A-16
Mating Pin and Socket Housings.....	A-16
Removing Terminal.....	A-16
Installing Terminal.....	A-17
Preparing Wire Leads for Crimping.....	A-17
Crimping Terminals.....	A-17
Inspecting Crimps.....	A-17

A.12 DELPHI GT 150 SEALED CONNECTORS

Delphi GT 150 Sealed Connector Repair.....	A-19
General.....	A-19
Separating Pin and Socket Housings.....	A-19
Mating Pin and Socket Housings.....	A-19
Removing Socket Terminals.....	A-19
Installing Socket Terminals.....	A-19

A.13 DEUTSCH DT SEALED CONNECTORS

Deutsch DT Sealed Connector Repair.....	A-21
General.....	A-21
Separating Pin and Socket Housings.....	A-21
Mating Pin and Socket Housings.....	A-21

Removing Socket Terminals.....	A-21	General.....	A-36
Installing Socket Terminals.....	A-21	Separating Pin and Socket Housings.....	A-36
Removing Pin Terminals.....	A-22	Mating Pin and Socket Housings.....	A-36
Installing Pin Terminals.....	A-23	Removing Terminals from Housing.....	A-36
Crimping Terminals.....	A-23	Inserting Terminals into Housing.....	A-37
		Crimping Terminals to Leads.....	A-37
		Inspecting Crimped Terminals.....	A-37
A.14 DEUTSCH DT SEALED TERMINAL REPAIR		A.21 TYCO 070 MULTILOCK UNSEALED CONNECTOR	
Deutsch DT Sealed Terminal Crimps.....	A-25	Tyco 070 Multilock Unsealed Connector Repair.....	A-38
Preparing Wire Leads for Crimping.....	A-25	General.....	A-38
Crimping Terminal to Lead.....	A-25	Separating Pin and Socket Housings.....	A-38
Inspecting Crimps.....	A-25	Mating Pin and Socket Housings.....	A-38
		Removing Terminals from Housing.....	A-38
		Inserting Terminals into Housing.....	A-39
		Crimping Terminals to Leads.....	A-40
		Inspecting Crimped Terminals.....	A-40
A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR		A.22 TYCO GET 64 SEALED CONNECTOR	
Deutsch DTM Sealed Mini Terminal Crimps.....	A-26	Tyco GET 64 Sealed Connector Repair.....	A-41
Preparing Wire Leads for Crimping.....	A-26	General.....	A-41
Crimping a Mini Terminal to Wire Lead.....	A-26	Housings.....	A-41
Inspecting Crimps.....	A-26	Removing Socket Terminals.....	A-41
		Installing Socket Terminals.....	A-42
		Crimping Terminals.....	A-42
A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR		A.23 TYCO MCP SEALED CONNECTOR	
Deutsch DTM Sealed Solid Barrel Terminal Crimps.....	A-27	Tyco MCP Sealed Connector.....	A-43
Preparing Wire Leads For Crimping.....	A-27	General.....	A-43
Adjusting Crimper Tool.....	A-27	Housing.....	A-43
Crimping a Barrel Contact To Wire Lead.....	A-27	Removing the Large Terminals.....	A-43
Inspecting Crimps.....	A-27	Removing the Small Terminals.....	A-43
		Installing Terminals.....	A-44
		Crimping Terminals.....	A-44
A.17 JAE MX19 SEALED CONNECTORS		A.24 SEALED SPLICE CONNECTORS	
JAE MX19 Sealed Connectors.....	A-29	Sealed Splice Connector Repair.....	A-45
Connector Housings.....	A-29	General.....	A-45
Removing Terminals.....	A-29	Preparing Wire Leads.....	A-45
Installing Terminals.....	A-29	Splicing Wire Leads.....	A-45
Crimping Terminals.....	A-29	Inspecting Seals.....	A-45
A.18 MOLEX CMC SEALED CONNECTORS		APPENDIX B WIRING	
Molex CMC Sealed Connectors.....	A-30	B.1 CONNECTORS	
Separating the Connector.....	A-30	Connector Locations.....	B-1
Removing Terminals.....	A-30	Function/Location.....	B-1
Installing Terminals.....	A-30	Place and Color.....	B-1
Crimping Terminals.....	A-31	Connector Number.....	B-1
		Repair Instructions.....	B-1
		B.2 WIRING DIAGRAMS	
A.19 MOLEX MX 150 SEALED CONNECTORS		Wiring Diagram Information.....	B-7
Molex MX 150 Sealed Connector Repair.....	A-32	Wire Color Codes.....	B-7
Separating Pin and Socket Housings.....	A-32	Wiring Diagram Symbols.....	B-7
Mating Pin and Socket Housings.....	A-32	2015 Touring Wiring Diagrams.....	B-9
Removing Terminals.....	A-32		
Installing Terminals.....	A-32		
Crimp Terminal to Lead.....	A-33		
Prepare Lead.....	A-33		
Prepare Tool.....	A-33		
Position Terminal in the Punch/Die.....	A-34		
Insert Stripped Lead.....	A-34		
Crimp Terminal to Lead.....	A-34		
Inspect Crimp.....	A-35		
A.20 TYCO 040 MULTILOCK UNSEALED CONNECTOR			
Tyco 040 Multilock Unsealed Connector Repair.....	A-36		

TABLE OF CONTENTS

APPENDIX C COOLING SYSTEM

C.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....C-1

C.2 SPECIFICATIONS: COOLING SYSTEM

General.....C-2

C.3 COOLING SYSTEM OPERATION

Operation.....C-3

C.4 TESTING AND DIAGNOSTICS

Troubleshooting.....C-4

 Low Engine Temperature.....C-4

 High Engine Temperature.....C-4

 Coolant Leaks.....C-4

Pressure Cap Test.....C-4

System Pressure Test.....C-4

Leak Detection Dye Test.....C-5

C.5 COOLING SYSTEM REPAIR

Crimp Clamps.....C-6

 Removal.....C-6

 Installation.....C-6

Coolant Bottle.....C-6

 Removal.....C-6

 Installation.....C-6

Upper Coolant Line Removal.....C-7

 Hose and Manifold Removal.....C-7

 Cylinder Head Coolant Lines and Adapters.....C-7

Upper Coolant Line Installation.....C-8

 Cylinder Head Coolant Lines and Adapters.....C-8

 Hose and Manifold Installation.....C-8

Coolant Down Tubes.....C-8

 Removal.....C-8

 Installation.....C-8

Horizontal Coolant Tube.....C-9

 Removal.....C-9

 Installation.....C-9

Radiator.....C-9

 Removal.....C-9

 Installation.....C-9

Coolant Distribution Components.....C-10

 Coolant Pump/Thermostat Removal.....C-10

 Coolant Pump/Thermostat Installation.....C-10

 Coolant Temperature Sensor.....C-12

Cooling Fan.....C-13

 Removal.....C-13

 Installation.....C-13

APPENDIX D REFERENCE

D.1 METRIC CONVERSION

Conversion Table.....D-1

D.2 FLUID CONVERSION

United States System.....D-2

Metric System.....D-2

British Imperial System.....D-2

D.3 TORQUE CONVERSION

United States System.....D-3

Metric System.....D-3

D.4 GLOSSARY

Acronyms and Abbreviations.....D-4

REFERENCE MATERIAL

TOOLS.....I

TORQUE VALUES.....IX

INDEX.....XXIX

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com