



2015 Harley-Davidson V-Rod Models Service Manual

©2014 H-D.
ALL RIGHTS RESERVED
99501-15

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

MAINTENANCE

1.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....1-1

1.2 GENERAL

Servicing a New Motorcycle.....	1-2
Safe Operating Maintenance.....	1-2
Disposal and Recycling.....	1-2
Shop Practices.....	1-2
Repair Notes.....	1-2
Safety.....	1-2
Removing Parts.....	1-2
Cleaning.....	1-2
Disassembly and Assembly.....	1-3
Checking Torques on Fasteners.....	1-3
Magnetic Parts Trays.....	1-3
Repair and Replacement Procedures.....	1-3
Hardware and Threaded Parts.....	1-3
Threadlocking Agents.....	1-3
Wiring, Hoses and Lines.....	1-3
Instruments and Gauges.....	1-3
Bearings.....	1-3
Bushings.....	1-3
Gaskets.....	1-3
Lip-Type Seals.....	1-3
O-Rings.....	1-4
Gears.....	1-4
Shafts.....	1-4
Part Replacement.....	1-4
Cleaning.....	1-4
Protecting Rubber Parts.....	1-4
Cleaning Process.....	1-4
Rust or Corrosion Removal.....	1-4
Bearings.....	1-4
Tool Safety.....	1-4
Air Tools.....	1-4
Wrenches.....	1-4
Pliers/Cutters/Pry Bars.....	1-4
Hammers.....	1-5
Punches/Chisels.....	1-5
Screwdrivers.....	1-5
Ratchets and Handles.....	1-5
Sockets.....	1-5
Storage Units.....	1-5

1.3 FUEL AND OIL

Fuel.....	1-6
Gasoline Blends.....	1-6
Engine Lubrication.....	1-6
Winter Lubrication.....	1-7

1.4 BULB REQUIREMENTS

General.....	1-8
--------------	-----

1.5 MAINTENANCE SCHEDULE

General.....	1-9
--------------	-----

1.6 ENGINE OIL AND FILTER

Checking and Adding Oil.....	1-14
Cold Engine Oil Level Check.....	1-14
Hot Engine Oil Level Check.....	1-14
Changing Oil and Filter.....	1-15

1.7 AIR CLEANER AND EXHAUST SYSTEM

Air Cleaner Removal.....	1-17
Installation.....	1-18
Exhaust System Leak Check.....	1-20
Exhaust System Leakage.....	1-20

1.8 TIRES AND WHEELS

Tires.....	1-21
Tire Replacement.....	1-21
Inspection.....	1-21
When To Replace Tires.....	1-21
Wheel Bearings.....	1-22

1.9 CLUTCH

General.....	1-23
Fluid Inspection.....	1-23

1.10 DRIVE BELT AND SPROCKETS

General.....	1-24
Cleaning.....	1-24
Inspection.....	1-24
Sprockets.....	1-24
Drive Belt.....	1-24
Checking Drive Belt Deflection.....	1-25

1.11 THROTTLE CABLES

Inspection.....	1-28
Lubrication.....	1-28
Adjustment.....	1-28

1.12 CABLE, LINE AND FRAME INSPECTION

General.....	1-29
Cables and Hand Levers.....	1-29
Jiffy Stand.....	1-29
Fuel System Lines and Fittings.....	1-29
Hydraulic Lines.....	1-29

1.13 BRAKES

Fluid Inspection.....	1-30
Rear Brake Pedal.....	1-30
Pedal Adjustment.....	1-30
Brake Lines Inspection.....	1-30

1.14 BRAKE PADS AND DISCS

Inspection.....	1-32
Brake Pads.....	1-32
Brake Disc Thickness.....	1-32
Brake Disc Lateral Runout and Warp.....	1-32
Brake Pad Replacement.....	1-32
Rear Brake Caliper.....	1-32
Front Brake Caliper.....	1-33

1.15 SPARK PLUGS AND COIL

Removal.....	1-35
Inspection.....	1-35
Cleaning.....	1-36
Installation.....	1-36

1.16 COOLING SYSTEM

Checking Coolant Level in Overflow Bottle.....	1-37
Check for Coolant in System.....	1-37

1.17 STEERING HEAD BEARINGS

Adjustment (Fall-Away).....	1-38
-----------------------------	------

TABLE OF CONTENTS

1.18 VALVE LASH

Lash Measurement.....	1-40
Camshaft Inspection.....	1-42
Lobe Surface Finish.....	1-42
Camshaft Spalling.....	1-43
Verify Cam Timing.....	1-43
Lash Adjustment.....	1-45

1.19 BATTERY MAINTENANCE

General.....	1-50
Disconnection/Removal.....	1-51
Cleaning and Inspection.....	1-51
Voltmeter Test.....	1-51
Voltmeter Test.....	1-52
Charging Battery.....	1-52
Safety Precautions.....	1-52
Using a Battery Charger.....	1-52
Installation/Connection.....	1-53
Storage.....	1-53

1.20 RADIATOR SIDE COVERS

Removal.....	1-55
Installation.....	1-55

1.21 SUSPENSION ADJUSTMENTS

Shock Absorbers.....	1-56
General.....	1-56
Adjustment.....	1-56

1.22 SECONDARY CAM CHAIN

General.....	1-57
Adjustment.....	1-57

1.23 HEADLAMP ALIGNMENT

Headlamp Alignment.....	1-59
Headlamp Adjustment.....	1-59

1.24 STORAGE

General.....	1-60
Placing in Storage.....	1-60
Removal from Storage.....	1-60

1.25 TROUBLESHOOTING

General.....	1-62
Engine.....	1-62
Starter Motor Does Not Operate or Does Not Turn Engine Over.....	1-62
Engine Turns Over But Does Not Start.....	1-62
Starts Hard.....	1-62
Starts But Runs Irregularly or Misses.....	1-62
Spark Plug Fouls Repeatedly.....	1-62
Pre-Ignition or Detonation (Knocks or Pings).....	1-62
Overheating.....	1-63
Valve Train Noise.....	1-63
Excessive Vibration.....	1-63
Check Engine Light Illuminates During Operation.....	1-63
Lubrication System.....	1-63
Engine Uses Too Much Oil Or Smokes Excessively.....	1-63
Engine Leaks Oil From Cases, Hoses, Etc.....	1-63
Low Oil Pressure.....	1-63
High Oil Pressure.....	1-63

Electrical System.....	1-63
Alternator Does Not Charge.....	1-63
Alternator Charge Rate Is Below Normal.....	1-63
Speedometer Operates Erratically.....	1-63
Transmission.....	1-63
Shifts Hard.....	1-63
Jumps Out Of Gear.....	1-64
Clutch Slips.....	1-64
Clutch Drags Or Does Not Release.....	1-64
Clutch Chatters.....	1-64
Handling.....	1-64
Irregularities.....	1-64
Brakes.....	1-64
Brake Does Not Hold Normally.....	1-64

CHASSIS

2.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	2-1
---	-----

2.2 SPECIFICATIONS: CHASSIS

General.....	2-6
--------------	-----

2.3 VEHICLE IDENTIFICATION NUMBER (V.I.N.)

Vehicle Identification Number (VIN).....	2-8
General.....	2-8
Location.....	2-8
Abbreviated VIN.....	2-8

2.4 LOWER FRAME RAILS

Removal.....	2-10
Installation.....	2-11

2.5 FRONT ENGINE MOUNT

Replacement.....	2-12
------------------	------

2.6 FRONT ENGINE MOUNT ASSEMBLY

Removal.....	2-13
Disassembly And Assembly.....	2-13
Installation.....	2-13

2.7 REAR ENGINE MOUNTS

Removal.....	2-15
Installation.....	2-15

2.8 ENGINE REPLACEMENT

General.....	2-16
Removal.....	2-16
Installation.....	2-20

2.9 RIDER FOOTRESTS AND FOOT CONTROLS

Rider Footrests.....	2-23
Removal.....	2-23
Installation.....	2-23

2.10 PASSENGER FOOTRESTS

Passenger Footrests: All except VRSCF.....	2-25
--	------

Removal.....2-25
 Installation.....2-25
 Passenger Footrests: VRSCF.....2-25
 Removal.....2-25
 Installation.....2-25

2.11 THROTTLE CABLES

Removal/Disassembly.....2-26
 Cleaning And Inspection.....2-26
 Assembly and Installation.....2-26

2.12 CLUTCH MASTER CYLINDER AND RESERVOIR

General.....2-28
 Removal.....2-28
 Disassembly.....2-29
 Assembly.....2-30
 Installation.....2-31

2.13 CLUTCH LEVER

Removal.....2-32
 Installation.....2-32

2.14 CLUTCH FLUID LINE

Removal.....2-33
 Installation.....2-34

2.15 SECONDARY CLUTCH ACTUATOR

Removal.....2-36
 Assembly.....2-36
 Installation.....2-36

2.16 BLEEDING CLUTCH FLUID LINE

Procedure.....2-38

2.17 FRONT BRAKE MASTER CYLINDER AND RESERVOIR

General.....2-40
 Removal and Disassembly.....2-40
 Cleaning and Inspection.....2-42
 Assembly.....2-42
 Installation.....2-42

2.18 FRONT BRAKE CALIPER

Removal.....2-44
 Installation.....2-44

2.19 REAR BRAKE MASTER CYLINDER AND RESERVOIR

Removal.....2-46
 Disassembly.....2-48
 Cleaning and Inspection.....2-48
 Assembly.....2-48
 Installation.....2-49

2.20 REAR BRAKE CALIPER

Removal.....2-50
 Installation.....2-50

2.21 ABS BRAKE LINES

Front Master Cylinder to ABS Module.....2-51
 Removal.....2-51
 Installation.....2-51
 ABS Module to Front Brake Calipers.....2-52
 Removal.....2-52
 Installation.....2-52
 Rear Master Cylinder to ABS Module.....2-53
 Removal.....2-53
 Installation.....2-53
 ABS Module to Rear Brake Caliper.....2-54
 Removal.....2-54
 Installation.....2-54

2.22 BLEEDING BRAKES

General.....2-58
 Procedure.....2-58

2.23 HANDLEBARS: VRSCDX

Removal.....2-60
 Installation.....2-60

2.24 HANDLEBARS: VRSCF

Removal.....2-62
 Installation.....2-62

2.25 HAND GRIPS

Right Hand Grip.....2-64
 Left Hand Grip.....2-64
 Removal.....2-64
 Installation.....2-64

2.26 FRONT WHEEL

General.....2-65
 Preliminary Inspection - Brake Discs.....2-65
 Preliminary Inspection - Wheel/Tire.....2-65
 Removal.....2-66
 Disassembly.....2-68
 Cleaning and Inspection.....2-68
 Assembly.....2-69
 Installation.....2-70

2.27 REAR WHEEL

General.....2-71
 Preliminary Inspection - Brake Disc.....2-71
 Preliminary Inspection - Wheel/Tire.....2-71
 Removal.....2-72
 Disassembly.....2-73
 Cleaning and Inspection.....2-74
 Assembly.....2-75
 Installation.....2-76

2.28 SEALED WHEEL BEARINGS

Inspection.....2-78
 Removal.....2-78
 Installation.....2-79

2.29 CHECKING CAST WHEEL RUNOUT

Checking Wheel Runout.....2-81
 Checking Lateral Runout.....2-81

TABLE OF CONTENTS

Checking Radial Runout.....	2-81	Debris Deflector.....	2-107
2.30 TIRES		2.37 REAR SHOCK ABSORBERS	
General.....	2-82	Removal.....	2-108
Removal.....	2-82	Installation.....	2-108
Cleaning, Inspection, and Repair.....	2-82	2.38 REAR FORK	
Tire Installation.....	2-83	Removal.....	2-110
Checking Tire Runout.....	2-83	Disassembly and Assembly.....	2-111
Lateral Runout.....	2-83	General.....	2-111
Radial Runout.....	2-84	Left Side Rear Fork Bearing Removal.....	2-112
Wheel Balancing.....	2-84	Left Side Rear Fork Bearing Installation.....	2-112
Static vs Dynamic.....	2-84	Right Side Bushing Removal.....	2-112
Weights.....	2-84	Right Side Bearing Installation.....	2-112
2.31 WHEEL ALIGNMENT		Installation.....	2-113
General.....	2-86	2.39 SEAT	
Inspection.....	2-86	Removal.....	2-115
Front Engine Mount.....	2-86	Cleaning and Inspection.....	2-115
Rear Engine Mounts and Rear Fork Pivot.....	2-86	Installation.....	2-116
Engine Stabilizer Link.....	2-86	2.40 REAR FENDER	
Clearances.....	2-86	Removal.....	2-117
Verification.....	2-86	Installation.....	2-118
Centering Engine.....	2-87	2.41 LICENSE PLATE BRACKET: VRSCF	
2.32 FRONT FENDER		Removal: US Only.....	2-119
All Models.....	2-89	Removal: Non-US.....	2-119
2.33 FRONT FORK		Installation: US Only.....	2-121
Fork Oil Leak Check.....	2-90	Installation: Non-US.....	2-121
Fork Oil Seals.....	2-90	2.42 JIFFY STAND	
Oil Leak Check.....	2-90	Cleaning.....	2-122
Removal.....	2-90	Jiffy Stand Interlock: International Models.....	2-122
Disassembly.....	2-92	Removal.....	2-122
Left Side.....	2-92	Installation.....	2-123
Right Side.....	2-94	ENGINE	
Cleaning and Inspection.....	2-95	3.1 FASTENER TORQUE VALUES	
Assembly.....	2-96	Fastener Torque Values in this Chapter.....	3-1
Left Side.....	2-96	3.2 SPECIFICATIONS: ENGINE	
Right Side.....	2-98	General.....	3-3
Installation.....	2-101	3.3 SERVICE WEAR LIMITS	
2.34 STEERING HEAD		General.....	3-7
Removal.....	2-103	3.4 HOW TO USE THIS SECTION	
Cleaning and Inspection.....	2-103	Top End Repair.....	3-9
Lower Fork Stem Bearing.....	2-104	Bottom End Repair.....	3-9
Steering Head Bearing Race.....	2-104	Typical Symptoms.....	3-9
Assembly.....	2-105	3.5 OIL FLOW	
Installation.....	2-105	General.....	3-10
2.35 FORK LOCK		3.6 OIL PRESSURE	
General.....	2-106	Oil Pressure Indicator Lamp.....	3-14
Removal.....	2-106	Checking Oil Pressure.....	3-14
Installation.....	2-106		
2.36 BELT GUARD AND DEBRIS DEFLECTOR			
Removal.....	2-107		
Belt Guard.....	2-107		
Debris Deflector.....	2-107		
Installation.....	2-107		
Belt Guard.....	2-107		

3.7 TROUBLESHOOTING

Compression Test.....3-15
 Diagnosing Valve Train Noise.....3-15
 Cylinder Leakage Test.....3-15
 Diagnosing Smoking Engine or High Oil Consumption.....3-16
 Check Prior to Cylinder Head Removal.....3-16
 Check After Cylinder Head Removal.....3-16

3.8 PREPARING MOTORCYCLE FOR SERVICE

General.....3-17
 Engine Cradle and Stand.....3-18

3.9 CAMSHAFTS, DRIVE CHAINS AND CAMSHAFT TIMING

Camshaft and Secondary Timing Chain Removal.....3-20
 Primary Cam Drive Removal.....3-23
 Primary Cam Drive Installation.....3-24
 Installation of Cams, Timing Chains and Camshaft Timing.....3-27

3.10 CYLINDER HEAD

Removal.....3-34
 Disassembly.....3-35
 Valve Seat Refacing.....3-39
 Head Assembly.....3-41
 Installation.....3-43

3.11 UPPER AND LOWER CRANKCASE SEPARATION

Disassembly.....3-46

3.12 ENGINE BOTTOM END SERVICE

Crankshaft, Piston and Cylinder Liner Removal/Installation.....3-49

3.13 OIL PUMP

Removal/Installation.....3-63

3.14 OIL FILTER MOUNT

Removal/Installation.....3-64

FUEL SYSTEM

4.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....4-1

4.2 SPECIFICATIONS: FUEL SYSTEM

General.....4-2

4.3 THROTTLE POSITION SENSOR (TP)

General.....4-3
 Removal.....4-3
 Installation.....4-3

4.4 INTAKE AIR TEMPERATURE SENSOR (IAT)

General.....4-4

Removal.....4-4
 Installation.....4-4

4.5 THROTTLE BODY AND FUEL RAIL

Removal.....4-5
 Installation.....4-5

4.6 IDLE AIR CONTROL (IAC)

General.....4-7
 Removal.....4-7
 Installation.....4-7

4.7 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)

Removal.....4-9
 Installation.....4-9

4.8 OXYGEN SENSOR

Removal.....4-10
 Front Sensor.....4-10
 Rear Sensor.....4-10
 Installation.....4-10

4.9 FUEL INJECTORS

General.....4-12
 Removal.....4-12
 Disassembly.....4-12
 Fuel Injectors.....4-12
 Fuel Pressure Regulator.....4-12
 Fuel Tubes.....4-12
 Assembly.....4-12
 Fuel Injectors.....4-12
 Fuel Pressure Regulator.....4-13
 Fuel Tubes.....4-13
 Installation.....4-13

4.10 FUEL TANK

Removal.....4-14
 Cleaning and Inspection.....4-14
 Installation.....4-15

4.11 FUEL MODULE ASSEMBLY

Removal.....4-16
 Installation.....4-17
 Suction Side Fuel Filter.....4-17
 Removal.....4-17
 Installation.....4-17
 Pressure Side Fuel Filter.....4-17
 Removal.....4-17
 Installation.....4-18
 Fuel Pump.....4-18
 General.....4-18
 Removal.....4-18
 Installation.....4-18
 Fuel Level Sensor.....4-20
 Removal.....4-20
 Installation.....4-20

4.12 VAPOR VALVE

General.....4-21
 Replacement.....4-21

TABLE OF CONTENTS

4.13 FUEL PRESSURE TEST

General.....	4-22
Testing.....	4-22

4.14 EXHAUST SYSTEM: VRSCDX

Removal.....	4-24
Installation.....	4-26

4.15 EXHAUST SYSTEM: VRSCF

Removal.....	4-27
Installation.....	4-29

4.16 INTAKE LEAK TEST

General.....	4-30
Leak Tester.....	4-30
Parts List.....	4-30
Tester Assembly.....	4-30
Tester Adjustment.....	4-30
Procedure.....	4-30

4.17 EVAPORATIVE EMISSIONS CONTROL

General.....	4-32
Purge Solenoid.....	4-32
Removal.....	4-32
Installation.....	4-33
Carbon Canister.....	4-33
Removal/Inspection.....	4-33
Installation.....	4-33
Tube Routing/Replacement.....	4-33

COOLING SYSTEM

5.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	5-1
---	-----

5.2 SPECIFICATIONS: COOLING SYSTEM

General.....	5-2
--------------	-----

5.3 COOLANT FLOW

General.....	5-3
Flow Description.....	5-3
Troubleshooting.....	5-3
Low Engine Temperature.....	5-3
High Engine Temperature.....	5-3
Coolant Leaks.....	5-3
Pressure Cap.....	5-3
Pressure Cap Test.....	5-4
System Pressure Test.....	5-5
Leak Detection Dye Test.....	5-5
Tests for Blown Gasket.....	5-6

5.4 ENGINE COOLANT

Coolant Type.....	5-7
Drain and Fill Cooling System.....	5-7

5.5 THERMOSTAT

General.....	5-9
Removal.....	5-9
Installation.....	5-9

5.6 WATER PUMP

Removal.....	5-11
Installation.....	5-11

5.7 COOLANT PIPES AND HOSES

Removal.....	5-13
Disassembly.....	5-13
Assembly.....	5-15
Installation.....	5-15

5.8 ENGINE COOLANT TEMPERATURE SENSOR (ECT)

General.....	5-16
Removal.....	5-16
Installation.....	5-16

5.9 OIL LINE FITTINGS

Removal.....	5-17
Installation.....	5-18

5.10 RADIATOR AND OIL COOLER

General.....	5-19
Removal.....	5-19
Installation.....	5-21

5.11 OIL COOLER

Removal.....	5-24
Installation.....	5-24

TRANSMISSION

6.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....	6-1
---	-----

6.2 SPECIFICATIONS: TRANSMISSION

General.....	6-2
--------------	-----

6.3 CLUTCH

Removal.....	6-3
Disassembly.....	6-6
Cleaning and Inspection.....	6-7
Assembly.....	6-7
Installation.....	6-10

6.4 TRANSMISSION

Disassembly.....	6-13
Shift Drum Removal.....	6-14
Assembly.....	6-16

6.5 COUNTERBALANCER BEARING REPLACEMENT

Removal.....	6-24
Installation.....	6-27

6.6 SHIFT SHAFT AND SEAL

General.....	6-31
Removal.....	6-31
Installation.....	6-32

6.7 OUTPUT SHAFT

General.....6-33
 Disassembly: 2nd Gear End.....6-33
 Bearing Removal: 2nd Gear End.....6-33
 Bearing Installation: 2nd Gear End.....6-33
 Assembly: 2nd Gear End.....6-38
 Bearing Removal: 1st Gear End6-38
 Bearing Installation: 1st Gear End6-39
 Assembly: 1st Gear End.....6-40

6.8 INPUT SHAFT

Disassembly: 2nd Gear End.....6-43
 Bearing Removal: 2nd Gear End.....6-43
 Bearing Installation: 2nd Gear End.....6-43
 Assembly: 2nd Gear End.....6-46
 Disassembly: 1st Gear End.....6-47
 Bearing Removal: 1st Gear End6-47
 Assembly: 1st Gear End.....6-48
 Bearing Installation: 1st Gear End6-48

6.9 DRIVE BELT

Replacement.....6-49

6.10 DRIVE SPROCKET FLANGE

Replacement.....6-51

ELECTRICAL

7.1 FASTENER TORQUE VALUES

Fastener Torque Values in this Chapter.....7-1

7.2 SPECIFICATIONS: ELECTRICAL

General.....7-3

7.3 ELECTRONIC CONTROL MODULE (ECM)

General.....7-4
 Removal.....7-4
 Installation.....7-4

7.4 TURN SIGNAL AND SECURITY MODULE (TSM/TSSM/HFSM)

General.....7-5
 Removal.....7-5
 TSM/HFSM/TSSM Configuration.....7-5
 Installation.....7-5

7.5 RELAY AND FUSE BLOCK

General.....7-6
 Relay/Fuse Block Removal.....7-6
 Fuse Replacement.....7-6
 Relay Replacement.....7-6
 Relay/Fuse Block Installation.....7-6

7.6 MAIN FUSE

General.....7-7
 Replacement.....7-7

7.7 STARTER SYSTEM

General.....7-8

Wiring Diagrams.....7-8
 Starter Relay.....7-8
 Starter.....7-8
 Starter Solenoid.....7-8
 Operation.....7-8

7.8 STARTER RELAY

Removal.....7-9
 Installation.....7-9

7.9 STARTER

Removal.....7-10
 Installation.....7-10

7.10 STARTER SOLENOID

Removal.....7-11
 Installation.....7-11

7.11 IGNITION/HEADLAMP KEY SWITCH

General.....7-12
 Replacement.....7-12

7.12 HEADLAMP

General.....7-13
 Headlamp Bulb.....7-13
 Removal.....7-13
 Installation.....7-13

7.13 TAIL LAMP: VRSCDX

Removal.....7-15
 Installation.....7-15

7.14 TAIL LAMP: VRSCF

Removal.....7-16
 Installation.....7-16

7.15 TURN SIGNALS AND RUNNING LIGHTS: VRSCDX

Bulb Replacement.....7-17
 Turn Signals.....7-17
 License Plate.....7-17
 Lamp Replacement.....7-17
 Front Turn Signals.....7-17
 Light Assembly.....7-18
 Rear Turn Signals.....7-19
 License Plate Lamp.....7-19

7.16 TURN SIGNALS: VRSCF

Turn Signal Replacement.....7-21
 Front Turn Signals.....7-21
 Rear Turn Signals.....7-21

7.17 CRANK POSITION SENSOR (CKP)

General.....7-22
 Removal.....7-22
 Installation.....7-22

7.18 VOLTAGE REGULATOR

General.....7-23
 Removal.....7-23

TABLE OF CONTENTS

Installation.....7-23

7.19 ALTERNATOR

General.....7-24
Removal.....7-24
Disassembly.....7-25
Assembly.....7-26
Installation.....7-26

7.20 INSTRUMENT CLUSTER: VRSCDX

General.....7-28
Removal.....7-28
Installation.....7-28

7.21 INSTRUMENT CLUSTER: VRSCF

Removal.....7-29
Installation.....7-29

7.22 VEHICLE SPEED SENSOR (VSS)

General.....7-30
Removal.....7-30
Installation.....7-30

7.23 WHEEL SPEED SENSORS

Front Wheel Speed Sensor.....7-31
 Removal.....7-31
 Installation.....7-31
Rear Wheel Speed Sensor.....7-32
 Removal.....7-32
 Installation.....7-32

7.24 NEUTRAL SWITCH

General.....7-34
Removal.....7-34
Installation.....7-34

7.25 OIL PRESSURE SWITCH

General.....7-35
Removal.....7-35
Installation.....7-35

7.26 REAR STOPLIGHT SWITCH

General.....7-36
Removal.....7-36
Installation.....7-36

7.27 HORN

Inspection.....7-37
Replacement.....7-37

7.28 COOLING FANS

Removal.....7-38
Installation.....7-38

7.29 HANDLEBAR SWITCH ASSEMBLIES

General.....7-40
Repair Procedures.....7-40

7.30 RIGHT HANDLEBAR SWITCH

Removal.....7-41

Installation.....7-41

Disassembly.....7-43

Switch Repair/Replacement.....7-44

 Switch and Lead Replacement.....7-44

 Switch Only Replacement: Upper Housing.....7-44

 Switch Only Replacement: Lower Housing.....7-45

 Turn-Right Signal Switch Only.....7-45

 Front Stop Lamp Switch Only.....7-45

Assembly.....7-45

7.31 LEFT HANDLEBAR SWITCH

Removal.....7-47

Installation.....7-47

Disassembly.....7-48

Switch Repair and Replacement.....7-48

 Switch and Lead Replacement.....7-48

 Switch Only Replacement: Upper Housing.....7-48

 Switch Only Replacement: Lower Housing.....7-49

 Turn-Left Signal Switch Only.....7-49

 Clutch Interlock Switch Only.....7-49

Assembly.....7-49

7.32 HFSM MAINTENANCE

General.....7-51

Fob Battery.....7-51

 Battery Replacement Schedule.....7-51

 Battery Replacement.....7-51

Smart Siren (If Installed).....7-51

 Battery Replacement Schedule.....7-51

 Battery Replacement.....7-51

7.33 PERSONAL IDENTIFICATION NUMBER (PIN)

General.....7-52

Initial PIN Entry.....7-52

Changing The PIN.....7-52

 Modifying an Existing PIN.....7-52

7.34 H-DSSS ACTUATION

General.....7-54

Sidecar Configuration.....7-54

Actuation.....7-54

Fob Assignment.....7-54

Power Disruption and Configuring.....7-54

7.35 TSM/HFSM: PASSWORD LEARN

General.....7-55

Password Learn.....7-55

7.36 ABS MODULE

Removal.....7-57

ABS Module Service.....7-58

ABS Diode Service.....7-58

Installation.....7-59

APPENDIX A CONNECTOR REPAIR

A.1 AUTOFUSE UNSEALED ELECTRICAL CONNECTORS

Autofuse Unsealed Connector Repair.....A-1

General.....A-1
 Disassembly.....A-1
 Assembly.....A-1

A.2 BOSCH COMPACT 1.1M CONNECTOR

Bosch Compact 1.1M Connector.....A-2
 General.....A-2
 Housings.....A-2
 Removing Socket Terminal.....A-2
 Installing Socket Terminal.....A-2

A.3 BOSCH BTC SEALED CONNECTOR

Bosch BTC Sealed Connector Repair.....A-3
 Plugging and Unplugging Connector.....A-3
 Removing and Installing Connector Cover.....A-3
 Removing and Installing Wire Terminals.....A-4
 Crimping Terminals to Leads.....A-5

A.4 DELPHI 100W MICRO-PACK SEALED CONNECTOR

Delphi 100W Micro-Pack Sealed Connector Repair.....A-6
 General.....A-6
 Separating Socket Housing From ECM.....A-6
 Mating Socket Housing To ECM.....A-6
 Removing Socket Terminal.....A-6
 Installing Socket Terminal.....A-6
 Crimping Terminals.....A-7

A.5 DELPHI 150 METRI-PACK SEALED CONNECTORS

Delphi 150 Metri-Pack Sealed Connector Repair.....A-8
 General.....A-8
 Separating Pin and Socket Housings.....A-8
 Mating Pin and Socket Housings.....A-8
 Removing Socket Terminal.....A-8
 Inserting Socket Terminal.....A-8

A.6 DELPHI 280 METRI-PACK UNSEALED CONNECTORS

Fuse Block Repair.....A-10
 Removing Socket Terminals.....A-10
 Installing Socket Terminals.....A-10
 Crimping Terminals.....A-10

A.7 DELPHI 480 METRI-PACK UNSEALED CONNECTORS

Delphi 480 Metri-Pack Unsealed Connector Repair.....A-11
 General.....A-11
 Separating Pin and Socket Housings.....A-11
 Mating Pin and Socket Housings.....A-11
 Removing Socket Terminals.....A-11
 Installing Socket Terminals.....A-11

A.8 DELPHI 630 METRI-PACK UNSEALED CONNECTORS

Delphi 630 Metri-Pack Unsealed Connector Repair.....A-12
 Separating Pin and Socket Housings.....A-12
 Mating Pin and Socket Housings.....A-12
 Removing Socket Terminal.....A-12
 Installing Socket Terminal.....A-12

A.9 DELPHI 800 METRI-PACK SEALED MAIN FUSE HOUSING

Delphi 800 Metri-Pack Sealed Main Fuse Housing Repair.....A-13
 Removing Socket Terminals.....A-13
 Installing Socket Terminals.....A-13

A.10 DELPHI METRI-PACK TERMINAL REPAIR

Metri-Pack Terminal Crimps.....A-14
 Matching Terminal To Crimper.....A-14
 Preparing Wire Lead.....A-14
 Crimping Wire Core.....A-14
 Crimping Insulation/Seal.....A-15
 Inspecting Crimps.....A-15

A.11 DELPHI MICRO 64 SEALED CONNECTORS

Delphi Micro 64 Sealed Connector Repair.....A-16
 General.....A-16
 Separating Pin and Socket Housings.....A-16
 Mating Pin and Socket Housings.....A-16
 Removing Terminal.....A-16
 Installing Terminal.....A-17
 Preparing Wire Leads for Crimping.....A-17
 Crimping Terminals.....A-17
 Inspecting Crimps.....A-17

A.12 DELPHI GT 150 SEALED CONNECTORS

Delphi GT 150 Sealed Connector Repair.....A-19
 General.....A-19
 Separating Pin and Socket Housings.....A-19
 Mating Pin and Socket Housings.....A-19
 Removing Socket Terminals.....A-19
 Installing Socket Terminals.....A-19

A.13 DEUTSCH DT SEALED CONNECTORS

Deutsch DT Sealed Connector Repair.....A-21
 General.....A-21
 Separating Pin and Socket Housings.....A-21
 Mating Pin and Socket Housings.....A-21
 Removing Socket Terminals.....A-21
 Installing Socket Terminals.....A-21
 Removing Pin Terminals.....A-22
 Installing Pin Terminals.....A-23
 Crimping Terminals.....A-23

A.14 DEUTSCH DT SEALED TERMINAL REPAIR

Deutsch DT Sealed Terminal Crimps.....A-25
 Preparing Wire Leads for Crimping.....A-25
 Crimping Terminal to Lead.....A-25
 Inspecting Crimps.....A-25

A.15 DEUTSCH DTM SEALED MINI TERMINAL REPAIR

Deutsch DTM Sealed Mini Terminal Crimps.....A-26
 Preparing Wire Leads for Crimping.....A-26

TABLE OF CONTENTS

Crimping a Mini Terminal to Wire Lead.....	A-26
Inspecting Crimps.....	A-26

A.16 DEUTSCH DTM SEALED SOLID BARREL MINI TERMINAL REPAIR

Deutsch DTM Sealed Solid Barrel Terminal Crimps.....	A-27
Preparing Wire Leads For Crimping.....	A-27
Adjusting Crimper Tool.....	A-27
Crimping a Barrel Contact To Wire Lead.....	A-27
Inspecting Crimps.....	A-27

A.17 JAE MX19 SEALED CONNECTORS

JAE MX19 Sealed Connectors.....	A-29
Connector Housings.....	A-29
Removing Terminals.....	A-29
Installing Terminals.....	A-29
Crimping Terminals.....	A-29

A.18 MOLEX CMC SEALED CONNECTORS

Molex CMC Sealed Connectors.....	A-30
Separating the Connector.....	A-30
Removing Terminals.....	A-30
Installing Terminals.....	A-30
Crimping Terminals.....	A-31

A.19 MOLEX MX 150 SEALED CONNECTORS

Molex MX 150 Sealed Connector Repair.....	A-32
Separating Pin and Socket Housings.....	A-32
Mating Pin and Socket Housings.....	A-32
Removing Terminals.....	A-32
Installing Terminals.....	A-32
Crimp Terminal to Lead.....	A-33
Prepare Lead.....	A-33
Prepare Tool.....	A-33
Position Terminal in the Punch/Die.....	A-34
Insert Stripped Lead.....	A-34
Crimp Terminal to Lead.....	A-34
Inspect Crimp.....	A-35

A.20 TYCO 040 MULTILOCK UNSEALED CONNECTOR

Tyco 040 Multilock Unsealed Connector Repair.....	A-36
General.....	A-36
Separating Pin and Socket Housings.....	A-36
Mating Pin and Socket Housings.....	A-36
Removing Terminals from Housing.....	A-36
Inserting Terminals into Housing.....	A-37
Crimping Terminals to Leads.....	A-37
Inspecting Crimped Terminals.....	A-37

A.21 TYCO 070 MULTILOCK UNSEALED CONNECTOR

Tyco 070 Multilock Unsealed Connector Repair.....	A-38
General.....	A-38
Separating Pin and Socket Housings.....	A-38
Mating Pin and Socket Housings.....	A-38
Removing Terminals from Housing.....	A-38
Inserting Terminals into Housing.....	A-39
Crimping Terminals to Leads.....	A-40

Inspecting Crimped Terminals.....	A-40
-----------------------------------	------

A.22 TYCO GET 64 SEALED CONNECTOR

Tyco GET 64 Sealed Connector Repair.....	A-41
General.....	A-41
Housings.....	A-41
Removing Socket Terminals.....	A-41
Installing Socket Terminals.....	A-42
Crimping Terminals.....	A-42

A.23 TYCO MCP SEALED CONNECTOR

Tyco MCP Sealed Connector.....	A-43
General.....	A-43
Housing.....	A-43
Removing the Large Terminals.....	A-43
Removing the Small Terminals.....	A-43
Installing Terminals.....	A-44
Crimping Terminals.....	A-44

A.24 SEALED SPLICE CONNECTORS

Sealed Splice Connector Repair.....	A-45
General.....	A-45
Preparing Wire Leads.....	A-45
Splicing Wire Leads.....	A-45
Inspecting Seals.....	A-45

APPENDIX B WIRING

B.1 CONNECTORS

Connector Locations.....	B-1
Function/Location.....	B-1
Place and Color.....	B-1
Connector Number.....	B-1
Repair Instructions.....	B-1

B.2 WIRING DIAGRAMS

Wiring Diagram Information.....	B-4
Wire Color Codes.....	B-4
Wiring Diagram Symbols.....	B-4
2015 V-Rod Wiring Diagrams.....	B-6

APPENDIX C REFERENCE

C.1 VALVE TAPPET SHIMS

Tables.....	C-1
-------------	-----

C.2 VALVE LASH CALCULATION WORKSHEET 1

Worksheet 1.....	C-2
------------------	-----

C.3 VALVE LASH CALCULATION WORKSHEET 2

Worksheet 2.....	C-3
------------------	-----

C.4 LENGTH CONVERSION

Conversion Table.....	C-4
-----------------------	-----

C.5 FLUID CONVERSION

United States System.....	C-5
---------------------------	-----

TABLE OF CONTENTS

Metric System.....	C-5
British Imperial System.....	C-5

C.6 TORQUE CONVERSION

United States System.....	C-6
Metric System.....	C-6

C.7 GLOSSARY

Acronyms and Abbreviations.....	C-7
---------------------------------	-----

REFERENCE MATERIAL

TOOLS.....	I
-------------------	----------

TORQUE VALUES.....	XI
---------------------------	-----------

INDEX.....	XXI
-------------------	------------

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com