



2017 Harley-Davidson Dyna Models Service Manual

©2016 H-D.
ALL RIGHTS RESERVED
94000381

Printed in the U.S.A.

VISIT THE HARLEY-DAVIDSON WEB SITE
<http://www.harley-davidson.com>

MAINTENANCE

1.1 FASTENER TORQUE VALUES

| | |
|---|-----|
| Fastener Torque Values in this Chapter..... | 1-1 |
| 1.2 GENERAL | |
| Servicing a New Motorcycle..... | 1-3 |
| Safe Operating Maintenance..... | 1-3 |
| Disposal and Recycling..... | 1-3 |
| Shop Practices..... | 1-3 |
| Repair Notes..... | 1-3 |
| Safety..... | 1-3 |
| Removing Parts..... | 1-3 |
| Cleaning..... | 1-3 |
| Cleaning Fastener Threads..... | 1-4 |
| Disassembly and Assembly..... | 1-4 |
| Checking Torques on Fasteners..... | 1-4 |
| Magnetic Parts Trays..... | 1-4 |
| Repair and Replacement Procedures..... | 1-4 |
| Hardware and Threaded Parts..... | 1-4 |
| Threadlocking Agents..... | 1-4 |
| Wiring, Hoses and Lines..... | 1-4 |
| Instruments and Gauges..... | 1-4 |
| Bearings..... | 1-4 |
| Bushings..... | 1-4 |
| Gaskets..... | 1-4 |
| Lip-Type Seals..... | 1-5 |
| O-Rings..... | 1-5 |
| Gears..... | 1-5 |
| Shafts..... | 1-5 |
| Part Replacement..... | 1-5 |
| Cleaning..... | 1-5 |
| Protecting Rubber Parts..... | 1-5 |
| Cleaning Process..... | 1-5 |
| Rust or Corrosion Removal..... | 1-5 |
| Bearings..... | 1-5 |
| Tool Safety..... | 1-5 |
| Air Tools..... | 1-5 |
| Wrenches..... | 1-6 |
| Pliers/Cutters/Pry Bars..... | 1-6 |
| Hammers..... | 1-6 |
| Punches/Chisels..... | 1-6 |
| Screwdrivers..... | 1-6 |
| Ratchets and Handles..... | 1-6 |
| Sockets..... | 1-6 |
| Storage Units..... | 1-6 |

1.3 FUEL AND OIL

| | |
|----------------------------------|-----|
| Fuel..... | 1-7 |
| Gasoline Blends..... | 1-7 |
| Engine Lubrication..... | 1-7 |
| Low Temperature Lubrication..... | 1-8 |

1.4 MAINTENANCE SCHEDULE

| | |
|--------------|-----|
| General..... | 1-9 |
|--------------|-----|

1.5 ENGINE OIL AND FILTER

| | |
|----------------------------------|------|
| Check Engine Oil Level..... | 1-14 |
| Oil Level Cold Check..... | 1-14 |
| Oil Level Hot Check..... | 1-14 |
| Changing Oil and Oil Filter..... | 1-14 |

1.6 AIR CLEANER AND EXHAUST SYSTEM

| | |
|--|------|
| Removal, All But HO103 and 110..... | 1-16 |
| Installation, All But HO103 and 110..... | 1-17 |

| | |
|-----------------------------------|------|
| Removal, HU103..... | 1-17 |
| Installation, HO103..... | 1-18 |
| Removal: FXDLS..... | 1-18 |
| Cleaning: FXDLS..... | 1-18 |
| Installation: FXDLS..... | 1-19 |
| Check Exhaust System Leakage..... | 1-19 |
| Exhaust System Leakage..... | 1-19 |

1.7 TIRES AND WHEELS

| | |
|----------------------------------|------|
| Tires..... | 1-20 |
| Tire Replacement..... | 1-20 |
| Dunlop..... | 1-21 |
| Michelin..... | 1-21 |
| Wheel Bearings..... | 1-22 |
| Wheel Spokes..... | 1-22 |
| Identify Wheel Spoke Groups..... | 1-22 |
| Adjust Wheel Spokes..... | 1-22 |

1.8 PRIMARY CHAINCASE LUBRICANT

| | |
|---|------|
| Change Primary Chaincase Lubricant..... | 1-24 |
|---|------|

1.9 TRANSMISSION LUBRICANT

| | |
|------------------------------------|------|
| Check Transmission Lubricant..... | 1-26 |
| Change Transmission Lubricant..... | 1-26 |

1.10 CLUTCH CABLE

| | |
|-----------------|------|
| Adjustment..... | 1-28 |
|-----------------|------|

1.11 DRIVE BELT AND SPROCKETS

| | |
|----------------------------------|------|
| General..... | 1-30 |
| Cleaning..... | 1-30 |
| Inspection..... | 1-30 |
| Sprockets..... | 1-30 |
| Drive Belt..... | 1-30 |
| Check Drive Belt Deflection..... | 1-31 |
| Adjusting Belt Deflection..... | 1-32 |

1.12 THROTTLE CABLES

| | |
|---------------------------------------|------|
| Cable Inspection and Lubrication..... | 1-34 |
| Cable Adjustment..... | 1-34 |
| Operation..... | 1-34 |
| Adjustment..... | 1-34 |

1.13 CABLE AND CHASSIS LUBRICATION

| | |
|-----------------------------|------|
| General..... | 1-36 |
| Cables and Hand Levers..... | 1-36 |
| Jiffy Stand..... | 1-36 |

1.14 BRAKES

| | |
|--------------------------|------|
| Fluid Inspection..... | 1-37 |
| Rear Pedal Height..... | 1-37 |
| Inspect Brake Lines..... | 1-37 |

1.15 BRAKE PADS AND DISCS

| | |
|----------------------------|------|
| Inspection..... | 1-39 |
| Brake Pads..... | 1-39 |
| Brake Disc..... | 1-39 |
| Brake Pad Replacement..... | 1-40 |
| Rear Brake Caliper..... | 1-40 |
| Front Brake Caliper..... | 1-40 |

1.16 SPARK PLUGS

| | |
|-----------------|------|
| Inspection..... | 1-42 |
|-----------------|------|

TABLE OF CONTENTS

1.17 STEERING HEAD BEARINGS

| | |
|---------------------------------------|------|
| Adjustment..... | 1-43 |
| Bearing Adjustment (Measurement)..... | 1-43 |
| Bearing Adjustment (Fall-Away)..... | 1-43 |
| Lubrication..... | 1-44 |

1.18 BATTERY MAINTENANCE

| | |
|----------------------------------|------|
| General..... | 1-45 |
| Cleaning and Inspection..... | 1-46 |
| Voltage Test..... | 1-46 |
| Charging Battery..... | 1-46 |
| Safety Precautions..... | 1-46 |
| Using a Battery Charger..... | 1-46 |
| Battery Tender Connector..... | 1-47 |
| Disconnection and Removal..... | 1-47 |
| Storage..... | 1-48 |
| Installation and Connection..... | 1-48 |

1.19 ENGINE MOUNTS

| | |
|-----------------|------|
| Inspection..... | 1-50 |
|-----------------|------|

1.20 HEADLAMP ALIGNMENT

| | |
|--|------|
| Headlamp Alignment..... | 1-51 |
| Headlamp Adjustment: All but FXDL..... | 1-51 |
| Headlamp Adjustment: FXDL..... | 1-52 |

1.21 SUSPENSION ADJUSTMENTS: ALL BUT FXDLS

| | |
|---|------|
| Shock Absorber Preload: All except FXDLS..... | 1-53 |
|---|------|

1.22 SUSPENSION ADJUSTMENTS: FXDLS

| | |
|--|------|
| Shock Absorber Preload Adjustment..... | 1-54 |
|--|------|

1.23 STORAGE

| | |
|---------------------------|------|
| General..... | 1-55 |
| Placing in Storage..... | 1-55 |
| Removal from Storage..... | 1-55 |

1.24 TROUBLESHOOTING

| | |
|--------------|------|
| General..... | 1-56 |
| Engine..... | 1-56 |

| | |
|--|------|
| Starter Motor Does Not Operate or Does Not Turn Engine Over..... | 1-56 |
| Engine Turns Over But Does Not Start..... | 1-56 |
| Starts Hard..... | 1-56 |
| Starts But Runs Irregularly or Misses..... | 1-56 |
| Spark Plug Fouls Repeatedly..... | 1-56 |
| Pre-Ignition or Detonation (Knocks or Pings)..... | 1-56 |
| Overheating..... | 1-57 |
| Valve Train Noise..... | 1-57 |
| Excessive Vibration..... | 1-57 |
| Check Engine Light Illuminates During Operation..... | 1-57 |
| Lubrication System..... | 1-57 |
| Oil Does Not Return To Oil Pan..... | 1-57 |
| Engine Uses Too Much Oil Or Smokes Excessively..... | 1-57 |
| Engine Leaks Oil From Cases, Pushrods, Hoses, Etc..... | 1-57 |
| Low Oil Pressure..... | 1-57 |
| High Oil Pressure..... | 1-57 |
| Electrical System..... | 1-57 |

| | |
|---------------------------------|------|
| Alternator Does Not Charge..... | 1-57 |
|---------------------------------|------|

| | |
|---|------|
| Alternator Charge Rate Is Below Normal..... | 1-57 |
|---|------|

| | |
|---------------------------------------|------|
| Speedometer Operates Erratically..... | 1-58 |
|---------------------------------------|------|

| | |
|-------------------|------|
| Transmission..... | 1-58 |
|-------------------|------|

| | |
|------------------|------|
| Shifts Hard..... | 1-58 |
|------------------|------|

| | |
|------------------------|------|
| Jumps Out Of Gear..... | 1-58 |
|------------------------|------|

| | |
|-------------------------------|------|
| Clutch Slips: Mechanical..... | 1-58 |
|-------------------------------|------|

| | |
|------------------------------|------|
| Clutch Slips: Hydraulic..... | 1-58 |
|------------------------------|------|

| | |
|---------------------------------------|------|
| Clutch Drags Or Does Not Release..... | 1-58 |
|---------------------------------------|------|

| | |
|----------------------|------|
| Clutch Chatters..... | 1-58 |
|----------------------|------|

| | |
|---------------|------|
| Handling..... | 1-58 |
|---------------|------|

| | |
|---------------------|------|
| Irregularities..... | 1-58 |
|---------------------|------|

| | |
|-------------|------|
| Brakes..... | 1-58 |
|-------------|------|

| | |
|-----------------------------------|------|
| Brake Does Not Hold Normally..... | 1-58 |
|-----------------------------------|------|

CHASSIS

2.1 FASTENER TORQUE VALUES

| | |
|---|-----|
| Fastener Torque Values in this Chapter..... | 2-1 |
|---|-----|

2.2 SPECIFICATIONS

| | |
|---------------------|-----|
| Specifications..... | 2-5 |
|---------------------|-----|

| | |
|-----------------------------|-----|
| Chassis Specifications..... | 2-5 |
|-----------------------------|-----|

| | |
|--------------------------|-----|
| Tire Specifications..... | 2-6 |
|--------------------------|-----|

2.3 VEHICLE IDENTIFICATION NUMBER (VIN)

| | |
|------------------------------------|-----|
| Vehicle Identification Number..... | 2-8 |
|------------------------------------|-----|

2.4 FRONT WHEEL

| | |
|--------------|------|
| Removal..... | 2-10 |
|--------------|------|

| | |
|------------------|------|
| Disassembly..... | 2-10 |
|------------------|------|

| | |
|-----------------|------|
| Cast Wheel..... | 2-10 |
|-----------------|------|

| | |
|------------------------------|------|
| Cast Wheel, Dual Brakes..... | 2-10 |
|------------------------------|------|

| | |
|------------------|------|
| Laced Wheel..... | 2-10 |
|------------------|------|

| | |
|------------------------------|------|
| Cleaning and Inspection..... | 2-13 |
|------------------------------|------|

| | |
|---------------|------|
| Assembly..... | 2-13 |
|---------------|------|

| | |
|-----------------|------|
| Cast Wheel..... | 2-13 |
|-----------------|------|

| | |
|------------------|------|
| Laced Wheel..... | 2-14 |
|------------------|------|

| | |
|-------------------|------|
| Installation..... | 2-14 |
|-------------------|------|

2.5 REAR WHEEL

| | |
|--------------|------|
| Removal..... | 2-16 |
|--------------|------|

| | |
|------------------|------|
| Disassembly..... | 2-16 |
|------------------|------|

| | |
|------------------------------|------|
| Cleaning and Inspection..... | 2-17 |
|------------------------------|------|

| | |
|---------------|------|
| Assembly..... | 2-18 |
|---------------|------|

| | |
|-------------------|------|
| Installation..... | 2-18 |
|-------------------|------|

2.6 SEALED WHEEL BEARINGS

| | |
|--------------|------|
| Inspect..... | 2-20 |
|--------------|------|

| | |
|--------------|------|
| Removal..... | 2-20 |
|--------------|------|

| | |
|-------------------|------|
| Installation..... | 2-22 |
|-------------------|------|

2.7 WHEEL LACING

| | |
|-------------------------------------|------|
| Wheel Lacing: Angle Flange Hub..... | 2-24 |
|-------------------------------------|------|

| | |
|---|------|
| Wheel Lacing: Straight Flange Hub, Single Hole Circle.... | 2-25 |
|---|------|

| | |
|--|------|
| Wheel Lacing: Straight Flange Hub, Dual Hole Circle..... | 2-27 |
|--|------|

2.8 CHECKING AND TRUING WHEELS

| | |
|--------------|------|
| General..... | 2-29 |
|--------------|------|

| | |
|---|------|
| Checking Wheel Runout..... | 2-29 |
| Checking Radial Runout..... | 2-29 |
| Checking Lateral Runout..... | 2-29 |
| Laced Wheel Rim Offset..... | 2-30 |
| True Laced Wheels..... | 2-33 |
| Adjust Radial Runout..... | 2-33 |
| Adjust Lateral Runout..... | 2-33 |
| 2.9 VEHICLE ALIGNMENT | |
| Inspection..... | 2-35 |
| 2.10 FRONT BRAKE MASTER CYLINDER | |
| General..... | 2-37 |
| Removal and Disassembly..... | 2-37 |
| Cleaning and Inspection..... | 2-39 |
| Assembly and Installation..... | 2-39 |
| 2.11 FRONT BRAKE CALIPER | |
| Removal..... | 2-41 |
| Disassembly..... | 2-41 |
| Cleaning, Inspection and Repair..... | 2-43 |
| Assembly..... | 2-44 |
| Installation..... | 2-45 |
| 2.12 REAR BRAKE MASTER CYLINDER | |
| Removal..... | 2-47 |
| Disassembly..... | 2-49 |
| Cleaning and Inspection..... | 2-49 |
| Assembly..... | 2-50 |
| Installation..... | 2-50 |
| 2.13 REAR BRAKE CALIPER | |
| Removal..... | 2-52 |
| Disassembly..... | 2-52 |
| Cleaning, Inspection and Repair..... | 2-54 |
| Assembly..... | 2-54 |
| Installation..... | 2-55 |
| 2.14 BRAKE LINES | |
| Front Master Cylinder to Front Caliper Line Assembly..... | 2-56 |
| Removal..... | 2-56 |
| Installation..... | 2-56 |
| ABS Module to Front Manifold Brake Lines..... | 2-56 |
| Removal..... | 2-56 |
| Installation..... | 2-58 |
| Rear Master Cylinder to ABS Module..... | 2-59 |
| Removal..... | 2-59 |
| Installation..... | 2-59 |
| ABS Module to Rear Brake Caliper..... | 2-61 |
| Removal..... | 2-61 |
| Installation..... | 2-61 |
| 2.15 ABS MODULE (EHCU) | |
| General..... | 2-63 |
| Electro Hydraulic Control Unit (EHCU)..... | 2-63 |
| Removal..... | 2-63 |
| Installation..... | 2-65 |
| 2.16 BLEEDING BRAKES | |
| General..... | 2-66 |
| Procedure..... | 2-66 |
| 2.17 TIRES | |
| General..... | 2-68 |
| Remove..... | 2-68 |
| Clean, Inspect and Repair..... | 2-68 |
| Installation..... | 2-69 |
| Tube Type Tires..... | 2-69 |
| Tubeless Tires..... | 2-69 |
| Check Tire Runout..... | 2-70 |
| Lateral Runout..... | 2-70 |
| Radial Runout..... | 2-70 |
| Balance Wheel..... | 2-70 |
| Static vs Dynamic..... | 2-70 |
| Weights..... | 2-71 |
| 2.18 FRONT FORK | |
| Check For Oil Leak..... | 2-72 |
| Fork Oil Seals..... | 2-72 |
| Check Oil Leak..... | 2-72 |
| Removal..... | 2-72 |
| Disassembly: All But FXDLS Left Side..... | 2-72 |
| Disassembly: Cartridge Fork (FXDLS Left Side)..... | 2-75 |
| Cleaning and Inspection..... | 2-77 |
| Assembly: All But FXDLS Left Side..... | 2-78 |
| Assembly: Cartridge Fork (FXDLS Left Side)..... | 2-79 |
| Installation..... | 2-82 |
| 2.19 STEERING HEAD | |
| Removal..... | 2-83 |
| Inspection..... | 2-83 |
| Disassembly..... | 2-84 |
| Steering Head Bearing Race Removal | 2-84 |
| Assembly..... | 2-84 |
| Installation..... | 2-84 |
| 2.20 BELT GUARD AND DEBRIS DEFLECTOR | |
| Belt Guard Removal..... | 2-85 |
| Belt Guard Installation..... | 2-85 |
| Debris Deflector Removal..... | 2-85 |
| Debris Deflector Installation..... | 2-85 |
| 2.21 CABLE THROTTLE CONTROL | |
| Removal/Disassembly..... | 2-87 |
| Cleaning and Inspection..... | 2-87 |
| Assembly/Installation..... | 2-87 |
| Throttle Cable Routing..... | 2-88 |
| 2.22 SHOCK ABSORBERS | |
| Removal..... | 2-89 |
| Inspection..... | 2-89 |
| Installation..... | 2-90 |
| 2.23 REAR FORK | |
| Removal..... | 2-91 |
| Disassembly..... | 2-91 |
| Cleaning and Inspection..... | 2-92 |
| Assembly..... | 2-92 |
| Installation..... | 2-92 |

TABLE OF CONTENTS

| | |
|--|-------|
| 2.24 CABLE CLUTCH CONTROL | |
| Removal..... | 2-93 |
| Installation..... | 2-93 |
| 2.25 HANDLEBAR: FXDB, FXDF, FXDLS AND FXDWG | |
| Removal..... | 2-94 |
| Remove Handlebar..... | 2-94 |
| Remove Risers..... | 2-94 |
| Installation..... | 2-94 |
| Handlebar Risers..... | 2-94 |
| Handlebar..... | 2-95 |
| 2.26 HANDLEBAR: FXDL | |
| Removal..... | 2-97 |
| Installation..... | 2-97 |
| Handlebar and Riser Adjustment..... | 2-99 |
| 2.27 SPEED SCREEN: FXDLS | |
| Remove..... | 2-100 |
| Install..... | 2-100 |
| 2.28 FRONT FENDER | |
| Removal..... | 2-101 |
| Installation..... | 2-101 |
| 2.29 REAR FENDER | |
| General..... | 2-102 |
| Removal..... | 2-102 |
| Tail Lamp/Turn Signal Harness Routing..... | 2-102 |
| Installation..... | 2-102 |
| FXDL..... | 2-104 |
| Removal..... | 2-104 |
| Installation..... | 2-104 |
| FXDB, FXDLS..... | 2-104 |
| Removal..... | 2-104 |
| Installation..... | 2-104 |
| FXDWG..... | 2-105 |
| Removal..... | 2-105 |
| Sissy Bar..... | 2-106 |
| Installation..... | 2-106 |
| FXDF..... | 2-106 |
| Removal..... | 2-106 |
| Installation..... | 2-107 |
| 2.30 SEAT | |
| Removal..... | 2-108 |
| Seat and Seat Strap: All But FXDWG..... | 2-108 |
| Seat and Seat Strap: FXDWG..... | 2-108 |
| Installation..... | 2-109 |
| Seat and Seat Strap: All But FXDWG..... | 2-109 |
| Seat and Seat Strap: FXDWG..... | 2-109 |
| Lumbar Pad: FXDL..... | 2-110 |
| Removal..... | 2-110 |
| Installation..... | 2-110 |
| 2.31 FOOTBOARDS AND FOOTRESTS | |
| Rider Footboards..... | 2-111 |
| Removal..... | 2-111 |
| Disassembly..... | 2-111 |
| Assembly..... | 2-111 |
| Installation..... | 2-111 |
| Rider Footrests: Mid Controls..... | 2-112 |
| Removal..... | 2-112 |
| Installation..... | 2-112 |
| Rider Footrests: Forward Controls..... | 2-113 |
| Removal..... | 2-113 |
| Installation..... | 2-113 |
| Passenger Footrests: All But FXDB..... | 2-113 |
| Removal..... | 2-113 |
| Installation..... | 2-113 |
| 2.32 JIFFY STAND | |
| Cleaning..... | 2-115 |
| Jiffy Stand Sensor: HDI Models..... | 2-117 |
| Removal..... | 2-117 |
| Installation..... | 2-117 |
| 2.33 FORK LOCK | |
| Removal..... | 2-119 |
| Installation..... | 2-119 |
| 2.34 ENGINE MOUNTS | |
| Removal..... | 2-121 |
| Front Isolator..... | 2-121 |
| Rear Isolator..... | 2-121 |
| Installation..... | 2-121 |
| Front Isolator..... | 2-121 |
| Rear Isolator..... | 2-121 |
| 2.35 SAREE GUARD: INDIA MODELS | |
| Replacement..... | 2-123 |
| Removal..... | 2-123 |
| Installation..... | 2-123 |
| 2.36 MEDALLIONS, BADGES AND TANK EMBLEMS | |
| Removal..... | 2-124 |
| Installation..... | 2-124 |
| ENGINE | |
| 3.1 FASTENER TORQUE VALUES | |
| Fastener Torque Values in this Chapter..... | 3-1 |
| 3.2 SPECIFICATIONS | |
| Specifications..... | 3-3 |
| 3.3 SERVICE WEAR LIMITS | |
| General..... | 3-6 |
| 3.4 ENGINE OIL FLOW | |
| Oil Feed..... | 3-8 |
| Top End..... | 3-8 |
| Bottom End..... | 3-10 |
| Oil Return..... | 3-12 |
| 3.5 OIL PUMP OPERATION | |
| General..... | 3-13 |
| Operation..... | 3-13 |

TABLE OF CONTENTS

| | |
|--|------|
| 3.6 BREather OPERATION | |
| General..... | 3-15 |
| 3.7 OIL PRESSURE | |
| Oil Pressure Indicator Lamp..... | 3-16 |
| Oil Pressure Check..... | 3-16 |
| 3.8 TROUBLESHOOTING | |
| Diagnosing Valve Train Noise..... | 3-17 |
| Compression Test..... | 3-17 |
| Cylinder Leakdown Test..... | 3-18 |
| Diagnosing Smoking Engine or High Oil Consumption..... | 3-18 |
| Check Before Cylinder Head Removal:..... | 3-18 |
| Check After Cylinder Head Removal:..... | 3-18 |
| 3.9 HOW TO USE THIS SECTION | |
| Top End Repair..... | 3-19 |
| Bottom End Repair..... | 3-19 |
| Typical Symptoms..... | 3-19 |
| 3.10 TOP END SERVICE | |
| Engine in Chassis..... | 3-20 |
| Engine Removed from Chassis..... | 3-21 |
| 3.11 CAM COMPARTMENT SERVICE | |
| Replace Camshaft..... | 3-22 |
| Engine Removed From Chassis..... | 3-23 |
| 3.12 STRIPPING MOTORCYCLE FOR SERVICE | |
| Procedure..... | 3-24 |
| Cam Compartment Service Only..... | 3-24 |
| Complete Top End Service..... | 3-24 |
| 3.13 ASSEMBLING MOTORCYCLE AFTER SERVICE | |
| Procedure..... | 3-25 |
| After Complete Top End Service..... | 3-25 |
| After Cam Compartment Service Only..... | 3-25 |
| 3.14 REMOVING ENGINE FROM CHASSIS | |
| Procedure..... | 3-26 |
| 3.15 INSTALLING ENGINE IN CHASSIS | |
| Procedure..... | 3-27 |
| 3.16 TOP END OVERHAUL: DISASSEMBLY | |
| General..... | 3-29 |
| Rocker Covers..... | 3-29 |
| Rocker Arm Support Plate..... | 3-29 |
| Pushrods, Lifters and Covers..... | 3-31 |
| Cylinder Head..... | 3-31 |
| Cylinder..... | 3-32 |
| Piston..... | 3-33 |
| 3.17 BREather ASSEMBLY | |
| Disassembly..... | 3-35 |
| Cleaning and Inspection..... | 3-35 |
| Assembly..... | 3-35 |
| 3.18 ROCKER ARM SUPPORT PLATE | |
| Disassembly..... | 3-36 |
| Cleaning, Inspection and Repair..... | 3-36 |
| Inspection..... | 3-36 |
| Rocker Shaft Fit..... | 3-36 |
| Rocker Arm Shaft to Bushing..... | 3-37 |
| Replace Rocker Arm Bushings..... | 3-37 |
| Assembly..... | 3-38 |
| 3.19 PUSHRODS, LIFTERS AND COVERS | |
| Disassembly..... | 3-39 |
| Clean and Inspect..... | 3-39 |
| Inspect Lifters..... | 3-39 |
| Assemble Pushrod Cover..... | 3-39 |
| 3.20 CYLINDER HEAD: TWIN CAM 96, 103 | |
| Inspect Valve Sealing..... | 3-41 |
| Disassembly..... | 3-41 |
| Cleaning..... | 3-42 |
| Inspection..... | 3-42 |
| Cylinder Head..... | 3-42 |
| Valve Guides..... | 3-43 |
| Valves..... | 3-43 |
| Valve Springs..... | 3-43 |
| Tapered Keepers..... | 3-43 |
| Valve Seats..... | 3-43 |
| Valve Guide Replacement..... | 3-43 |
| Removal..... | 3-43 |
| Installation..... | 3-44 |
| Valve and Seat Refacing..... | 3-47 |
| Assembly..... | 3-49 |
| 3.21 CYLINDER HEAD: TWIN CAM 110 | |
| Cylinder Head Repair..... | 3-51 |
| 3.22 CYLINDER: TWIN CAM 96, 103 | |
| Cleaning..... | 3-52 |
| Inspection..... | 3-52 |
| Deglazing Cylinder..... | 3-54 |
| Boring and Honing Cylinder..... | 3-54 |
| 3.23 CYLINDER: TWIN CAM 110 | |
| Cylinder Bore Finished Size..... | 3-56 |
| 3.24 PISTON: TWIN CAM 96, 103 | |
| Disassembly..... | 3-57 |
| Piston Rings..... | 3-57 |
| Cleaning..... | 3-57 |
| Inspection..... | 3-57 |
| Assembly..... | 3-59 |
| Checking Piston Ring Gap..... | 3-59 |
| Installing Piston Rings..... | 3-59 |
| 3.25 PISTON: TWIN CAM 110 | |
| Checking Piston Clearance..... | 3-61 |
| 3.26 TOP END OVERHAUL: ASSEMBLY | |
| General..... | 3-62 |
| Piston..... | 3-62 |
| Cylinder..... | 3-63 |

TABLE OF CONTENTS

| | | | |
|--|------|-------------------------|------|
| Cylinder Head..... | 3-65 | Crankshaft Removed..... | 3-96 |
| Pushrods, Lifters and Covers..... | 3-68 | | |
| Rocker Arm Support Plate..... | 3-69 | | |
| Breather and Rocker Cover..... | 3-70 | | |
| 3.27 CAM COMPARTMENT AND COMPONENTS | | | |
| Cam Support Plate and Cover Removal..... | 3-72 | | |
| Prepare Engine..... | 3-72 | | |
| Cam Chain and Sprockets Removal..... | 3-72 | | |
| Cam Support Plate Removal..... | 3-73 | | |
| Cam Support Plate Cleaning and Inspection..... | 3-74 | | |
| Oil Pressure Relief Valve..... | 3-74 | | |
| Cam Support Plate..... | 3-74 | | |
| Camshafts..... | 3-74 | | |
| Removal..... | 3-74 | | |
| Installation..... | 3-75 | | |
| Oil Pressure Relief Valve..... | 3-76 | | |
| Removal..... | 3-76 | | |
| Inspection..... | 3-77 | | |
| Installation..... | 3-77 | | |
| Cam Needle Bearings..... | 3-77 | | |
| Removal..... | 3-77 | | |
| Installation..... | 3-79 | | |
| Cam Support Plate and Cover Installation..... | 3-80 | | |
| 3.28 OIL PUMP | | | |
| Removal..... | 3-85 | | |
| Cleaning and Inspection..... | 3-85 | | |
| Installation..... | 3-86 | | |
| 3.29 CRANKCASE DISASSEMBLY AND REPAIR | | | |
| Crankcase Disassembly..... | 3-87 | | |
| Cleaning and Inspection..... | 3-87 | | |
| Right Crankcase Half..... | 3-88 | | |
| Main Bearing Removal..... | 3-88 | | |
| Main Bearing Installation..... | 3-88 | | |
| Piston Jets Removal..... | 3-89 | | |
| Piston Jets Installation..... | 3-89 | | |
| Left Crankcase Half..... | 3-89 | | |
| Main Bearing Removal..... | 3-89 | | |
| Main Bearing Installation..... | 3-90 | | |
| Sprocket Shaft Bearing Inner Race..... | 3-91 | | |
| Removal..... | 3-91 | | |
| Installation..... | 3-92 | | |
| Cylinder Studs..... | 3-94 | | |
| Remove..... | 3-94 | | |
| Install..... | 3-94 | | |
| Pipe Plugs and Oil Fittings..... | 3-94 | | |
| Remove..... | 3-94 | | |
| Install..... | 3-94 | | |
| 3.30 FLYWHEEL AND CONNECTING RODS | | | |
| Symptoms..... | 3-95 | | |
| Overview..... | 3-95 | | |
| No Oil Pressure..... | 3-95 | | |
| Vibration..... | 3-95 | | |
| Inspection..... | 3-95 | | |
| Measuring Crankshaft Runout..... | 3-95 | | |
| Crankshaft Installed..... | 3-95 | | |
| 3.31 CRANKCASE ASSEMBLY | | | |
| Crankcase Assembly..... | 3-97 | | |
| 3.32 OIL PAN | | | |
| Removal..... | 3-99 | | |
| Installation..... | 3-99 | | |
| FUEL SYSTEM | | | |
| 4.1 FASTENER TORQUE VALUES | | | |
| Fastener Torque Values in this Chapter..... | 4-1 | | |
| 4.2 SPECIFICATIONS: FUEL SYSTEM | | | |
| Specifications..... | 4-5 | | |
| 4.3 AIR CLEANER ASSEMBLY: ALL BUT FXDLS | | | |
| Removal, All But HO103..... | 4-6 | | |
| Installation, All But HO103..... | 4-7 | | |
| Removal, HO103..... | 4-7 | | |
| Installation, HO103..... | 4-8 | | |
| Backplate Assembly: HDI Models..... | 4-9 | | |
| 4.4 AIR CLEANER ASSEMBLY: FXDLS | | | |
| Disassemble..... | 4-10 | | |
| Assemble..... | 4-10 | | |
| 4.5 FUEL TANK | | | |
| General..... | 4-12 | | |
| Removal..... | 4-12 | | |
| Cleaning and Inspection..... | 4-13 | | |
| Installation..... | 4-14 | | |
| Vapor Valve..... | 4-14 | | |
| 4.6 TWIST GRIP SENSOR (TGS): FXDLS | | | |
| Remove..... | 4-15 | | |
| Install..... | 4-15 | | |
| 4.7 ENGINE TEMPERATURE SENSOR (ET) | | | |
| General..... | 4-17 | | |
| Removal..... | 4-17 | | |
| Installation..... | 4-18 | | |
| 4.8 INDUCTION MODULE: ALL BUT FXDLS | | | |
| Removal..... | 4-19 | | |
| Installation..... | 4-20 | | |
| 4.9 THROTTLE POSITION SENSOR (TPS): ALL BUT FXDLS | | | |
| General..... | 4-21 | | |
| Removal..... | 4-21 | | |
| Installation..... | 4-21 | | |
| 4.10 INTAKE AIR TEMPERATURE SENSOR (IAT): ALL BUT FXDLS | | | |
| General..... | 4-22 | | |
| Removal..... | 4-22 | | |

TABLE OF CONTENTS

| | | | |
|---|------|---|------|
| Installation..... | 4-22 | Removal: FXDL (all but HDI, JPN)..... | 4-48 |
| 4.11 IDLE AIR CONTROL (IAC): ALL BUT FXDLS | | Installation: FXDL (all but HDI, JPN)..... | 4-50 |
| General..... | 4-23 | 4.21 INTAKE LEAK TEST | |
| Removal..... | 4-23 | General..... | 4-51 |
| Installation..... | 4-23 | Leak Tester..... | 4-51 |
| 4.12 MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP): ALL BUT FXDLS | | Parts List..... | 4-51 |
| General..... | 4-24 | Assemble Tester | 4-51 |
| Removal..... | 4-24 | Adjust Tester..... | 4-51 |
| Installation..... | 4-24 | Procedure..... | 4-51 |
| 4.13 FUEL INJECTORS: ALL BUT FXDLS | | 4.22 EVAPORATIVE EMISSIONS CONTROL | |
| General..... | 4-25 | General..... | 4-53 |
| Removal..... | 4-25 | Charcoal Canister..... | 4-55 |
| Installation..... | 4-25 | Removal..... | 4-55 |
| 4.14 INDUCTION MODULE: FXDLS | | Installation..... | 4-55 |
| Removal..... | 4-27 | DRIVE | |
| Installation..... | 4-28 | 5.1 FASTENER TORQUE VALUES | |
| 4.15 TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP) SENSOR: FXDLS | | Fastener Torque Values in this Chapter..... | 5-1 |
| Removal..... | 4-29 | 5.2 SPECIFICATIONS: DRIVE | |
| Installation..... | 4-29 | Specifications..... | 5-2 |
| 4.16 FUEL INJECTORS: FXDLS | | 5.3 PRIMARY CHAINCASE COVER | |
| Removal..... | 4-30 | Removal..... | 5-3 |
| Installation..... | 4-30 | Installation..... | 5-3 |
| 4.17 OXYGEN SENSOR | | 5.4 DRIVE COMPONENTS | |
| General..... | 4-31 | Removal..... | 5-5 |
| Removal..... | 4-31 | Installation..... | 5-7 |
| Installation..... | 4-31 | 5.5 PRIMARY CHAINCASE HOUSING | |
| 4.18 FUEL PUMP | | Removal..... | 5-10 |
| General..... | 4-32 | Inspection..... | 5-10 |
| Removal..... | 4-32 | Mainshaft Bearing and Seal..... | 5-10 |
| Disassembly and Assembly..... | 4-34 | Remove..... | 5-10 |
| Fuel Filter..... | 4-34 | Install..... | 5-10 |
| Regulator..... | 4-34 | Mainshaft Bearing Inner Race..... | 5-11 |
| Inlet Sock..... | 4-35 | Remove..... | 5-11 |
| Fuel Pump..... | 4-36 | Install..... | 5-11 |
| Installation..... | 4-36 | Shifter Shaft Bushing..... | 5-11 |
| 4.19 FUEL PRESSURE TEST | | Installation..... | 5-12 |
| General..... | 4-39 | 5.6 CLUTCH | |
| Testing..... | 4-39 | Removal and Installation..... | 5-14 |
| 4.20 EXHAUST SYSTEM | | Clutch Pack Only..... | 5-14 |
| Removal: FXDB (all markets), FXDL (HDI, JPN)..... | 4-41 | Partial Disassembly..... | 5-14 |
| Disassembly: FXDB (all markets), FXDL (HDI, JPN)..... | 4-44 | Cleaning And Inspection..... | 5-14 |
| Assembly: FXDB (all markets), FXDL (HDI, JPN)..... | 4-44 | Assembly..... | 5-15 |
| Installation: FXDB (all markets), FXDL (HDI, JPN)..... | 4-44 | Complete Clutch Disassembly..... | 5-16 |
| FXDB (all but HDI, JPN)..... | 4-44 | Prepare..... | 5-16 |
| FXDB, FXDL (HDI, JPN)..... | 4-45 | Disassemble..... | 5-16 |
| Removal: FXDLS, FXDF and FXDWG..... | 4-46 | Assemble..... | 5-17 |
| Installation: FXDLS, FXDF and FXDWG..... | 4-48 | Complete..... | 5-17 |
| 5.7 TRANSMISSION SPROCKET | | TABLE OF CONTENTS XI | |
| Removal..... | 5-18 | | |
| Clean and Inspect..... | 5-19 | | |

TABLE OF CONTENTS

| | |
|---|------|
| Installation..... | 5-19 |
| 5.8 DRIVE BELT | |
| Removal..... | 5-21 |
| Installation..... | 5-21 |
| TRANSMISSION | |
| 6.1 FASTENER TORQUE VALUES | |
| Fastener Torque Values in this Chapter..... | 6-1 |
| 6.2 SPECIFICATIONS: TRANSMISSION | |
| Specifications..... | 6-2 |
| Service Wear Limits..... | 6-2 |
| 6.3 TRANSMISSION | |
| Power Flow..... | 6-4 |
| Neutral..... | 6-4 |
| First Gear..... | 6-4 |
| Second Gear..... | 6-4 |
| Third Gear..... | 6-4 |
| Fourth Gear..... | 6-4 |
| Fifth Gear..... | 6-4 |
| Sixth Gear..... | 6-4 |
| 6.4 SHIFTER LINKAGE | |
| Shifter Rod Adjustment..... | 6-6 |
| Forward Control Shifter Adjustment..... | 6-6 |
| Mid-Control Shifter Adjustment..... | 6-6 |
| 6.5 CABLE CLUTCH RELEASE COVER | |
| Removal and Disassembly..... | 6-7 |
| Cleaning and Inspection..... | 6-7 |
| Assembly and Installation..... | 6-8 |
| 6.6 TRANSMISSION ASSEMBLY | |
| Removal..... | 6-9 |
| Disassembly..... | 6-10 |
| Shifter Cam/Shifter Forks..... | 6-10 |
| Mainshaft..... | 6-12 |
| Countershaft..... | 6-14 |
| Removing Bearing Housing Bearings..... | 6-15 |
| Cleaning and Inspection..... | 6-16 |
| Assembly..... | 6-16 |
| Installing Bearing Housing Bearings..... | 6-16 |
| Countershaft..... | 6-16 |
| Mainshaft..... | 6-17 |
| Shifter Cam/Shifter Forks..... | 6-17 |
| Installation..... | 6-19 |
| 6.7 MAIN DRIVE GEAR AND BEARING | |
| Removal..... | 6-22 |
| Clean and Inspect..... | 6-23 |
| Replace Needle Bearings..... | 6-24 |
| Installation..... | 6-25 |
| Installing Main Drive Gear Bearing..... | 6-25 |
| Installing Main Drive Gear..... | 6-26 |
| Installing Main Drive Gear Large Seal..... | 6-26 |
| 6.8 TRANSMISSION CASE | |
| Removal..... | 6-29 |
| Installation..... | 6-29 |
| Disassemble..... | 6-30 |
| Remove Shifter Pawl Lever..... | 6-30 |
| Clean and Inspect..... | 6-30 |
| Assemble..... | 6-31 |
| Replace Countershaft Needle Bearing..... | 6-31 |
| Install Shifter Pawl Lever..... | 6-31 |
| ELECTRICAL | |
| 7.1 FASTENER TORQUE VALUES | |
| Fastener Torque Values in this Chapter..... | 7-1 |
| 7.2 SPECIFICATIONS: ELECTRICAL | |
| Specifications..... | 7-4 |
| 7.3 ELECTRICAL CADDY | |
| Removal..... | 7-5 |
| Installation..... | 7-7 |
| 7.4 ELECTRONIC CONTROL MODULE (ECM) | |
| General..... | 7-8 |
| Replacement..... | 7-8 |
| Removal..... | 7-8 |
| Installation..... | 7-8 |
| 7.5 BODY CONTROL MODULE (BCM) | |
| General..... | 7-9 |
| Removal..... | 7-9 |
| Installation..... | 7-10 |
| 7.6 SECURITY SIREN | |
| Removal..... | 7-11 |
| Installation..... | 7-11 |
| 7.7 SPARK PLUG CABLES | |
| Inspect Spark Plug Cables..... | 7-12 |
| Removal..... | 7-12 |
| Installation..... | 7-12 |
| 7.8 FUSES | |
| General..... | 7-13 |
| Replacement..... | 7-13 |
| 7.9 IGNITION SWITCH | |
| Removal..... | 7-14 |
| All but FXDL, FXDLS..... | 7-14 |
| FXDL..... | 7-14 |
| Installation..... | 7-15 |
| All but FXDL, FXDLS..... | 7-15 |
| FXDL..... | 7-15 |
| 7.10 BATTERY TRAY AND BATTERY CABLES | |
| Battery Tray..... | 7-16 |
| Removal..... | 7-16 |
| Installation..... | 7-16 |

TABLE OF CONTENTS

| | | | |
|--|------|---|------|
| Battery Cables..... | 7-17 | Installation..... | 7-38 |
| Routing..... | 7-17 | | |
| 7.11 STARTER | | | |
| General..... | 7-19 | Removal..... | 7-40 |
| Removal..... | 7-19 | Installation..... | 7-40 |
| Drive Assembly..... | 7-19 | | |
| Disassembly..... | 7-19 | | |
| Inspection..... | 7-20 | | |
| Assembly..... | 7-20 | | |
| Solenoid..... | 7-20 | | |
| Remove Cover and Plunger..... | 7-20 | | |
| Short Post Contact: Starter..... | 7-21 | | |
| Long Post Contact: Battery Positive..... | 7-21 | | |
| Install Plunger and Cover..... | 7-22 | | |
| Installation..... | 7-22 | | |
| 7.12 HEADLAMP | | | |
| General..... | 7-23 | Removal..... | 7-44 |
| Bulb Removal..... | 7-23 | Installation..... | 7-45 |
| Single Bulb Headlamp..... | 7-23 | | |
| Dual Bulb Headlamp..... | 7-24 | | |
| Bulb Installation..... | 7-25 | | |
| Headlamp Assembly: All But FXDL..... | 7-25 | | |
| Removal..... | 7-25 | Speedometer..... | 7-47 |
| Installation..... | 7-25 | Removal..... | 7-47 |
| Headlamp Assembly: FXDL..... | 7-25 | Installation..... | 7-47 |
| Removal..... | 7-25 | | |
| Installation..... | 7-25 | | |
| Headlamp Visor: FXDL..... | 7-26 | 7.21 INSTRUMENTS: FXDF | |
| Removal..... | 7-26 | Speedometer..... | 7-47 |
| Installation..... | 7-26 | Removal..... | 7-47 |
| 7.13 TAIL LAMP | | Installation..... | 7-47 |
| General..... | 7-28 | | |
| Tail Lamp Bulb Replacement: FXDL..... | 7-28 | 7.22 INSTRUMENTS: FXDB, FXDWG | |
| Base Replacement: FXDL..... | 7-28 | Removal..... | 7-48 |
| Base Replacement: FXDWG, All But U.S..... | 7-29 | Installation..... | 7-48 |
| Tail Lamp Replacement: FXDF..... | 7-30 | | |
| Tail Lamp Removal..... | 7-30 | 7.23 INSTRUMENTS: FXDL AND FXDLS | |
| Tail Lamp Installation..... | 7-30 | Removal..... | 7-50 |
| License Plate Lamp Replacement..... | 7-30 | Installation..... | 7-50 |
| Tail Lamp/License Plate Bracket: FXDB, FXDLS, All But U.S..... | 7-32 | | |
| Disassemble..... | 7-32 | 7.24 VEHICLE SPEED SENSOR (VSS) | |
| Assemble..... | 7-32 | General..... | 7-51 |
| 7.14 TURN SIGNALS | | Removal..... | 7-51 |
| Turn Signal Bulb Replacement: Bullet Style..... | 7-33 | Installation..... | 7-51 |
| Front Lamp Housing Replacement..... | 7-33 | | |
| Rear Lamp Housing Replacement..... | 7-35 | 7.25 WHEEL SPEED SENSORS | |
| | | Front Wheel Speed Sensor (WSS)..... | 7-52 |
| 7.15 CRANK POSITION SENSOR (CKP) | | Removal..... | 7-52 |
| General..... | 7-37 | Installation..... | 7-52 |
| Removal..... | 7-37 | | |
| Installation..... | 7-37 | Rear Wheel Speed Sensor (WSS)..... | 7-53 |
| | | Removal..... | 7-53 |
| 7.16 AUTOMATIC COMPRESSION RELEASE (ACR) | | Installation..... | 7-54 |
| General..... | 7-38 | | |
| Removal..... | 7-38 | 7.26 INDICATOR LAMPS | |
| | | Removal..... | 7-56 |
| | | FXDF..... | 7-56 |
| | | FXDB, FXDWG..... | 7-56 |
| | | Installation..... | 7-57 |
| | | FXDF..... | 7-57 |
| | | FXDLS, FXDB, FXDWG, FXDF..... | 7-57 |
| | | | |
| 7.27 NEUTRAL SWITCH | | | |
| General..... | 7-58 | | |
| Removal..... | 7-58 | | |
| Installation..... | 7-58 | | |
| | | | |
| 7.28 OIL PRESSURE SWITCH | | | |
| General..... | 7-59 | | |

TABLE OF CONTENTS

| | | | |
|---|------|--------------------------|------|
| Removal..... | 7-59 | Battery Replacement..... | 7-79 |
| Installation..... | 7-59 | | |
| 7.29 REAR STOP LAMP SWITCH | | | |
| General..... | 7-60 | | |
| Removal..... | 7-60 | | |
| Installation..... | 7-60 | | |
| 7.30 HORN | | | |
| Inspection..... | 7-61 | | |
| Replacement: All But FXDL and FXDLS..... | 7-61 | | |
| Replacement: FXDL and FXDLS..... | 7-62 | | |
| 7.31 MAIN WIRING HARNESS | | | |
| General..... | 7-63 | | |
| Removal..... | 7-63 | | |
| Installation..... | 7-65 | | |
| 7.32 HANDLEBAR CONTROL MODULES | | | |
| General..... | 7-69 | | |
| Repair Procedures..... | 7-69 | | |
| 7.33 LEFT HANDLEBAR CONTROL MODULE: ALL BUT FXDLS | | | |
| Removal..... | 7-70 | | |
| Clutch Switch Replacement..... | 7-70 | | |
| Installation..... | 7-70 | | |
| 7.34 RIGHT HANDLEBAR CONTROL MODULE: ALL BUT FXDLS | | | |
| Removal..... | 7-72 | | |
| Front Brake Switch Replacement..... | 7-73 | | |
| Installation..... | 7-73 | | |
| 7.35 LEFT HANDLEBAR CONTROL MODULE: FXDLS | | | |
| Removal..... | 7-75 | | |
| Installation..... | 7-75 | | |
| 7.36 RIGHT HANDLEBAR CONTROL MODULE: FXDLS | | | |
| Removal..... | 7-77 | | |
| Installation..... | 7-77 | | |
| 7.37 H-DSSS MAINTENANCE | | | |
| Fob Battery..... | 7-79 | | |
| Battery Replacement Schedule..... | 7-79 | | |
| Battery Replacement..... | 7-79 | | |
| Fob Battery..... | 7-79 | | |
| Battery Replacement Schedule..... | 7-79 | | |
| Battery Replacement..... | 7-79 | | |
| Smart Siren (If Installed)..... | 7-79 | | |
| Battery Replacement Schedule..... | 7-79 | | |
| 7.38 PERSONAL IDENTIFICATION NUMBER (PIN) | | | |
| General..... | 7-81 | | |
| Changing The PIN..... | 7-81 | | |
| Modifying an Existing PIN..... | 7-81 | | |
| 7.39 H-DSSS ACTUATION | | | |
| Sidecar Configuration..... | 7-83 | | |
| Activation..... | 7-83 | | |
| Fob Assignment..... | 7-83 | | |
| APPENDIX A WIRING | | | |
| A.1 CONNECTORS | | | |
| Connector Locations..... | A-1 | | |
| Function/Location..... | A-1 | | |
| Place and Color..... | A-1 | | |
| Connector Number..... | A-1 | | |
| Repair Instructions..... | A-1 | | |
| A.2 WIRING DIAGRAMS | | | |
| Wiring Diagram Information..... | A-4 | | |
| Wire Color Codes..... | A-4 | | |
| Wiring Diagram Symbols..... | A-4 | | |
| 2017 Dyna Wiring Diagrams..... | A-6 | | |
| APPENDIX B REFERENCE | | | |
| B.1 LENGTH CONVERSION | | | |
| Conversion Table..... | B-1 | | |
| B.2 FLUID CONVERSION | | | |
| United States System..... | B-2 | | |
| Metric System..... | B-2 | | |
| British Imperial System..... | B-2 | | |
| B.3 TORQUE CONVERSION | | | |
| United States System..... | B-3 | | |
| Metric System..... | B-3 | | |
| B.4 GLOSSARY | | | |
| Acronyms and Abbreviations..... | B-4 | | |
| REFERENCE MATERIAL | | | |
| TOOLSI | | | |
| TORQUE VALUESVII | | | |
| INDEXXXI | | | |

Thank you so much for reading.

**Please click the “Buy Now!”
button below to download the
complete manual.**

Buy Now



After you pay.

**You can download the most
perfect and complete manual in
the world immediately.**

Our support email:

ebooklibonline@outlook.com