

DV23
DV26
Tier 4A (interim)
Vibratory Roller

DV23CC
DV26CC
Tier 4A (interim)
Combination Roller

SERVICE MANUAL

Part number 48142067

1st edition English

September 2017

Replaces part number 47538930

CASE
CONSTRUCTION

Contents

INTRODUCTION

Maintenance	00
[00.150] Start-up.....	00.1
Engine.....	10
[10.001] Engine and crankcase	10.1
[10.400] Engine cooling system	10.2
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.104] Fixed displacement pump.....	35.1
[35.000] Hydraulic systems.....	35.2
[35.102] Pump control valves.....	35.3
[35.353] Hydraulic travel system	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.995] Compaction/vibration hydraulic system	35.6
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
Wheels	44
[44.160] Compaction drums	44.1
Electrical systems	55
[55.031] Parking brake electrical system	55.1

[55.000] Electrical system	55.2
[55.019] Hydrostatic drive control system	55.3
[55.100] Harnesses and connectors.....	55.4
[55.408] Warning indicators, alarms, and instruments	55.5
[55.512] Cab controls.....	55.6
[55.640] Electronic modules	55.7
[55.404] External lighting	55.8
[55.DTC] FAULT CODES.....	55.9
Tools	89
[89.165] Water kit.....	89.1
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.110] Operator platform less cab	90.2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com