

**845 - 865 - 885 GRADER**  
**Service Manual**  
**Brz 6-46503**  
**Table of Contents**

Description	Section Number	Publication Form Number
<b>General</b>		<b>Tab 1</b>
Section Index - General		6-46521
Special Tools - Cross Reference Guide	1000	6-15050
Standard Torque Specifications	1001	6-46530
Fluids and Lubricants	1002	6-46541
Metric Conversion Chart	1003	6-46550
Service Tools	1005	6-75330
Loctite Product Chart		8-98902
<b>Engine</b>		<b>Tab 2</b>
Section Index - Engines		6-46561
For Engine Repair, See the Engine Service Manual		
Charge Air Cooler	2002	6-75420
<b>Fuel System</b>		<b>Tab 3</b>
Section Index - Fuel System		6-46591
For Fuel System Repair, See the Engine Service Manual		
<b>Electrical</b>		<b>Tab 4</b>
Section Index - Electrical		6-46601
Removal and Installation of Starter and Alternator	4001	6-42322
Electrical Diagram	4002	6-46621
Battery	4003	6-42331
Alternator 45 Ampere	4008	6-42361
<b>Steering</b>		<b>Tab 5</b>
Section Index - Steering		6-46661
Front Wheel, Axle and Wheel Lean	5002	6-46681
Steering Control Valve (845 - 865 - 885 Grader)	5003	6-46691
Steering Priority Valve (845 - 865 - 885 Grader)	5004	6-46701
<b>Power Train</b>		<b>Tab 6</b>
Section Index - Power Train		6-46731
Transmission Specifications, Pressure Checks and Troubleshooting (845 - 865 Grader)	6002	6-46751

# 845 - 865 - 885 GRADER Service Manual Brz 6-46503

## Table of Contents (Continued)

Description	Section Number	Publication Form Number
Transmission Specifications, Pressure Checks and Troubleshooting (885 Grader)	6002	6-75350
Transmission (845 - 865 Grader)	6003	6-46761
Transmission (885 Grader)	6003	6-75360
Rear Axle With Differential Lock	6005	6-75370
Limited Slip Rear Axle 845-865 Grader	6005	6-46782
Tandem Drive Limited Slip Rear Axle 845-865 Grader	6006	6-46792
Tandem Drive Differential Hydraulic Lock	6006	6-75380
<b>Brakes</b>		<b>Tab 7</b>
Section Index - Brakes		6-46810
Hydraulic Brake Troubleshooting	7002	6-46831
Brake Pedal Valve System	7003	6-46842
<b>Hydraulics</b>		<b>Tab 8</b>
Section Index - Hydraulics		6-46861
Removal and Installation of Hydraulic Components	8001	6-46872
Hydraulic Schematics	8002	6-75400
<b>Mounted Equipment</b>		<b>Tab 9</b>
Section Index - Mounted Equipment		6-46931
Air Conditioning Troubleshooting	9002	6-46950
Air Conditioning Troubleshooting For Systems With HFC 134A Refrigerant	9002	6-75390
Air Conditioner System Operating Instructions	9003	6-46960
Air Conditioner System Service	9003	6-42650
Removal and Installation of Air Conditioning Components for Systems with HFC 134A Refrigerant	9004	6-46971
Rear Ripper	9007	6-47011
Frame, Articulation Joint, Circle and Scarifier	9008	6-47001
Front Blade and Counterweight	9009	6-47021
ROPS Cab	9010	6-47031
Cab Glass Installation	9011	6-47041

**NOTE:** CNH Latino Americana reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)