

885, 895 and 995 Series Tractors

Service Manual No. 8-85073

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
General Specifications	1000	8-57670
Special Tools	1005	8-59410
Fuel System Specification	1230	8-57721
Steering System Specifications	1250	8-57570
Hydraulic System Specifications	1280	8-56930
Engines		
	Tab 2	
Engine Removal - Tractor with XL Cab	2120	8-57160
Engine Troubleshooting	2201	8-56590
Separating the Tractor - Tractor without Cab	2310	8-56660
4 Cylinder Engine Cylinder Head, Valves and Rockers	2315	8-56600
4 Cylinder Engine Cylinder Block, Pistons and Conrods	2325	8-56610
4 Cylinder Engine Camshaft and Idler Gear - Tractor without Air Conditioning	2330	8-57100
4 Cylinder Engine Camshaft and Idler Gear - Tractor with Air Conditioning	2331	8-57190
4 Cylinder Engine Crankshaft, Bearings and Balancer	2335	8-56620
4 Cylinder Engine Lubrication System	2345	8-56630
Engine Cooling System	2355	8-56640
Engine Removal - Tractor without Cab	2410	8-56670
Fuel System		
	Tab 3	
Fuel System	3310	8-56650
Fuel Injection Pump VE	3311	8-59020
Fuel Injection Pump VA	3312	8-57630
Fuel Injectors	3313	8-57640
Fuel Tanks - Tractor with XL Cab	3315	8-57180
Electrical		
	Tab 4	
Electrical Troubleshooting and Schematics	4001*	7-35861
Electrical System Troubleshooting	4201	8-57010
Wiring Diagram - Tractor without Cab	4210	8-57050
Wiring Diagram - Tractor with LX Cab	4225	8-57080
Battery Servicing and Testing	4235	8-56980
Lucas A115 and A127 45 Ampere Alternators and Regulators	4240	8-57030
Lucas A133 65 Ampere Alternator and Regulator	4241	8-57230
Starter Motors	4330	8-57020

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 SOUTH SERVICE ROAD
BURLINGTON, ON L7N 3M6 CANADA

Reprinted

Rac 7-36883

© 1996 Case Corporation
Printed in U.S.A.
September 1991 (Revised August 1996)

Description	Section No.	Form No.
Steering	Tab 5	
Steering Pump Removal	5015	8-57600
Steering Hand Pump	5020	8-56470
Front Axles 2WD Tractor	5330	8-56700
Front Axle - Case Heavy Duty Fixed	5340	8-58940
Steering Cylinder, 2WD	5420	8-57410
Steering Cylinder, MFD	5425	8-56460
Steering Cylinder - Case Axle	5430	8-58930
Power Train	Tab 6	
Clutch Controls, Linkage and Thrust Bearing	6001	8-56520
Rear Axles	6030	8-56480
Clutch (Rockford Type)	6241	8-56681
Steering Support Removal - Tractor with XL Cab	6305	8-57210
Steering Support Removal - Tractor without Cab	6306	8-57240
Transmission Speedbox	6310	8-56950
Transmission Rangebox - with Light Duty Park Brake	6315	8-56960
Power Shift Transmission	6320	8-56970
Forward/Reverse Transmission - Tractor without Cab	6325	8-56980
Forward/Reverse Transmission - Tractor with XL Cab	6325	7-35910
Differential - Transmission with Light Duty Park Brake	6330	8-57290
Differential - Transmission with Heavy Duty Park Brake	6331	8-57650
Transmission Rangebox - with Heavy Duty Park Brake	6335	8-56990
Power Take Off (PTO) Clutch and Lower Shaft - 2wd	6340	8-56540
Clutch (Laycock Type)	6341	8-56690
PTO Clutch and Lower Shaft - MFD Tractor	6343	8-59360
Speedbox Removal - Tractor without Cab	6410	8-56830
Rangebox Removal - Tractor without Cab	6411	8-57370
Speedbox Removal - Tractor with XL Cab	6420	8-56850
Rangebox Removal - Tractor with XL Cab	6421	8-57360
Creeper Speed Transmission - Tractor with XL Cab	6430	7-35880
Creeper Speed Transmission - Tractor without Cab	6430	7-36620
Center Drive MFD Front Axles - (ZF Types APL 325 and APL 330)	6465	8-56530
Center Drive MFD Front Axle (ZF Type APL 335)	6470	8-58230
Axle Hubs and Planetaries (Carraro Type 707-164 and 707 STD-164)	6471	7-36731
Axle Removal and Differential (Carraro Type 707-164 and 707 STD-164)	6472	7-36741
Carraro Drop Box	6473	7-37740
Center Drive MFD Transfer Gearbox with Dog Clutch	6475	8-57401
Center Drive MFD Transfer Gearbox with Multi Plate Clutch	6480	8-57220
MFD Drive Shaft	6485	8-57390

Description	Section No.	Form No.
Brakes	Tab 7	
Disc Brakes	7105	7-57480
Brake Master Cylinders and Controls	7110	8-58660
Park Brake - 2WD Tractors	7115	8-58250
Park Brake - MFD Tractors	7120	8-58260
Hydraulic System	Tab 8	
Hydraulic Schematic and Troubleshooting	8001*	8-57581
Hitch Adjustments	8005	8-56920
Multiple Control Valve (MCV)	8010	8-56870
Unloading and Flow Control Valve	8015	8-56880
Filter and Pump	8020	8-56860
Bosch Remote Valves	8025	8-56890
Draft Cylinder and Rockshaft	8030	8-56900
Control Levers and Raise Rate Valve	8035	8-56910
Hydraulic Housing Removal	8040	8-57250
Chassis and Accessories	Tab 9	
Pedal and Lever Adjustment	9001*	7-35890
Air Conditioning System Troubleshooting	9205	8-58290
Testing Air Conditioning System	9215	8-58300
Servicing Air Conditioning System	9225	8-58900
Servicing Air Conditioning System Components	9235	8-58310
Hood, Fender and Panels - Tractor without Cab	9240	8-56810
Hood and Panels	9240	7-35940
Cab Removal - Tractor with XL Cab	9440	8-56750
Servicing LX Cab	9441	8-58270

* Schematic Set Sections

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com