

# **Vibratory Rollers DV201 - DV202 - DV204**

## **Service Manual**

**Cre 9-54980**

**CASE**

# DV201 - DV202 - DV204

## Vibratory Rollers

### CONTENT

---

<b>1</b>	<b>GENERAL INSTRUCTIONS</b>	<b>3</b>
	INTRODUCTION	3
	SAFETY INSTRUCTIONS	4
	ENVIRONMENTAL MEASURES AND HEALTH PRECAUTIONS	7
	PRODUCT IDENTIFICATION	9
	TORQUES SPECIFICATIONS	12
	SERVICING INSTRUCTIONS	15
	HOURMETER	15
	SERVICING INTERVAL	16
	FLUIDS AND LUBRICANTS	18
	FLUIDS AND LUBRICANT CAPACITIES AND SPECIFICATIONS	21
<b>2</b>	<b>DESCRIPTION OF THE MACHINE</b>	<b>23</b>
<b>3</b>	<b>THE ENGINE</b>	<b>37</b>
	REMOVAL OF THE ENGINE FROM THE MACHINE WITH THE TRAVEL PUMP	39
<b>4</b>	<b>DRUM</b>	<b>69</b>
	REMOVAL OF THE HYDRAULIC MOTOR OF VIBRATION	69
	REMOVAL OF THE HYDRAULIC MOTOR OF TRAVEL	81
	REPLACEMENT OF RUBBERIZED METAL PIECES ON THE DRUM	107
	REPLACEMENT OF THE SEAL ON THE DAMPING PLATE ON THE MACHINE	139
	REMOVAL OF DRUMS FROM THE FRAME OF THE MACHINE	153
	REMOVAL OF THE ECCENTRIC FROM THE DRUM	195
	INSTALLATION OF THE DRUM ON THE FRAME OF THE MACHINE	207
<b>5</b>	<b>STEERING JOINT</b>	<b>217</b>
	REMOVAL OF THE STEERING JOINT FROM THE MACHINE	217
	REMOVAL OF THE STEERING JOINT	231
	INSTALLATION OF THE STEERING JOINT	241
<b>6</b>	<b>HYDRAULICS</b>	<b>253</b>
	REMOVAL OF THE TRAVEL PUMP AND THE CLUTCH	253
	REMOVAL OF THE PUMPS OF VIBRATION AND OF STEERING	271
	REMOVAL OF THE OIL COOLER	281
	REMOVAL OF STEERING HYDRAULIC MOTOR FROM THE MACHINE	295
	REMOVAL OF THE STEERING HYDRAULIC MOTOR	303
	INSTALLATION OF THE STEERING HYDRAULIC MOTOR	309
	REMOVAL OF THE SERVOSTEERING	313
	REMOVAL OF THE HYDRAULIC TANK	319
	REPLACEMENT OF THE ELECTROMAGNET VALVE OF VIBRATION ON THE MACHINE	331
	REMOVAL OF THE HYDRAULIC LOOP FILTER	335
	REPLACEMENT OF FILTER CARTRIDGE AND OIL	339
	DISASSEMBLY OF SUCTION STRAINER	345
	SCHEMATICS OF THE HYDRAULIC LOOP	349
	HYDRAULIC OF DRIVE	352
	LINEAR VALVES	354
	HYDRAULIC OF VIBRATION	355
	HYDRAULIC OF STEERING	358
	FLUSHING AND DRAIN	360
<b>7</b>	<b>CONTROL OF GAS</b>	<b>361</b>
	REMOVAL OF BOWDEN CABLE OF GAS CONTROL	361
	REMOVAL OF TRAVEL LEVER ON THE CONTROL PANEL	365
	REMOVAL OF TRAVEL PULL ROD	373
<b>8</b>	<b>PLATFORM</b>	<b>383</b>
	REMOVAL OF THE PLATFORM	383
	REMOVAL OF RUBBERIZED METAL PIECES OF THE PLATFORM	389

# DV201 - DV202 - DV204

## Vibratory Rollers

### CONTENT

---

<b>9 THE SEAT</b>	<b>397</b>
REMOVAL OF THE SWITCH ON THE SEAT	397
<b>10 THE WATER TANK</b>	<b>405</b>
REMOVAL OF THE FRONT TANK FROM THE FRAME OF THE MACHINE	405
REMOVAL OF THE REAR TANK FROM THE FRAME OF THE MACHINE	409
<b>11 SPRINKLING</b>	<b>415</b>
REMOVAL OF THE SPRINKLING PUMP	415
<b>12 ROPS FRAME</b>	<b>419</b>
REMOVAL OF THE PROTECTIVE ROPS FRAME	419
<b>13 ELECTRICAL WIRING</b>	<b>423</b>
FUSE BOX	425
BATTERIES	427
EXCHANGE BULB	429
ALTERNATOR	435
STARTER	439
SCHEME OF THE ELECTRICAL INSTALLATION	443
FUNCTIONAL DESCRIPTION	448
<b>14 APPENDICES</b>	<b>453</b>
TEST POSTS	453
TOWING THE MACHINE	455
TROUBLESHOOTING	463
LIST FIXTURES	483

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)