

TABLE OF CONTENTS

770-870 TRACTORS

SERIES	SECTION	DESCRIPTION	FORM NUMBER
10		GENERAL	
	11	General Specifications	9-79253
	12	Detailed Specifications	9-79282
	13	Lubrication	9-79201
20		ENGINES	
	22	Cylinder Head and Valves (Diesel)	9-78822
2008		Cylinder Head and Valves (Spark Ignition)	9-78843
	23	Engine Block Assembly	9-79403
2047		Lubrication System	9-78667
	24	Air Intake System	9-78721
2013		Cooling System - Engine Oil Filter	9-78894
	26	Governor (Spark Ignition)	9-79411
30		FUEL SYSTEM	
	3010	Diesel Fuel System and Filters	9-75297
	3012	Robert Bosch Fuel Injection Pumps	9-74937
	3013	Roosa Master Fuel Injectors	9-74959
	3016	Repairing Cast Nylon Fuel Tanks	9-79753
	35	Carburetor (Spark Ignition) - 770 Tractor	9-78751
	35	Carburetor (Spark Ignition) - 870 Tractor	9-79481
40		HYDRAULICS	
	4010	Hydraulic Oil Filters	9-79113
	4011	Dual Hydraulic Pump	9-79083
	4014	Dual Remote Valve	9-79033
	44	Flow Divider - PTO Control Valve	9-79192
	45	Draft-O-Matic System	9-79123
	4019	Break-Away Couplings and Portable Cylinders	9-74197
50		STEERING	
	5010	Steering Column and Pump-Valve (Starting With SN8693001)	9-74269
	5010	Steering Column and Hand Pump (Prior to SN8693001)	9-78853
	53	Steering Control Valve	9-78832
	54	Hydrostatic Steering Actuator	9-78782
	5015	Steering Axles	9-78773
60		POWER TRAIN	
	6001	Trouble Shooting RPS-34 Power Shift	9-76037
	62	RPS-34 Power Shift	9-79074
	64	Single Reduction Final Drive and Transmission	9-78962
	6045	Hydraulic PTO	9-79173
	66	12" Traction Clutch and Pedal	9-78952
70		BRAKES	
	72	Brake Master Cylinders and Pedals	9-78912
	73	Power Assist Brake Unit and Pedals	9-78923
	7012	Power Assist Brake Valve With Adjustable Relief Valve	9-45871
	7012	Differential and Parking Brake	9-78903



80	ELECTRICAL	
	8010 Tractor Wiring Diagram - Diesel	9-77106
	8010 Tractor Wiring Diagram - Spark Ignition	9-77115
	8011 Cab Wiring Diagram (Prior to Cab SN7814176)	9-77125
	8011 Cab Wiring Diagram (Starting With Cab SN7814176)	9-77698
	8012 Starting or Cranking Motors	9-75366
	8013 Battery Servicing and Testing	9-75377
	8014 Prestolite Alternator Systems	9-75399
	83 Distributor Ignition Systems	9-74625
90	ACCESSORIES	
	92a Cab Sealing and Recirculation	9-75915
	9005 Trouble Shooting - Air Conditioning System	9-78895
	9015 Gauging and Testing - Air Conditioning System	9-78995
	9025 Compressor Isolation, Removal, Installation and Evacuation - System Discharging, Evacuation and Charging	9-79015
	9035 Servicing Air Conditioning Components	9-78705
100	HOW IT WORKS	
	101 Hydraulic Testing, Steering - Power Brakes	9-79821
	111 Hydraulic Testing, Power Shift, Remotes and PTO	9-79832
	141 Hydraulic System	9-79691
	141 Dual Pump - Flow Divider Valve	9-79182
	141 Dual Remote System	9-79022
	141 Draft-O-Matic System	9-79042
	151 Power Steering - Power Brakes	9-79162
	161 Power Shift Transmission	9-79232
	161 Hydraulic PTO	9-79242
	19010 Air Conditioning System	9-78615

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com