


1213

SERVICE MARUAL

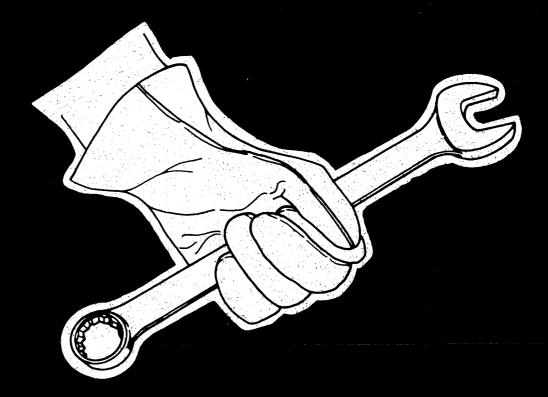

FOREWORD

This manual gives the owner/operator necessary operating, servicing and adjustment of the Feller Buncher and overhaul instructions of the drive system, loader hydraulic/hydrostatic system and general main frame parts.

Refer to the Operator's Manual for operating instructions (Starting Procedure, Daily Checks, Bucket Operation, etc.).

A General inspection of the following items must be made whenever the Feller Buncher has had service or repair:

- 1. Check hydraulic fluid level, engine oil level and fuel supply.
- 2. Inspect for any sign of fuel, oil or hydraulic fluid leaks.
- 3. Lubricate the Feller Buncher.
- 4. Check the condition of the battery and cables.
- 5. Inspect air cleaner for damage or leaks. Check element and replace as needed.
- 6. Check electrical charging system.
- 7. Check the warning lights.
- 8. Check tires for wear and pressure.
- 9. Check the tree shear for condition.
- 10. Inspect Operator Cab, Seat Belt, Seat Bar Safety Treads, Lights, Horn, Safety Signs (Decals), Brake etc.
- 11. Inspect for loose or broken parts or connections.
- 12. Operate the Feller Buncher and check all functions.
- 13. Inform the Owner/Operator of any items that need service.

PREVENTIVE MAINTENANCE

HYDRAULIC SYSTEM

HYDROSTATIC SYSTEM

DRIVE SYSTEM

MAIN FRAME

ELECTRICAL SYSTEM

ENGINE SERVICE

TECHNICAL DATA

CONTENTS

SAFETY INSTRUCTIONS
FIRE PREVENTIONii
SERIAL NUMBER LOCATIONSiii
DELIVERY REPORTiii
FELLER BUNCHER IDENTIFICATION
PREVENTIVE MAINTENANCE
HYDRAULIC SYSTEM2
HYDROSTATIC SYSTEM
DRIVE SYSTEM4
MAIN FRAME
ELECTRICAL SYSTEM6
ENGINE SERVICE
TECHNICAL DATA8

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com