




bobcat

2000

RTF

SERVICE MANUAL

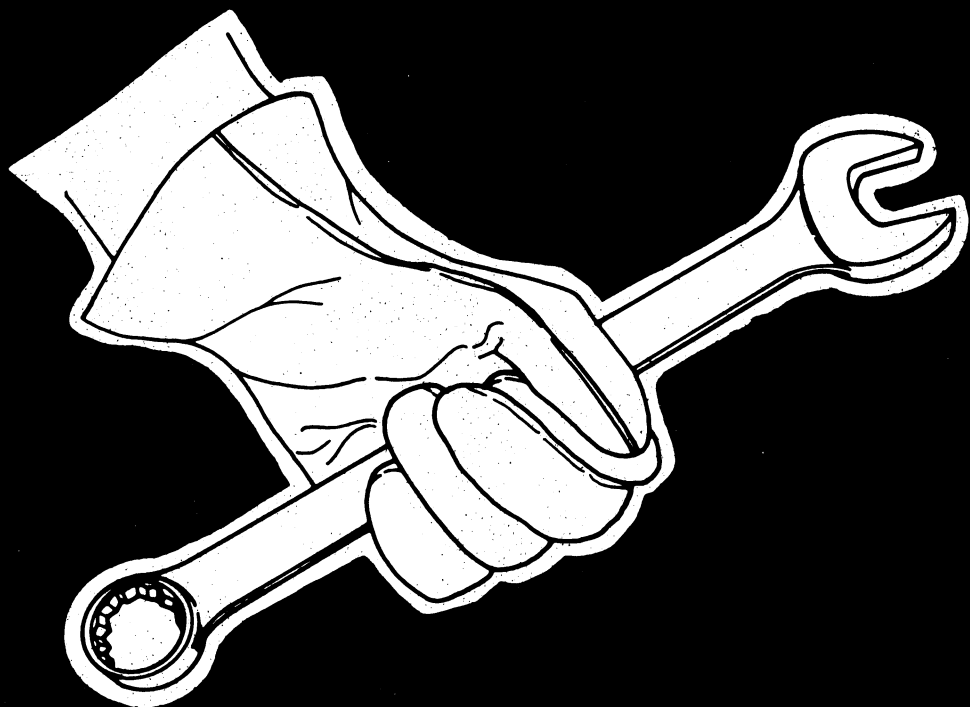

FOREWORD

This manual gives instruction for correct servicing and adjustment of the Bobcat Forklift, and overhaul instructions of the drive system, machine hydraulic/hydrostatic system and general main frame parts.

Make reference to the Operator's Manual for operations instructions (Starting Procedure, Daily Checks, Vertical Mast Operations, etc.).

A general inspection of the following items must be made whenever the machine has had service or repair:

1. Check hydraulic fluid level, engine oil level and fuel supply.
2. Inspect for any sign of fuel, oil or hydraulic fluid leaks.
3. Lubricate the machine.
4. Check battery condition and cables.
5. Inspect air cleaner system for damage or leaks. Check element and make replacement, as needed.
6. Check electrical charging system.
7. Check the warning lights.
8. Check tires for wear and pressure.
9. Check the attachment for condition. Inspect the vertical mast for damage or wear.
10. Inspect safety items for condition (Operator Enclosure, Seat Belt, Safety Treads, Lights, Horn, Safety Signs [Decals], Brake, etc.).
11. Make an inspection for loose or broken parts or connections.
12. Operate the Bobcat Forklift, checking all functions.

Check the above items, if any are in need of repair tell the Owner/Operator.

CONTENTS

PREVENTIVE MAINTENANCE	1
HYDRAULIC SYSTEM	2
HYDROSTATIC SYSTEM	3
DRIVE SYSTEM	4
MAIN FRAME	5
ELECTRICAL SYSTEM	6
ENGINE SERVICE	7
TECHNICAL DATA	8
ALPHABETICAL INDEX	9

**PREVENTIVE
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

**MAIN
FRAME**

**ELECTRICAL
SYSTEM**

**ENGINE
SERVICE**

**TECHNICAL
DATA**

**ALPHABETICAL
INDEX**

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com