

**Workmate
2100
2100S**




**Bobcat®
Maintenance
and
Service**



**S/N 522711001 & Above
S/N 524411001 & Above**

Utility Vehicle

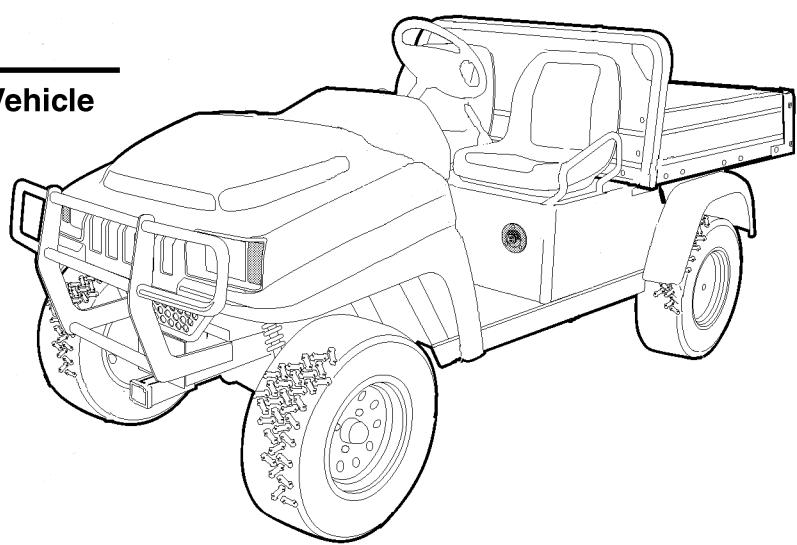

CONTENTS

SECTION 1 – SAFETY

General Warning	1-1
-----------------------	-----

SECTION 2 – VEHICLE SPECIFICATIONS

SECTION 3 – GENERAL INFORMATION

General Information	3-1
Serial Number Identification	3-1
Storage	3-2
Preparing the Vehicle for Extended Storage	3-2
To Return Vehicle to Service	3-2

SECTION 4 – BODY AND TRIM

Cleaning the Vehicle	4-1
Front Body Repair	4-1
Abrasions and Haze	4-1
Light Scratches	4-2
Large Scratches and Abrasions	4-2
Front Body Components	4-2
Dashboard Removal	4-2
Dashboard Installation	4-2
Front Body Removal	4-3
Front Fender Removal	4-3
Front Fender Installation	4-4
Front Body Installation	4-4
Seat	4-4
Seat Adjustment	4-4
Front Seat Support	4-6
Front Seat Support Removal	4-6
Front Seat Support Installation	4-7
Rear Seat Support	4-7
Rear Seat Support Removal	4-7
Rear Seat Support Installation	4-7

Cargo Bed	4-9
Cargo Bed Removal	4-9
Cargo Bed Installation	4-9
Bed Stop Bumper Adjustment	4-11
Rear Fender Removal	4-12
Rear Fender Installation	4-12
Tailskirt	4-12
Tailskirt Removal	4-12
Tailskirt Installation	4-12
Receiver Hitch	4-12
Receiver Hitch Removal	4-12
Receiver Hitch Installation	4-13
Floor Mat	4-14
Floor Mat Removal	4-14
Floor Mat Installation	4-14

SECTION 5 – ACCELERATOR AND BRAKE PEDAL ASSEMBLIES

Brake Pedal	5-1
Brake Pedal Removal	5-1
Brake Pedal Installation	5-1
Brake Pedal Adjustment	5-2
Accelerator Pedal	5-4
Accelerator Pedal Removal	5-4
Accelerator Pedal Installation	5-5
Accelerator Pedal Adjustment	5-5

SECTION 6 – MC012C-AS00 TRANSAXLE: HYDRAULIC AND PARK BRAKE SYSTEMS

Brake System Inspection	6-1
Brake System Troubleshooting	6-3
Brake Drum Removal	6-6
Front Wheel Brake Drum Removal	6-6
Rear Wheel Brake Drum Removal	6-8
Brake Shoe Removal	6-8
Front Brake Shoe Removal	6-8
Rear Brake Shoe Removal	6-9
Brake Cluster Inspection and Cleaning	6-10
Brake Shoe Installation	6-11
Front Brake Shoe Installation	6-12
Rear Brake Shoe Installation	6-12

Brake Drum Installation	6-14
Front Wheel Brake Drum Installation	6-14
Rear Wheel Brake Drum Installation	6-16
Brake Cluster Assembly Replacement	6-17
Front Brake Cluster Assembly Removal	6-17
Front Brake Cluster Assembly Installation	6-17
Rear Brake Cluster Assembly Removal	6-18
Rear Brake Cluster Assembly Installation	6-19
Wheel Cylinder Replacement	6-19
Front Wheel Cylinder Removal	6-19
Front Wheel Cylinder Installation	6-20
Rear Wheel Cylinder Removal	6-20
Rear Wheel Cylinder Installation	6-20
Brake Shoe Adjuster Replacement	6-21
Front Brake Shoe Adjuster Removal	6-22
Front Brake Shoe Adjuster Installation	6-22
Rear Brake Shoe Adjuster Removal	6-22
Rear Brake Shoe Adjuster Installation	6-22
Hydraulic Line and Hose Replacement	6-23
Front Brake Line Removal	6-23
Front Brake Line Installation	6-23
Front Brake Hose Assembly Removal	6-24
Front Brake Hose Assembly Installation	6-24
Rear Brake Line Removal	6-24
Rear Brake Line Installation	6-26
Rear Brake Hose Removal	6-26
Rear Brake Hose Installation	6-27
Master Cylinder And Bell Crank Replacement	6-27
Bell Crank Removal	6-27
Bell Crank Installation	6-27
Master Cylinder Removal	6-29
Master Cylinder Installation	6-29
Bleeding the Hydraulic Brake System	6-31
Purging the Hydraulic System	6-32
Filling the Hydraulic System	6-32
Park Brake System	6-33
Park Brake Cable Removal	6-33
Park Brake Cable Installation	6-34
Park Brake Handle Removal	6-35
Park Brake Handle Installation	6-35
Park Brake Adjustment	6-35

SECTION 7 – STEERING AND FRONT SUSPENSION

Steering Wheel	7-1
Steering Wheel Removal	7-1
Steering Wheel Installation	7-3
Steering Column	7-3
Steering Column Removal	7-3
Steering Column Disassembly	7-3
Steering Column Assembly	7-4
Steering Column Installation	7-4
Rack and Pinion	7-5
Rack and Pinion Removal	7-5
Rack and Pinion Disassembly	7-6
Rack and Pinion Assembly	7-9
Rack and Pinion Installation	7-10
Front Suspension	7-12
Lubrication	7-12
Wheel Alignment	7-12
Front Suspension Components	7-14
Kingpin and Steering Spindle Removal	7-14
Kingpin and Steering Spindle Installation	7-14
A-Arm Removal	7-15
A-Arm Installation	7-17
Shock Absorber Removal	7-17
Shock Absorber Installation	7-18
Front Wheel Bearings and Hubs	7-18
Front Wheel Free Play Inspection	7-18
Front Wheel Bearings and Hub Removal	7-19
Front Wheel Bearings and Hub Installation	7-19

SECTION 8 – WHEELS AND TIRES

General Information	8-1
---------------------------	-----

SECTION 9 – REAR SUSPENSION

Shock Absorbers	9-1
Shock Absorber Removal and Inspection	9-1
Shock Absorber Installation	9-1
Multi-Leaf Springs	9-1
Multi-Leaf Spring Removal	9-1
Multi-Leaf Spring Installation	9-3

Snubber	9-4
Snubber Removal	9-4
Snubber Installation	9-4

SECTION 10 – PERIODIC MAINTENANCE

Periodic Service Schedule	10-1
Periodic Lubrication Schedule	10-2
Master Cylinder	10-3
Brake Fluid	10-4
Engine Oil	10-4
Engine Oil Level Check	10-4
Engine Oil and Filter Change	10-5
Oil Viscosity	10-7
Fueling Instructions	10-7
Battery	10-8

SECTION 11 – TROUBLESHOOTING AND ELECTRICAL SYSTEM: FE400 ENGINE

Troubleshooting Guide	11-1
Electrical System	11-5
Wiring Diagram	11-6
Electrical Circuits	11-8
Starter Circuit	11-8
Generator Circuit	11-8
Engine Ignition Circuit	11-9
Engine Kill Circuit	11-9
Reverse Buzzer Circuit	11-10
Low Oil Warning Circuit	11-10
Lockout Cam Circuit	11-11
Fuel Gauge and Sending Unit Circuit	11-12
Hour Meter Circuit	11-13
Lighting Circuit	11-13
Circuit Testing	11-13
Testing the Starter Circuit and Generator Circuit	11-14
Testing the Engine Ignition Circuit	11-15
Testing the Engine Kill Circuit	11-15
Testing the Reverse Buzzer Circuit	11-16
Testing the Low Oil Warning Circuit	11-17
Testing the Lockout Cam Circuit	11-18
Testing the Fuel Gauge and Sending Unit Circuit	11-18
Testing the Lighting Circuit	11-19

Test Procedures	11-19
Index of Test Procedures	11-19

SECTION 12 – ELECTRICAL COMPONENTS: FE400 ENGINE

Starter/Generator	12-1
Voltage Regulator	12-11
Diode	12-12
Key Switch	12-14
Solenoid	12-15
Fuse	12-15
Lockout Cam Limit Switch	12-17
Lockout Cam	12-17
Reverse Warning Buzzer	12-18
Reverse Buzzer Limit Switch	12-19
Low Oil Warning Light	12-20
Fuel Gauge/Hour Meter	12-21
Fuel Level Sending Unit	12-22
RPM Limiter	12-22
Ignition Coil	12-23
Oil Level Sensor	12-26
Headlights	12-26
Headlight Diode	12-27
Light Switch	12-28
Testing the Light Switch	12-28
Battery	12-28
General Information	12-29
Ground Straps	12-33

SECTION 13 – FE400 ENGINE

General Information	13-1
Before Servicing	13-1
Lubrication System	13-1
Spark Plug	13-1
Cylinder	13-3
Breather Valve (Reed Valve)	13-3
Valve Clearance Check and Adjustment	13-3
Crankcase	13-3
Engine Removal	13-3
Crankcase Cover Removal	13-4
Oil Level Sensor	13-5

Ignition Coil and Flywheel	13-6
Crankcase Cover Installation	13-7
Flywheel Installation	13-7
Engine Installation	13-8
Torque Specifications	13-9
Adjustment and Settings	13-9

SECTION 14 – FUEL SYSTEM

General Information	14-1
Carburetor	14-1
Main Jet Elevation/Size Chart	14-1
Changing the Main Jet	14-2
Engine Control Linkage	14-5
General Information	14-5
Accelerator Rod	14-6
Governor Cable	14-7
Accelerator Cable	14-8
Closed Throttle or Idle Adjustment	14-10
Engine RPM Adjustment	14-10
Choke and Air Intake System	14-11
Choke Cable Removal	14-11
Choke Cable Installation	14-11
Air Box Removal	14-11
Air Box Installation	14-12
Intake Duct Repair	14-13
Intake Duct Removal	14-13
Intake Duct Installation	14-15
Air Filter	14-16
Fuel Filter Removal	14-17
Fuel Filter Installation	14-17
Fuel Pump	14-17
General Information	14-17
Fuel Pump Removal	14-20
Fuel Pump Disassembly	14-20
Fuel Pump Cleaning and Inspection	14-20
Fuel Pump Assembly	14-21
Fuel Pump Installation	14-21
Fuel Tank	14-22
Fuel Tank Removal	14-22
Fuel Tank Storage or Disposal	14-26
Fuel Tank Installation	14-26

Fuel Lines	14-27
Fuel Shut-Off Valve	14-28

SECTION 15 – EXHAUST SYSTEM

Muffler	15-1
Muffler Removal	15-1
Muffler Installation	15-1

SECTION 16 – MC012C-AS00 UNITIZED TRANSAXLE WITH DIFFERENTIAL LOCK

General Information	16-1
Lubrication	16-2
Axle Shaft	16-3
Axe Shaft, Bearing, and Oil Seal Removal	16-3
Axe Bearing Removal	16-5
Axe Shaft, Bearing, and Oil Seal Installation	16-5
Unitized Transaxle Removal	16-6
Unitized Transaxle Installation	16-16
Forward/Reverse Shifter Cable	16-24
Forward/Reverse Shifter Cable Removal	16-24
Forward/Reverse Shifter Cable Installation	16-24
Forward/Reverse Shifter Cable Adjustment	16-25
Differential Lock System	16-26
Differential Lock System Inspection	16-26
Differential Lock Cable Removal	16-26
Differential Lock Cable Installation	16-27

SECTION 17 – TORQUE CONVERTER

General Information	17-1
Drive Belt	17-3
Drive Belt Removal	17-3
Drive Belt Installation	17-4
Drive Clutch	17-4
Drive Clutch Removal	17-4
Drive Clutch Cleaning and Inspection	17-5
Drive Clutch Disassembly	17-6
Inspection of Drive Clutch Parts	17-7
Drive Clutch Assembly	17-9
Drive Clutch Installation	17-12

Driven Clutch	17-13
Driven Clutch Removal	17-13
Driven Clutch Disassembly	17-13
Driven Clutch Inspection	17-13
Driven Clutch Assembly	17-15
Driven Clutch Installation	17-17

SECTION i – INDEX

Thank you so much for reading.

**Please click the “Buy Now!”
button below to download the
complete manual.**

Buy Now



After you pay.

**You can download the most
perfect and complete manual in
the world immediately.**

Our support email:

ebooklibonline@outlook.com