

**Workmate
2100
2100S**




**Bobcat®
Maintenance**

&

Service 

**S/N 522711758 & Above
S/N 524411001 & Above**

Utility Vehicle

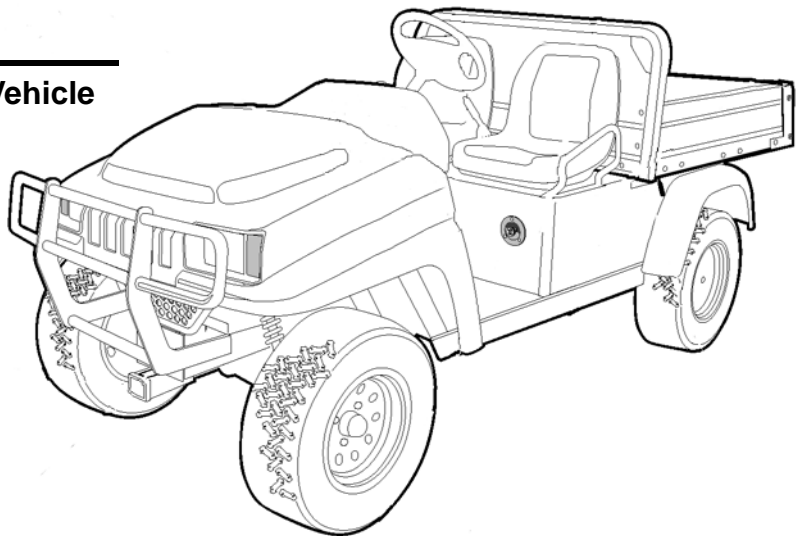

CONTENTS

SECTION 1 – SAFETY

General Warning	1-1
-----------------------	-----

SECTION 2 – VEHICLE SPECIFICATIONS

SECTION 3 – GENERAL INFORMATION

General Information	3-1
Serial Number Identification	3-1
Storage	3-2
Preparing the Vehicle for Extended Storage	3-2
To Return Vehicle to Service	3-2

SECTION 4 – BODY AND TRIM

Cleaning the Vehicle	4-1
Front Body Repair	4-1
Abrasions and Haze	4-1
Light Scratches	4-2
Large Scratches and Abrasions	4-2
Front Body Components	4-2
Dashboard Removal	4-2
Dashboard Installation	4-2
Front Body Removal	4-3
Front Fender Removal	4-3
Front Fender Installation	4-4
Front Body Installation	4-4
Seat	4-4
Seat Adjustment	4-4
Front Seat Support	4-6
Front Seat Support Removal	4-6
Front Seat Support Installation	4-7
Rear Seat Support	4-7
Rear Seat Support Removal	4-7
Rear Seat Support Installation	4-7

Cargo Bed	4-9
Cargo Bed Removal	4-9
Cargo Bed Installation	4-9
Bed Stop Bumper Adjustment	4-11
Rear Fender Removal	4-12
Rear Fender Installation	4-12
Tailskirt	4-12
Tailskirt Removal	4-12
Tailskirt Installation	4-12
Receiver Hitch	4-12
Receiver Hitch Removal	4-12
Receiver Hitch Installation	4-13
Floor Mat	4-14
Floor Mat Removal	4-14
Floor Mat Installation	4-14

SECTION 5 – ACCELERATOR AND BRAKE PEDAL ASSEMBLIES

Brake Pedal	5-1
Brake Pedal Removal	5-1
Brake Pedal Installation	5-1
Brake Pedal Adjustment	5-2
Accelerator Pedal	5-4
Accelerator Pedal Removal	5-4
Accelerator Pedal Installation	5-5
Accelerator Pedal Adjustment	5-5

SECTION 6 – MC012C-AS00 TRANSAXLE: HYDRAULIC AND PARK BRAKE SYSTEMS

Brake System Inspection	6-1
Brake System Troubleshooting	6-3
Brake Drum Removal	6-6
Front Wheel Brake Drum Removal	6-6
Rear Wheel Brake Drum Removal	6-8
Brake Shoe Removal	6-8
Front Brake Shoe Removal	6-8
Rear Brake Shoe Removal	6-9
Brake Cluster Inspection and Cleaning	6-10
Brake Shoe Installation	6-11
Front Brake Shoe Installation	6-12
Rear Brake Shoe Installation	6-12

Brake Drum Installation	6-14
Front Wheel Brake Drum Installation	6-14
Rear Wheel Brake Drum Installation	6-16
Brake Cluster Assembly Replacement	6-17
Front Brake Cluster Assembly Removal	6-17
Front Brake Cluster Assembly Installation	6-17
Rear Brake Cluster Assembly Removal	6-18
Rear Brake Cluster Assembly Installation	6-19
Wheel Cylinder Replacement	6-19
Front Wheel Cylinder Removal	6-19
Front Wheel Cylinder Installation	6-20
Rear Wheel Cylinder Removal	6-20
Rear Wheel Cylinder Installation	6-20
Brake Shoe Adjuster Replacement	6-21
Front Brake Shoe Adjuster Removal	6-22
Front Brake Shoe Adjuster Installation	6-22
Rear Brake Shoe Adjuster Removal	6-22
Rear Brake Shoe Adjuster Installation	6-22
Hydraulic Line and Hose Replacement	6-23
Front Brake Line Removal	6-23
Front Brake Line Installation	6-23
Front Brake Hose Assembly Removal	6-24
Front Brake Hose Assembly Installation	6-24
Rear Brake Line Removal	6-24
Rear Brake Line Installation	6-26
Rear Brake Hose Removal	6-26
Rear Brake Hose Installation	6-27
Master Cylinder And Bell Crank Replacement	6-27
Bell Crank Removal	6-27
Bell Crank Installation	6-27
Master Cylinder Removal	6-29
Master Cylinder Installation	6-29
Bleeding the Hydraulic Brake System	6-31
Purging the Hydraulic System	6-32
Filling the Hydraulic System	6-32
Park Brake System	6-33
Park Brake Cable Removal	6-33
Park Brake Cable Installation	6-34
Park Brake Handle Removal	6-35
Park Brake Handle Installation	6-35
Park Brake Adjustment	6-35

SECTION 7 – STEERING AND FRONT SUSPENSION

Steering Wheel	7-1
Steering Wheel Removal	7-1
Steering Wheel Installation	7-3
Steering Column	7-3
Steering Column Removal	7-3
Steering Column Disassembly	7-3
Steering Column Assembly	7-4
Steering Column Installation	7-4
Rack and Pinion	7-5
Rack and Pinion Removal	7-5
Rack and Pinion Disassembly	7-6
Rack and Pinion Assembly	7-9
Rack and Pinion Installation	7-10
Front Suspension	7-12
Lubrication	7-12
Wheel Alignment	7-12
Front Suspension Components	7-14
Kingpin and Steering Spindle Removal	7-14
Kingpin and Steering Spindle Installation	7-14
A-Arm Removal	7-15
A-Arm Installation	7-17
Shock Absorber Removal	7-17
Shock Absorber Installation	7-18
Front Wheel Bearings and Hubs	7-18
Front Wheel Free Play Inspection	7-18
Front Wheel Bearings and Hub Removal	7-19
Front Wheel Bearings and Hub Installation	7-19

SECTION 8 – WHEELS AND TIRES

General Information	8-1
---------------------------	-----

SECTION 9 – REAR SUSPENSION

Shock Absorbers	9-1
Shock Absorber Removal and Inspection	9-1
Shock Absorber Installation	9-1
Multi-Leaf Springs	9-1
Multi-Leaf Spring Removal	9-1
Multi-Leaf Spring Installation	9-3

Snubber	9-4
Snubber Removal	9-4
Snubber Installation	9-4

SECTION 10 – PERIODIC MAINTENANCE

Periodic Service Schedule	10-1
Periodic Lubrication Schedule	10-2
Master Cylinder	10-3
Brake Fluid	10-4
Engine Oil	10-4
Engine Oil Level Check	10-4
Engine Oil and Filter Change	10-5
Oil Viscosity	10-7
Fueling Instructions	10-7
Battery	10-8

SECTION 11 – TROUBLESHOOTING AND ELECTRICAL SYSTEM: FE400 ENGINE

Troubleshooting Guide	11-1
Electrical System	11-5
Wiring Diagram	11-6
Electrical Circuits	11-8
Starter Circuit	11-8
Generator Circuit	11-8
Engine Ignition Circuit	11-9
Engine Kill Circuit	11-9
Reverse Buzzer Circuit	11-10
Low Oil Warning Circuit	11-10
Lockout Cam Circuit	11-11
Fuel Gauge and Sending Unit Circuit	11-12
Hour Meter Circuit	11-13
Lighting Circuit	11-13
Circuit Testing	11-13
Testing the Starter Circuit and Generator Circuit	11-14
Testing the Engine Ignition Circuit	11-15
Testing the Engine Kill Circuit	11-15
Testing the Reverse Buzzer Circuit	11-16
Testing the Low Oil Warning Circuit	11-17
Testing the Lockout Cam Circuit	11-18
Testing the Fuel Gauge and Sending Unit Circuit	11-18
Testing the Lighting Circuit	11-19

Test Procedures	11-19
Index of Test Procedures	11-19

SECTION 12 – ELECTRICAL COMPONENTS: FE400 ENGINE

Starter/Generator	12-1
Voltage Regulator	12-11
Diode	12-12
Key Switch	12-14
Solenoid	12-15
Fuse	12-15
Lockout Cam Limit Switch	12-17
Lockout Cam	12-17
Reverse Warning Buzzer	12-18
Reverse Buzzer Limit Switch	12-19
Low Oil Warning Light	12-20
Fuel Gauge/Hour Meter	12-21
Fuel Level Sending Unit	12-22
RPM Limiter	12-22
Ignition Coil	12-23
Oil Level Sensor	12-26
Headlights	12-26
Headlight Diode	12-27
Light Switch	12-28
Testing the Light Switch	12-28
Battery	12-28
General Information	12-29
Ground Straps	12-33

SECTION 13 – FE400 ENGINE

General Information	13-1
Before Servicing	13-1
Lubrication System	13-1
Spark Plug	13-1
Cylinder	13-3
Breather Valve (Reed Valve)	13-3
Valve Clearance Check and Adjustment	13-3
Crankcase	13-3
Engine Removal	13-3
Crankcase Cover Removal	13-4
Oil Level Sensor	13-5

Ignition Coil and Flywheel	13-6
Crankcase Cover Installation	13-7
Flywheel Installation	13-7
Engine Installation	13-8
Torque Specifications	13-9
Adjustment and Settings	13-9

SECTION 14 – FUEL SYSTEM

General Information	14-1
Carburetor	14-1
Main Jet Elevation/Size Chart	14-1
Changing the Main Jet	14-2
Engine Control Linkage	14-5
General Information	14-5
Accelerator Rod	14-6
Governor Cable	14-7
Accelerator Cable	14-8
Closed Throttle or Idle Adjustment	14-10
Engine RPM Adjustment	14-10
Choke and Air Intake System	14-11
Choke Cable Removal	14-11
Choke Cable Installation	14-11
Air Box Removal	14-11
Air Box Installation	14-12
Intake Duct Repair	14-13
Intake Duct Removal	14-13
Intake Duct Installation	14-15
Air Filter	14-16
Fuel Filter Removal	14-17
Fuel Filter Installation	14-17
Fuel Pump	14-17
General Information	14-17
Fuel Pump Removal	14-20
Fuel Pump Disassembly	14-20
Fuel Pump Cleaning and Inspection	14-20
Fuel Pump Assembly	14-21
Fuel Pump Installation	14-21
Fuel Tank	14-22
Fuel Tank Removal	14-22
Fuel Tank Storage or Disposal	14-26
Fuel Tank Installation	14-26

Fuel Lines	14-27
Fuel Shut-Off Valve	14-28

SECTION 15 – EXHAUST SYSTEM

Muffler	15-1
Muffler Removal	15-1
Muffler Installation	15-1

SECTION 16 – MC012C-AS00 UNITIZED TRANSAXLE WITH DIFFERENTIAL LOCK

General Information	16-1
Lubrication	16-2
Axle Shaft	16-3
Axle Shaft, Bearing, and Oil Seal Removal	16-3
Axle Bearing Removal	16-5
Axle Shaft, Bearing, and Oil Seal Installation	16-5
Unitized Transaxle Removal	16-6
Unitized Transaxle Installation	16-16
Forward/Reverse Shifter Cable	16-24
Forward/Reverse Shifter Cable Removal	16-24
Forward/Reverse Shifter Cable Installation	16-24
Forward/Reverse Shifter Cable Adjustment	16-25
Differential Lock System	16-26
Differential Lock System Inspection	16-26
Differential Lock Cable Removal	16-26
Differential Lock Cable Installation	16-27

SECTION 17 – TORQUE CONVERTER

General Information	17-1
Drive Belt	17-3
Drive Belt Removal	17-3
Drive Belt Installation	17-4
Drive Clutch	17-4
Drive Clutch Removal	17-4
Drive Clutch Cleaning and Inspection	17-5
Drive Clutch Disassembly	17-6
Inspection of Drive Clutch Parts	17-7
Drive Clutch Assembly	17-9
Drive Clutch Installation	17-12

Driven Clutch	17-13
Driven Clutch Removal	17-13
Driven Clutch Disassembly	17-13
Driven Clutch Inspection	17-13
Driven Clutch Assembly	17-15
Driven Clutch Installation	17-17

SECTION 18 – RECONDITIONING THE FE400 ENGINE

General Information	18-1
Recommended Replacement Parts For Engine Teardown	18-2
Before Servicing	18-2
Mechanical Systems	18-2
Cylinder Components	18-4
Cylinder Head	18-4
General Information	18-4
Cylinder Shroud Removal	18-5
Rocker Arm and Push Rod Removal	18-7
Cylinder Head Removal	18-8
Valve Removal	18-8
Breather Valve (Reed Valve)	18-9
Cylinder Head Cleaning and Inspection	18-9
Valve Guides	18-10
Valve Seats	18-11
Valves	18-13
Rocker Arm and Rocker Shaft inspection	18-15
Push Rod Inspection	18-16
Cylinder Head Installation	18-16
Valve Clearance Check and Adjustment	18-17
Breather Valve (Reed Valve)	18-17
Installation of Remaining Engine Components	18-18
Crankcase Components	18-20
Crankcase Cover Removal	18-20
Camshaft and Hydraulic Lifters	18-22
Piston and Connecting Rod	18-24
Cylinder Block	18-26
Ignition Coil and Flywheel	18-28
Oil Pump	18-29
Oil Pressure Relief Valve	18-31

Crankshaft and Counterbalance	18-32
Counterbalance Weight	18-35
Oil Screen	18-38
Ball Bearing	18-38
Oil Seals	18-39
Crankshaft Axial Play Adjustment	18-42
Crankcase Cover Installation	18-44
Engine Assembly	18-45
Engine Installation	18-46
Service Specifications	18-47
Specifications for Resizing Cylinder Bore	18-48
Torque Specifications	18-48
Adjustment and Settings	18-49

SECTION 19 – RECONDITIONING THE MC012C-AS00 UNITIZED TRANSAXLE WITH DIFFERENTIAL LOCK

Transaxle Model and Identification	19-1
Lubrication	19-2
Axle Shaft	19-3
Unitized Transaxle Removal	19-3
Unitized Transaxle Disassembly	19-5
Component Disassembly	19-7
Differential Gear Lock Housing Disassembly	19-7
Governor Gear Disassembly	19-9
Differential Gear Case Disassembly	19-9
Shifter Fork Disassembly	19-12
Synchronizer Gear Disassembly	19-12
Intermediate Gear Disassembly	19-13
Idler Shaft Disassembly	19-14
Unitized Transaxle Component Inspection	19-15
Idler Shaft Assembly	19-15
Intermediate Gear Assembly	19-16
Synchronizer Gear Assembly	19-16
Shifter Fork Assembly	19-18
Differential Gear Case Assembly	19-19
Governor Gear Assembly	19-21
Differential Gear Lock Housing Assembly	19-21
Unitized Transaxle Assembly	19-22
Unitized Transaxle Installation	19-29

SECTION i – INDEX

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com