

# CRAWLER EXCAVATOR CX700B SERVICE MANUAL

## TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data.....	1001	7-27691EN
General specifications and special torque setting .....	1002	SM700B1002-3EN
<b>2 ENGINE</b>		
Removal and installation of the engine.....	2000	SM700B2000-0EN
Removal and installation of the fuel cooler, engine inter-cooler, radiator and oil cooler .....	2001	SM700B2001-0EN
Removal and installation of the turbo charger .....	2004	SM700B2004-0EN
Removal and installation of EGR cooler and EGR valve.....	2005	SM700B2005-0EN
Removal and installation of the engine hood.....	2006	SM700B2006-0EN
Engine specifications.....*	*	
Disassembly and assembly of the engine .....	*	
<b>3 FUEL SYSTEM</b>		
Removal and installation of the fuel tank.....	3001	SM700B3001-0EN
Removal and installation of the supply pump and common rail .....	3004	SM700B3004-0EN
Removal and installation of the injectors .....	3005	SM700B3005-0EN
Fuel engine system .....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Service connector kit .....	4000	SM350B4000-1EN
Electrical and engine functions and service support .....	4001	SM700B4001-1EN
Removal and installation of the starter motor .....	4004	SM700B4004-0EN
Removal and installation of the alternator .....	4005	SM700B4005-0EN
Electrical equipment & electrical circuit diagrams .....	4020	SM700B4020-0EN
Engine error code (DTC) .....	4021	SM700B4021-0EN
Main body error code (DTC).....	4022	SM700B4022-0EN
Troubleshooting, 6WG1 engine .....	4023	SM700B4023-0EN
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	SM700B5001-0EN
Rollers .....	5003	SM700B5003-0EN
Take-up roller .....	5005	SM700B5005-0EN
<b>6 DRIVE TRAIN</b>		
Removal and installation of the drive motor and final drive transmission.....	6001	SM700B6001-0EN
Disassembly and assembly of the drive motor and final drive transmission.....	6002	SM700B6002-0EN
Removal and installation of the swing motor and swing reduction gear .....	6003	SM700B6003-0EN
Disassembly and assembly of the swing reduction gear .....	6004	SM700B6004-0EN
<b>7 UNDERCARRIAGE HYDRAULICS</b>		

\* Consult the Engine Service Manual

## DIVISION/SECTION

## SECTION N°

## REFERENCE N°

**8 UPPERSTRUCTURE HYDRAULICS**

Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	SM700B8001-0EN
Removal and installation of the hydraulic reservoir .....	8002	SM700B8002-0EN
Removal and installation of the main hydraulic pump.....	8003	SM700B8003-0EN
Removal and installation of the main hydraulic control valve.....	8004	SM700B8004-0EN
Removal and installation of the attachment cylinders.....	8005	SM700B8005-0EN
Removal and installation of the hydraulic swivel.....	8006	SM700B8006-0EN
Removal and installation of the pilot blocs.....	8007	SM700B8007-0EN
Disassembly and assembly of the main hydraulic pump .....	8010	SM700B8010-0EN
Disassembly and assembly of the main hydraulic control valve .....	8011	SM700B8011-0EN
Disassembly and assembly of the attachment cylinders .....	8012	SM700B8012-0EN
Disassembly and assembly of the hand control levers .....	8013	SM130B8013-0EN
Disassembly and assembly of the foot control levers .....	8014	SM350B8014-0EN
Disassembly and assembly of the cushion valve.....	8016	SM130B8016-0EN
Removal and installation of the safety valve .....	8017	SM700B8017-0EN
Disassembly and assembly of the swing motor .....	8019	SM700B8019-0EN
Hydraulic functions .....	8020	SM700B8020-0EN
Hydraulic component functions.....	8030	SM700B8030-1EN

**9 UPPERSTRUCTURE**

Removal and installation of the counterweight .....	9002	SM700B9002-0EN
Removal and installation of the boom, dipper and bucket .....	9003	SM700B9003-0EN
Removal and installation of the seat.....	9004	SM130B9004-0EN
Removal and installation of the cab and cab equipment .....	9005	SM130B9005-0EN
Air conditioner functions and troubleshooting .....	9006	SM700B9006-1EN
Air conditioning unit .....	9007	SM700B9007-0EN
Air conditioning components.....	9009	SM700B9009-0EN
Removal and installation of the attachment, counterweight and side frame.....	9010	SM700B9010-0EN
Large size hydraulic schematics .....	Pocket	KWJ11230-E02
Large size electrical schematics .....	Pocket	KWR10070-E04

NOTE: CNH France S.A. Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

All data given in this manual is subject to production variations. Dimensions and weights are provided with approximate values and the machine fitting shown in the illustrations may not correspond with standard models. For precise information on specific machine models and versions, please contact your CASE dealer.

Reproduction or translation, even partial, is prohibited without written authorization from CNH France SA Company.

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**