

2050M
TIER2/TIER3
Crawler Dozer

SERVICE MANUAL

Part number 48037321

English

February 2017

© 2017 CNH Industrial Latin America LTDA. All Rights Reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

**2050M PAT
2050M PAT TIER 3
2050M BD TIER 3
2050M Bulldozer**

Link Product / Engine

Product	Market Product	Engine
2050M PAT	Latin America	F4HFA613N*E002
2050M Buldózer	Latin America	F4HFA613N*E002

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.250] Turbocharger and lines.....	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
[10.310] Aftercooler.....	10.7
[10.304] Engine lubrication system.....	10.8
Rear axle system.....	27
[27.120] Planetary and final drives	27.1
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.300] Reservoir, cooler, and filters.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.106] Variable displacement pump	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve	35.5
[35.741] Dozer blade cylinders	35.6
[35.752] Hydraulic fan drive cooling system.....	35.7
[35.000] Hydraulic systems.....	35.8

Frames and ballasting	39
[39.100] Frame	39.1
Tracks and track suspension	48
[48.140] Dropbox and final drive	48.1
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator	55.10
[55.302] Battery.....	55.11
[55.512] Cab controls.....	55.12
[55.518] Wiper and washer system.....	55.13
[55.DTC] FAULT CODES.....	55.14
Tools	89
[89.128] Ripper assembly	89.1
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1
[90.114] Operator protections	90.2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com