

CX800 Crawler Excavators

Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	9-44840
General specifications and special torque setting.....	1002	9-44850
2 ENGINE		
Removal and installation of the engine	2000	9-36800GB
Radiator and oil-cooler.....	2001	9-42540GB
Engine specifications	*	
Disassembly and assembly of the engine.....	*	
3 FUEL SYSTEM		
Fuel tank	3001	9-36820GB
Fuel engine system.....	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting	4001	9-44860
Inspection and maintenance of batteries and connecting a booster battery	4002	9-36830GB
Main and engine electronic control boxes.....	4003	9-36840GB
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	9-36860GB
Rollers.....	5003	9-36880GB
Sprocket.....	5004	9-36890GB
Idler wheel and tension shock absorber	5005	9-36900GB
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	9-36980GB
Drive motor and final drive transmission disassembly and assembly	6002	9-40350GB
Swing reduction gear, removal and installation.....	6003	9-36990GB
Swing reduction gear, disassembly and assembly	6004	9-42630GB
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	9-40270GB
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	9-44870
Hydraulic reservoir removal and installation	8002	9-40280GB
Main and pilot pumps, removal and installation	8003	9-40770GB
Main hydraulic control valve, removal and installation	8004	9-40910GB
Attachment cylinders, removal and installation	8005	9-27791GB
Hydraulic swivel, removal and installation	8006	9-40920GB
Pilot blocs, removal and installation	8007	9-44940
Swing motor, removal and installation	8008	9-40260GB
Free swing disassembly and assembly	8009	9-44920
Main hydraulic pump, disassembly and assembly	8010	9-42560GB
Main hydraulic control valve, disassembly and assembly.....	8011	9-42760GB
Attachment cylinders, disassembly and assembly.....	8012	9-40940GB
Hand control levers, disassembly and assembly	8013	9-40980GB
Foot control levers, disassembly and assembly	8014	9-40990GB
Six-solenoid valves, disassembly and assembly	8015	9-42520GB
Caution valve, disassembly and assembly	8016	7-27941GB
Anti-hose burst valves.....	8017	9-42770GB
Hydraulic swivel, disassembly and assembly	8018	9-42510GB
Swing motor, disassembly and assembly	8019	9-42530GB
Hydraulic functions.....	8020	9-44880

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE		
Upperstructure, turntable bearing and counterweight	9002	9-42550GB
Boom, dipper and bucket	9003	9-42620GB
Seat and seat belt	9004	9-40960GB
Cab and cab equipment	9005	9-40970GB
Air conditioning troubleshooting	9006	[REDACTED]
Air conditioning unit disassembly and assembly	9007	[REDACTED]
Air conditioning servicing	9008	[REDACTED]
Air conditioning components	9009	[REDACTED]
Removal and installation attachment, counterweight and side fram	9010	9-44890
Attachment reinforcement procedures	9012	9-43940
Large format hydraulic and electrical schematics	Pocket	9-42650

* Consult the Engine Service Manual

[REDACTED] Sections to be distributed at a later date

NOTE: Case Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Thank you so much for reading.

**Please click the “Buy Now!”
button below to download the
complete manual.**

Buy Now



After you pay.

**You can download the most
perfect and complete manual in
the world immediately.**

Our support email:

ebooklibonline@outlook.com