

WX210
WX240
WX210 Industry
WX240 Industry

TIER 3

Service manual

Print No. 87677489A

CASE
CONSTRUCTION

INDEX

SECTION 01 - SAFETY PRECAUTIONS

- 1. GENERAL SAFETY INSTRUCTIONS 2
- 2. USE INSTRUCTION 11

SECTION 02 - CONTROLS AND INSTRUMENTS

- 1. SWITCHES AND PUSH-BUTTONS 1
- 2. CONTROLS AND PEDALS 13
- 3. MULTI-FUNCTION DISPLAY 16

SECTION 03 - TECHNICAL SPECIFICATIONS

- 1. MAIN COMPONENTS 1
- 2. DIMENSIONS - OPERATING WEIGHTS 4
- 3. DIGGING PERFORMANCE 10
- 4. LIFTING CAPACITIES 20
- 5. HYDRAULIC SYSTEM 33
- 6. ROTATION 34
- 7. TRAVEL 35
 - 7.1 TYRES 36
- 8. BRAKES 36
- 9. STEERING 36
- 10. ELECTRICAL SYSTEM 37
- 11. BUCKETS 37
- 12. TIGHTENING TORQUES 38
- 13. CENTRALIZED LUBRICATION PUMP (OPTIONAL) 38
- 14. FUEL SYSTEM 38
- 15. ENGINE 39
- 16. SUPPLY SUMMARIZING CHART 40

SECTION 04 - UPPER STRUCTURE

- 1. MAIN COMPONENTS 1
- 2. SLEWING BEARING 3
- 3. ROTATION GEARMOTOR 7
 - 3.1 DISASSEMBLY AND ASSEMBLY 12
- 4. MULTI-COOLER 13
 - 4.1 TECHNICAL SPECIFICATIONS 14
- 5. HYDRAULIC PUMPS 17
- 6. MUFFLER 18

7. HYDRAULIC OIL TANK.....	19
8. AIR FILTER.....	25
9. COUNTERWEIGHT.....	25
10. FUEL SYSTEM.....	26
11. CAB AND OPERATOR'S SEAT.....	32
11.1 CAB AT VARIABLE HEIGHT (WX 210 Industry - WX 240 Industry).....	43
12. CENTRALIZED LUBRICATION PUMP.....	44

SECTION 05 - UNDERCARRIAGE

1. UNDERCARRIAGE COMPONENTS.....	1
2. REAR RIGID AXLE.....	2
2.1 TECHNICAL SPECIFICATIONS.....	3
2.2 DISASSEMBLY AND ASSEMBLY.....	6
2.3 DISASSEMBLY AND ASSEMBLY.....	8
2.4 TROUBLESHOOTING.....	87
2.5 SPECIAL TOOLS.....	89
3. TRAVEL MOTOR.....	90
3.1 TECHNICAL SPECIFICATIONS.....	90
3.2 DISASSEMBLY AND ASSEMBLY.....	91
3.3 DISASSEMBLY AND ASSEMBLY.....	92
4. CARDAN SHAFT.....	103
4.1 DISASSEMBLY AND ASSEMBLY.....	104
5. FRONT STEERING AXLE.....	106
5.1 TECHNICAL SPECIFICATIONS.....	107
5.2 DISASSEMBLY AND ASSEMBLY.....	110
5.3 DISASSEMBLY AND ASSEMBLY.....	112
5.4 TROUBLESHOOTING.....	184
5.5 SPECIAL TOOLS.....	186
6. WHEELS AND TYRES.....	187
7. BLADE.....	192
7.1 BLADE CYLINDER.....	194
8. AXLE FLOATING LOCKING CYLINDERS.....	202
8.1 TECHNICAL SPECIFICATIONS.....	203
8.2 DISASSEMBLY AND ASSEMBLY.....	204
8.3 AIR BLEEDING.....	205
8.4 DISASSEMBLY AND ASSEMBLY.....	206
8.5 TROUBLESHOOTING.....	208
9. STABILIZERS.....	209
9.1 STABILIZER CYLINDERS.....	212
9.2 TROUBLESHOOTING.....	222
10. LEFT LADDER.....	224
11. RIGHT LADDER AND TOOL STORAGE BOX.....	225
12. ROTARY CONTROL VALVE AND ELECTRIC ROTOR.....	226
12.1 TECHNICAL SPECIFICATIONS.....	226
12.2 DISASSEMBLY AND ASSEMBLY.....	227
12.3 DISASSEMBLY AND ASSEMBLY.....	228
12.4 ELECTRIC ROTOR.....	230

SECTION 06 - FRONT ATTACHMENT

- 1. TYPES OF FRONT ATTACHMENT 2
- 2. HYDRAULIC CYLINDERS..... 4
 - 2.1 BOOM CYLINDER..... 6
 - 2.2 DIPPER CYLINDER (WX 210 - WX 240) 16
 - 2.3 DIPPER CYLINDER (WX 210 Industry - WX 240 Industry)..... 26
 - 2.4 SPECIAL TOOLS..... 55
- 3. BUCKETS WX 210 - WX 240 56
- 4. WX 210 - WX 240 QUICK COUPLER 60
- 5. CLAMSHELL BUCKET 64

SECTION 07 - STEERING SYSTEM

- 1. OPERATION 1
- 2. POWER STEERING 3
 - 2.1 DISASSEMBLY AND ASSEMBLY..... 5
- 3. PRIORITY VALVE 23
- 4. TROUBLESHOOTING 24

SECTION 08 - BRAKE SYSTEM

- 1. OPERATION 1
- 2. SERVICE BRAKE 4
- 3. PARKING BRAKE..... 7
- 4. PEDAL BRAKE VALVE 8
- 5. ACCUMULATORS 9
- 6. TROUBLESHOOTING 11

SECTION 09 - HYDRAULIC SYSTEM

- 1. HYDRAULIC SYSTEM 1
- 2. HYDRAULIC SYSTEM DIAGRAMS 5
 - 2.1 HYDRAULIC SYSTEM DIAGRAMS - UPPER STRUCTURE 5
 - 2.2 HYDRAULIC SYSTEM DIAGRAMS - UNDERCARRIAGE 21
 - 2.3 HYDRAULIC SYSTEM DIAGRAMS BLADE AND/OR STABILIZERS 25
- 3. HYDRAULIC PUMPS 28
- 4. UPPER STRUCTURE CONTROL VALVE 48
- 5. UNDERCARRIAGE CONTROL VALVE 60
- 6. PILOT CONTROL ASSY 62
- 7. ROTATION SYSTEM..... 71
- 8. TRAVEL 75
- 9. STABILIZATION HYDRAULIC SYSTEM 87
- 10. BOOM HYDRAULIC SYSTEM 93
- 11. HYDRAULIC SYSTEM 100

12. HYDRAULIC SYSTEM OF DIPPER	106
13. HYDRAULIC SYSTEM OF PLACING BOOM	110
14. HYDRAULIC SYSTEM WITH COMBINATION OF DIFFERENT FUNCTIONS (BOOM, PLACING BOOM, DIPPER AND BUCKET)	117
15. HYDRAULIC SYSTEM OF HAMMER (WITH PLACING BOOM)	119
16. HYDRAULIC SYSTEM OF HAMMER AND SHEARS (WITH PLACING BOOM)	122
17. HYDRAULIC SYSTEM OF SHEARS (WITH PLACING BOOM)	127
18. HYDRAULIC SYSTEM OF HAMMER (WITH MONOBOOM)	130
19. HYDRAULIC SYSTEM OF HAMMER AND SHEARS (WITH MONOBOOM)	133
20. HYDRAULIC SYSTEM OF SHEARS (WITH MONOBOOM)	138
21. TROUBLESHOOTING	141

SECTION 10 - ELECTRICAL SYSTEM

1. ELECTRICAL DIAGRAMS	1
1.1 WX 210 - WX 240	1
1.2 WX 210 Industry - WX 240 Industry	41
2. FUSES	80
3. BATTERIES	83
4. BULBS	87
5. TROUBLESHOOTING	91

SECTION 11 - ELECTRONICS

1. MAIN COMPONENTS	1
1.1 ELECTRICAL POWER SUPPLY DIAGRAM	3
2. COMPONENTS OF LINE 1	6
3. COMPONENTS OF LINE 2	10
3.1 TRAVEL PEDAL	16
3.2 ATTACHMENT PEDAL (PLACING BOOM AND HAMMER)	17
3.3 ELECTRO-HYDRAULIC SYSTEM	18
3.4 POWER CONTROL SYSTEM	19
4. ENGINE SPEED ACTUATOR	26
5. COOLANT TEMPERATURE DETECTION	27
6. CHARGE AIR TEMPERATURE DETECTION	28
7. HYDRAULIC OIL TEMPERATURE DETECTION	29
8. PROPORTIONAL VALVE - FAN MOTOR	30
9. PROPORTIONAL VALVES - CONTROL BLOCK	31

SECTION 12 - CALIBRATION

1. NECESSARY OPERATIONS BEFORE CALIBRATION	1
2. DISPLAY: CALIBRATION MENU	3

3. CALIBRATIONS WITH THE ENGINE RUNNING.....	4
3.1 VDO CALIBRATION	6
3.2 POWER CALIBRATION	8
3.3 MAIN VALVE CALIBRATION (CONTROL VALVE).....	10
3.4 TRAVEL CALIBRATION	13
3.5 PUMP DELIVERY CALIBRATION.....	15
3.6 ROTATION PUMP CALIBRATION	18
3.7 AUXILIARY PRESSURE CALIBRATION	20
4. CALIBRATIONS WITH THE ENGINE STOPPED	22
4.1 CALIBRATIONS, ALL SOLENOID VALVES, MAIN PUMP, ROTATION PUMP, AUXILIARY PRESSURE.....	24
4.2 MAIN VALVE CALIBRATION (CONTROL VALVE).....	26

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com