



NEW HOLLAND



TD60 – TD70 – TD80 – TD90 – TD95 STRADDLE MOUNT MODEL TRACTORS SERVICE MANUAL

SECTIONS	
GENERAL	00
ENGINE	10
CLUTCH	18
GEARBOX	21
TRANSMISSION OF MOTION	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
ELECTRICAL SYSTEM	55
CAB	90

S E R V I C E

NEW HOLLAND

Repair Manual–TD Straddle Mount Series Tractors

CONTENTS

GENERAL

SECTION 00

General Instructions and Health and Safety

Chapter 1

Section	Description	Page
00 000	General instructions	1
	Notes for spare parts	2
	Notes for equipment	2
	Safety rules	3
	Consumables	6

ENGINE

SECTION 10

Engine System

Chapter 1

Section	Description	Page
10 000	General specifications	2
	Data	5
	Torque settings	24
	Tools	25
	Cross-sectional views	28
	Lubrication and cooling system diagrams	32
	Troubleshooting	35
10 001	Removal – Installation – Overhaul	39
	Checks, dimensions and repairs	80

CLUTCH

SECTION 18

Clutches

Chapter 1

Section	Description	Page
18 000	General Characteristics	1
	Tightening Torques	2
	Tools	3
	Sectional views	3–6
	Clutch Troubleshooting	7
18 110 10	Removal – Refitting	8–15
18 110 30	Overhaul	16–19

	Checks, measurements and repairs	20–21
18 100 40	Adjustments	22–23

GEARBOX

SECTION 21

Mechanical Transmission (12x4)

Chapter 1

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	5
	Description and operation	8
	Fault diagnosis	8
21 110	Removal – Refitting	see sect 27

Reverser (12x12)

Chapter 2

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3
	Description and operation	5
	Fault diagnosis	5
21 110	Removal–Refitting	6

Reverser and Creeper (20x12)

Chapter 3

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	4
	Description and operation	6
	Fault diagnosis	6
21 110	Removal–Refitting	7

DRIVE LINES

SECTION 23

Drive Lines

Chapter 1

Section	Description	Page
23 000	Main specification	1
	Torque settings and Tools	2
	Cross–Sectional views	3
23 101 26	Transmission shafts and guard (Disassembly – Assembly)	4
23 101 40	Drive gear housing (Removal – Installation)	5–6
23 101 42	Drive gear housing removed (Disassembly – Assembly)	7

FRONT AXLE MECHANICAL TRANSMISSION

SECTION 25

Front Axle Mechanical Transmission

Chapter 1

Section	Description	Page
25 000	Main data	1
	Tightening torques	4
	Tools	6
	Cross-sectional views	7
	Description and operation	9
	25 100 30	Complete front axle. Removal – Installation
25 100 38	Front axle. Removal – Installation	14
25 108 46–47	Steering knuckle bearing pins. Replacement	24
	Stub axle adjustment	25
	Wheel hub bearing adjustment	27
	Bevel drive adjustment	28
25 102 24	Front axle differential. Overhaul	34
25 100 27	Front axle differential with LIM–SLIP. Overhaul	35
	Front axle differential with NO SPIN. Overhaul	37
44 511 80	Leading drive wheels toe-in check	40

REAR AXLE AND TRANSMISSION

SECTION 27

Rear Axle And Transmission

Chapter 1

Section	Description	Page
27 000	Main specification	1
	Torque settings	3
	Special tools	5
	Sectional views	6
	Description and operation	7
	Fault finding	8
27 100	Removal–Refitting–Overhaul	9

POWER TAKE-OFF

SECTION 31

Mechanical Power Take – Off

Chapter 1

Section	Description	Page
31 000	Main specifications	1
	Tools	3
	Torque settings	4
	Sectional drawings	5
	Description and operation	8
	Troubleshooting	9
	Removal – Refitting	10
31 101	Bench overhaul	13

BRAKING SYSTEM

SECTION 33

Braking System

Chapter 1

Section	Description	Page
31 000	Main specifications	1
	Tools	2
	Torque settings	3
	Sectional drawings	5
	Description and operation	6
	Troubleshooting	7
	Removal – Refitting	7
31 101	Bench overhaul	12

HYDRAULIC SYSTEM

SECTION 35

Rear Mechanical Hydraulic Lift

Chapter 1

Section	Description	Page
35 000	Main specification	1
	Torque settings	5
	Tools	6
	Sectional views	7
	Description and operation	9
	Fault diagnosis	13
35 114	Removal – Refitting – Overhaul	15

Open Centre System Auxiliary Control Valves

Chapter 2

Section	Description	Page
35 000	Main data – Tools	1
	Sectional views	2
	Description and operation	3
	Fault diagnosis	see 'lift' in chapter 1
35 204	Overhaul	6

Trailer Brake Auxiliary Control Valve

Chapter 3

Section	Description	Page
35 000	Section views	1
	Description and operation	1
	Trailer brake remote control valve linkage adjustment	6

STEERING

SECTION 41

Steering

Chapter 1

Section	Description	Page
41 000	Principal data	1
	Torque settings	3
	Operation	7
	Fault diagnosis	9
	Tools	10
41 204	Hydrostatic steering control valve – Removal–Refitting	11
	Hydrostatic steering control valve – Disassembly–Assembly	14

	Hydrostatic steering control valve – Bench testing	28
41 206	Hydrostatic steering oil pump – Disassembly–Assembly	30
41 216	Steering cylinder – Removal–Refitting	32

FRONT AXLE AND WHEELS

SECTION 44

Front Axle And Wheels

Chapter 1

Section	Description	Page
44 000	Principal data	1
	Sectional views	3
	Torque settings	4
	Equipment – Fault diagnosis	5
44 101	Removal–Refitting–Overhaul	6
44 101	Wheel hub disassembly–assembly	9
44 101	Stub axle overhaul	12

ELECTRICAL SYSTEM

SECTION 55

Instruments

Chapter 1

Section	Description	Page
55 418	Analogue instruments	1
	Introduction	1
	Maintenance	14

Components

Chapter 2

Section	Description	Page
55 500	Introduction	1
	Component description	2

Starting System

Chapter 3

Section	Description	Page
55 000	Technical information	1
	Tightening torques	1
	Description and operation	2
	Trouble–shooting	4
	System tests	5
55 201	Removal and re–installation of starter motor	7
	Servicing	8
	Bench tests	10

Charging System

Chapter 4

Section	Description	Page
55 000	Technical information	1
	Tightening torques	1
	Description and operation	2
	System testing and trouble–shooting	4
55 301	Removal, re–installation and servicing	10

Battery

Chapter 5

Section	Description	Page
55 000	Technical information	1
	Description and operation	1
55 301	Removal and re-installation	2
	Battery checking and maintenance	3
	Charging the battery	4
	Battery problems – Frequent causes	7

Electrical Circuits

Chapter 6

Section	Description	Page
55 100	Fuses (all versions)	2
	Symbols used in electrical circuits	3
	Electrical wire colour coding	4
	Electrical diagrams	
	General diagrams	5
	Start-up circuit	6
	Side lights, main and dipped headlights, parking light circuit	7
	Direction indicator and hazard warning light circuit	8
	Work lamp circuit	9
	Windscreen and rear window wiper/washer circuit	10
	Heating and air-conditioning system circuit	11
	Analogue instrument circuit	12

BODYWORK AND DRIVER POSITION

SECTION 90

Bodywork And Driver Position

Chapter 1

Section	Description	Page
90 000	Disassembly–Assembly	1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com