

# **F510 and F525 Residential Front Mowers**

**John Deere Horicon Works  
TM1475 (23OCT95)**

LITHO IN U.S.A.  
ENGLISH

# Contents

## SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Repair Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Location

## SECTION 20—ENGINE REPAIR

- Group 05—Remove and Install Engine
- Group 10—Blower Housing and Flywheel
- Group 15—Cylinder Head and Valves
- Group 20—Cylinder Block and Internal Components

## SECTION 30—FUEL AND AIR SYSTEM REPAIR

- Group 05—Fuel Tank
- Group 10—Fuel Pump
- Group 15—Air Cleaner
- Group 20—Carburetor

## SECTION 40—ELECTRICAL REPAIR

- Group 05—Electric PTO Clutch
- Group 10—Starter
- Group 15—Ignition and Charging System

## SECTION 50—POWER TRAIN REPAIR

- Group 10—Hydrostatic Transmission and Differential

## SECTION 60—STEERING REPAIR

- Group 05—Steering Shaft and Gears
- Group 10—Wheels

## SECTION 65—BRAKE REPAIR

- Group 05—Brake Repair

## SECTION 80—MISCELLANEOUS

- Group 05—Mower Deck Repair
- Group 10—Blade Drive Belt
- Group 15—38-Inch Snowthrower
- Group 20—Power Flow™ Blower Assembly
- Group 25—Engine Shroud and Fenders
- Group 30—Weight Transfer System

## SECTION 210—SPECIFICATIONS/OPERATIONAL CHECKOUT PROCEDURE

- Group 05—Operational Checkout Procedure
- Group 10—Test and Adjustment Specifications

## SECTION 220—ENGINE OPERATION, TESTS, AND

- Group 05—Engine Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests, and Adjustments

## SECTION 230—FUEL/AIR OPERATION, TESTS, AND ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests, and Adjustments

## SECTION 240—ELECTRICAL SYSTEM OPERATION, TESTS, AND ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests, and Adjustments
- Group 20—Wiring Schematic and Harness Diagram

## SECTION 250—POWER TRAIN OPERATION, TESTS, AND ADJUSTMENTS

- Group 05—Power Train Component Location
- Group 10—Theory of Operation
- Group 15—Power Train Diagnosis

## SECTION 260—STEERING OPERATION, TESTS, AND ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnostics
- Group 20—Adjustments

## SECTION 265—BRAKE OPERATION, TESTS, AND ADJUSTMENTS

- Group 05—Component Location
- Group 10—Theory of Operation

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1475-19-23OCT95

COPYRIGHT© 1995  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright 1992, 1989 Deere & Company

Group 15—Diagnostics  
Group 20—Adjustments

10

**SECTION 280—MISCELLANEOUS OPERATION,  
TESTS, AND ADJUSTMENTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis and  
Adjustments—Snowthrower  
Group 20—Diagnosis—Power Flow™ Blower  
Assembly

20

30

**Index**

40

50

60

65

80

210

220

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)