

5105 and 5205 Tractors

For complete service information also see:

Component Technical Manuals 3029

Engine	CTM8
Alternators and Starting Motors	CTM77

John Deere Augusta Works
TM1792 (20MAR00)

LITHO IN U.S.A.
ENGLISH

Contents

SECTION 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Locations
- Group 30—Features and Accessories

SECTION 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

SECTION 30—Fuel and Air Repair

- Group 05—Fuel System
- Group 10—Air Intake System
- Group 15—Speed Control Linkage

SECTION 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 10—Electrical System Components
- Group 15—Wiring Harness

SECTION 50—Power Train Repair

- Group 05—Clutch Housing
- Group 10—Clutch Assembly
- Group 15—Transmission
- Group 20—Rear PTO
- Group 25—Differential
- Group 30—Final Drives
- Group 35—Mechanical Front Wheel Drive

SECTION 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Brake Repair

SECTION 70—Hydraulic Repair

- Group 05—Hydraulic Pump and Filter
- Group 10—Rockshaft
- Group 15—Selective Control Valve (SCV)
- Group 20—Hydraulic Mid Mount Coupler

SECTION 80—Miscellaneous Repair

- Group 05—Front Axle—2WD
- Group 10—Wheels
- Group 15—3-Point Hitch

SECTION 90—Operator Station Repair

- Group 05—Seat and Support
- Group 10—ROLL-GARD
- Group 15—Operator Platform
- Group 20—Fenders

SECTION 210—Operational Checkout Procedures

- Group 10—Operational Checkout Procedures

SECTION 220—Engine Operation, Tests and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

SECTION 230—Fuel/Air Operation, Tests and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

SECTION 240—Electrical System Operation, Tests & Adjust

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Test and Adjust
- Group 20—Wiring Schematics

SECTION 250—Power Train Operation, Tests & Adjustments

- Group 05—Component Location—Power Train
- Group 10—Theory of Operation—Transmission
- Group 15—Diagnosis, Tests and Adjustments—Power Train

SECTION 260—Steering and Brake Operation, Test & Adjust

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

SECTION 270—Hydraulic System Operation, Test &

Continued on next page

10

20

30

40

50

60

70

80

90

210

10

Adjust

Group 05—Component Location

Group 10—Theory of Operation

Group 15—Diagnosis

Group 16—Hydraulic Tests—Without SCV

20

Group 17—Hydraulic Tests—With SCV

Group 18—Hydraulic Tests—With Mid Mount

Control Valve

Group 19—Hydraulic Tests—All

Group 20—Adjustments

30

Group 21—Hydraulic Schematics

SECTION 299—Dealer Fabricated Tools

Group 00—Dealer Fabricated Tools

40

50

60

70

80

90

210

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com