
# OPERATOR'S MANUAL TEDDER

# TD1010E

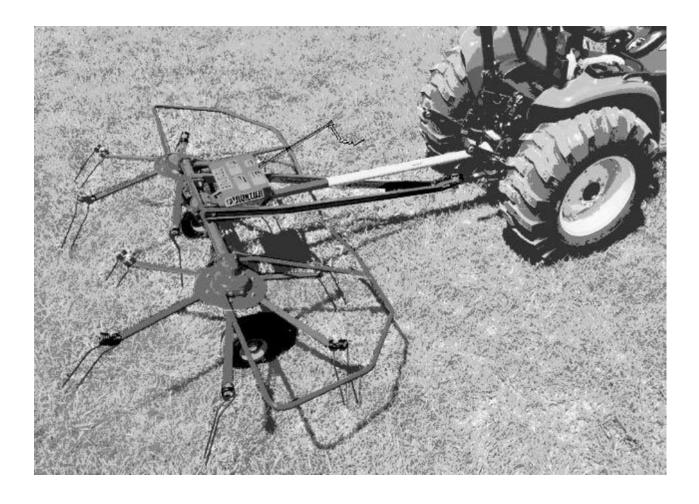

# FRONTIER

OMUS00TDF (04/14/08)

#### INTRODUCTION

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your Frontier dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.


#### WRITE PRODUCT IDENTIFICATION NUMBERS

(P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of Frontier's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained in the back of this manual.

This warranty provides you the assurance that Frontier will back its products where defects appear within the warranty period. In some circumstances, Frontier also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

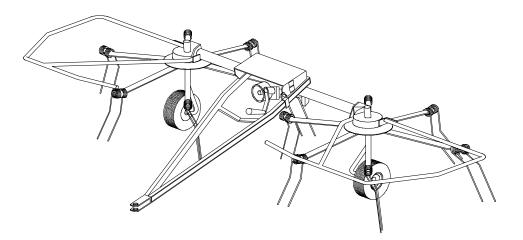

### TABLE OF CONTENTS

|   | Page |
|---|------|
| SAFETY  | 4    |
| PREPARING THE TRACTOR                               |      |
| Positioning Tractor Drawbar                         | . 16 |
| Adjusting the Drawbar                               | 16   |
| Using Drawbar Shield                                |      |
| Making Drawbar Shield                               | 17   |
| Three-Point Hitch Position                          | 17   |
| Checking Ballast, Wheel Spacing, and Tire Inflation | . 17 |
| PREPARING THE TEDDER                                |      |
| Checking Tire Inflation Pressure                    | 18   |
| Checking Wheel Nut Torque                           | . 18 |
| ATTACHING AND DETACHING                             |      |
| Attaching Tedder to Tractor Drawbar                 | . 19 |
| Detaching Tedder from Tractor                       |      |
| TRANSPORTING  |      |
| Preparing Tedder for Transport                      | 21   |
| OPERATING THE TEDDER                                |      |
| Wheels  | 22   |
| Work Position                                       | 22   |
| Use of the Tedder                                   | 23   |
| Adjustments23 -                                     | - 24 |
| Spring Tilt   | 24   |
| Spring Link Tilt                                    | 24   |
| Operating the Tedder                                | 25   |
| LUBRICATION AND MAINTENANCE                         |      |
| Perform Lubrication and Maintenance                 |      |
| Observe Lubrication Symbols                         |      |
| Alternative and Synthetic Lubricants                |      |
| Grease  | . 27 |
| Lubricant Storage                                   | . 28 |
| Every 10 Hours - Lubricate Height Adjustment Handle | 28   |
| Every 10 Hours - Grease Basket Gearhead             | 29   |
| Every 25 Hours – Check Gearbox Grease               | 29   |
| Every 50 Hours                                      | 30   |
| Annually  |      |
| As Required   | 31   |
| SERVICE   |      |
| Servicing Tires Safely                              | 32   |

## TABLE OF CONTENTS

| Sping Tine Replacement                        | 33    |
|---|-------|
| STORAGE                                       |       |
| End of Season                                 | 34    |
| Beginning of Season                           |       |
|   | 54    |
| TEDDER CHECKLISTS                             |       |
| Dealers Record                                |       |
| Predelivery                                   | 36    |
| Delivery                                      | 37    |
| ASSEMBLY                                      |       |
| Uncrating Machine                             | 38    |
| Preparing the Forks                           |       |
| Wheel Assembly                                | 30    |
| Install Tine Arms                             |       |
|   |       |
| Drawbar Assembly.                             |       |
| Assembly of the Regulating Screw              | 41    |
| Install Spring Tine                           | 42    |
| Install Guards                                | 42    |
| Install PTO Shaft                             | 43    |
| SPECIFICATIONS                                |       |
| Tedder  | 44    |
| Record Product Identification Number          | 45    |
| Legend  | 46    |
| Unified Inch Bolt and Cap Screw Torque Values |       |
| Metric Bolt and Cap Screw Torque Values       |       |
| Tightening Flare Type Tube Fittings           |       |
| SPARE PARTS                                   | 51-62 |
| DECALS  | 63    |
| NUMERICAL INDEX                               | 64    |
| INDEX   | 65    |
| WARRANTY POLICY Inside Back (                 | Cover |

#### SAFETY ALERT SYMBOL



This safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Carefully read and follow the safety message accompanying this symbol.

Why is SAFETY important to you?

|               | <ul> <li>ACCIDENTS DISABLE AND KILL</li> </ul> |
|---------------|--|
| 3 BIG REASONS | <ul> <li>ACCIDENTS COST</li> </ul>             |
|               | <ul> <li>ACCIDENTS CAN BE AVOIDED</li> </ul>   |

#### SIGNAL WORDS

Note the use of the signal words DANGER, WARNING, and CAUTION with safety messages. The appropriate signal word for each message has been selected using the following guidelines:



**DANGER** – Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



**WARNING** – Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It is also used to alert against unsafe practices.



**CAUTION** – Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It is also used as a reminder of good safety practices.

#### FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your Frontier dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your Frontier dealer.



#### **OPERATE TEDDER SAFELY**

All machinery should be operated by responsible persons who have been properly instructed and delegated to do so.

Before each use, inspect entire machine. Check tightness of all hardware.

Stop the tractor engine and engage parking brake before leaving tractor operator's station to adjust, lubricate, clean or unclog the machine.

Never hand feed material into the machine.

Do not lean against, sit, or stand on rake.

#### **KEEP RIDERS OFF MACHINE**

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



### PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

 
Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

#### WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.





#### HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with Frontier equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.


Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.


(See your Frontier dealer for MSDS's on chemical products used with Frontier equipment.)

#### **USE SAFETY LIGHTS AND DEVICES**

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.

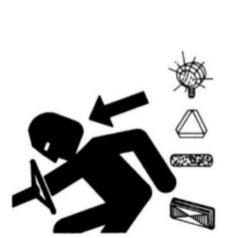

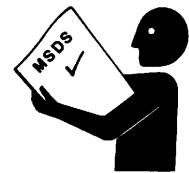


#### **USE A SAFETY CHAIN**

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your Frontier dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

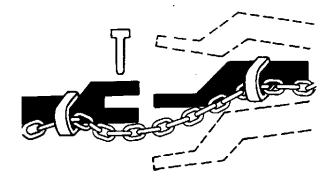


#### TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

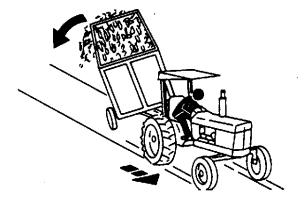

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com