OPERATOR'S MANUAL

CARTED WHEEL RAKE

WR 1008

WR 1010

WR 1012





TABLE OF CONTENTS

SAFETY	Page
O/I E I I	7
PREPARING THE TRACTOR	
Positioning Tractor Drawbar	
Using Drawbar Shield	. 14
Making Drawbar Shield	. 15
Three-Point Hitch Position	
Checking Ballast, Wheel Spacing, and Tire Inflation	. 15
PREPARING THE RAKE	
Checking Tire Inflation Pressure	. 16
Checking Wheel Nut Torque	
ATTACHING AND DETACHING	
Attaching Rake to Tractor Drawbar	17
Attaching to Tractor Hydraulic System	
Detaching Rake from Tractor	
TRANSPORTING	
Preparing Rake For Transport	. 22
OPERATING THE RAKE	
Prestarting Checks	24
Preparing Rake for Field Operation	. 25
Operating the Rake	. 27
Setting Working Width	. 28
Adjusting Raking and Windrow Width	
Adjusting Raking Wheel Ground Pressure	. 30
Raking a Single Windrow or Swath	
ATTACHMENTS Center Kicker Wheel	37
LUBRICATION AND MAINTENANCE	
Perform Lubrication and Maintenance	. 38
Observe Lubrication Symbols	
Alternative and Synthetic Lubricants	
Grease	. 39
Lubricant Storage	40
Every 10 Hours	40
Every 50 Hours	40
Every 100 Hours	
Annually	
As Required	
TROUBLESHOOTING	44-45
SERVICE	
Servicing Tires Safely	16

TABLE OF CONTENTS

Servicing Rake Safely	
Replacing Wheel Tines	
Identifying Left-Hand and Right-Hand Rake Wheels	47
STORAGE	
End of Season	49
Beginning of Season	
Beginning of Season	40
CHECKLISTS	
Dealers Record	50
Predelivery	
Delivery	
•	
ASSEMBLY	
Uncrating Rakes	
Install Jackstand	
Install Tongue to Rear Frame	
Install Wheels	
Install Reflectors	
Install Pivot Shaft and Pivot Head Assembly	54
Install Hydraulic Cylinder Guide Tube, Cylinder, and Lift Links	56
Install Turnbuckles	
Install Rake Wheel Frames	
Install Rake Wheel Frames WR 1012	
Install Rake Wheels	
Install Hydraulic Hose	
Install SMV Emblem	
Set Windrow Width.	
Store Lock Pins	
Store Lock Pins	64
INSTALLING CENTER KICKER WHEEL	65-68
FINAL INCRECTION AND LURBICATION	
FINAL INSPECTION AND LUBRICATION Final Inspection and Lubrication	00
Final inspection and Lubrication	
SPECIFICATIONS	
Carted Wheel Rake	70
Record Product Identification Number	
Unified Inch Bolt and Cap Screw Torque Values	
Metric Bolt and Cap Screw Torque Values	
Tightening Flare Type Tube Fittings	
Tigritering Flare Type Tube Fittings	
SPARE PARTS	
INDEX	99
MADDANITY DOLLOY	Inside Back Cover

SAFETY ALERT SYMBOL



This safety alert symbol indicates important safety messages in this manual and on safety signs on the machine.

This symbol means:

ATTENTION!
BECOME ALERT!
YOUR SAFETY IS INVOLVED!

Carefully read and follow the safety message accompanying this symbol.

Why is SAFETY important to you?

· ACCIDENTS DISABLE AND KILL

3 BIG REASONS · ACCIDENTS COST

· ACCIDENTS CAN BE AVOIDED

SIGNAL WORDS

Note the use of the signal words DANGER, WARNING, and CAUTION with safety messages. The appropriate signal word for each message has been selected using the following guidelines:



DANGER – Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



WARNING – Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. It is also used to alert against unsafe practices.



CAUTION – Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It is also used as a reminder of good safety practices.


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your Frontier dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your Frontier dealer.

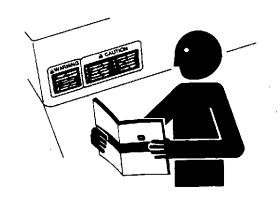

OPERATE RAKE SAFELY

All machinery should be operated by responsible persons who have been properly instructed and delegated to do so.

Before each use, inspect entire machine. Check tightness of all hardware.

Stop the tractor engine and engage parking brake before leaving tractor operator's station to adjust, lubricate, clean or unclog the machine.

Never hand feed material into the machine.

Do not lean against, sit, or stand on rake.

Make sure bystanders are clear of machine before lowering rake wheels.

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

 


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.



WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.



HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with Frontier equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your Frontier dealer for MSDS's on chemical products used with Frontier equipment.)



USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.




USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your Frontier dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

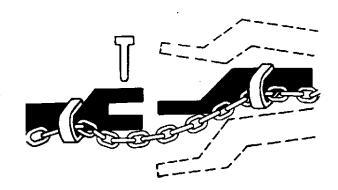


TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

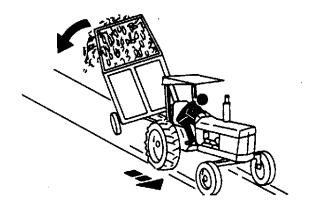

SERVICE RAKE SAFELY

To help prevent injury caused by unexpected movement, be sure to service machine on level surface.


Lower rake wheels before servicing or adjusting rake.

If machine is connected to a tractor:

- Engage tractor parking brake and/or place transmission in "Park."
- Shut off engine and remove key.

If machine is detached from tractor, block wheels and use safety stands to prevent movement.

To avoid eye injuries, cuts and bruises, take care when working around raised wheels. Do not service or adjust machine with rake wheels raised.

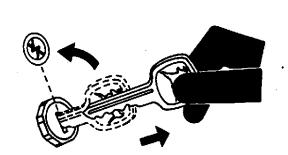

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

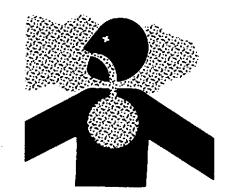

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com