

# FENDT 800 Vario S4

## FENDT 822 Vario S4

839 .. 1001-

## FENDT 824 Vario S4

840 .. 1001-

## FENDT 826 Vario S4

841 .. 1001-

## FENDT 828 Vario S4

842 .. 1001-



# FENDT 800 Vario S4

<b>1 Overall system/tractor</b>	<b>1-1</b>
<b>1.1 General</b>	<b>1-3</b>
1.1.1 Notes on documentation	1-3
1.1.2 Safety instructions and measures	1-4
1.1.3 Importance of and position of the safety decals	1-7
1.1.4 Note on hydraulics	1-18
1.1.5 Assignment table FENDT T types to the EU Type Approval Number	1-18
1.1.6 Support points for jack and support stands	1-19
1.1.7 Location of the identification plates	1-20
1.1.8 Biodegradable hydraulic oil	1-23
1.1.9 Tightening torque for screws with a galvanized surface	1-24
1.1.10 Tightening torque for screws and bolts with VDA coating	1-25
<b>1.2 Technical specification</b>	<b>1-27</b>
1.2.1 Technical data: 0000 general	1-27
1.2.2 Technical data: 1000 - Transmission	1-28
1.2.3 Technical data: 2000 - Diesel engine	1-34
1.2.4 Technical data: 3000 front axle	1-42
1.2.5 Technical data: 5500 air conditioning system/8100 cab/8600 EPC control valve	1-44
1.2.6 Technical data: 8800 compressed air system / 9000 electrical system / 9200 front power lift	1-45
1.2.7 Technical data: 9600 hydraulic equipment	1-46
<b>1.3 Fault code tables 800 / 900 Vario S4</b>	<b>2-1</b>
<b>1.3.1 Fault code tables</b>	<b>2-3</b>
1.3.1.1 Confirming, calling up, deleting fault codes	2-3
1.3.1.2 Fault code 00.0.00	2-5
1.3.1.3 Fault code 01.0.00	2-8
1.3.1.4 Fault code 02.1.00	2-14
1.3.1.5 Error code 03.1.00	2-16
1.3.1.6 Fault code 04.1.00	2-18
1.3.1.7 Fault code 05.1.00	2-31
1.3.1.8 Fault code 06.1.00	2-36
1.3.1.9 Fault code 07.1.00	2-41
1.3.1.10 Fault code 08.1.00	2-43
1.3.1.11 Fault code 09.1.00	2-49
1.3.1.12 Fault code 0A.1.00	2-54
1.3.1.13 Fault code 0B.1.00	2-73
1.3.1.14 Fault code 0D.1.00	2-76
1.3.1.15 Fault code 0E.1.00	2-79
1.3.1.16 Error code 0F.1.00	2-84
1.3.1.17 Fault code 10.1.00	2-88
1.3.1.18 Fault code 12.1.00	2-89
1.3.1.19 Fault code 15.1.00	2-97
1.3.1.20 Fault code 17.1.00	2-98
1.3.1.21 Fault code 18.01.00	2-99
1.3.1.22 Fault code 1D.1.00	2-102
1.3.1.23 Fault code 1F.1.00	2-115
1.3.1.24 Fault code 20.1.00	2-116
1.3.1.25 Calibration fault codes	2-121
<b>1.4 Component position</b>	<b>1-131</b>
1.4.1 Electrical/electronic components - A	1-131

1.4.2	Electrical/electronic components - B	1-137
1.4.3	Electrical/electronic components - E	1-149
1.4.4	Electrical/electronic components - F	1-160
1.4.5	Electrical/electronic components - G	1-160
1.4.6	Electrical/electronic components - H	1-161
1.4.7	Electrical/electronic components - K	1-162
1.4.8	Electrical/electronic components - M	1-165
1.4.9	Electrical/electronic components - R	1-168
1.4.10	Electrical/electronic components - S	1-170
1.4.11	Electrical/electronic components - U	1-177
1.4.12	Electrical/electronic components - X (001–1000)	1-178
1.4.13	Electrical/electronic components - X (1001–2000)	1-184
1.4.14	Electrical/electronic components - X (2001–4000)	1-190
1.4.15	Electrical/electronic components - X (4001–6000)	1-193
1.4.16	Electrical/electronic components - Y	1-225
1.4.17	Hydraulic components	1-233
<b>1.5</b>	<b>Calibrations</b>	<b>1-266</b>
1.5.1	Adjustments — General	1-266
1.5.1.1	Calibration notes	1-266
1.5.2	Adjustments — Gearbox	1-266
1.5.2.1	Calibration 4001 clutch pedal	1-266
1.5.2.2	Calibration 4002: Hand throttle	1-269
1.5.2.3	Calibration 4003: Travel range selector	1-272
1.5.2.4	Calibration 4005 driving pedal	1-276
1.5.2.5	Calibration 4007: Transmission ratio characteristic	1-278
1.5.2.6	Calibration 4009: Turbo-clutch function	1-282
1.5.2.7	Calibration 4010 driving pedal resolution	1-286
1.5.3	Adjustments — Sensors and functions	1-289
1.5.3.1	Calibration 1001 crossgate lever	1-289
1.5.3.2	Calibration 1003/1004/1005/1006 Linear modules	1-295
1.5.3.3	Calibration 2401 steering angle sensor	1-299
1.5.3.4	Calibration 2401 - checking the calibration accuracy	1-303
1.5.3.5	Calibration 2403: Steering valve, when required.	1-305
1.5.3.6	Calibration 6034: Rear PTO clutch	1-309
1.5.3.7	Calibration 7034 front PTO clutch	1-312
1.5.3.8	Calibration 7666: Front axle suspension	1-315
1.5.3.9	Calibration 8001 rear EPC - depth control	1-318
1.5.3.10	Calibration 8002: Rear EPC - position control	1-321
1.5.3.11	Calibration 9001 front EPC - depth control	1-325
1.5.3.12	Calibration 9002 front EPC - position control	1-328
1.5.3.13	Heating valve calibration - automatic air-conditioning system	1-331
1.5.3.14	Speed display calibration	1-333
<b>3</b>	<b>Gearbox</b>	<b>3-1</b>
<b>3.1</b>	<b>Gearbox control</b>	<b>3-3</b>
3.1.1	Transmission control system functional sequence	3-3
3.1.2	Gearbox hydraulics wiring diagram — 842.100.000.002	3-7
3.1.3	Transmission function diagram	3-10
3.1.4	Position of transmission components	3-16
3.1.5	Hydraulic pressure measuring points on transmission and comfort controls	3-23
3.1.6	Measuring transmission pressure	3-26
3.1.7	Transmission pressure measurement (fax template)	3-26
3.1.8	Transmission comfort control functions pressure measurement report: Fax template.	3-28
3.1.9	Test the clutch/turbo-clutch valve	3-29
<b>3.2</b>	<b>Differential unit</b>	<b>3-32</b>
3.2.1	Dismantling differential	3-32

3.2.2 Assemble the differential . . . . .	3-37
3.2.3 Dismantling the pinion shaft . . . . .	3-43
3.2.4 Adjusting and fitting the pinion shaft . . . . .	3-47
3.2.5 Install differential and set backlash . . . . .	3-55
<b>3.3 Final drive axle . . . . .</b>	<b>3-61</b>
3.3.1 Remove final drive axle . . . . .	3-61
3.3.2 Install final drive axle . . . . .	3-65
3.3.3 Dismantling and reassembling final drive axle . . . . .	3-69
3.3.4 Technical drawing of drive axle with TPMS . . . . .	3-84
<b>3.4 Brake system . . . . .</b>	<b>3-86</b>
3.4.1 Warning . . . . .	3-86
3.4.2 Hydraulic brake system: single-circuit brake, 1 pedal . . . . .	3-87
3.4.3 Hydraulic brake system: single-circuit brake, 2 pedals . . . . .	3-90
3.4.4 Hydraulic brake system: dual-circuit, 1 pedal . . . . .	3-93
3.4.5 Connection assignment on the brake valve block for the trailer spool valve . . . . .	3-96
3.4.6 Hand brake emergency release . . . . .	3-99
3.4.7 Check hydraulic brake system . . . . .	3-100
3.4.8 Technical drawing of rear wheel brake . . . . .	3-103
3.4.9 Component location - Brake . . . . .	3-104
3.4.10 Dismantle rear wheel brake . . . . .	3-108
3.4.11 Install rear wheel brake . . . . .	3-110
3.4.12 Bleed the hydraulic brake system . . . . .	3-114
3.4.13 Adjust the S105/106 brake switch . . . . .	3-116
3.4.14 Check the pilot control for the pneumatic trailer brake . . . . .	3-118
<b>3.5 Vario insert . . . . .</b>	<b>3-119</b>
3.5.1 Remove the Vario insert . . . . .	3-119
3.5.2 Fit the Vario insert . . . . .	3-129
3.5.3 Top up the transmission oil . . . . .	3-139
3.5.4 Remove actuator shaft . . . . .	3-140
3.5.5 Fit actuator shaft . . . . .	3-142
3.5.6 Remove connecting rod . . . . .	3-146
3.5.7 Fit coupling rod . . . . .	3-148
3.5.8 Dismantle control housing . . . . .	3-151
3.5.9 Fit control housing . . . . .	3-153
3.5.10 Install B014 hydrostatic collecting shaft sensor . . . . .	3-155
3.5.11 Install B015 bevel pinion sensor . . . . .	3-158
<b>3.6 Cardan brake . . . . .</b>	<b>3-161</b>
3.6.1 Technical drawing of Cardan shaft brake . . . . .	3-161
3.6.2 Remove cardan shaft brake . . . . .	3-163
3.6.3 Installing cardan shaft brake . . . . .	3-167
<b>3.7 Front PTO . . . . .</b>	<b>3-178</b>
3.7.1 Front PTO valve block . . . . .	3-178
3.7.2 Front PTO transmission . . . . .	3-179
3.7.3 Front PTO drive . . . . .	3-180
3.7.4 Remove front PTO clutch . . . . .	3-182
3.7.5 Fit the front PTO clutch . . . . .	3-190
3.7.6 Remove front PTO pump . . . . .	3-197
3.7.7 Install front PTO pump . . . . .	3-199
3.7.8 Remove front PTO stub shaft . . . . .	3-201
3.7.9 Install front PTO stub shaft . . . . .	3-203
<b>3.8 Rear PTO . . . . .</b>	<b>3-204</b>
3.8.1 Technical drawing of rear PTO . . . . .	3-204
3.8.2 Remove of rear PTO clutch . . . . .	3-207
3.8.3 Install rear PTO clutch . . . . .	3-215
3.8.4 Remove and dismantle rear PTO transmission . . . . .	3-224
3.8.5 Install rear PTO transmission . . . . .	3-229
<b>3.9 Front wheel drive . . . . .</b>	<b>3-235</b>

3.9.1	Technical drawing: Front-wheel drive shaft . . . . .	3-235
3.9.2	Removing and dismantling the front wheel drive clutch . . . . .	3-237
3.9.3	Fit the front wheel drive clutch . . . . .	3-241
<b>3.10</b>	<b>Hydrodamp . . . . .</b>	<b>3-249</b>
3.10.1	Remove the hydrodamp . . . . .	3-249
3.10.2	Fit the hydrodamp . . . . .	3-251
<b>4</b>	<b>Engine . . . . .</b>	<b>4-1</b>
<b>4.1</b>	<b>Engine . . . . .</b>	<b>4-3</b>
4.1.1	Faults on the Common Rail diesel engine (without fault code) . . . . .	4-3
4.1.2	Special tools for diesel engines (Deutz) . . . . .	4-7
4.1.3	Fax template for determining the specific engine lubricating oil consumption . . . . .	4-33
4.1.4	Determining engine power - comparison of standards and directives . . . . .	4-37
4.1.5	Calculating the fuel consumption of a diesel engine . . . . .	4-38
4.1.6	PTO power measurement . . . . .	4-46
4.1.7	General description of the common rail system . . . . .	4-48
4.1.8	Emergency operation (emergency function) . . . . .	4-51
4.1.9	Deutz TCD/TTCD diesel engines: Automatic system calibration . . . . .	4-52
4.1.10	A099 - engine control unit . . . . .	4-71
4.1.11	B055 - foot throttle sensor . . . . .	4-75
4.1.12	B085 camshaft speed sensor . . . . .	4-76
4.1.13	B086 rail pressure sensor . . . . .	4-78
4.1.14	B087 fuel low pressure sensor . . . . .	4-80
4.1.15	B088 - sensor, crankshaft speed . . . . .	4-81
4.1.16	B089 engine temperature sensor (Deutz) . . . . .	4-82
4.1.17	B090 oil pressure sensor . . . . .	4-83
4.1.18	B091 - water in fuel sensor . . . . .	4-83
4.1.19	B092 charge air pressure/temperature sensor . . . . .	4-85
4.1.20	Starter control . . . . .	4-86
<b>4.2</b>	<b>Cylinder head . . . . .</b>	<b>4-88</b>
4.2.1	Adjust the valves . . . . .	4-88
4.2.2	Remove and install the injector and injector sleeve . . . . .	4-98
<b>4.3</b>	<b>Cooling system . . . . .</b>	<b>4-125</b>
4.3.1	Coolant circuit TTCD 6.1 . . . . .	4-125
<b>4.4</b>	<b>Fuel system . . . . .</b>	<b>4-127</b>
4.4.1	Fuel system . . . . .	4-127
4.4.2	Pressure checking (Deutz TCD 4.1/6.1/7.8) common rail system "High-pressure system 1600/2000 bar operating pressure", test injector, Y091 dispensing unit, test high-pressure pump . . . . .	4-128
4.4.3	Water sedimentor (pre-filter) . . . . .	4-192
4.4.4	Fuel pump . . . . .	4-193
4.4.5	Y091 - dispensing unit (fuel) . . . . .	4-193
4.4.6	High-pressure pump (PF 45) . . . . .	4-197
4.4.7	High-pressure accumulator: Common rail . . . . .	4-198
4.4.8	Design and function of the high-pressure relief valve . . . . .	4-199
4.4.9	Y095 to Y101 - Injectors 1 to 6 . . . . .	4-200
4.4.10	Measuring fuel return pressure . . . . .	4-204
4.4.11	Measuring low fuel pressure . . . . .	4-211
4.4.12	Measuring low fuel pressure at the Y091 dispensing unit . . . . .	4-215
4.4.13	Removing and installing the high-pressure limiting valve and rail pressure sensor . . . . .	4-217
4.4.14	Bleeding air from the fuel system . . . . .	4-220
<b>4.5</b>	<b>Exhaust gas system . . . . .</b>	<b>4-222</b>
4.5.1	Charge air system and exhaust gas after-treatment . . . . .	4-222
4.5.2	CSF particulate filter for reducing soot particles . . . . .	4-228
4.5.3	SCR catalytic converter . . . . .	4-233
4.5.4	Components of the exhaust after-treatment system . . . . .	4-238

4.5.5	Fault analysis on A084 supply module / Y120 "AdBlue" (read faults / flush / check SCR system) . . . . .	4-243
4.5.6	AdBlue dosing system diagnostics using the FENDIAS diagnostics program (Deutz-Serdia) . . . . .	4-281
4.5.7	AdBlue dosing system: AdBlue consumption and fuel consumption . . . . .	4-300
<b>5</b>	<b>Overall system/front axle . . . . .</b>	<b>5-1</b>
<b>5.1</b>	<b>Suspension . . . . .</b>	<b>5-3</b>
5.1.1	Functional plans . . . . .	5-3
5.1.2	Disassemble and reassemble suspension cylinder . . . . .	5-10
<b>5.2</b>	<b>Cardan shaft . . . . .</b>	<b>5-12</b>
5.2.1	Technical drawing: Front-wheel drive shaft . . . . .	5-12
<b>6</b>	<b>Steering . . . . .</b>	<b>6-1</b>
<b>6.1</b>	<b>Steering . . . . .</b>	<b>6-3</b>
6.1.1	Steering hydraulics . . . . .	6-3
6.1.2	Steering hydraulics . . . . .	6-4
6.1.3	Steering monitoring . . . . .	6-8
6.1.4	Remove the steering servo unit. . . . .	6-10
6.1.5	Install the steering servo unit . . . . .	6-13
6.1.6	Remove the RÜFA steering servo unit . . . . .	6-16
<b>7</b>	<b>Vehicle layout . . . . .</b>	<b>7-1</b>
<b>7.1</b>	<b>Layout . . . . .</b>	<b>7-3</b>
7.1.1	Remove, install and repair turntable from operator's seat (Rüfa) . . . . .	7-3
<b>8</b>	<b>Overall system/air conditioning system . . . . .</b>	<b>8-1</b>
<b>8.1</b>	<b>Air-conditioning system . . . . .</b>	<b>8-3</b>
8.1.1	Diagram: Automatic air conditioning system . . . . .	8-3
8.1.2	Air conditioning unit service hatch . . . . .	8-6
8.1.3	Removing the air conditioning unit (HVAC) . . . . .	8-8
8.1.4	Installing the air conditioning unit (HVAC) . . . . .	8-13
8.1.5	Removing the air box (B071, M015, M016) . . . . .	8-18
8.1.6	Installing the air box . . . . .	8-20
8.1.7	Assembly and disassembly of the dryer module for the air conditioning condenser . . . . .	8-23
<b>9</b>	<b>Cab . . . . .</b>	<b>9-1</b>
<b>9.1</b>	<b>Cab . . . . .</b>	<b>9-3</b>
9.1.1	Reverse drive control function and operation . . . . .	9-3
9.1.2	Remove the cab . . . . .	9-7
9.1.3	Attaching the cab . . . . .	9-15
9.1.4	Glue in the front windscreen . . . . .	9-22
9.1.5	Tightening torques of the door furniture . . . . .	9-28
<b>10</b>	<b>Power lift/EPC electro-hydraulic control . . . . .</b>	<b>10-1</b>
<b>10.1</b>	<b>Power lift/EPC electro-hydraulic control . . . . .</b>	<b>10-3</b>
10.1.1	Slip control system operation and function . . . . .	10-3
10.1.2	Functional description of B031/B032 - draft sensing pin left/right . . . . .	10-4
10.1.3	EPC valves . . . . .	10-8
10.1.4	Functional plans . . . . .	10-13
10.1.5	Lower link stabilizer functional plan . . . . .	10-25
10.1.6	Remove the rear EPC valve . . . . .	10-26
10.1.7	Fit the rear EPC valve . . . . .	10-29
10.1.8	Dismantle the rear pressure relief valve DW Y062 . . . . .	10-34
10.1.9	Assemble the rear pressure relief valve DW Y062 . . . . .	10-35

<b>10.2 Power lift control</b>	10-36
10.2.1 Technical drawing of the hydr. lower linkage support	10-36
10.2.2 Remove the lower linkage stabilizer solenoid valve Y082/Y083	10-40
10.2.3 Install the Y082/Y083 lower link stabilizer solenoid valves	10-41
<b>11 Overall system/compressed air system</b>	11-1
<b>11.1 Compressed air system</b>	11-3
11.1.1 Compressed air system (area: trailer brake)	11-3
11.1.2 Compressed air system diagram – 842.880.000.001_b	11-10
11.1.3 Compressed air system diagram - 842.880.000.002	11-13
11.1.4 Tightening torques for compressed-air connection system	11-15
11.1.5 "VarioGrip" tire pressure monitoring system, function and layout	11-17
<b>12 Electrical system</b>	12-1
<b>12.1 Electrical system</b>	12-5
12.1.1 Circuit diagrams for A050 - basic control ECU	12-5
<b>12.2 Measure and test - A components</b>	12-12
12.2.1 A007 - instrument panel	12-12
12.2.2 A009 - actuator unit	12-24
12.2.3 Installing A009 actuator unit	12-32
12.2.4 A011 - radar sensor	12-38
12.2.5 A013 - circuit board, microfuses	12-41
12.2.6 A036 - "dashboard" control panel	12-47
12.2.7 A038 - relay; +supply; K BUS	12-51
12.2.8 A038 - head light, side light, direction indicator	12-62
12.2.9 A038 - horn, rotating beacon, wide vehicle marker	12-68
12.2.10 A038 - work lights	12-70
12.2.11 A038 - interior lighting	12-73
12.2.12 A038 - mirror heating, rear window heating, windscreen heating; windscreen wipers	12-75
12.2.13 A038 - automatic air conditioning system (heating, air conditioning, ventilation)	12-79
12.2.14 A038 - sockets	12-85
12.2.15 A038 - Starter and tank pump	12-94
12.2.16 A038 - reverse drive control (Rüfa)	12-97
12.2.17 A038 Work light activation	12-103
12.2.18 Test A038 with 160-pin adapter box	12-111
12.2.19 A050 - basic control unit ECU	12-114
12.2.20 A050 - CAN BUS (K BUS, G BUS, V BUS, ISO BUS)	12-118
12.2.21 Test A050 with 160-pin adapter box	12-126
12.2.22 A077 - immobilizer ECU: Functional description	12-128
12.2.23 A077 - immobilizer ECU	12-129
12.2.24 A082 - nitrogen oxide NOx sensor 1, upstream of SCR (Not G3)	12-131
12.2.25 A083 - nitrogen oxide NOx sensor 2, downstream of SCR (Not G3)	12-132
12.2.26 A084 - AdBlue module (Not G3)	12-133
12.2.27 A087 - tire pressure monitoring system (TPMS)	12-135
12.2.28 A099 - ECU engine control unit (EDC 17)	12-137
12.2.29 Test A099 with 160-pin adapter box	12-143
12.2.30 A100 - MFA, multifunction armrest	12-145
12.2.31 Test A100 with 160-pin adapter box	12-152
12.2.32 A133 - air intake throttle ECU	12-154
12.2.33 A134 - exhaust gas recirculation ECU	12-155
12.2.34 A136 - wastegate ECU	12-157
12.2.35 A177 - AGCO Connectivity Module (ACM)	12-158
<b>12.3 Measure and test - B components</b>	12-160
12.3.1 B002 - front PTO speed sensor	12-160
12.3.2 B003 - front axle suspension position sensor	12-161
12.3.3 B004 - vacuum switch (air filter)	12-162

12.3.4	B007 - fuel level sensor	12-164
12.3.5	B008 - High pressure sensor 1	12-166
12.3.6	B009 - discharge temperature sensor	12-168
12.3.7	B013 - hydraulic oil temperature sensor	12-169
12.3.8	B014 - Collecting shaft speed sensor	12-171
12.3.9	B015 - bevel pinion sensor	12-172
12.3.10	B016 - travel speed range detection sensor	12-174
12.3.11	B017 - clutch pedal sensor	12-175
12.3.12	B020 - rear PTO (stub shaft) speed sensor	12-176
12.3.13	B021 - rear PTO clutch speed sensor	12-177
12.3.14	B031 - right draft sensing pin	12-179
12.3.15	B032 left-hand draft sensing pin sensor	12-180
12.3.16	B039 - high pressure sensor 2	12-182
12.3.17	B040 - Front power lift position sensor	12-184
12.3.18	B055 - foot throttle sensor	12-185
12.3.19	B060 compressed air supply sensor	12-186
12.3.20	B071 - output temperature sensor	12-188
12.3.21	B073 - Solar thermal radiation sensor	12-189
12.3.22	B074 - interior temperature sensor	12-191
12.3.23	B076 - exterior temperature sensor	12-193
12.3.24	B081 - steering wheel sensor (360°)	12-195
12.3.25	B084 - hydraulic oil level sensor	12-197
12.3.26	B085 - camshaft speed sensor	12-199
12.3.27	B086 - rail pressure sensor	12-202
12.3.28	B087 - low fuel pressure sensor	12-205
12.3.29	B088 - sensor, crankshaft speed	12-207
12.3.30	B089 - engine temperature sensor (Deutz)	12-210
12.3.31	B090 - oil pressure sensor	12-213
12.3.32	B091 - water in fuel sensor	12-215
12.3.33	B092 - boost pressure/charge air temperature sensor	12-216
12.3.34	B097 - brake pressure sensor	12-219
12.3.35	B102 - AdBlue temperature and level sensor	12-222
12.3.36	B105 - Exhaust gas temperature sensor upstream of SCR (Not G3)	12-225
12.3.37	B145 - rear power lift position sensor	12-227
12.3.38	B168 - steering angle sensor	12-228
12.3.39	B187 - evaporator temperature sensor	12-229
12.3.40	B191 - Exhaust gas pressure sensor upstream of turbo	12-231
12.3.41	B192 - CSF differential pressure sensor (Not G3)	12-232
12.3.42	B193 - exhaust temperature upstream of CSF sensor (Not G3)	12-234
12.3.43	B194 - pressure downstream of CSF sensor (Not G3)	12-236
12.3.44	B217 - temperature sensor downstream of venturi (Not G3)	12-237
12.3.45	B218 - venturi differential pressure sensor (Not G3)	12-239
12.3.46	B283 - Supply pressure monitoring sensor 2	12-240
12.3.47	B284 - Supply pressure monitoring sensor 1	12-242
12.3.48	B290 - Brake pedal lock sensor	12-244
<b>12.4</b>	<b>Measure and test - CAN bus</b>	<b>12-246</b>
12.4.1	Measure the CAN bus	12-246
<b>12.5</b>	<b>Measure and test - E components</b>	<b>12-249</b>
12.5.1	E050 to E280 - work lights	12-249
12.5.2	E063 - air-dryer heater element (temperature-controlled)	12-249
12.5.3	E216 - AdBlue heater suction and return line and E217 - AdBlue heater pressure line	12-251
<b>12.6</b>	<b>Measure and test - G components</b>	<b>12-253</b>
12.6.1	G001 - battery	12-253
12.6.2	G002/G004 - right/left alternators	12-254
<b>12.7</b>	<b>Measure and test - H components</b>	<b>12-257</b>
12.7.1	H011 - horn	12-257



<b>12.8 Measure and test - K components</b>	<b>12-258</b>
12.8.1 K063 - Grid heater flange relay	12-258
12.8.2 K065 - starter relay	12-259
12.8.3 K083 - AdBlue relay	12-259
12.8.4 K090 - AdBlue module heater relay	12-260
12.8.5 K091 - AdBlue heating relay for suction and return line	12-261
12.8.6 K092 - AdBlue heating relay for pressure line	12-261
<b>12.9 Measure and test - M components</b>	<b>12-262</b>
12.9.1 M001 - starter	12-262
12.9.2 M003/M005 - front/rear screen washer pumps	12-266
12.9.3 M004 - rear wiper motor	12-267
12.9.4 M015/M016 - actuator motor for ventilation air flap	12-269
12.9.5 M017 - primary fan	12-271
12.9.6 M046/M047 - headlight actuator motor (headlight adjustment)	12-273
12.9.7 M048 - main fan	12-275
12.9.8 M049 - heater valve	12-277
12.9.9 M054 - cooling water pump	12-278
12.9.10 M055 - front wiper motor	12-279
<b>12.10 Measure and test - S components</b>	<b>12-281</b>
12.10.1 S017 - filter contamination switch	12-281
12.10.2 S019 - left external rear PTO button	12-282
12.10.3 S020 - right external rear PTO button	12-283
12.10.4 S021/S022 - external front power lift button	12-285
12.10.5 S025 - variable displacement pump pressure monitoring switch	12-286
12.10.6 S027/S028/S029/S030 - external (rear power lift) buttons	12-287
12.10.7 S034 - coolant level switch	12-289
12.10.8 S035 High & low-pressure switch for air conditioning system	12-290
12.10.9 S045 reverse drive switch	12-291
12.10.10 S047 - engine brake switch	12-293
12.10.11 S053 - driver seat switch	12-293
12.10.12 S067/S068 - external valve button	12-295
12.10.13 S074 - starter lockout switch	12-296
12.10.14 S075 - Wheel driven steering pump flow monitor switch	12-298
12.10.15 S080 - hand brake switch	12-299
12.10.16 S085 - reverse drive (RÜFA) actuation switch	12-300
12.10.17 S105/S106 - left/right brake switches	12-301
12.10.18 S119 - hydraulic oil filter contamination switch	12-302
12.10.19 S134 - auxiliary pump pressure monitor switch	12-303
12.10.20 S157 - forward/reverse shuttle switch	12-304
12.10.21 S174/175 - right-hand external valve actuation button	12-305
<b>12.11 Measure and test - X components</b>	<b>12-308</b>
12.11.1 X007 - "black" implement socket	12-308
12.11.2 X008 - counter input (onboard computer) "blue"	12-310
12.11.3 X015 - external control, rear EPC (external position sensor)	12-313
12.11.4 X015 external control (Area: 3rd and 4th hydraulic circuit)	12-315
12.11.5 X015 - external control socket (area: automatic steering axle mode)	12-316
12.11.6 X017 - front socket (with front power lift only)	12-322
12.11.7 X018 - trailer socket	12-323
12.11.8 X028 - cab ISO socket	12-324
12.11.9 X400 ISO BUS PCB (implement socket)	12-325
12.11.10 X1048 ABS socket (anti-lock system on trailer)	12-335
<b>12.12 Measure and test - Y components</b>	<b>12-337</b>
12.12.1 Y002 - travel speed range I solenoid valve	12-337
12.12.2 Y003 - travel speed range II solenoid valve	12-338
12.12.3 Y004 clutch/turbo-clutch solenoid valve	12-340
12.12.4 Y005 - Speed limiter solenoid valve	12-341
12.12.5 Y008 - rear PTO (clutch) solenoid valve	12-343

12.12.6	Y009 - 4WD solenoid valve	12-344
12.12.7	Y010 - differential lock solenoid valve	12-346
12.12.8	Y011 - front PTO (clutch) solenoid valve	12-347
12.12.9	Y012 - suspension loading/oil preheating solenoid valve	12-349
12.12.10	Y013 - Suspension lowering solenoid valve	12-350
12.12.11	Y021 - raise solenoid valve (standard front power lift)	12-352
12.12.12	Y021 - front pressure compensator lock valve	12-353
12.12.13	Y022 - standard front power lift lowering solenoid valve	12-355
12.12.14	Y026/Y027 - rear PTO stage I/II selection solenoid valve	12-356
12.12.15	Y032 - control pressure solenoid valve	12-358
12.12.16	Y055 - rear pressure compensator lock valve	12-359
12.12.17	Y060 - hydraulic oil preheater solenoid valve	12-361
12.12.18	Y062 - rear field pressure control solenoid valve	12-362
12.12.19	Y063 - wobble stabilizer solenoid valve	12-364
12.12.20	Y065 - Suspension raising solenoid valve	12-365
12.12.21	Y067 - Suspension locking solenoid valve	12-367
12.12.22	Y082/Y083 - lock and release lower link stabilizer solenoid valve	12-368
12.12.23	Y084 - power beyond solenoid valve	12-370
12.12.24	Y091 - fuel dispensing unit	12-371
12.12.25	Y092/Y093 - reverse drive (RÜFA) rotation solenoid valves	12-372
12.12.26	Y095 to Y098, Y100, Y101 - injectors 1 to 6	12-374
12.12.27	Y120 - AdBlue metering valve	12-378
12.12.28	Y168 - front ground pressure control solenoid valve	12-380
12.12.29	Y169 - AdBlue tank heater solenoid valve	12-382
12.12.30	Y170 - engine brake solenoid valve	12-384
12.12.31	Y176-Y185	12-385
12.12.32	Y209 - reversible fan (Hägele)	12-387
12.12.33	Y222 - Visco fan (Viscotronic)	12-391
12.12.34	Y241 - Air dryer solenoid valve	12-393
<b>13</b>	<b>Hydraulic pump installation</b>	<b>13-1</b>
13.1	<b>Hydraulic pump installation</b>	<b>13-3</b>
13.1.1	Fit wheel-driven emergency steering pump	13-3
<b>14</b>	<b>Hydraulic pipes</b>	<b>14-1</b>
14.1	<b>Hydraulic trailer brake</b>	<b>14-3</b>
14.1.1	Function of the hydraulic trailer brake (French and Italian versions)	14-3
14.2	<b>Reverse operation</b>	<b>14-27</b>
14.2.1	Technical drawing of the turntable (reverse drive)	14-27
14.2.2	Seal the turntable	14-33
<b>15</b>	<b>Overall system/hydraulic equipment</b>	<b>15-1</b>
15.1	<b>Hydraulic equipment</b>	<b>15-3</b>
15.1.1	Pressure control — PR (LS pump)	15-3
15.1.2	Pressure measuring points overview	15-6
15.1.3	External pressure rise (Power Beyond)	15-7
15.1.4	Test report, fax template	15-8
15.1.5	SB 33 EHS 1 RD spool valves	15-11
15.1.6	Central control block	15-12
<b>16</b>	<b>Electronics</b>	<b>16-1</b>
16.1	<b>Electronics</b>	<b>16-3</b>
16.1.1	Fendt 800 Vario Tier IIIb electronics concept	16-3
16.1.2	Functional description of the A050 basic control ECU	16-9
<b>17</b>	<b>Service</b>	<b>17-1</b>
17.1	<b>Special tools</b>	<b>17-3</b>

---

17.1.1 Special tools . . . . .	17-3
<b>17.2 FENDIAS . . . . .</b>	<b>17-4</b>
17.2.1 EOL programming . . . . .	17-4
17.2.2 Programming the immobilizer - introduction . . . . .	17-10
17.2.3 Teaching in the vehicle key . . . . .	17-12
17.2.4 Create activation package . . . . .	17-16
17.2.5 Apply activation package . . . . .	17-19
17.2.6 Replace components . . . . .	17-22

# 1. Overall system/tractor

<b>1.1 General</b>	<b>1-3</b>
1.1.1 Notes on documentation	1-3
1.1.2 Safety instructions and measures	1-4
1.1.3 Importance of and position of the safety decals	1-7
1.1.4 Note on hydraulics	1-18
1.1.5 Assignment table FENDT T types to the EU Type Approval Number	1-18
1.1.6 Support points for jack and support stands	1-19
1.1.7 Location of the identification plates	1-20
1.1.8 Biodegradable hydraulic oil	1-23
1.1.9 Tightening torque for screws with a galvanized surface	1-24
1.1.10 Tightening torque for screws and bolts with VDA coating	1-25
<b>1.2 Technical specification</b>	<b>1-27</b>
1.2.1 Technical data: 0000 general	1-27
1.2.2 Technical data: 1000 - Transmission	1-28
1.2.3 Technical data: 2000 - Diesel engine	1-34
1.2.4 Technical data: 3000 front axle	1-42
1.2.5 Technical data: 5500 air conditioning system/8100 cab/8600 EPC control valve	1-44
1.2.6 Technical data: 8800 compressed air system / 9000 electrical system / 9200 front power lift	1-45
1.2.7 Technical data: 9600 hydraulic equipment	1-46
<b>1.3 Fault code tables 800 / 900 Vario S4</b>	<b>2-1</b>
<b>1.3.1 Fault code tables</b>	<b>2-3</b>
1.3.1.1 Confirming, calling up, deleting fault codes	2-3
1.3.1.2 Fault code 00.0.00	2-5
1.3.1.3 Fault code 01.0.00	2-8
1.3.1.4 Fault code 02.1.00	2-14
1.3.1.5 Error code 03.1.00	2-16
1.3.1.6 Fault code 04.1.00	2-18
1.3.1.7 Fault code 05.1.00	2-31
1.3.1.8 Fault code 06.1.00	2-36
1.3.1.9 Fault code 07.1.00	2-41
1.3.1.10 Fault code 08.1.00	2-43
1.3.1.11 Fault code 09.1.00	2-49
1.3.1.12 Fault code 0A.1.00	2-54
1.3.1.13 Fault code 0B.1.00	2-73
1.3.1.14 Fault code 0D.1.00	2-76
1.3.1.15 Fault code 0E.1.00	2-79
1.3.1.16 Error code 0F.1.00	2-84
1.3.1.17 Fault code 10.1.00	2-88
1.3.1.18 Fault code 12.1.00	2-89
1.3.1.19 Fault code 15.1.00	2-97
1.3.1.20 Fault code 17.1.00	2-98
1.3.1.21 Fault code 18.01.00	2-99
1.3.1.22 Fault code 1D.1.00	2-102
1.3.1.23 Fault code 1F.1.00	2-115
1.3.1.24 Fault code 20.1.00	2-116
1.3.1.25 Calibration fault codes	2-121
<b>1.4 Component position</b>	<b>1-131</b>
1.4.1 Electrical/electronic components - A	1-131

1.4.2	Electrical/electronic components - B	1-137
1.4.3	Electrical/electronic components - E	1-149
1.4.4	Electrical/electronic components - F	1-160
1.4.5	Electrical/electronic components - G	1-160
1.4.6	Electrical/electronic components - H	1-161
1.4.7	Electrical/electronic components - K	1-162
1.4.8	Electrical/electronic components - M	1-165
1.4.9	Electrical/electronic components - R	1-168
1.4.10	Electrical/electronic components - S	1-170
1.4.11	Electrical/electronic components - U	1-177
1.4.12	Electrical/electronic components - X (001–1000)	1-178
1.4.13	Electrical/electronic components - X (1001–2000)	1-184
1.4.14	Electrical/electronic components - X (2001–4000)	1-190
1.4.15	Electrical/electronic components - X (4001–6000)	1-193
1.4.16	Electrical/electronic components - Y	1-225
1.4.17	Hydraulic components	1-233
<b>1.5</b>	<b>Calibrations</b>	<b>1-266</b>
1.5.1	Adjustments — General	1-266
1.5.1.1	Calibration notes	1-266
1.5.2	Adjustments — Gearbox	1-266
1.5.2.1	Calibration 4001 clutch pedal	1-266
1.5.2.2	Calibration 4002: Hand throttle	1-269
1.5.2.3	Calibration 4003: Travel range selector	1-272
1.5.2.4	Calibration 4005 driving pedal	1-276
1.5.2.5	Calibration 4007: Transmission ratio characteristic	1-278
1.5.2.6	Calibration 4009: Turbo-clutch function	1-282
1.5.2.7	Calibration 4010 driving pedal resolution	1-286
1.5.3	Adjustments — Sensors and functions	1-289
1.5.3.1	Calibration 1001 crossgate lever	1-289
1.5.3.2	Calibration 1003/1004/1005/1006 Linear modules	1-295
1.5.3.3	Calibration 2401 steering angle sensor	1-299
1.5.3.4	Calibration 2401 - checking the calibration accuracy	1-303
1.5.3.5	Calibration 2403: Steering valve, when required.	1-305
1.5.3.6	Calibration 6034: Rear PTO clutch	1-309
1.5.3.7	Calibration 7034 front PTO clutch	1-312
1.5.3.8	Calibration 7666: Front axle suspension	1-315
1.5.3.9	Calibration 8001 rear EPC - depth control	1-318
1.5.3.10	Calibration 8002: Rear EPC - position control	1-321
1.5.3.11	Calibration 9001 front EPC - depth control	1-325
1.5.3.12	Calibration 9002 front EPC - position control	1-328
1.5.3.13	Heating valve calibration - automatic air-conditioning system	1-331
1.5.3.14	Speed display calibration	1-333

---

## 1.1 General

---

### 1.1.1 Notes on documentation

---

To ensure that the information is structured in a user-friendly manner, the service documentation is divided into the operator's manual and the workshop manual.

The operator's manual includes a general description as well as instructions for all necessary maintenance work.

Knowledge of the owner's manual is essential to understand the workshop manual. This is particularly important for safety instructions. The workshop manual describes repairs to assemblies and components that will require more effort and suitably qualified specialists to carry out.

#### **Note**

This workshop manual provides notes for trained technicians to maintain our tractors. Read and observe the information in this documentation. This will help you prevent accidents and safeguard the manufacturer's warranty.

The respective accident prevention rules as well as other generally recognized safety and occupational health rules must be observed.

The tractor is built solely for the purpose defined by the implement manufacturer. Any other type of use is considered unauthorized. The manufacturer bears no liability for any damage resulting from improper use. The user bears this risk alone. Intended use includes maintaining operating, service and maintenance conditions as specified by the manufacturer.

Operation, maintenance and repair of the tractor may only be carried out by people who are familiar with this equipment and aware of the associated dangers. Ensure that this documentation is available to and understood by everyone involved in operation, maintenance and repair. Not observing this documentation can lead to faults, damage and personal injury, for which the manufacturer assumes no liability. The prerequisite for the tractor being correctly serviced and maintained is the perfect condition and availability of all necessary equipment, standard tools and general workshop equipment as well as special tools. Special tools must only be used where absolutely necessary. The tools are displayed where they need to be used in each case.

The machine must be maintained according to its proper use. Always replace parts with genuine FENDT spare parts! When ordering parts, please provide the chassis number as per the most up-to-date spare parts documentation.

Only parts approved by the manufacturer for that specific purpose may be used for any alterations. The manufacturer will not accept liability for any damage resulting from unauthorized modifications to the tractor. Non-compliance invalidates the warranty!

Workshops should also refer to documentation on maintenance work and technical data. Once maintenance is complete, take a test drive to ensure the vehicle's correct operation and road safety.

We reserve the right to make design changes in light of technical developments.

#### **Notes on repairs**

The assembly/disassembly instructions shown correspond to the design status at the time the workshop manual was drawn up.

Further technical development of the product and additions related to different versions may require alternative working processes that do not pose too many difficulties to trained and qualified specialists.

These assembly/disassembly instructions shall be invalidated upon issue of the next version of this document.

---

## 1.1.2 Safety instructions and measures

---

### Important notes on work safety

The statutory accident prevention regulations (available from professional associations or specialist shops) must be observed. These depend on the operating site, operating mode and fuels and lubricants used. Special protective measures dependent on the respective procedures are specified in the corresponding repair guidelines and highlighted.

### This handbook uses the following safety tips



**DANGER:** Indicates an impending dangerous situation that will lead to serious injury or death if not avoided.



**WARNING:** Indicates a potentially dangerous situation that could lead to serious injury or death if not avoided.



**CAUTION:** Indicates a potentially dangerous situation that could lead to minor injury if not avoided.

### Please observe the following when carrying out maintenance or service work to the tractor:

Only the documentation associated with the vehicle (workshop manual and operator's manual) must be used to complete any pending work.

#### 1. General

- Only briefed personnel may operate the tractor or carry out maintenance work.
- Only use qualified specialists to carry out repairs or service work.
- Nobody may be in the cab while work is being carried out under the jacked-up tractor.
- Relieve pressure from implement lines, e.g. to the front loader.
- All people should keep clear of a lifted, unsecured load (e.g. tilted cab etc.).
- Never open or remove any safety devices while the engine is running.
- Pressurized fluids (fuel or hydraulic oil) escaping under high pressure can penetrate the skin and cause severe injuries. If this should occur, seek medical advice immediately to avoid the risk of serious infection.
- Keep at a safe distance from hot areas.
- Pressure accumulator and connected pipes are highly pressurized. Only remove and repair in accordance with instructions provided in the workshop manual.
- To avoid eye injury, do not look directly at the surface of the activated radar sensor.
- Dispose of oil, fuel and filters properly!
- Specialist knowledge and special fitting tools are required to fit tires.
- Run the tractor for a short time, then retighten all wheel nuts and bolts and check them regularly.

For correct torque values refer to TECHNICAL DATA.

- Before working on the electrical system, always remove the earth strap from the battery. Observe the following when carrying out electric welding. Before carrying out welding work on tractor or mounted implements, ensure that both battery terminals are disconnected. Attach the welding appliance's earth terminal as close to the welding spot as possible.
- Caution is required when dealing with brake fluid and battery acid as these are toxic and corrosive!
- Only use genuine FENDT spare parts.

#### 2. Working on the front-axle suspension

- The front axle suspension pressure lines between the central control block (ZSB) and the suspension cylinders, and

- the cased ASPL, ASPR and ZSP pressure accumulators



**DANGER:** are under 200 bar pressure, even when the engine is switched off and the suspension is lowered (= locked).

**Safety measures:**

**Prior to each repair and after releasing or opening in this area, the pressure must be released manually.**

**NOTE:**

The "Lock suspension/lower suspension" command has no effect!  
 Even externally energizing the solenoid valves **Y013** - lower suspension solenoid valve and **Y065** - suspension raising solenoid valve has no effect!  
 (There are hydraulic pilot-operated non-return valves built in)

**To release pressure:**

- Screw in the knurled-head screw on the **MVFS [Y013]** - Suspension lowering solenoid valve;  
 the chassis may be lowered
- Screw in the knurled-head screw on the **MVFH [Y065]** - Suspension raising solenoid valve;  
 the rebound accumulator will be relieved



Fig. 1

**Check:**

As the oil temperature rises, the emptying accumulator will make a flowing sound (barely audible in winter).

**3. Working on the brake system**



**DANGER:** The brake system hydraulic lines remain under pressure even when the engine has been switched off!

**Safety measures:**

**Before each repair to the brake system or when removing the cab, the pressure must be relieved manually.**



Fig. 2

**To release pressure:**

1. Engine must be off
2. Secure the tractor to prevent it from rolling away.
3. With the hand brake applied, press the foot brake 50 times
4. Apply the hand brake 20 times

**General notes:**



## 1. Overall system/tractor

---

- Always check the brakes before driving.
- Adjustments and repairs to the brake system must be carried out in specialist workshops or by approved brake repair technicians.
- It must not be possible to brake individual wheels when driving (lock pedals)!

### 4. Working on the engine

- After switching the engine off, wait 30 seconds before carrying out any work on the fuel system.
- Only start the engine once all safety guards have been attached and nobody is standing in the danger area.
- Never let the engine run in enclosed spaces with no exhaust gas suction system.
- Cleaning, maintenance and repair work may only be carried out once the engine is switched off and secured to prevent it starting.
- Injection pipes and high-pressure lines must not be deformed.
- Any damaged injection pipe or high-pressure line must be replaced.
- Do not loosen any injection pipes for high-pressure fuel lines while the engine is running.
- Before carrying out checks to the running engine, always perform a visual check of all high-pressure components. Suitable protective clothing (e.g. protective goggles) should be worn while doing this. Leaks indicate potential sources of danger for workshop personnel.
- In the event of leaks to the high-pressure fuel system, always remain out of range of any possible fuel spray to avoid serious injury.
- Even when no leaks to the high-pressure fuel system can be detected, workshop personnel should avoid the immediate danger area and wear suitable protective clothing (such as protective goggles) when carrying out checks to the running engine and during the first test run.
- Smoking is forbidden while carrying out work to the fuel system.
- Do not work in the proximity of sparks or naked flames.
- Never disconnect an injector while the engine is running.

### 5. Working on the PTO

- Always switch off the engine before fitting or removing the drive shaft. PTO in "0" position!
- When working on the PTO, allow no-one in the vicinity of the rotating PTO or drive shaft.
- Make sure drive shaft and PTO are equipped with shield pipes and protective funnels.
- After deactivating the PTO, it is possible that parts on the mounted implement may continue to run. In this case, do not get too close to the implement. Work may only be carried out to the implement when nothing is moving!
- When the drive shaft is removed, cover the PTO shaft with its protective cap.
- Nobody should be in the cab when installing and removing the drive shaft.

Operation of controls for the tractor and mounted implements by people in the cab, especially children, may result in severe or fatal injury.

### 6. Working on the front loader

- Before undertaking maintenance work, lower the front loader to the ground, switch off the engine and remove the ignition key.
- In the event of a collapsed pipe rupture feature, support the load before starting repair work, and slowly retract the cylinder.
- Check hydraulic hoses and pipes for signs of damage and aging regularly and replace with genuine spare parts in good time.
- Following installation and repairs, operate the tractor for a short time, then retighten all nuts and bolts and check them regularly.
- Retighten eccentric bolt for front loader attachment, if necessary.

### Disposal

The work described in the operator's manual and workshop manual includes replacing parts, fuel and lubricants. These renewed parts/fuel/lubricants must be stored, transported and disposed of in accordance

with regulations. The repairing workshop bears responsibility for this. The disposal encompasses the recycling and final disposal of parts, fuel and lubricants with recycling having the higher priority. Details about disposal and monitoring are specified in regional, national and international laws and directives, the observation of which is the sole responsibility of the repairing workshops.

---

### **1.1.3 Importance of and position of the safety decals**

---

The position and importance of the safety decals on the vehicle are explained below:

**Position:** Left C-pillar, cab interior

743.810.090.050



**WARNING:**  
Serious injury or death caused by inadequate compliance with the Operator's Manual  
Inadequate compliance with the Operator's Manual can cause damage, injuries and in serious cases death. Before operation, make sure that this Operator's Manual is available on the vehicle in legible form. The owner is responsible for providing adequate training to those personnel who are entrusted with the vehicle and for ensuring they are familiar with the instructions in the Operator's Manual and, where applicable, the service manual. The same applies to those persons who are both owner and operator.  
Observe all safety notes and instructions, and execute all measures correctly and completely at all times.



**Position:** Left B-pillar, cab interior

743.810.090.100



**WARNING:**  
Serious injury or death caused by being ejected from the cab  
When driving, an improperly closed door can open. Vehicle occupants not strapped in or not properly strapped in can be ejected from the vehicle and run over. This can cause serious injury and even death.  
Make sure that, during travel, all vehicle passengers are properly strapped in at all times.



**Position:** Left C-pillar, cab interior

743.810.090.060



**WARNING:**  
Serious injury or death caused by being ejected from the cab  
If the vehicle tips over, the door can open. Vehicle occupants not strapped in or not properly strapped in can be ejected from the vehicle. This can cause serious injury and even death.  
Make sure that, during travel, all vehicle passengers are properly strapped in at all times.



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)