

7200 and 7400 Tractors

**John Deere Waterloo Works
OMAR113565 Issue J3**

**Export Edition
LITHO IN U.S.A.
ENGLISH**

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record

all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.



-UN-25JUN93

RW22138

RX7000WE,IFC -19-04OCT93

Contents

	Page		Page
Safety	05-1	Operating the Engine	
Safety Signs	10-1	Pre-starting Checks	35-1
Controls and Instruments		Starting the Engine	35-2
Command Console	15-1	Cold Weather Starting	35-3
Function Indicators	15-1	Auxiliary Heaters	35-3
Single Lever Control	15-2	Booster Battery	35-4
Control Console	15-3	Operating the Tractor	
Instrument Panels		Foldable ROPS	40-1
Analog	15-4	Avoid Pesticides	40-2
Digital	15-6	Transmission	40-3
Display Functions	15-8	Creepers	40-5
Calibrating Tire Size-With Radar	15-9	Hydraulic System Warm-up	40-5
Performance Monitor	15-10	Mechanical Front-Wheel Drive	40-6
Lights		Differential Lock	40-6
Operating Lights		Brakes	40-7
Open Station	20-1	Hitch	
ComfortGard	20-2	Components and Controls	45-1
Hazard	20-3	Hitch Operation	45-1
Turn Signals, Horn, and Head Lights	20-3	External Raise/Lower Switch	45-4
Seven-Terminal Outlet	20-4	Sway Blocks	45-5
Operator Station		Attaching and Detaching Implements	45-6
Seats	25-1	Adjusting Implement Level	45-9
Step Removal	25-2	Adjusting Lift Links	45-10
Heater/Air Conditioner	25-3	Lateral Float	45-10
Windshield Wiper	25-4	Hitch Conversion	45-11
Steering Wheel	25-4	Remote Hydraulic Cylinders	
Handbrake	25-4	Cylinder Hoses	50-1
Radio	25-5	SCV Operation	50-1
Clock	25-6	Detent Relief Setting	50-5
Cassette	25-6	Low-Pressure Circuit	50-6
Accessory Electrical Outlet	25-7	Hydraulic Motor Return	50-6
Break-In Period		Power Beyond Valve	50-6
Engine	30-1	Load Sensing Hydraulic System	50-7
Wheel and Axle Bolts	30-1	Remote Cylinders	50-8
		Drawbar and PTO	
		Drawbar	55-1

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMAR113565 J3-19-04OCT93

COPYRIGHT© 1993
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
PTO	55-2	Hood and Side Shields	80-1
Ballast		Accessing and Charging Batteries	80-2
Guidelines	60-1	Service Interval Charts	80-4
Determining Ballast	60-4	Service/Daily or Every 10 Hours	
Liquid Weight	60-6	Check Engine Oil	85-1
Rear Cast Iron Weights	60-8	Check Coolant	85-1
Implement Codes	60-9	Check Transmission-Hydraulic Oil	85-2
Quik-Tatch Weights	60-10	Water Separator	85-2
Wheels, Tires, and Treads		Rear Axle Bearings	85-3
Guidelines	65-1	Front Wheel Bearings	85-3
Inflation Pressures	65-2	Front Axle	85-4
Tire Combinations	65-7	MFWD Axle	85-5
Wheel and Axle Bolts	65-8	Tires	85-5
Front Tread Settings		Service/250 Hours	
Standard	65-10	Change Engine Oil and Filter	90-1
Extensions	65-11	Manual Brakes	90-2
Hi-Crop	65-12	Batteries	90-3
Front Axle Adjustment	65-13	Drain Fuel Tank Sump	90-5
Toe-In		Clean Fuel Tank Vent Filter	90-5
Adjustable Axle	65-13	Wheel Bolts	90-5
MFWD	65-14	Neutral Start System	90-5
MFWD Tread Settings	65-15	Cab Air Filters	90-6
Steering Stops	65-17	MFWD Housing and Wheel Hub Oil	90-6
Adjust Fenders	65-20	Front or MFWD Axle	90-7
Rear Wheel Adjustment		MFWD Housing and Wheel Hub Oil	90-7
Cast	65-21	Hi-Crop Axle Housing Oil	90-7
Steel	65-22	Rear Window Hinge	90-8
Rear Wheel Tread Settings-Singles		Service/750 Hours	
Flanged Axles	65-23	Replace Transmission Filter	95-1
Rack and Pinion Axles	65-26	Replace Hydraulic Filter	95-1
Duals	65-29	Engine Valve Clearance	95-2
Rear Wheel Tread Settings-Duals		Rear Axle Bearings	95-2
Dual Hub Extensions	65-30	Air Intake System	95-2
Transport		Engine Idle Speeds	95-3
Driving	70-1	Coolant Conditioner	95-3
Towing Loads	70-2	Service/1500 Hours	
Towing Tractor	70-4	Change Transmission-Hydraulic Oil	100-1
Fuels, Lubricants, and Coolant		Hydraulic Oil Suction Screen	100-1
Fuel	75-1	Change MFWD Housing and Wheel Hub Oil	100-2
Engine Oil	75-3	Change Hi-Crop Axle Housing Oil	100-2
Engine Coolant	75-4	Engine Valve Clearance	100-3
Transmission-Hydraulic Oil	75-4	Fuel Injection Nozzles	100-3
MFWD Gear Oil	75-5	Draft Link Support Shaft Bushing	100-3
Grease	75-5	Belt Tensioner	100-4
Service		Repack Front Wheel Bearings	100-4
Service Reference Chart	80-1		

Continued on next page

Contents

	Page
Service/Annual	
Air Cleaner	105-1
Draft Link Support Shaft Bushing	105-1
Service/Two Years	
Flush Cooling System and Replace Thermostats	110-1
Service/4500 Hours	
Engine Crankshaft Damper	115-1
Service/As Required	
Transmission Filter	120-1
Hydraulic Filter	120-1
Fuel Prefilter	120-2
Fuel Filter	120-2
Bleed Fuel System	120-3
Bleed Brakes	120-4
Engine Compartment	120-4
Grille Screens, Radiator, and Condenser . . .	120-5
Air Cleaner	120-6
Fan Belt	120-8
Front Lights	120-9
Head Lights	120-10
Fuses and Relays	120-11
Air Conditioning	120-14
Troubleshooting	
Engine	125-1
Transmission	125-4
Hydraulic System	125-5
Brakes	125-5
Hitch	125-6
Selective Control Valves	125-8
Electrical System	125-9
Operator Enclosure	125-11
Storage	130-1
Crime Tips	135-1
Specifications	
Specifications	140-1
Ground Speeds	140-6
Identification Numbers	145-1
Lubrication and Maintenance Charts	150-1
Index	


Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

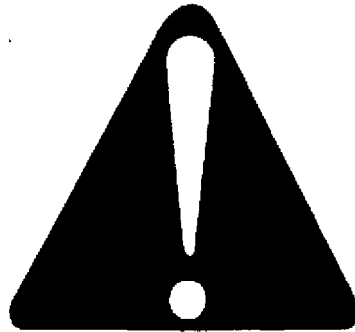

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

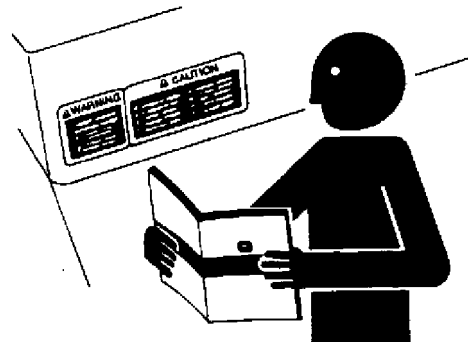


DX,READ -19-03MAR93


TS201 -UN-23AUG88



OPERATING THE TRACTOR SAFELY

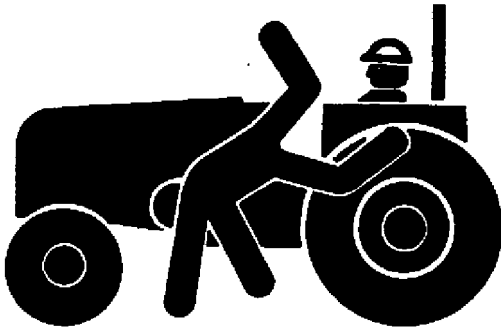

TS213 -JUN-23AUG88

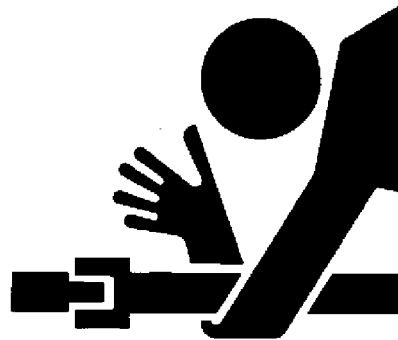 

TS276 -JUN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

- Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.
- Be sure everyone is clear of tractor and attached equipment before starting engine.
- Never try to get on or off a moving tractor.
- When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.

 
RX,HAZARD,S -19-22SEP92

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

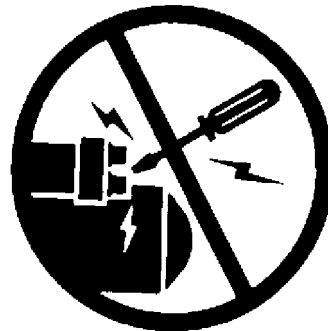

TS177 -JUN-11,JAN89

 
DX,BYPAS1 -19-03MAR93



USE ROPS AND SEAT BELT PROPERLY

If this tractor is equipped with a foldable ROPS, keep the ROPS in the fully extended and locked position. If the tractor is ever operated with ROPS folded (e.g., to enter a low building), drive with extreme caution. Do NOT use seat belt with the ROPS folded.

Return the ROPS to the raised, fully extended and locked position as soon as the tractor is operated under normal conditions. Always fasten your seat belt when the ROPS is fully extended and locked.

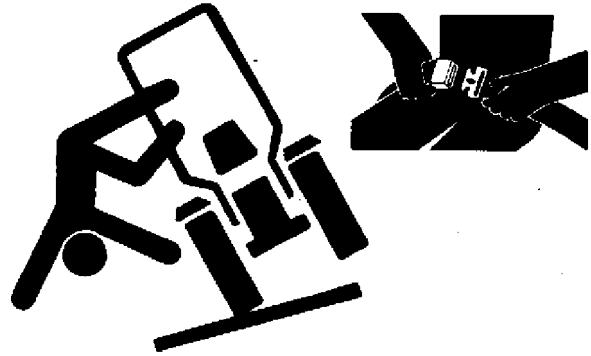


DX,FOLDROPS -19-16APR92

-UN-23AUG88
TS205

KEEP ROPS INSTALLED PROPERLY

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

 The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

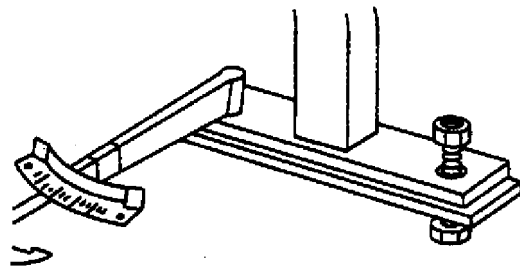

DX,ROPS3 -19-03MAR93

-UN-23AUG88
TS212

 


USE CAUTION ON HILLSIDES

Avoid holes, ditches, and obstructions which may cause tractor roll-over, especially on hillsides. Avoid sharp turns on hills.

Never drive near the edge of a gully or steep embankment.

Driving out of a ditch, mired condition, or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.

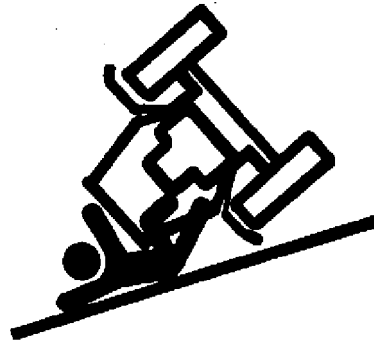


RX,HILL,SIDE1 -19-22SEP92

RW13093 -UN-07DEC88

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

 Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

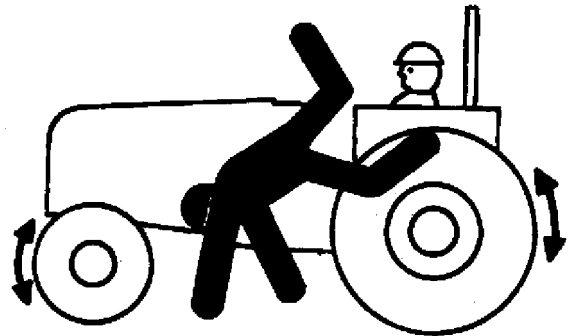


DX,RIDER -19-03MAR93

TS290 -UN-23AUG88

AVOID EYE CONTACT WITH RADAR

 Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

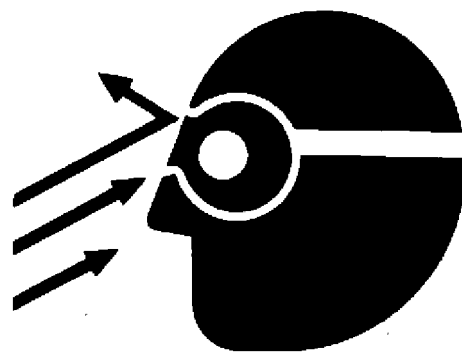

RX,SAFTY,RADAR1-19-21SEP92


TS266 -UN-23AUG88



WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

 Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

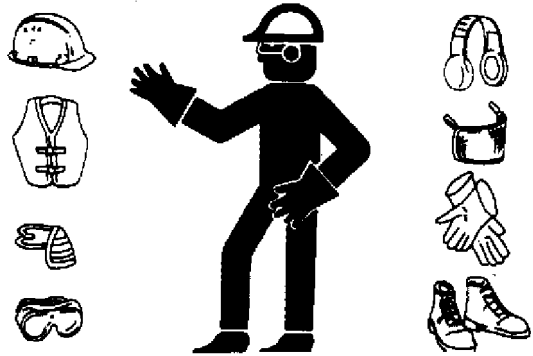

DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG88

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX,NOISE -19-03MAR93

TS207 -UN-23AUG88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93

TS202 -UN-23AUG88



 
HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

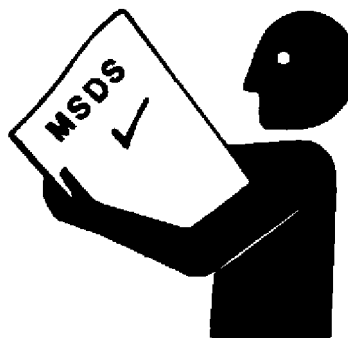

DX,MSDS,NA -19-03MAR93


TS1132 -UN-26NOV90

AVOID CONTACT WITH PESTICIDES

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

 Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

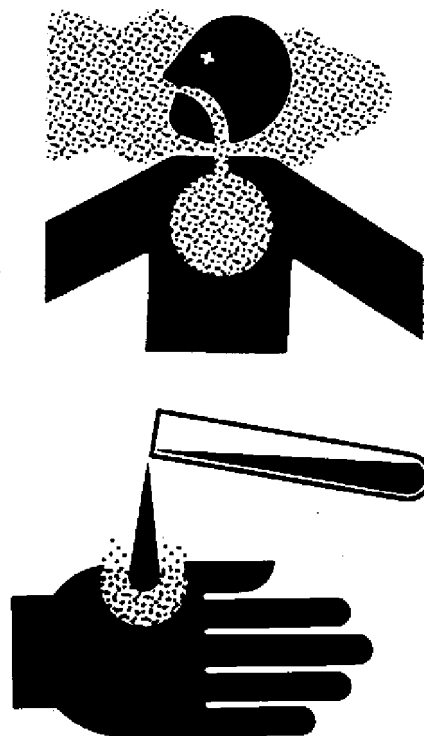

DX,CABS -19-03MAR93

TS220 -UN-23AUG88

TS272 -UN-23AUG88



STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX.PTO -19-03MAR93


TS198 -UN-23AUG88

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

 Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

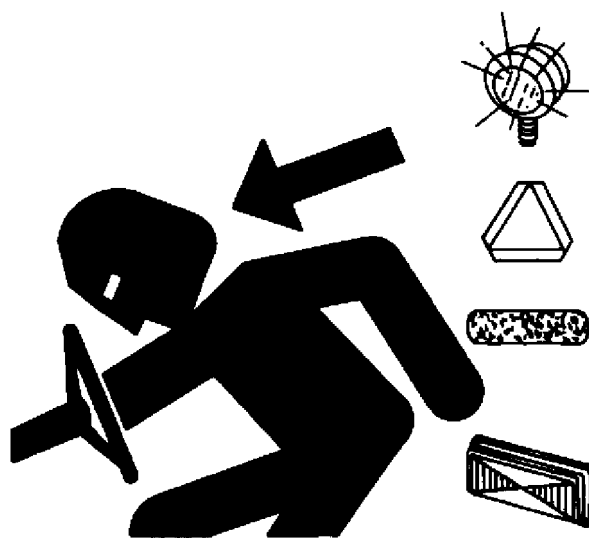

DX.FLASH -19-15MAR93


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

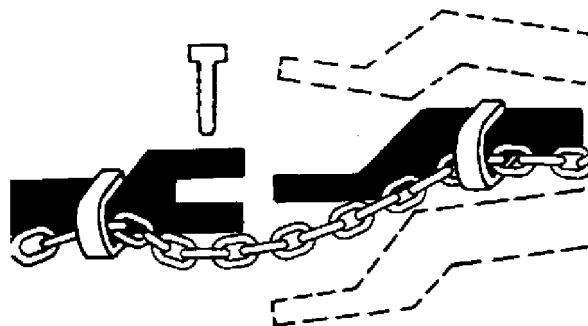

DX.CHAIN -19-03MAR93


TS217 -UN-23AUG88



TRANSPORT TRACTOR SAFELY

Transport a disabled tractor on a flatbed carrier. Securely chain tractor to carrier.

 If towing a tractor, never tow faster than 16 km/h (10 mph) with front or rear wheels raised or faster than 8 km/h (5 mph) with all wheels on the ground. Have an operator steer and brake tractor.

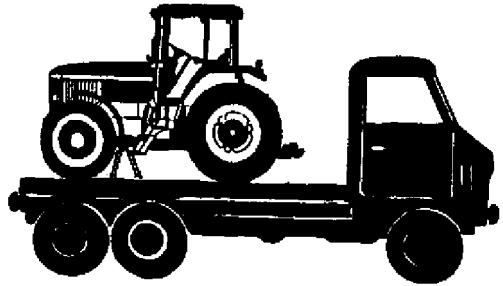

RX,HAUL,IT1 -19-14SEP93


RW22056 -UN-04DEC92

REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

 - Maximum speed is 32 km/h (20 mph) when towing load equal to or less in weight than the tractor.
- Reduce speed to 16 km/h (10 mph) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

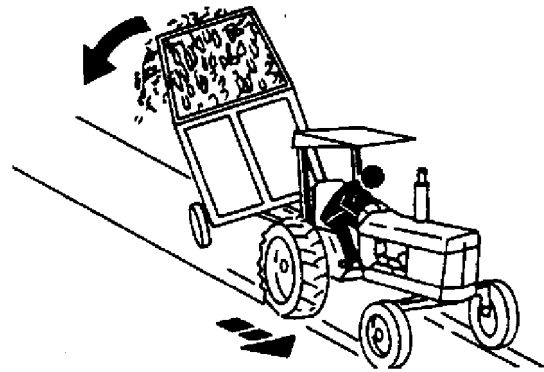

DX,TOW -19-03MAR93

T5216 -UN-23AUG88



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

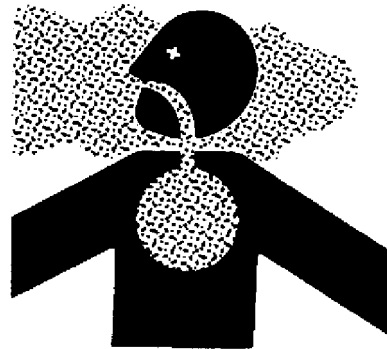

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88



AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

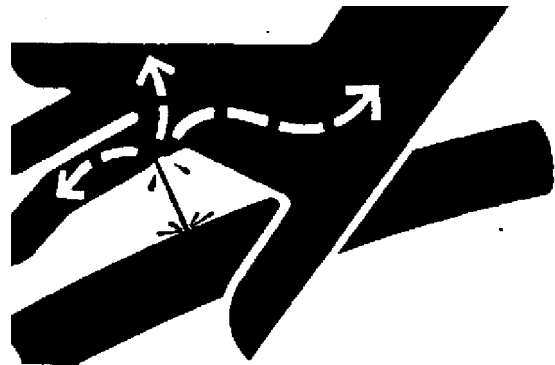

DX,FLUID -19-03MAR93

X9811 -UN-23AUG88

SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



DX,RCAP -19-04JUN90

TS281 -UN-23AUG88



STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-03MAR93

TS219 -UN-23AUG68

DISPOSE OF WASTE PROPERLY

 
Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

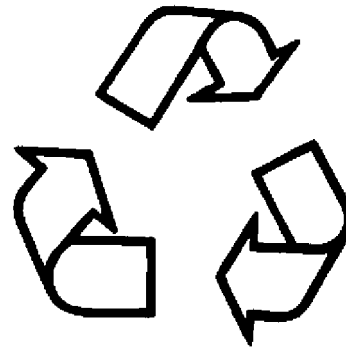


DX,DRAIN -19-03MAR93

TS1133 -UN-26NOV90

Safety Signs

 PREVENT MACHINE RUNAWAY

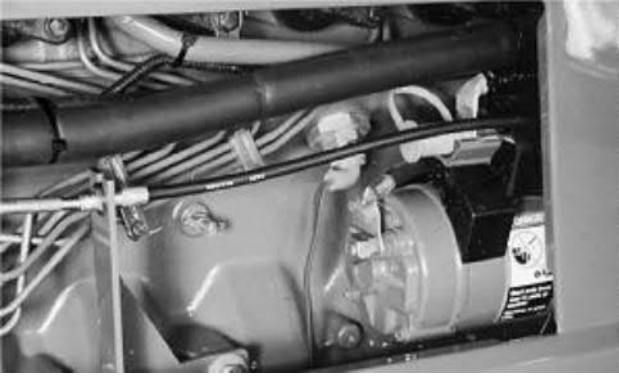

RW22613 -UN-25JUN93



RW15224 -19-06APR89

RX7000W,10,1 -19-02JUN93

Buy Now



Our support email:

ebooklibonline@outlook.com