

575 Round Baler

**John Deere Arc-lès-Gray
OMCC40847 Issue L7**

European Edition

Printed in Germany

ANGLAIS

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS ROUND BALER IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS ROUND BALER SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this round baler will relieve the manufacturer of all liability for any resulting damage or injury.

Predelivery Inspection

Contents

	Page		Page
Identification Views	00-1		
Safety	05-1	Connect wiring harness	25-8
Safety Decals	10-1	Detaching telescoping hook-up	25-9
		Storing telescoping hook-up	25-9
Preparing the Tractor		Transporting	
Adjusting drawbar	15-1	Warning lights	30-1
Adjusting front tread	15-1	Preparing for transport	30-1
Adjusting rear tire spacing	15-1	Storing jackstand	30-2
Checking ballast	15-2		
PTO speed	15-2	Operating the Baler - General Purposes	
Setting selective control valves	15-2	Break-in period	35-1
Preparing tractor for monitor installation	15-3	Rotating baler by hand	35-1
Installing monitor support	15-5	How the net wrapping works	35-2
Connecting monitors	15-8	Crop preparation	35-3
Using drawbar shield	15-9	Feeding the material	35-4
		Operating in short, dry slick crops	35-6
Preparing the Baler		Operating in cornstalks	35-7
Selecting twine	20-1	Operating in silage and damp crops	35-7
Tying sheet bend knot	20-1	Gate lock valve	35-8
Tying modified square knot	20-1	Unplugging baler without precutter device	35-8
Loading twine boxes	20-2	Unplugging baler with precutter device	35-9
Routing twine	20-4	Bale density gauge	35-9
Selecting net roll	20-9	Adjusting gate control valve	35-10
Care of net roll	20-10	Adjusting twine spacing	35-10
Care of net wrapping device	20-10	Adjusting full-size bale	35-11
Loading net boxes	20-11	Changing precutter knife support position	35-12
Routing net roll	20-12	Adjusting pickup height	35-14
Tire inflation	20-13	Adjusting twine guide	35-15
		Adjusting compressor rack	35-16
Attaching and Detaching		Positioning short crop deflector (standard pickup)	35-16
Attaching to 540 rpm PTO	25-1	Positioning short crop deflector (precutter device)	35-17
Attaching to drawbar	25-2	Adjusting pickup float	35-18
Attaching to trailer hitch	25-3	Adjusting lubrication pump flow	35-19
Connecting safety chain	25-4	Adjusting chain oiling system brush flow	35-20
Storing jackstand	25-4	Installing straw bar	35-21
Using jackstand	25-4		
Connecting telescoping hook-up	25-5		
Attaching to hydraulic system	25-7		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMCC40847 L7-19-15MAR98

COPYRIGHT© 1998
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996, 1995 Deere & Company

Contents

	Page		Page
Operating Manual Twine Control		Wheel chocks	
Manual twine control	36-1		40-2
Forming a bale	36-2	Lubrication and Maintenance	
Wrapping a bale	36-4	Checking precutter knives	45-4
Discharging bale	36-5	Draining and refilling gear case	45-4
		Refilling lubrication pump reservoir	45-5
		Every 10 hours	45-6
		Every 30 hours	45-9
		Annually	45-10
Operating Electronic Wrapping Control		Troubleshooting	
Electronic Wrapping Control Monitor	37-1	BaleMaster control monitor	50-1
Forming a bale	37-4	Twine wrapping	50-2
Wrapping a bale	37-6	Feeding	50-4
Discharging bale	37-8	Pickup	50-6
		Bale quality	50-7
		General baler difficulties	50-8
		Silage equipment	50-9
		Net wrapping	50-10
		Chain oiling system	50-13
Operating BaleMaster Control		Service	
General description	38-1	Torques for hardware	55-1
BaleMaster component locations	38-2	Baler roll numbering	55-2
LCD screen description	38-3	Tightening Roll Sprocket Fixing Nuts	55-3
Keyboard description	38-4	Replacing precutter knives	55-4
Operating BaleMaster monitor	38-5	Adjusting bale shape indicator straps	55-6
BaleMaster setup values and initial settings	38-6	Adjusting roll scrapers	55-7
Switching ON control monitor	38-7	Adjusting roll drive chains	55-7
BaleMaster malfunctions check-up at start up	38-8	Adjusting pickup drive chain	55-8
Changing measurement units	38-9	Adjusting pickup auger drive chain	55-8
Resetting control monitor to initial settings	38-10	Adjusting precutter drive chain	55-9
Selecting wrapping mode	38-11	Adjusting twine cutter anvil	55-9
Adjusting twine density	38-12	Adjusting twine arm travel	55-10
Adjusting net wrap density	38-13	Adjusting twine arm timing	55-11
Adjusting bale start wrap position	38-14	Replacing controller fuse	55-12
Adjusting bale end wrap position	38-15	Diagnosing right gate switch	55-12
Adjusting bale side wrap	38-16	Adjusting gate switch	55-13
Adjusting twine arm re-extension	38-17	Diagnosing full-size bale switch	55-13
Reducing r.h. side number of twine coils	38-18	Adjusting full-size bale switch	55-14
Using bale counter	38-19	Diagnosing net switch	55-14
Resetting bale counter	38-20	Adjusting net switch	55-15
Displaying software versions	38-21	Diagnosing twine pulleys	55-15
Selecting baler model	38-22	Adjusting pulley sensors	55-16
Precutter operating modes	38-23	Diagnosing gear case output shaft sensor	55-17
Diagnostic mode	38-29	Adjusting gear case output shaft sensor	55-18
Forming a bale	38-30	Diagnosing precutter knife sensor	55-19
Wrapping a bale with twine	38-32	Adjusting precutter knife sensor	55-20
Wrapping a bale with net	38-39	Diagnosing precutter reverse sensor	55-21
Discharging bale	38-43	Adjusting precutter reverse sensor	55-21
		Diagnosing twine arm potentiometer	55-22
Attachments		Continued on next page	
Sensors	40-1		
Net wrapping	40-1		
Front road light kit	40-1		
Knife slot fillers kit	40-2		
Special knives kit	40-2		

Contents

	Page
Resetting twine arm actuator rod	55-23
Adjusting gear case hydraulic cylinder	55-24
Replacing pickup drive shear bolt	55-24
Adjusting net feed roll pressure	55-25
Adjusting net knife arm stop	55-26
Checking net feed roll brake	55-27
Adjusting net feed roll drive belt tension	55-28
Removing net feed roll drive belt	55-29
Installing net feed roll drive belt	55-29
Removing and installing net knife	55-30
Sharpening net knife	55-30
Removing and installing rear net guide	55-31
Removing front net guide	55-32
Installing front net guide	55-33
Checking front net guide rubber band	55-34
Replacing front net guide rubber paddle	55-34
Removing net wrapped around feed rolls	55-35

Storage

At end of season	60-1
Preparing for beginning of season	60-2

Specifications	65-1
---------------------------------	------

Serial Numbers

Serial number plates	70-1
Serial number plate description	70-1
Baler identification number	70-1
Net wrapping serial number	70-2
Precutter device serial number	70-2

Index

Contents

Identification Views



CC007956

575 Round Baler

-UN-17FEB97
CC007956



CC010083

575 Round Baler with Standard Pickup

-UN-17FEB97
CC010083


CC.575RB 003473-19-24SEP96

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

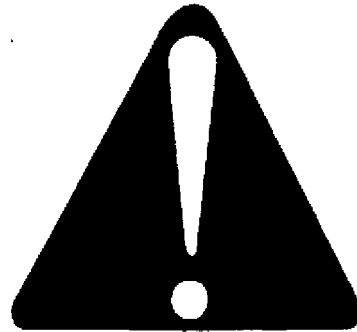

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

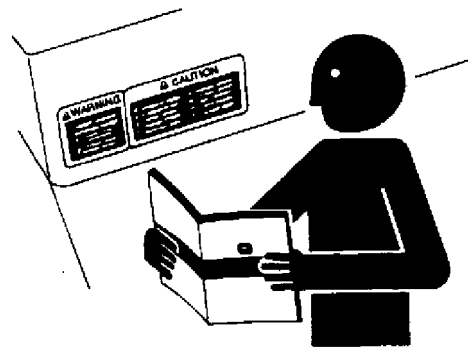

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.




FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

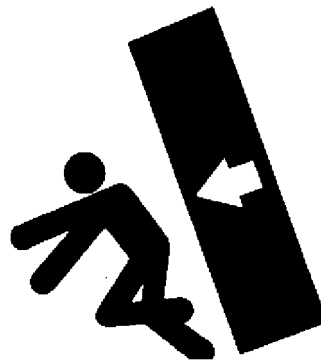

DX,STORE -19-03MAR93


TS219 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

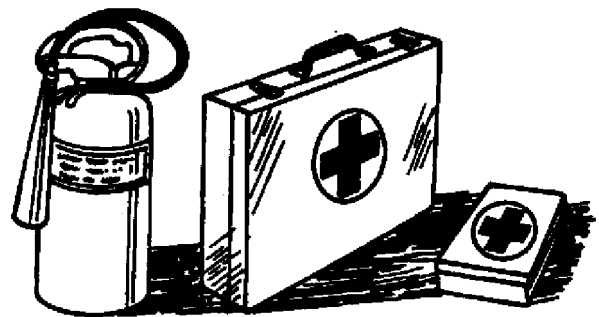

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com