

**570, 580
and 590
Round Balers**
(From Serial No. 315565)

**John Deere Arc-lès-Gray
OMCC45009 Issue A8**

European Edition

Printed in Germany

ANGLAIS

Contents

	Page		Page
Identification Views	00-1	Using jackstand	25-4
Safety	05-1	Connecting telescoping hook-up	25-5
Safety Decals	10-1	Attaching to hydraulic system	25-6
Preparing the Tractor		Connecting wiring harness	25-7
Adjusting drawbar	15-1	Detaching telescoping hook-up	25-8
Adjusting front tread	15-1	Storing hook-up	25-8
Adjusting rear tire spacing	15-1	Transporting	
Checking ballast	15-2	Warning lights	30-1
PTO speed	15-2	Preparing for transport	30-1
Setting selective control valves	15-3	Storing jackstand	30-2
Preparing tractor for monitor installation	15-4	Operating the Baler-General Purposes	
Installing monitor support	15-6	Break-in period	35-1
Connecting monitors	15-9	Rotating baler by hand	35-2
Using drawbar shield	15-10	How the net wrapping works	35-3
Preparing the Baler		How the soft core works	35-4
Selecting twine	20-1	Crop preparation	35-4
Loading twine boxes	20-1	Feeding the material	35-6
Tying sheet bend knot	20-2	Basic baler settings	35-8
Tying modified square knot	20-2	Gate lock valve (590 only)	35-13
Routing twine	20-3	Gate lock device (570-580 only)	35-14
Selecting net roll	20-5	Unplugging baler with precutter device	35-14
Care of net roll	20-6	Unplugging baler without precutter device	35-15
Care of net wrapping device	20-6	Adjusting twine spacing	35-16
Loading net boxes	20-7	Bale density gauge	35-16
Routing net	20-8	Adjusting bale density	35-17
Setting baler for 1000 rpm PTO	20-10	Adjusting twine guide	35-18
Tractors with low hydraulic flow	20-14	Adjusting lower net guide panel side wedges	35-19
Tire inflation	20-15	Setting wide pickup feeder forks	35-19
Attaching and Detaching		Adjusting compressor rack	35-20
Attaching to 540 rpm PTO	25-1	Adjusting converging wheel height	35-20
Tractor electrical connection	25-1	Adjusting wheel spindles	35-21
Attaching to drawbar	25-2	Adjusting wide pickup gauge wheels	35-24
Attaching to trailer hitch	25-3	Adjusting starter roll scraper	35-24
Connecting safety chain	25-4	Adjusting bottom roll scraper	35-25
Storing jackstand	25-4	Adjusting pickup auger scrapers	35-25
		Adjusting pickup float springs	35-26

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMCC45009 A8-19-15MAY98

COPYRIGHT© 1998
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996, 1994 Deere & Company

Contents

	Page		Page
Adjusting pickup height	35-27	Selecting precutter operating modes	38-27
Positioning precutter front sheet	35-29	Diagnostic mode	38-33
Changing precutter knife support position	35-30	Forming a bale	38-36
Resetting bale counter	35-32	Wrapping a bale with twine	38-39
Operating bale push bar	35-33	Wrapping a bale with net	38-46
		Discharging bale	38-50
Operating Manual Twine Control		Attachments	
Manual Twine Control	36-1	Converging wheels	40-1
Adjusting bale size	36-1	Hydraulic pickup lift	40-1
Adjusting soft core diameter	36-2	Standard belt stapler	40-1
Forming a bale	36-3	Goro belt stapler	40-2
Wrapping a bale	36-5	Mato belt stapler	40-2
Discharging bale	36-6	Road light kit	40-2
		Flax bundle	40-3
Operating Electronic Wrapping Control		Bale discharging ramp	40-3
Electronic Wrapping Control Monitor	37-1	Gate deflectors	40-3
Adjusting bale size	37-4	Silage bundle	40-4
Adjusting soft core diameter	37-5	Hemp bundle	40-4
Forming a bale	37-6	Pickup gauge wheel	40-4
Wrapping a bale	37-8	Wide pickup	40-4
Discharging bale	37-10	High floatation tires	40-5
		Upper roll drive	40-5
Operating BaleMaster Control		55 bar soft core kit	40-5
General description	38-1	0 bar soft core kit	40-6
BaleMaster component locations	38-2	Net wrapping	40-6
LCD screen description	38-3	Bale push bar	40-6
Keyboard description	38-4	Rubber covered shells	40-7
Operating BaleMaster monitor	38-5	Low drive belt speed bundle	40-7
BaleMaster setup values and initial settings	38-6	Twine pulley sensors	40-7
Switching ON control monitor	38-7	BaleMaster control monitor battery harness	40-7
BaleMaster malfunctions check-up	38-8	Monitor mounting bracket	40-8
Changing measurements units	38-9	Hydraulic pressure accumulator	40-8
Resetting control monitor to initial settings	38-10	Front twine/net box	40-8
Selecting wrapping mode	38-11	Knife slot filler kit	40-9
Selecting flax wrapping mode	38-12	Special knife kit	40-9
Adjusting bale size	38-13		
Fine tuning bale size	38-14	Lubrication and Maintenance	
Adjusting soft core diameter	38-15	Observe service intervals	45-1
Adjusting twine density	38-16	Grease	45-1
Adjusting net wrap density	38-17	Gear oil	45-2
Adjusting bale start wrap position	38-18	Alternative lubricants	45-2
Adjusting bale end wrap position	38-19	Lubricant storage	45-3
Adjusting bale side wrap	38-20	Mixing of lubricants	45-3
Adjusting twine arm re-extension	38-21	Draining and refilling gear case	45-4
Reducing l.h. side number of twine coils	38-22	Checking precutter knives	45-5
Using bale counter	38-23	Checking belt wires	45-6
Resetting bale counter	38-24	Every 10 hours	45-6
Displaying software versions	38-25	Every 30 hours	45-10
Selecting baler model	38-26		

Continued on next page

Contents

	Page		Page
Every 50 hours	45-12	Adjusting bale size potentiometer	55-37
Annually	45-13	Diagnosing twine arm potentiometer	55-38
Troubleshooting		Resetting twine arm actuator rod	55-39
BaleMaster Control Monitor	50-1	Diagnosing net cut switch (baler with adjustable net cut switch)	55-40
Twine wrapping	50-3	Adjusting net cut switch (baler with adjustable net cut switch)	55-40
Feeding	50-6	Diagnosing net cut switch (baler with non-adjustable net cut switch)	55-41
Pickup	50-8	Checking net cut switch (baler with non-adjustable net cut switch)	55-42
Bale quality	50-10	Adjusting bale size switch	55-43
General baler difficulties	50-12	Adjusting soft core switch	55-44
Silage equipment	50-15	Adjusting gear case hydraulic cylinder stroke	55-44
Net wrapping	50-16	Adjusting slip clutch	55-45
Push bar	50-20	Checking slip clutch	55-45
Service		Adjusting net feed roll pressure	55-46
Torques for hardware	55-1	Checking net feed roll drive belt	55-47
Baler roll numbering	55-2	Removing net feed roll drive belt	55-48
Adjusting main drive chain	55-4	Installing net feed roll drive belt	55-48
Adjusting bottom roll drive chain	55-4	Access to net knife or net guides	55-49
Adjusting upper drive roll chain	55-5	Removing and installing net knife	55-50
Adjusting precutter drive chain	55-6	Sharpening net knife	55-50
Adjusting pickup drive chains	55-6	Removing rear net guide	55-51
Replacing precutter knives	55-10	Installing rear net guide	55-51
Adjusting upper arm spring	55-11	Removing front net guide (baler with adjustable net cut switch)	55-52
Adjusting upper arm cylinder	55-12	Installing front net guide (baler with adjustable net cut switch)	55-53
Adjusting gate latch (590 only)	55-12	Removing front net guide (baler with non-adjustable net cut switch)	55-54
Adjusting gate latch stop	55-13	Installing front net guide (baler with non-adjustable net cut switch)	55-55
Adjusting gate locking hooks	55-14	Checking front net guide rubber band	55-56
Adjusting belt tracking	55-15	Adjusting net knife arm stop	55-57
Adjusting bale size indicator	55-16	Adjusting net feed roll brake (baler with upper net brake)	55-58
Adjusting twine cutter anvil	55-17	Checking net feed roll brake (baler with lower net brake)	55-59
Adjusting twine arm travel	55-18	Checking lower net guide panel (net guide panel with side wedges only)	55-59
Adjusting twine arm timing	55-19	Checking lower net guide panel (panel without side wedges only)	55-60
Replacing controller fuse	55-20	Checking lower net guide crossbar	55-61
Diagnosing right gate latch switch	55-20	Checking lower net guide channels	55-62
Diagnosing left gate latch switch	55-21	Removing net wrapped around feed roll	55-63
Adjusting gate latch switches	55-21	Replacing powerline shear bolt	55-64
Diagnosing oversize switch	55-22	Replacing pickup drive shear bolt	55-64
Adjusting oversize bale switch	55-23	Removing the belts	55-65
Diagnosing bale formation potentiometers	55-25		
Adjusting bale shape senders	55-27		
Diagnosing twine pulleys	55-29		
Adjusting pulley sensors	55-30		
Diagnosing lower drive roll sensor	55-31		
Adjusting lower drive roll sensor	55-32		
Diagnosing precutter knife sensor	55-33		
Adjusting precutter knife sensor	55-34		
Diagnosing precutter reverse sensor	55-35		
Adjusting precutter reverse sensor	55-35		
Diagnosing bale size potentiometer	55-36		

Continued on next page

Contents

	Page
Repairing belts	55-66
Preparing damaged belts	55-67
Installing standard belt hooks	55-68
Installing Goro belt hooks	55-70
Installing Mato belt hooks	55-74
Installing belts	55-77
Routing belts through the baler	55-78
Hook belt ends	55-80

Storage

At end of season	60-1
Preparing for beginning of season	60-2

Specifications

570 baler	65-1
580 baler	65-3
590 baler	65-5

Serial Numbers

Serial number plates	70-1
Baler serial number plate	70-1
Net wrapping serial number	70-1
Precutter device serial number	70-2

Index

Identification Views



CC006596

570 Round Baler

-UN-12FEB96



CC000935

580 Round Baler

-UN-12FEB96



CC000936

590 Round Baler

-UN-12FEB96

CC.570RB 001433-19-20OCT94

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

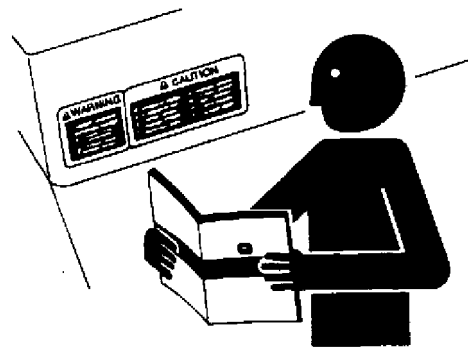

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-03MAR93


TS219 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

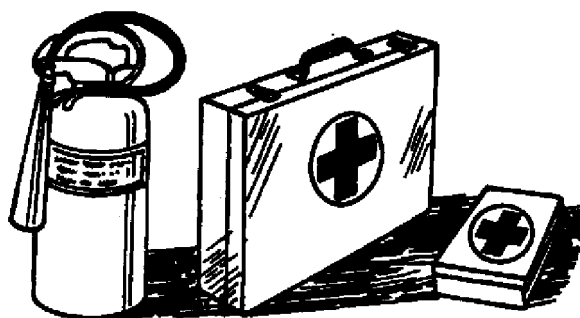

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

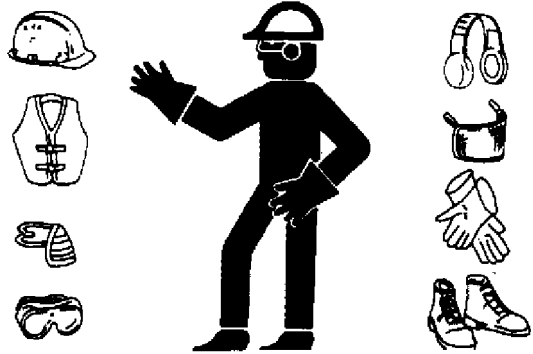

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68

HANDLING OF KNIVES

Prevent personal injury by wearing safety gloves to handle knives.

CC,570RB 004381-19-20APR98

CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91



STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-12SEP95

TS1644 -UN-22AUG95

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

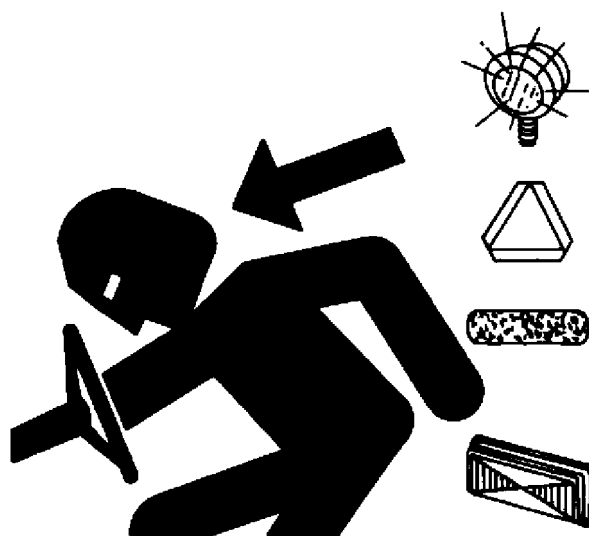

DX,FLASH -19-12SEP95


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

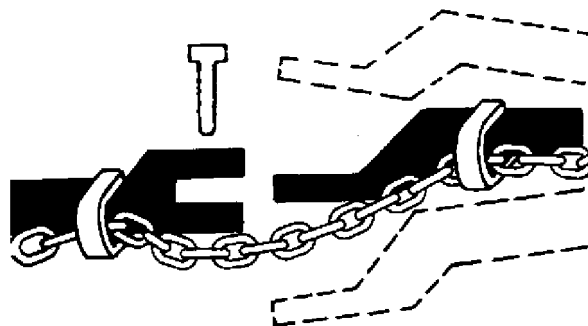

DX,CHAIN -19-03MAR93

TS217 -UN-23AUG88



OPERATE BALER SAFELY

To avoid injury or death by being pulled into the machine:


- DO NOT attempt to feed crop or twine into baler or unplug feed area WHILE BALER IS RUNNING. The baler feeds material faster than you can release it.
- Disengage PTO and shut off engine.
- Stand clear of baler at all times when machine is operating.

CC.575RB 001311-19-20MAY94

AVOIDING INJURY OR DEATH FROM FALLING ROUND BALES

 **CAUTION:** To help prevent personal injury or death caused by falling loads:

- DO NOT handle round bales unless loader is equipped with an approved bale handling device. Otherwise, the bale can fall on the operator when the loader is raised.
- For 6000 and 7000 series tractors, set detent selector knobs on top of valves to "loader" position when using the selective control valve levers to operate the loader. See "Setting Valve Detent Selector" in "Preparing the Tractor" Section.
- Handle raised loads with caution.
- Carry loads low and drive slowly.

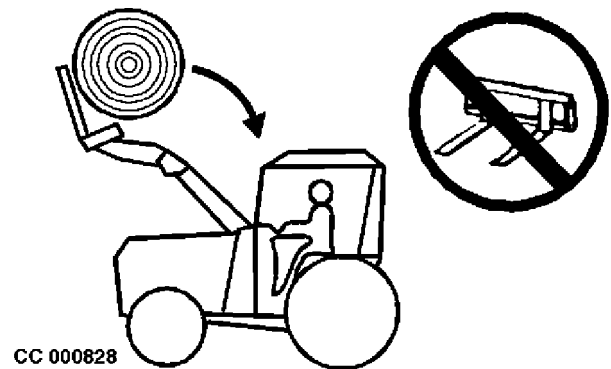

CC000828 -UN-05APR95

CC.575RB 001312-19-20MAY94

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com