

565
(From Serial No. 323924)
and 575
(From Serial No. 325041)
Round Balers

John Deere Arc-lès-Gray
OMCC52492 Issue I9

European Version

Printed in Germany

ANGLAIS

Contents

	Page		Page
Identification Views			
565 identification views	00-1	Connecting telescoping hook-up	25-5
575 identification views	00-2	Attaching to hydraulic system	25-6
Safety	05-1	Connect wiring harness	25-7
Safety Decals	10-1	Detaching telescoping hook-up	25-8
Preparing the Tractor		Storing telescoping hook-up	25-8
Adjusting drawbar	15-1	Transporting	
Adjusting front tread	15-1	Warning lights	30-1
Adjusting rear tire tread	15-1	Preparing for transport	30-1
Checking ballast	15-2	Storing jackstand	30-2
PTO speed	15-2	Operating the Baler - General Purposes	
Setting selective control valves	15-2	Break-in period	35-1
Preparing tractor for monitor installation	15-3	Rotating baler by hand	35-1
Installing monitor support	15-5	How the net wrapping works	35-2
Connecting monitors	15-8	Crop preparation	35-3
Using drawbar shield	15-10	Feeding the material	35-4
Preparing the Baler		Operating in short, dry slick crops	35-6
Selecting twine	20-1	Operating in cornstalks	35-7
Tying sheet bend knot	20-1	Operating in silage and damp crops	35-7
Tying modified square knot	20-1	Gate lock valve	35-8
Loading twine boxes	20-2	Unplugging baler	35-8
Routing twine	20-4	Unplugging 575 with precutter device	35-9
Routing twine through guides	20-7	Bale density gauge	35-9
Selecting net roll	20-9	Adjusting gate control valve	35-10
Care of net roll	20-10	Adjusting twine spacing	35-10
Care of net wrapping device	20-10	Adjusting full-size bale	35-11
Loading net boxes	20-11	Changing precutter knife support position	35-12
Routing net roll	20-12	Adjusting pickup height	35-14
Tire inflation	20-13	Adjusting twine guide	35-16
Attaching and Detaching		Adjusting compressor rack (standard pickup)	35-17
Attaching to 540 rpm PTO	25-1	Positioning short crop deflector	35-17
Attaching to drawbar	25-2	Adjusting pickup float (standard pickup)	35-19
Attaching to trailer hitch	25-3	Adjusting pickup float (wide pickup)	35-19
Connecting safety chain	25-4	Adjusting pickup float (precutter device)	35-20
Storing jackstand	25-4	Adjusting lubrication pump flow	35-21
Using jackstand	25-4	Adjusting chain oiling system brush flow	35-23
		Installing straw bar on 565	35-24
		Installing straw bar on 575	35-25

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMCC52492 19-19-01DEC99

COPYRIGHT© 1999
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
Operating Manual Twine Control		Net wrapping	
Manual twine control	36-1	Wheel chocks	40-1
Forming a bale	36-2	Knife slot fillers kit	40-2
Wrapping a bale	36-4	Battery harness	40-2
Discharging bale	36-5	Monitor mounting bracket	40-2
Operating Electronic Wrapping Control		Lubrication and Maintenance	
Electronic Wrapping Control Monitor	37-1	Observe service intervals	45-1
Forming a bale	37-6	Grease	45-1
Wrapping a bale manually	37-9	Gear oil	45-2
Discharging bale	37-11	Chain oil	45-2
Operating BaleMaster Control		Oil filters	45-2
General description	38-1	Alternative and synthetic lubricants	45-3
BaleMaster component locations	38-2	Lubricant storage	45-3
LCD screen description	38-3	Mixing of lubricants	45-3
Keyboard description	38-4	Checking precutter knives	45-4
Operating BaleMaster monitor	38-5	Draining and refilling gear case	45-4
BaleMaster setup values and initial settings	38-6	Refilling lubrication pump reservoir	45-5
Switching ON control monitor under operating mode	38-7	Every 10 hours	45-6
Switching ON control monitor under diagnostic mode	38-8	Every 30 hours	45-11
BaleMaster malfunctions check-up at start up	38-9	Annually	45-12
Changing measurement units	38-10	Troubleshooting	
Resetting control monitor to initial settings	38-11	BaleMaster control monitor	50-1
Selecting wrapping mode	38-12	Twine wrapping	50-2
Adjusting twine density	38-13	Feeding	50-4
Adjusting net wrap density	38-14	Pickup	50-6
Adjusting bale start wrap position	38-15	Bale quality	50-7
Adjusting bale end wrap position	38-16	General baler difficulties	50-8
Adjusting bale side wrap	38-17	Silage equipment	50-9
Adjusting twine arm re-extension	38-18	Net wrapping	50-10
Reducing r.h. side number of twine coils	38-19	Chain oiling system	50-13
Using bale counter	38-20	Service	
Resetting bale counter	38-21	Torques for hardware	55-1
Displaying software versions	38-22	Baler roll numbering	55-2
Selecting baler model	38-23	Tightening roll sprocket fixing nuts	55-3
Raising/lowering precutter pickup	38-24	Adjusting bale shape indicator straps	55-5
Retracting or engaging precutter knives	38-25	Adjusting roll scrapers	55-6
Reversing precutter rotor	38-27	Adjusting roll drive chains	55-6
Forming a bale	38-30	Adjusting pickup drive chains	55-7
Wrapping a bale with twine	38-32	Adjusting precutter main drive chain	55-9
Wrapping a bale with net	38-39	Adjusting twine cutter anvil	55-9
Discharging bale	38-43	Adjusting twine arm travel	55-10
Attachments		Adjusting twine arm timing	55-11
Twine pulley sensors	40-1	Replacing BaleMaster controller fuse	55-12
		Diagnosing right gate switch	55-12
		Adjusting gate switch	55-13
		Diagnosing full-size bale switch	55-13
		Adjusting full-size bale switch	55-14

Continued on next page

Contents

	Page
Diagnosing net cut switch	55-14
Adjusting net cut switch	55-15
Diagnosing twine pulleys	55-15
Adjusting twine pulley sensors	55-16
Diagnosing gear case output shaft sensor	55-17
Adjusting gear case output shaft sensor	55-18
Diagnosing precutter knife sensor	55-19
Adjusting precutter knife sensor	55-20
Diagnosing precutter reverse sensor	55-21
Adjusting precutter reverse sensor	55-22
Diagnosing twine arm potentiometer	55-22
Resetting twine arm actuator rod	55-23
Adjusting gear case hydraulic cylinder	55-24
Replacing powerline shear bolt	55-25
Replacing pickup drive shear bolt	55-25
Adjusting net feed roll pressure	55-26
Adjusting net knife arm stop	55-27
Checking net feed roll brake	55-28
Adjusting net feed roll drive belt tension	55-29
Removing net feed roll drive belt	55-30
Installing net feed roll drive belt	55-30
Removing and installing net knife	55-31
Sharpening net knife	55-31
Removing and installing rear net guide	55-32
Removing front net guide	55-33
Installing front net guide	55-34
Checking front net guide rubber band	55-35
Replacing front net guide rubber paddle	55-35
Removing net wrapped around feed rolls	55-36

Storage

At end of season	60-1
Preparing for beginning of season	60-2

Specifications

565	65-1
575	65-2

Serial Numbers

Serial number plates	70-1
Serial number plate description	70-1
Baler identification number	70-1
Net wrapping serial number	70-1
Precutter device serial number	70-2

Index

Identification Views



565 Round Baler with standard pickup



565 Round Baler with wide pickup

CC.565RB 004614-19-25AUG99

Identification Views



CC007956

575 Round Baler with Precutter device

-UN-17FEB97
CC007956



CC010083

575 Round Baler with Standard Pickup

-UN-17FEB97
CC010083


CC.575RB 003473-19-25AUG99

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

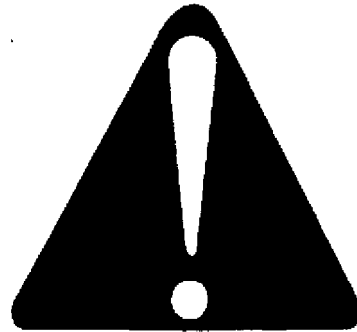

DX,ALERT -19-29SEP98

T81389 -UN-07DEC68


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

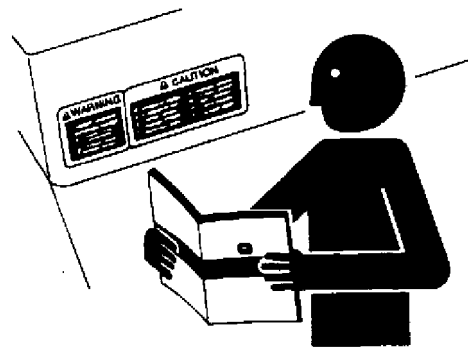

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

T5187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



FX,ROAD -19-01MAY91

H28930 -UN-30JUN89

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-03MAR93


TS219 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

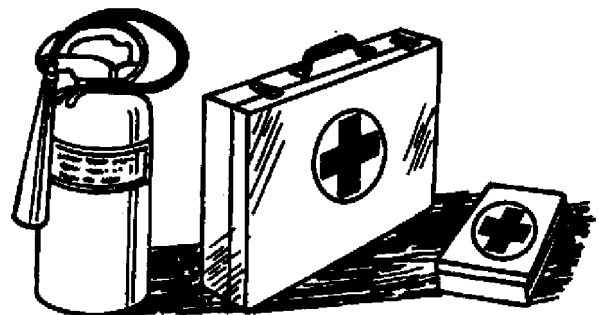

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

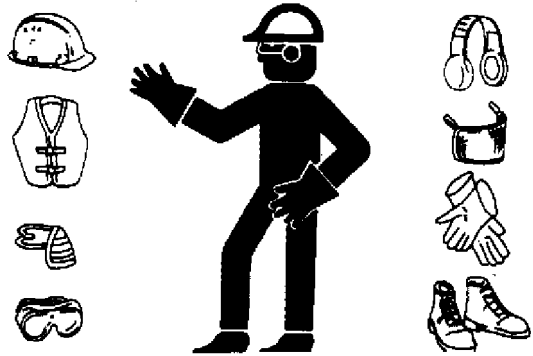

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68

CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95


TS1644 -UN-22AUG95



USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

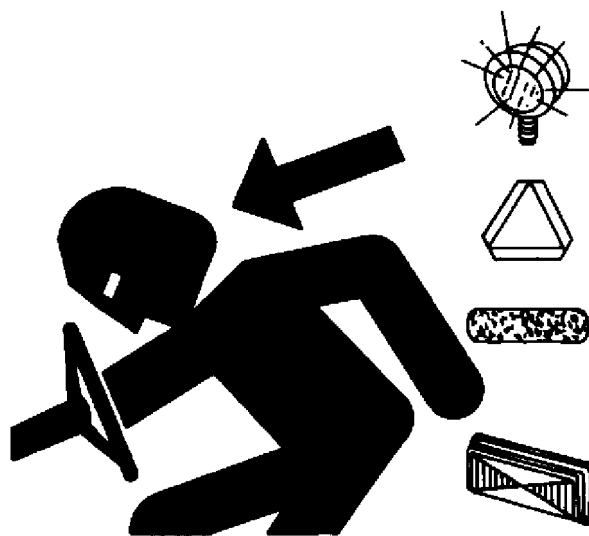

DX,FLASH -19-07JUL99


TSS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

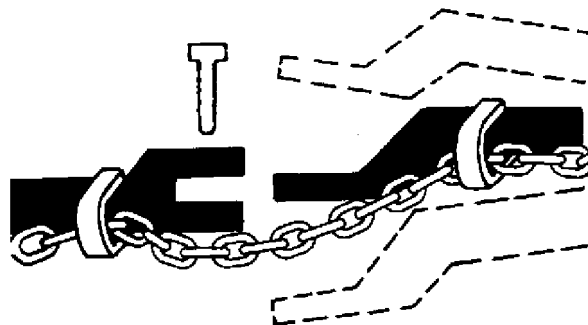

DX,CHAIN -19-03MAR93

TSS217 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com