

300 Auger Platform Grass Seed Special

(Serial No. 915001-)

**John Deere Ottumwa Works
OME81748 Issue H1**

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.


WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

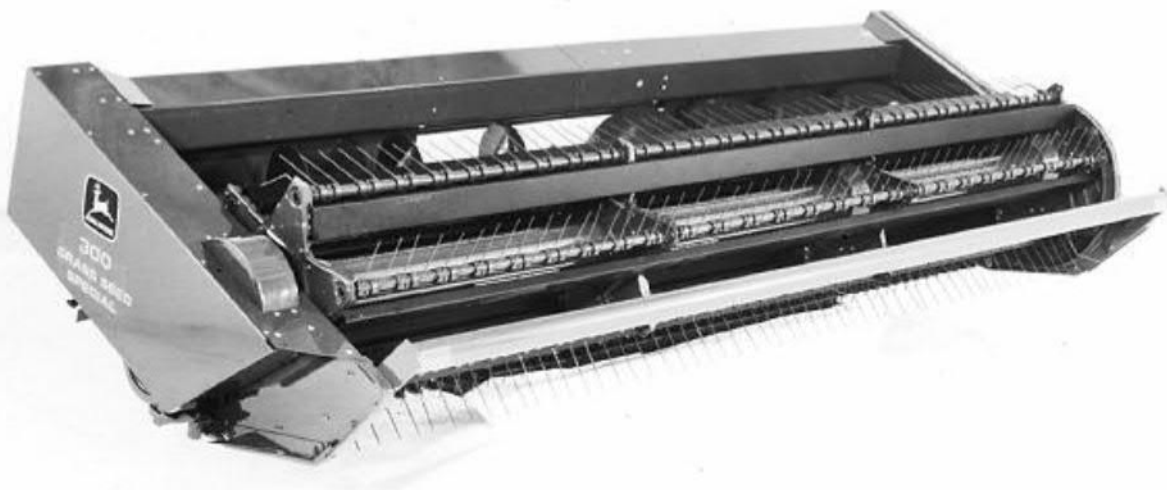

300 Auger Platform Grass Seed Special

EX,300GS,IFCOM -19-03JUL91

011101
PN=2

E35918 -JUN-11JUN91

Checklists

DEALER'S RECORD

Owner's Name _____ Date Sold _____
Address _____ Model Number _____
City _____ Serial Number _____
State _____ Zip _____

EX,300GSU,A -19-03JUN91

PREDELIVERY

After auger platform has been assembled, be sure it is in good running order before delivering to the customer. The following checklist is a reminder of points to inspect. Check off each item after it is found satisfactory or after the proper adjustment is made.

- All grease fittings have been lubricated and gear case filled. (See Lubrication and Maintenance section in operator's manual.)
- Remove shipping plugs from both knife drive cases and install breather plugs. Check knife drive case mounting bolts and knife drive arm nut torque.
- All moving parts are working freely.

- Check auger and reel speed and position.
- Check all chains for proper installation and adjustment.
- Check tension of both knife drive belts and adjust if necessary.
- Platform has been run and bearings are not heating.
- Slip the auger clutch. (See Slipping Auger Clutch in Service section of operator's manual.)
- Check reel drive clutch. (See Adjusting Reel Clutch in Service section of operator's manual.)

(Date set up)

(Signature)

EX,300GSU,B -19-03JUN91

Checklists

DELIVERY

The following checklist is a reminder of very important information which should be conveyed directly to the customer at the time the auger platform is delivered. Check off each item as it is fully explained.

- Advise customer that life expectancy of the auger platform, like any other machine, is dependent upon regular lubrication as described in the operator's manual.
- Advise customer of optional attachments that are available for special crop and operating adjustments.

- Give operator's manual to the customer and explain all operating adjustments fully.
- Advise customer of safety precautions that must be exercised while using the auger platform. (See Safety section.)
- When auger platform is transported on a road or highway at night or during the the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. In this regard, tell customers to check local governmental regulations.

(Date Delivered)

(Signature)

EX,300GSU,C -19-04JUN91

Checklists

AFTER SALE

It is suggested the following items be checked sometime during the first season's operation.

- Go over entire machine for loose or missing hardware.
- Check for broken or damaged parts.
- Check operating adjustments.
- All chains and belts are properly tensioned.

- Make sure all safety shields are in place.
- If possible, run the platform to see if it is functioning properly.
- Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

(Date Checked)

(Signature)

EX_300GSU,D -19-04JUN91

Checklists

Contents

	Page		Page
Safety	05-1	Adjusting Auger to Stripper Clearance	35-7
Transporting	10-1	Adjusting Auger Slip Clutch	35-7
Operating the Auger Platform		Slipping Auger Slip Clutch	35-8
Before Operating Checks	15-1	Adjusting Reel Clutch	35-9
Breaking In the Auger Platform	15-1	Adjusting Reel Vertically	35-10
Determining Starting and Ground Speed	15-2	Adjusting Reel Front-To-Rear	35-10
Knife Overlap	15-2	Adjusting Cam	35-11
Producing Uniform Windrows	15-3	Adjusting Cam Followers	35-12
Cutterbar	15-3	Replacing Reel Teeth in Right-Hand and Center Section	35-13
Knife Hold-Downs	15-4	Replacing Reel Teeth in Left-Hand Section	35-14
Platform Guard Angle and Gauge Shoes	15-4	Adjusting Knife Drive Belt (Both Sides)	35-16
Reel	15-5	Removing Knives	35-16
Auger	15-6	Installing Non-Clog Guards	35-17
Platform Float	15-6	Installing Center Knife Sections on L.H. and R.H. Cutterbars	35-19
Ground Speed	15-7	Adjusting Cutterbar	35-19
Cutting Grass	15-8	Adjust Non-Clog Knife Hold-Downs	35-20
Adjusting Platform Float	15-9	Cutterbar Knife Sections	35-21
Adjusting Platform Guard Angles	15-9	Sharpening Knife Sections	35-21
Attachments		Installing Knives	35-22
Cutterbar Knife Sections	20-1	Adjusting Gauge Shoes	35-22
Deck Sheets	20-1	Replacing Auger Drive Chain	35-22
Lubrication and Maintenance	25-1	Storage	40-1
Troubleshooting	30-1	Crime Prevention Tips	45-1
Service		Assembly	50-1
Practice Safe Service Procedures	35-1	Specifications	55-1
Tightening Bearing Locking Collars	35-1	Index	
Installing O-ring Connector Link	35-1		
Care of Chains	35-2		
Care of V-Belts	35-3		
Auger and Reel Speeds	35-4		
Changing Auger Speed	35-4		
Adjusting Auger Drive Chain Tension	35-5		
Changing Reel Speed	35-5		
Adjusting Reel Drive Chain Tension	35-6		
Adjusting Auger to Deck Clearance	35-6		

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME81748 H1-19-03JUL91

COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com