

335 AND 375 ROUND BALERS (SERIAL NO. 915001-)



OPERATORS MANUAL 335 AND 375 ROUND BALERS (SERIAL NO. 915001-)

OME81757 H1 English

**JOHN DEERE OTTUMWA WORKS
OME81757 H1**

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.


WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

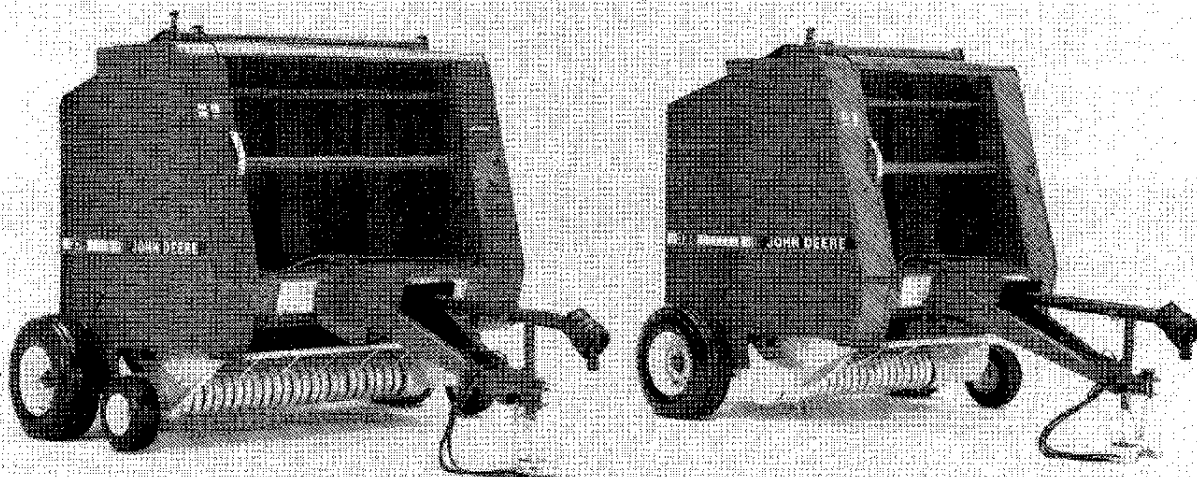

John Deere 375 and 335 Round Balers

E332228
-JUN-16SEP88

Contents

	Page		Page
Safety	05-1	Operating the Baler	
Preparing the Tractor		How the Baler Forms a Bale	35-1
Adjusting the Drawbar	10-1	Crop Preparation	35-2
Setting Tractor Wheels	10-1	Indicators for Baler Operation	35-3
Checking Ballast, Wheel Spacing, and Tire Inflation	10-2	Forming a Bale	35-4
Setting Hydraulic Outlets	10-2	Gate Lock	35-8
Tractor Electrical Hookup	10-2	Rotating Baler By Hand	35-8
Install Convenience Outlet On:		Adjusting	
Negative Ground Tractors Without SOUND-GARD Bodies	10-3	Pickup Height	35-9
Positive Ground Tractors Without SOUND-GARD Bodies	10-4	Converging Wheel Height	35-9
Tractors With SOUND-GARD Bodies	10-5	Bale Size	35-10
Using Right-Hand Rear View Mirror	10-7	Bale Size Switch	35-10
Using Drawbar Shield	10-7	Removing Compressor Rack Assembly	35-11
Making Drawbar Shield	10-7	Installing Compressor Rack Assembly	35-11
Preparing the Baler		Adjusting Compressor Rack Assembly	35-12
Selecting Twine	15-1	Starting a Bale in Difficult Conditions	35-13
Loading Twine Box	15-1	Baling Short, Dry, Slick Crops	35-14
Tying Sheet Bend Knot—Plastic	15-1	Baling Wet Hay	35-15
Tying Modified Square Knot—Sisal	15-2	Baling Cornstalks	35-16
Routing Twine for Single Twine Arm	15-2	Extinguishing a Fire	35-16
Routing Twine for Double Twine Arm (R-H Side-Rear Arm)	15-3	Attachments	40-1
Routing Twine From Left-Hand Twine Box (Front Arm) (Optional)	15-5	Lubrication and Maintenance	45-1
Adjusting Twine Spacing for Double Twine Wrap (Optional)	15-8	Troubleshooting	50-1
Tire Inflation	15-9	Service	
Attaching and Detaching	20-1	Practice Safety	55-1
Transporting	25-1	Mounting Tires	55-1
Handling Round Bales	30-1	Wiring Diagram	55-2
		Adjusting Chains	55-3
		Reversible Heat-Treated Chain Guide	55-3
		Replacing Shear Bolt	55-4
		Adjusting:	
		Pickup Float Springs	55-4
		Pickup Belt Idler	55-5
		Twine Arm Timing (375)	55-5

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME91757 H1-19-'86JUL91

COPYRIGHT® 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright® 1986 Deere & Company

Contents

	Page
Adjusting:	
Twine Cutter Anvil	55-6
Twine Cutter Tension	55-6
Twine Distance From Right-Hand End of Bale (335)	55-8
Twine Cylinder Installation Dimensions	55-9
Checking Knife Register	55-10
Adjusting:	
Lower Feed Roll Scraper	55-10
Belt Tracking	55-11
Bale Shape Senders	55-11
Twine Indicator Retaining Strap (Double Twine Arm)	55-13
Bale Size Indicator	55-13
Removing:	
Rear Tension Arm Roll	55-14
Center and Front Tension Arm Rolls	55-14
Belt Tension Spring	55-15
Installing Belt Tension Spring	55-15
Raising Gate With Hoist	55-16
Checking Belt Pins	55-16
Installing Belts	55-17
Belts Eligible for Warranty Replacement	55-22
Belts Not Eligible for Warrantwy Replacement	55-23
Storage	60-1
Crime Prevention Tips	65-1
Assembly	
Install Wheels—375 Baler	70-1
Install Driveline	70-2
Install Safety Chain	70-2
Check Tire Inflation	70-2
Install Bale Counter (Optional)	70-3
Install Fire Extinguisher (Optional)	70-3
Specifications	75-1

335 and 375 Baler Checklists

DEALER'S RECORD

Owner's Name _____ Date Sold _____
Address _____ Model Number _____
City _____ Serial Number _____
State _____ Zip _____

EX,375U,A -19-26SEP86

PREDELIVERY

After the baler has been completely set-up, inspect it to be sure it is in good running condition before delivering it to the customer. The following checklist is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- Baler has been assembled properly.
- Check all hydraulic hoses and connections for oil leaks.
- Baler has been lubricated.
- Gate opens and closes freely.
- Check bale shape indicator adjustment.
- Belt tracking is satisfactory.
- Cycle twine arm. Check twine cutter adjustment and knife register.
- Check bale size alert to see it functions properly.
- Check gate lock for proper function.
- Drive chains have been adjusted properly and lubricated.
- Safety chain is attached.
- Tire pressures have been checked.

(Date set up)

(Signature)

EX,357U,B -19-26SEP86

335 and 375 Baler Checklists

DELIVERY

The following checklist is a reminder of very important information which should be conveyed to the customer at the time the baler is delivered. Check off each item as it is fully explained.

- Advise customer that life expectancy of this, like any other machine, is dependent on regular lubrication as described in the operator's manual.
- Give operator's manual to the customer and explain all operating adjustments and lubrication fully.
- Explain proper bale handling procedures.
- Advise to use safety chain.
- Explain proper ASAE standard dimensions for PTO hookup.

- Advise customer of safety precautions that must be observed while using this baler.
- Advise the customer never to discharge bales on sloping ground and if moving bales with a tractor loader, the loader MUST have a grapple.
- When baler is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. Various safety lights and devices are available. In this regard, tell customers to check local governmental regulations.
- Advise customer to set front and rear wheels out on tractors having adjustable-tread width to avoid driving over hay.

(Date Delivered)

(Signature)

335 and 375 Baler Checklists

AFTER SALE

It is suggested the following items be checked some-time during the first season's operation.

- Go over entire machine for loose or missing hardware.
- Check belt lacing for excess wear.
- Check belt pins every 1000 bales. Replace worn or damaged pins.
- All chains are properly tightened.
- All safety shields are in place
- Check for broken or damaged parts.
- If possible, run the baler to see if it is functioning properly.
- A good quality twine is being used and is threaded properly.
- Check operating adjustments. If possible, inspect wraps on a few bales.
- Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

(Date Checked)

(Signature)

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com