

64, 74, and 75
Side-Delivery Rakes
and Tandem Hitch
(Serial No. 985001-)

John Deere Ottumwa Works
OME87592 Issue G5
(This manual replaces OME83617 H4)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.


WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

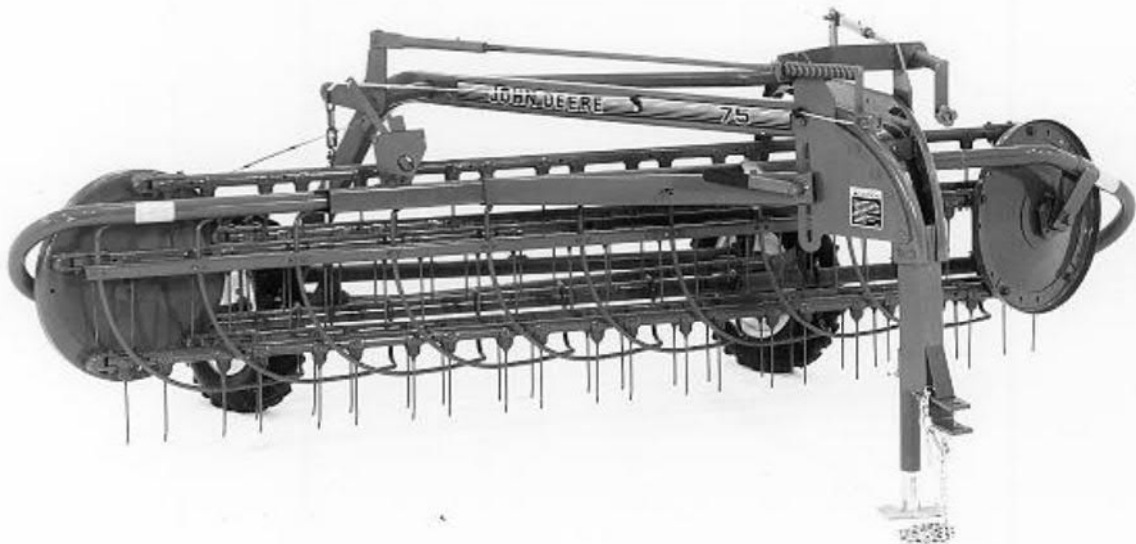

-UN-31MAY94

E38156

EX,75OM,IFCA -19-14JUL95

Contents

	Page		Page
Safety	1	Aligning and Centering Bearings In Driven Disk	29
Attaching and Detaching		Removing and Installing Tooth Bar Or Bearing	30
Positioning Tractor Rear Wheels	11	Troubleshooting	31
Adjusting Tractor Drawbar	11	Storage	33
Installing Hydraulic Lever Lock	11	Specifications	
Checking Tire Inflation	12	Machine Specifications	34
Checking Wheel Torque	12	Record Product Identification Number	35
Attaching Rake to Tractor	13	Bolt and Cap Screw Torque Value Charts	
Attaching Rakes to Trail-Type Tandem Hitch	14	Metric	36
Detaching Rakes From Trail-Type Tandem Hitch	15	Inch	37
Transporting	16	Crime Prevention Tips	38
Operating the Rake		Index	
Operating Speed for Hydraulic Rake	18		
Adjusting Hydraulic Rake Speed	19		
Adjusting Reel Height	19		
Adjusting Tooth Pitch	20		
Engaging Reel Clutch—Ground Drive	20		
Reel Clutch—Ground Drive (Clutch Shift Control)			
Engaging	21		
Adjusting	21		
Adjusting Front Stripper Support	22		
Unplugging Hydraulic Rake	22		
Adjusting Tandem Hitch	22		
Attachments	23		
Lubrication and Maintenance			
Perform Lubrication and Maintenance	25		
Grease	25		
Every 50 Hours	26		
As Required (Ground Drive)	28		
Once Each Season	28		

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME87592 G5-19-14JUL95

COPYRIGHT© 1995
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1994 Deere & Company

Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

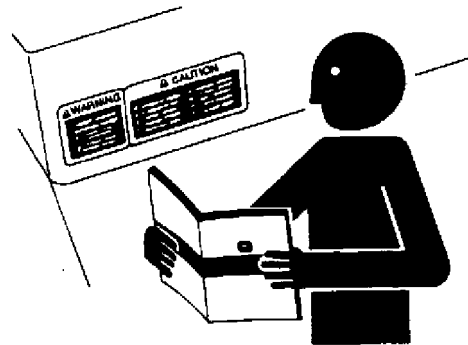

DX,READ -19-03MAR93

TS201 -UN-23AUG88



OPERATE RAKE SAFELY

Keep bystanders away from machine while it is operating.

Allow only the operator on tractor platform when operating the tractor and rake.

Never ride, or permit others to ride on drawbar of tractor, on the rake, or on tandem hitch.

Always put tractor in "Park" and turn off engine before dismounting.


When rake plugs with crop or foreign objects, the hydraulic system will be in a relief situation (reel stopped, but still under power). Before removing crop or foreign objects from a plugged reel, always disengage hydraulic power and shut off tractor engine. If hydraulic power is not disengaged, reel will begin to turn immediately when plug is removed.

EX,75RC,A -19-25APR94

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

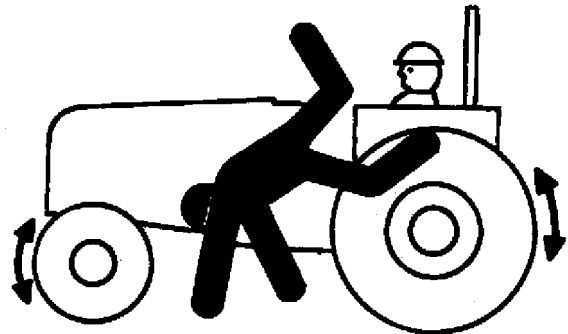

DX,RIDER -19-03MAR93


TS290 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

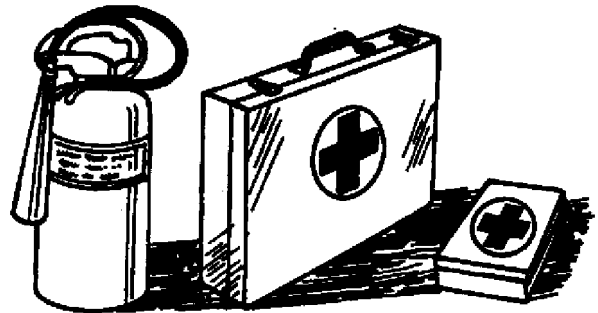

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

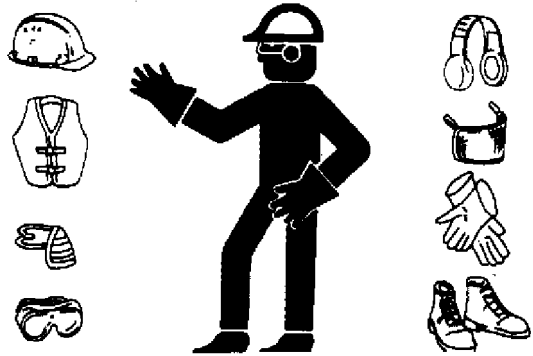

DX,WEAR -19-10SEP90

TS206 -UN-23AUG68


HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

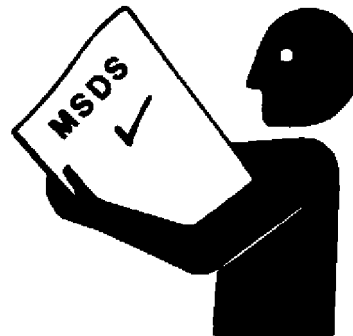

DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com