

**466**  
**Silage Special**  
**Round Baler**  
(Serial No. 115501- )

**John Deere Ottumwa Works**  
**OME92599 Issue A8**  
(This manual replaces OME91344 K6)

LITHO IN U.S.A.  
ENGLISH

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



*John Deere 466 Silage Special Round Baler*

E41686  
-UN-26OCT96

EX,466S,IFC -19-13NOV96

# Contents

	Page		Page
<b>Safety</b> .....	05-1	Additional Net Wrap Storage .....	25-1
<b>Safety Signs</b> .....	10-1	Opening and Closing Net Wrap Cover .....	25-2
<b>Preparing the Tractor</b>		Using Net Wrap After Extended Storage .....	25-2
Adjusting the Drawbar .....	15-1	Manually Releasing Net Wrap Brake .....	25-7
Using Heavy-Duty Tractor Drawbar .....	15-2	Threading Net Wrap and Routing Through Rolls .....	25-8
Using Drawbar Shield .....	15-3	<b>Attaching and Detaching</b>	
Making Drawbar Shield .....	15-3	Attaching Baler to Tractor Drawbar .....	30-1
Three-Point Hitch Position .....	15-3	PTO Driveline	
Adjusting Tractor Wheels .....	15-4	Assembling (If Necessary) .....	30-2
Checking Ballast, Wheel Spacing and Tire Inflation .....	15-4	Connecting .....	30-3
Setting Hydraulic Outlets .....	15-5	Attaching to Tractor Hydraulic Systems .....	30-4
Tractor Convenience Outlet .....	15-5	Using Tractor Convenience Outlet .....	30-6
Installing BaleTrak® PLUS		Connecting Baler Wiring Harness to Tractor .....	30-6
Monitor-Controller on Tractor		Connecting Warning Light Wiring Harness to Tractor .....	30-7
Open-Station .....	15-7	Detaching Baler from Tractor .....	30-8
ComfortGard™ Cab .....	15-7	<b>Transporting</b> .....	35-1
SOUND-GARD® Cab .....	15-8	<b>Handling Round Bales</b> .....	40-1
Using Extended Rear-View Mirror .....	15-9	<b>Operating the Baler</b>	
<b>Preparing the Baler</b>		How the Baler Forms a Bale .....	45-1
Checking Oversize Bale Switch .....	20-1	Crop Preparation .....	45-2
Selecting Twine .....	20-1	Breaking In Baler .....	45-2
Loading Twine Boxes .....	20-2	Keep Riders Off Machine .....	45-3
Routing Twine from Left-Hand Twine Box (Front Arm) .....	20-3	Rotating Output Shaft by Hand .....	45-3
Routing Twine from Right-Hand Twine Box (Rear Arm) .....	20-5	BaleTrak® PLUS Monitor-Controller	
Wheel Spindle Positions		Introduction .....	45-4
Mega Pickup .....	20-8	Description .....	45-5
Wide Pickup .....	20-9	Keys and Switches .....	45-6
Adjusting Wheel Spindles .....	20-9	Displays and Indicators .....	45-7
Tire Inflation .....	20-10	Setup Values and Initial Settings .....	45-8
Checking Wheel Nut Torque .....	20-10	Diagnostic and Setup Modes .....	45-9
<b>Preparing Baler for Net Wrap</b>		Diagnostic and Setup Channels .....	45-10
Selecting Net Wrap Material .....	25-1		
Care of Net Wrap Material .....	25-1		

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OME92599 A8-19-12JAN98

COPYRIGHT© 1998  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1996 Deere & Company

Contents

	Page		Page
<i>BaleTrak® PLUS Monitor-Controller—Continued</i>			
Operating	45-11	Compressor Rack Assembly	
Resetting to Initial Settings (Channel 01)	45-12	Removing	45-49
Activating Alarms	45-13	Installing	45-50
Adjusting Audible Alarm Volume	45-13	Adjusting (Mega Pickup)	45-51
Setting Bale Diameter	45-14	Adjusting Channel (Mega Pickup)	45-52
Adjusting Bale Diameter Display	45-15	Setting Pickup Feeder Forks (Wide	
Understanding Variable Core Feature	45-16	Pickup)	45-52
Adjusting Variable Core Diameter	45-17	Starting a Bale in Difficult Conditions	45-53
Understanding Twine Wrap Terms and		Baling	
Settings	45-18	Short, Dry, Slick Crops	45-54
Setting Twine Spacing	45-20	Cornstalks	45-55
Setting Number of Twine End Wraps	45-21	Long, Stiff, Cane-Type Crops	45-56
Setting Twine End Wrap Distance	45-22	Wet Hay	45-57
Setting Number of Net Wraps (If		Fire Prevention	45-58
Equipped)	45-23	Extinguishing a Fire	45-58
Recommended Baling Guidelines	45-24	Bale Push Bar (If Equipped)	
Interpreting Bale Shape Bars	45-26	Operation	45-59
Weaving in the Windrow	45-28	Operating	45-60
Viewing and Resetting Bale Counters	45-29	Locking Out	45-62
Using Manual Actuator, Wrap, and		Engaging	45-63
By-Pass Switches	45-30	<b>Attachments</b>	50-1
Using By-Pass Switch (Twine Wrap)	45-31	<b>Lubrication and Maintenance</b>	
Advanced Operational Information		Grease	55-1
Using Dry Straw Twine Wrap Program		Gear Case Oil	55-1
(Channel 17)	45-32	Alternative and Synthetic Lubricants	55-2
Adjusting Bale Shape Sensitivity		Observe Lubrication Symbols	55-2
(Channel 24)	45-33	Perform Lubrication and Maintenance	55-3
Adjusting Near-Full Indicator Set Point		Fire Prevention	55-3
(Channel 25)	45-34	Belt Pins	55-4
Adjusting New Wrap Delay (Channel		Lubrication and Maintenance	
26)	45-35	Every 10 Hours	55-4
Adjusting Bale Shape Bars (Channel		Every 30 Hours	55-8
28)	45-36	Every 50 Hours	55-10
Changing Monitor-Controller Display to		Every 100 Hours	55-10
Metric or English Units	45-37	Annually	55-11
Changing Baler Model Program	45-38	<b>Troubleshooting</b>	
Bale Density Gauge	45-39	PTO Driveline Difficulties	60-1
Adjusting		Main Drive Slip-Clutch Difficulties	60-2
Bale Density	45-40	Drive Chain Difficulties	60-2
Twine Tension	45-40	Gear Case Difficulties	60-3
Pickup Height	45-42	Diagnosing Hydraulic Functions	60-4
Gauge Wheels—Mega Pickup	45-43	Automatic Twine Wrap	60-7
Gauge Wheels—Wide Pickup	45-44	BaleTrak® PLUS Monitor-Controller	
Gathering Wheel Height	45-44	Difficulties	60-15
Checking Baler Performance in the Field	45-45	Feeding Difficulties	60-26
Locking the Gate	45-46	Pickup Difficulties	60-29
Unplugging Baler With Hydraulic Pickup		Bale Quality	60-32
Lift (If Equipped)	45-47		
Unplugging Baler Under Power	45-48		

Continued on next page

Contents

	Page		Page
General Baler Difficulties . . . . .	60-34	Twine Electric Actuator Installation	
Push Bar Difficulties . . . . .	60-40	Adjustment . . . . .	65-37
Silage Baling Difficulties . . . . .	60-42	Adjusting Twine Arm to Starter Roll and	
Net Wrap Difficulties . . . . .	60-44	Twine Arm Stop . . . . .	65-41
<b>Service—Baler</b>		Adjusting Pickup Float Springs	
Practice Safe Service Procedures . . . . .	65-1	Mega Pickup . . . . .	65-46
Fire Prevention . . . . .	65-2	Wide Pickup . . . . .	65-47
Keep Service Area Clean . . . . .	65-3	Adjusting Pickup Lift Crank Stop Nuts	
Service Tires Safely . . . . .	65-4	(Wide Pickup) . . . . .	65-48
BaleTrak® PLUS Component Locations . . . . .	65-5	Hydraulic Pickup Lift Cylinder Dimension . . . . .	65-49
Wiring Diagrams		Checking Pickup Tooth End Play . . . . .	65-50
BaleTrak® PLUS Control System . . . . .	65-6	Adjusting Gate Latch Stop . . . . .	65-51
Warning Light . . . . .	65-7	Adjusting Gate Latch Linkage . . . . .	65-51
Replacing Monitor Fuses and Relays . . . . .	65-8	Replacing Sensors	
Hydraulic System Diagram . . . . .	65-10	Twine Wrap . . . . .	65-52
Installing Orifice in Tractors With Low		Bale Diameter . . . . .	65-52
Hydraulic Flow . . . . .	65-11	Bale Shape . . . . .	65-53
Adjusting		Adjusting Switches	
Pickup Drive Chains—Mega Pickup . . . . .	65-13	Twine Wrap Sensor (Channel 03—With	
Pickup Drive Chains—Wide Pickup . . . . .	65-13	Sound) . . . . .	65-53
Lower Belt and Cleaning Auger Drive		Bale Diameter Sensor (Channel	
Roll Chain . . . . .	65-14	05—With Sound) . . . . .	65-55
Upper Drive Roll Chain . . . . .	65-14	Bale Shape Bar Display (Channels 07	
Servicing Upper Chain and Idler . . . . .	65-15	and 09) . . . . .	65-56
Replacing Chain Idler Bushing . . . . .	65-15	Bale Shape Sensor (Channels 07 and	
Main Drive Slip-Clutch		09—With Sound) . . . . .	65-57
Adjusting . . . . .	65-16	Testing	
Slipping . . . . .	65-17	Gate Latch and Oversize Bale	
Checking Pickup Slip-Clutch Torque . . . . .	65-18	Switches (Channels 11-12-13) . . . . .	65-58
Belt Tracking		Twine Wrap Actuator Current (Channel	
Checking . . . . .	65-21	14) . . . . .	65-59
Adjusting . . . . .	65-22	Tractor Convenience Outlet Voltage	
Adjusting Scrapers		(Channel 15) . . . . .	65-60
Lower Feed Roll . . . . .	65-24	Lighted Crystal Display (LCD) Panel	
Starter Roll . . . . .	65-25	(Channel 16) . . . . .	65-61
Idler Roll . . . . .	65-25	Oversize Bale . . . . .	65-62
Auger Scrapers (Wide Pickup) . . . . .	65-26	Adjusting Gate Latch Switches . . . . .	65-63
Cleaning Auger . . . . .	65-26	Checking Microswitches . . . . .	65-63
Adjusting		Raising Gate With Hoist . . . . .	65-64
Take-Up Arm Compression Spring . . . . .	65-28	Checking Belt Pins . . . . .	65-64
Twine Indicator Retaining Strap . . . . .	65-29	Correct Belt Lacing and Pin Installation . . . . .	65-65
Twine Cutter Tension . . . . .	65-29	Incorrect Belt Lacing and Pin Installation . . . . .	65-66
Cutter Link Support and Twine Arm		Installing Belts . . . . .	65-66
Clearance . . . . .	65-32	Repairing Belts . . . . .	65-67
Twine Arm Distance from Right		Belts Not Eligible for Warranty	
Sidesheet . . . . .	65-33	Replacement . . . . .	65-73
Front Twine Arm . . . . .	65-34	<b>Service—Net Wrap</b>	
Twine Cutter to Twine Arm . . . . .	65-35	Practice Safe Service Procedures . . . . .	70-1
Checking Knife Adjustment . . . . .	65-36	Releasing Feed Roll Brake . . . . .	70-2
		Correcting Net Wrap Feeding Problems . . . . .	70-3

Continued on next page

Contents


	Page
Repairing Cuts On Feed Roll . . . . .	70-6
Brake Bar Tension	
Decreasing . . . . .	70-7
Increasing . . . . .	70-8
Adjusting Knife Arm Stop . . . . .	70-9
Checking Feed Roll Brake . . . . .	70-12
Adjusting Feed Roll Pressure . . . . .	70-14
Net Wrap Switch	
Testing (Channel 10) . . . . .	70-15
Adjusting . . . . .	70-16
Checking Cutoff Indicator Channel Travel . . .	70-19
Knife	
Removing and Installing . . . . .	70-21
Sharpening . . . . .	70-24
Actuator	
Testing Current (Channel 14) . . . . .	70-25
Removing . . . . .	70-26
Installing . . . . .	70-28
Removing and Installing Net Wrap V-Belt . . .	70-31
Net Wrap V-Belt Idler Arm	
Removing and Installing . . . . .	70-32
Checking Adjustment . . . . .	70-32
Adjusting Net Wrap Roll Support Brackets. . .	70-34
Checking and Adjusting Lower Net Wrap	
Guide . . . . .	70-35
<b>Storage . . . . .</b>	<b>75-1</b>
<b>Specifications</b>	
Machine Specifications	
BaleTrak® PLUS Monitor-Controller . . . . .	80-1
Machine . . . . .	80-2
Record Product Identification Numbers . . . . .	80-4
Bolt and Cap Screw Torque Value Charts	
Metric . . . . .	80-5
Inch . . . . .	80-6
<b>Crime Prevention Tips . . . . .</b>	<b>85-1</b>
<b>Index</b>	

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

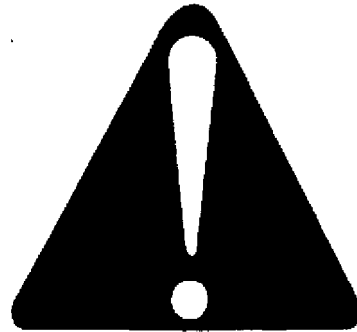

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

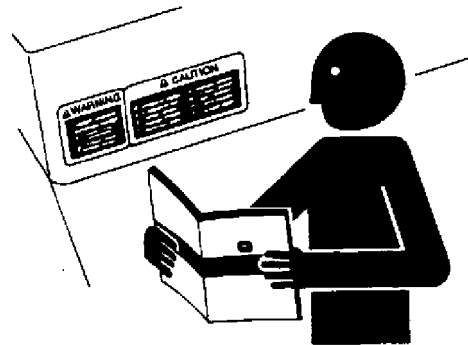


DX,READ -19-03MAR93

TS201 -UN-23AUG88



## PROTECT BYSTANDERS

To prevent crushing injury be sure bystanders stand clear before operating gate and unloading bale.

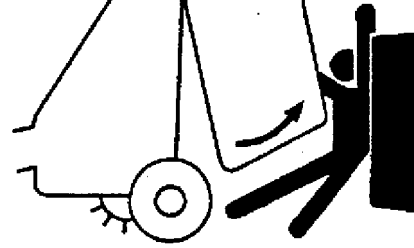


EX,435C,A -19-01SEP88

E32162 -UN-12SEP88

## OPERATE BALER SAFELY

To avoid injury or death by being pulled into the machine:

- DO NOT attempt to feed crop or twine into baler or unplug feed area WHILE BALER IS RUNNING. The baler feeds material faster than you can release it.
- Disengage PTO and shut off engine.
- Stand clear of baler at all times when machine is operating.

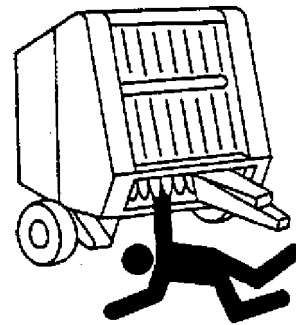


EX,435C,B -19-01SEP88

E32161 -UN-12SEP88

## OPERATE SAFELY ON SLOPES

Be especially careful when operating on hillsides. The baler may tip sideways if it strikes a hole, ditch, or other irregularity.

To prevent injury or damage from a rolling bale, discharge bales on level ground or in such a manner that the bale will not roll.

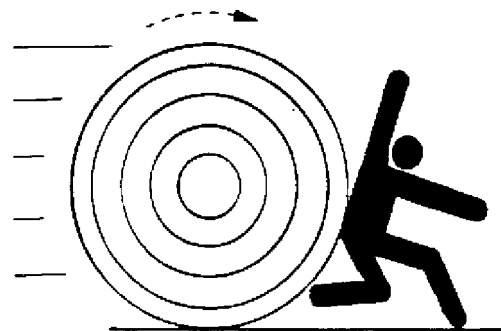

EX,435C,C -19-14JUL92

E36866 -UN-30APR92






## HANDLE ROUND BALES SAFELY

To help prevent personal injury, do not handle round bales without approved John Deere Round Bale Handling attachments.

Improper use of loaders to handle round bales can result in serious injury or death to the tractor/loader operator. This could be caused by the bale rolling back down the loader into the operator's station.

To attain optimum stability and visibility:

- Do not handle bales that exceed the bale weight limitations of the loader.
- Carry the bale slowly and as low as possible to the ground.
- Operate the loader controls smoothly, avoiding jerky operation.
- When handling round bales on a slope, always approach the bale with the tractor facing uphill.
- Never use the tractor/loader to stop a rolling bale.

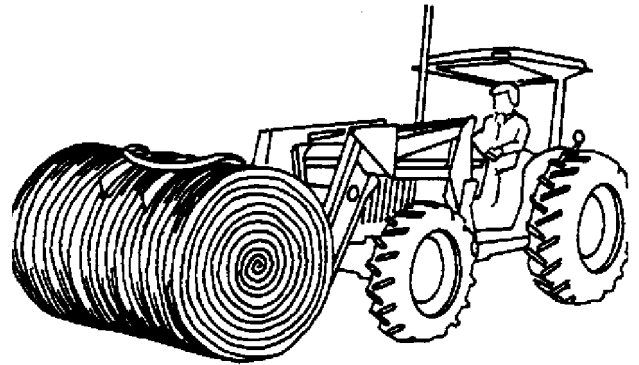

W7718 -UN-06OCT88

EX,435C,D -19-01SEP88

## KEEP RIDERS OFF MACHINE

Keep riders off.

Riders are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



TS249 -UN-23AUG88

EX,945IC,H -19-13FEB97



## PREPARE FOR EMERGENCIES


Be prepared if a fire starts.

1. Eject bale immediately.
2. Move tractor and baler upwind 9 m (30 ft) away from flammable material.
3. Raise gate and engage gate lock valve.
4. Use fire extinguisher or other water supply to put out fire.

- A 9.5 L (2-1/2 gal) pressurized-water fire extinguisher is recommended. See manufacturer's recommendation for inspection and maintenance.

Keep first aid kit handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

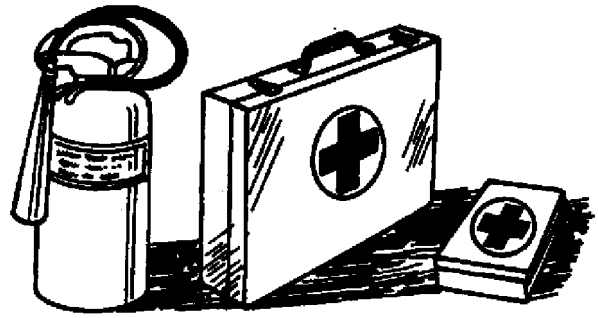

TS291  
-UN-23AUG68

EX,435C,J -19-25OCT96



## FIRE PREVENTION

To reduce the risk of fire, follow these guidelines, especially in dry crop conditions:

- Equip the baler with a water-type fire extinguisher. Large capacity water fire extinguishers are recommended because application of water can cool hot parts to prevent a fire. (See Attachments section.)
- Keep foreign material (crop, chaff, twine, net wrap material, etc.) from building up on the machine near potentially hot areas, such as bearings on ends of baler rolls and slip clutch. Remove this buildup as part of the regular service operations.
- Avoid high pressure power-washing adjacent to the bearings on ends of baler rolls to prevent damaging seals.
- Check bearings on ends of baler rolls regularly for early signs of failure replace as necessary. (See Lubrication and Maintenance section or see your John Deere dealer.)
- If noticeable changes in machine performance occur which might indicate a part is beginning to fail, stop baling immediately and investigate the cause of any sounds, smells, or sights which are unusual.
- Promptly eject bales after they have been tied or wrapped. Do not use the baler to transport bales from the field. Do not bring a baler, with a bale inside it, into a building. Never leave a baler unattended with a bale inside the chamber.
- Use extreme care if it is necessary to park a baler in a field of dry crop or stubble. Whenever possible, park baler on bare ground or in an area surrounded by bare ground. Before leaving a baler which has been operating, verify there are no areas which are hot enough to start a fire. Do not leave the baler unattended near bales which have been baled wet, because spontaneous combustion can occur.
- If service operations require using a welder, cutting torch or grinder on the baler, refer to Fire Prevention in Service—Baler section for guidelines which may prove useful in preventing a fire.
- Use extreme care when smoking around the baler.



TS227  
-UN-23AUG68



## IN CASE OF FIRE

Stop baling immediately at the first sign of trouble. This may be a scorched smell, an unusual sound, or the sight of smoke or flame.

**Do not risk personal injury. If a fire is too far advanced, do not try to extinguish it.**

If you can safely extinguish the fire, proceed carefully and follow these guidelines:

- Position the tractor upwind from the baler to avoid the fire from overtaking the tractor.
- Open the baler gate to eject any crop material from the bale chamber, and drive away from this material.
- Use a fire extinguisher or other source to spray water at the base of the flame, and to cool adjacent parts. Do not position yourself under an open baler gate. It may fall if baler is on fire.



EX,566C,O -19-05SEP97

TS227 -UN-23AUG88


## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

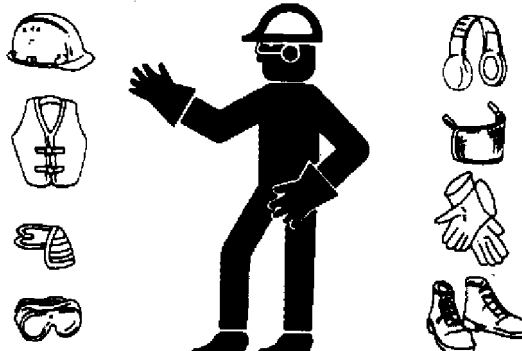

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88



## HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95


TS1644 -UN-22AUG95



## USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

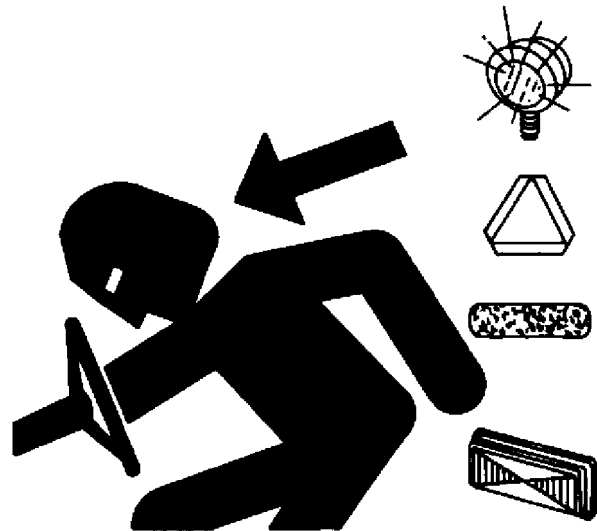

DX,FLASH -19-12SEP95


TSS951 -UN-12APR90

## USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

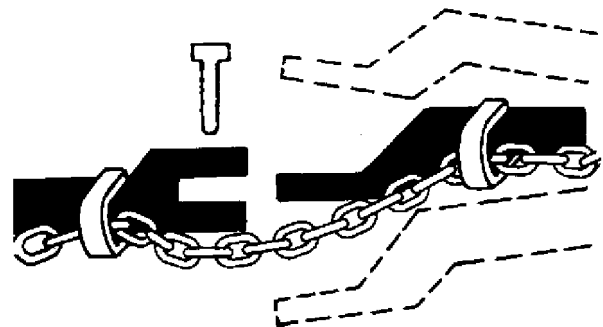

DX,CHAIN -19-03MAR93

TSS217 -UN-23AUG88




## TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

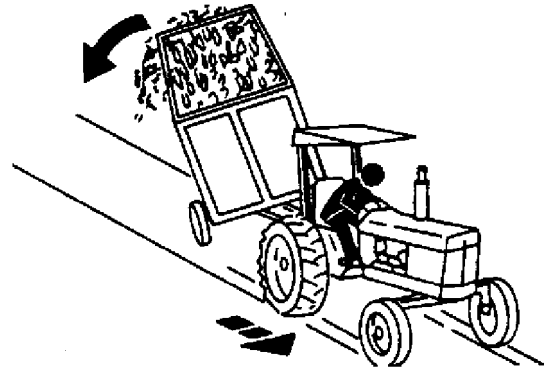

TS216 -UN-23AUG68

DX,TOW

-19-02OCT95



## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

## REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

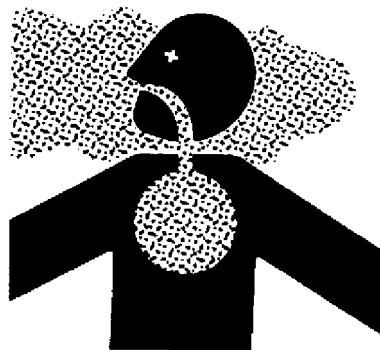

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88





## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90


## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

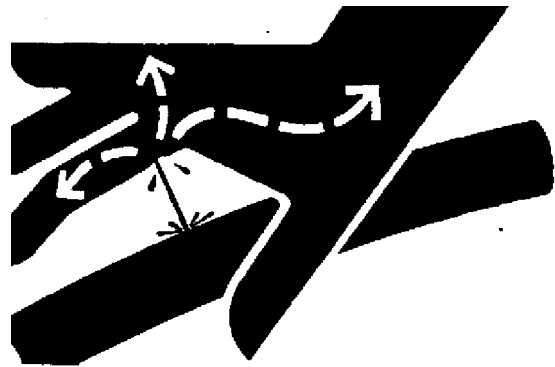

DX,FLUID -19-03MAR93

X9811 -UN-23AUG88



## DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

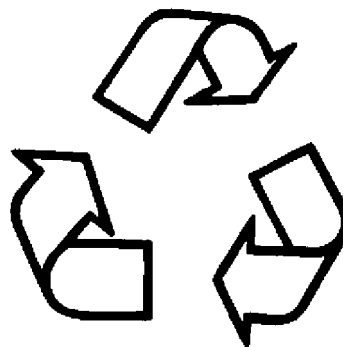

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)