


**467,  
467 Silage Special,  
and 567  
Round Balers**

**OPERATORS  
MANUAL**

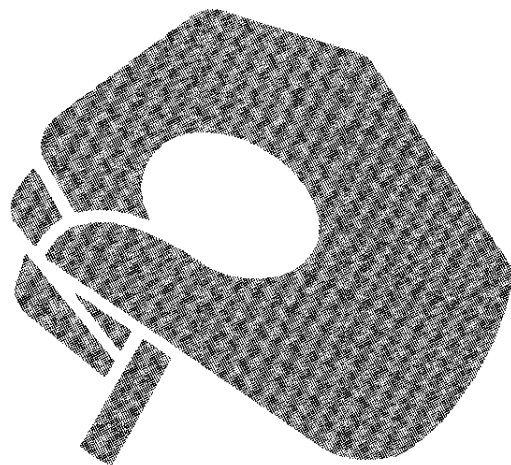

**John Deere Ottumwa Works  
OME97592 Issue H0**

LITHO IN U.S.A.  
ENGLISH

# Introduction

## Forward



567 with MegaWide Pickup, CoverEdge™ Net Wrap, and Optional Push Bar

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it

be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

# Contents

	Page		Page
<b>Safety</b> .....	05-1	Threading Net Wrap and Routing Through Rolls .....	25-8
<b>Safety Signs</b> .....	10-1		
<b>Preparing the Tractor</b>		<b>Attaching and Detaching</b>	
Adjusting Tractor Drawbar .....	15-1	Assembling Main PTO Driveline Splined Telescoping Members (If Necessary) .....	30-1
Using Heavy-Duty Tractor Drawbar .....	15-2	Attaching Baler to Tractor Drawbar .....	30-1
Drawbar Shield		Connecting PTO Driveline .....	30-2
Using .....	15-3	Attaching to Tractor Hydraulic System .....	30-4
Making .....	15-3	Using Tractor Convenience Outlet .....	30-5
Three-Point Hitch Position .....	15-3	Connecting Baler Wiring Harness to Tractor....	30-5
Adjusting Tractor Wheels .....	15-4	Connecting Tail/Warning Light Plug to Tractor .....	30-6
Checking Ballast, Wheel Spacing, and Tire Inflation .....	15-5	Detaching Baler From Tractor .....	30-7
Setting Tractor Hydraulic Outlets .....	15-5		
Tractor Convenience Outlet .....	15-5	<b>Transporting</b>	
Installing BALETRAK PLUS		Preparing Baler for Transport .....	35-1
Monitor-Controller		Follow Safe Transport Procedures .....	35-4
Open-Station Tractor .....	15-8	Lighting Enhancement Module Operation .....	35-4
ComfortGard Cab .....	15-8	Keep Riders Off Machine .....	35-5
SOUND-GARD Cab .....	15-9	Using Extended Rear-View Mirror .....	35-5
Using Extended Rear-View Mirror .....	15-10		
		<b>Handling Round Bales</b>	
<b>Preparing the Baler</b>		With Bale Fork .....	40-1
Checking Oversize Bale Switch .....	20-1	With Grapple .....	40-2
Selecting Twine .....	20-1	With Net Wrap .....	40-3
Loading Twine Boxes .....	20-2	Feeding Round Bales .....	40-3
Routing Twine from Boxes			
Left-Hand Side (Front Twine Arm) .....	20-3	<b>Operating the Baler</b>	
Right-Hand Side (Rear Twine Arm) .....	20-7	How the Baler Forms a Bale .....	45-1
Wheel Spindle Positions		Crop Preparation .....	45-2
Regular or MEGATOOTH Pickup .....	20-11	Breaking In Baler .....	45-2
MegaWide Pickup .....	20-12	Keep Riders Off Machine .....	45-3
Adjusting Wheel Spindles .....	20-12	BALETRAK PLUS Monitor-Controller	
Tire Inflation Pressures .....	20-13	Introduction .....	45-4
Checking Wheel Nut Torque .....	20-13	Description .....	45-6
		Keys and Switches .....	45-7
<b>Preparing Baler for Net Wrap</b>		Displays and Indicators .....	45-8
Selecting Net Wrap Material .....	25-1	Setup Values and Initial Settings .....	45-9
Care of Net Wrap Material .....	25-1	Diagnostic and Setup Modes .....	45-10
Opening and Closing Net Wrap Cover .....	25-1	Diagnostic and Setup Channels .....	45-11
Using Net Wrap After Extended Storage .....	25-2		
Manually Releasing Net Wrap Brake .....	25-7		

Continued on next page

Contents

	<b>Page</b>		<b>Page</b>
Operating . . . . .	45-12	Adjusting Compressor Rod Channel (MEGATOOTH™ and MegaWide Pickup) . . .	45-56
Resetting to Initial Settings (Channel 01) . . .	45-14	Starting a Bale in Difficult Conditions . . . . .	45-57
Activating Alarms . . . . .	45-15	Baling	
Adjusting Audible Alarm Volume. . . . .	45-16	Short, Dry, Slick Crops . . . . .	45-58
Setting Bale Diameter . . . . .	45-16	Cornstalks. . . . .	45-60
Adjusting Bale Diameter Display. . . . .	45-17	Long, Stiff, Cane-Type Crops . . . . .	45-62
Optional Variable (Soft) Core (If Equipped)		Wet Hay . . . . .	45-64
Understanding. . . . .	45-18	Fire Prevention . . . . .	45-65
Adjusting. . . . .	45-19	Extinguishing a Fire . . . . .	45-66
Understanding Twine Wrap Terms and		Bale Push Bar (If Equipped)	
Settings . . . . .	45-20	Operation . . . . .	45-66
Setting		Operating . . . . .	45-68
Twine Spacing . . . . .	45-22	Locking Out . . . . .	45-70
Number of Twine End Wraps . . . . .	45-23	Engaging . . . . .	45-71
Twine End Wrap Distance. . . . .	45-24	<b>Attachments</b>	
Number of Net Wraps (If Equipped) . . . . .	45-26	Hitch Conversion Kit . . . . .	50-1
Recommended Baling Guidelines . . . . .	45-27	Pickup Gauge Wheels (Regular Pickup) . . . . .	50-1
Interpreting Bale Shape Indicators . . . . .	45-28	Gathering Wheels. . . . .	50-1
Weaving in the Windrow. . . . .	45-30	Bale Push Bar . . . . .	50-2
Viewing and Resetting Bale Counters. . . . .	45-31	CoverEdge™ Surface Wrap Unit. . . . .	50-2
Using Manual Actuator, Wrap, and Bypass		High-Moisture Kit (467 and 567) . . . . .	50-3
Switches . . . . .	45-32	Hydraulic Pickup Lift . . . . .	50-3
Using Bypass Switch (Twine Wrap Only) . . . . .	45-33	Variable Core Valve . . . . .	50-4
Advanced Operational Information		Gate Deflectors (467 and 567) . . . . .	50-4
Using Dry Straw Twine Wrap		BALETRAK PLUS Monitor-Controller . . . . .	50-4
(Channel 17) . . . . .	45-34	Monitor-Controller Mounting Brackets. . . . .	50-5
Setting Twine Re-Extension or Cinch		Mounting Kit For Open Station 6000 and	
Wrap Distance (Channel 18) . . . . .	45-35	7000 Series Tractors. . . . .	50-5
Setting Bale Shape Sensitivity		Belt Lacing Tool . . . . .	50-5
(Channel 24) . . . . .	45-37	Skiving Tool . . . . .	50-6
Setting Near-Full Indicator Set Point		Drawbar Shield. . . . .	50-6
(Channel 25) . . . . .	45-38	Electrical Outlet Socket . . . . .	50-6
Adjusting Net Wrap Delay (Channel 26) . . . . .	45-39	Rear-View Mirror Extension . . . . .	50-6
Changing Monitor-Controller Display to		PTO Conversion Parts . . . . .	50-7
Metric or English Units . . . . .	45-40	Fire Extinguisher . . . . .	50-8
Changing Baler Model Program . . . . .	45-41	Allied Equipment . . . . .	50-10
Bale Density Gauge . . . . .	45-42	<b>Lubrication and Maintenance</b>	
Adjusting		Grease . . . . .	55-1
Bale Density . . . . .	45-43	Gear Case Oil . . . . .	55-1
Twine Tension . . . . .	45-44	Alternative and Synthetic Lubricants . . . . .	55-2
Pickup Height . . . . .	45-47	Observe Lubrication Symbols . . . . .	55-2
Gauge Wheels . . . . .	45-48	Perform Lubrication and Maintenance . . . . .	55-3
Gathering Wheel Height (If Equipped). . . . .	45-50	Fire Prevention . . . . .	55-3
Checking Baler Performance in the Field . . . . .	45-50	Belt Pins. . . . .	55-4
Locking the Gate . . . . .	45-51	Every 10 Hours . . . . .	55-4
Unplugging Baler With Hydraulic Pickup Lift		Every 30 Hours . . . . .	55-7
(If Equipped) . . . . .	45-51	Every 50 Hours . . . . .	55-10
Unplugging Baler Under Power . . . . .	45-52		
Compressor Rack Assembly			
Removing . . . . .	45-53		
Installing . . . . .	45-54		
Adjusting. . . . .	45-55		

Continued on next page

Contents

	Page		Page
Every 100 Hours .....	55-11	Main Drive Slip Clutch	
Annually .....	55-11	Adjusting .....	65-31
<b>Troubleshooting</b>		Slipping .....	65-32
PTO Driveline Difficulties .....	60-1	Checking Pickup Slip Clutch Torque (	
Main Drive Slip Clutch Difficulties .....	60-2	MEGATOOTH™ or MegaWide) .....	65-34
Drive Chain Difficulties .....	60-2	Belt Tracking	
Gear Case Difficulties .....	60-3	Checking .....	65-38
Diagnosing Hydraulic Functions .....	60-4	Adjusting .....	65-39
Automatic Twine Wrap .....	60-8	Adjusting Scraper(s)	
BALETRAK PLUS Monitor-Controller		Lower Feed Roll .....	65-43
Difficulties .....	60-17	Starter Roll (If Equipped) .....	65-44
Feeding Difficulties .....	60-30	Idler Roll .....	65-45
Pickup Difficulties .....	60-35	Adjusting Auger Scrapers (MegaWide	
Bale Quality .....	60-40	Pickup) .....	65-45
General Baler Difficulties .....	60-42	Checking and Adjusting Clearance Between	
Push Bar Difficulties .....	60-50	Cleaning Auger and Staggered Belt Roll (467S)	
High-Moisture Kit (Silage Baling) Difficulties ..	60-52	.....	65-46
Net Wrap Difficulties .....	60-55	Adjusting	
<b>Service—Baler</b>		Take-Up Arm Compression Springs .....	65-48
Detailed Service Information—Use TM1874 .....	65-1	Twine Indicator Retaining Strap .....	65-49
Practice Safe Service Procedures .....	65-2	Twine Cutter Tension .....	65-49
Fire Prevention .....	65-3	Clearance Between Cutter Link	
Keep Service Area Clean .....	65-4	Support and Twine Arm .....	65-53
Service Tires Safely .....	65-5	Front Twine Arm .....	65-55
Rotating Output Shaft By Hand .....	65-5	Twine Cutter-to-Twine Arm .....	65-57
BALETRAK PLUS Component Locations .....	65-6	Twine Arm Timing (567) .....	65-59
Wiring Diagram—BALETRAK® PLUS		Checking and Adjusting Twine Cutter Knife ..	65-60
Control System .....	65-7	Twine Electric Actuator Installation	
Wiring Harness Diagrams		Adjustment .....	65-62
BALETRAK PLUS .....	65-8	Adjusting Twine Arm-to-Starter Roll,	
Baler .....	65-12	Cutter Link Support, and Twine Arm Stop ..	65-67
Replacing Monitor-Controller Fuse and		Adjusting Pickup Float Springs	
Relays .....	65-15	Regular Pickup (467 and 567) .....	65-73
Hydraulic System Diagram .....	65-18	MEGATOOTH Pickup .....	65-74
Installing Orifice in Tractors With Low		MegaWide Pickup .....	65-75
Hydraulic Flow .....	65-20	Adjusting Initial Length of Hydraulic Lift	
Adjusting		Cylinder (If Equipped) .....	65-76
Initial Length of Pickup Drive Belt Idler		Checking Pickup Tooth End Play .....	65-77
Spring--Regular Pickup (467and 567) .....	65-22	Adjusting	
Pickup Drive Belt Idler--Regular Pickup		Gate Latch Stop .....	65-78
(467and 567) .....	65-22	Gate Latch Linkage .....	65-80
Pickup Drive Chains--MEGATOOTH		Replacing	
Pickup .....	65-23	Twine Wrap Sensor .....	65-80
Pickup Drive Chains--MegaWide Pickup .....	65-24	Bale Diameter Sensor .....	65-82
Lower Drive Roll Chain .....	65-26	Bale Shape Sensor .....	65-83
Upper Drive Roll Chain .....	65-27	Adjusting	
Servicing Upper Chain and Idler .....	65-28	Twine Wrap Sensor (Channel 3--With	
Rotating or Replacing Upper Drive Roll		Sound) .....	65-86
Chain Guides .....	65-29	Bale Diameter Sensor (Channel 05--With	
Rotating or Replacing Upper Drive Roll		Sound) .....	65-89
Chain Idler Bushing .....	65-30		

Continued on next page

Contents

	<b>Page</b>		<b>Page</b>
Bale Shape Bar Display (Channels 07 and 09) . . . . .	65-91	<b>Specifications</b>	
Adjusting Bale Shape Sensor (Channels 07 and 09—With Sound) . . . . .	65-92	BALETRAK PLUS Monitor-Controller . . . . .	80-1
Testing		Machine Specifications . . . . .	80-2
Gate Latch and Oversize Bale Switches . . . . .	65-94	Record Product Identification Numbers . . . . .	80-4
Twine Wrap Actuator Current . . . . .	65-96	Record Serial Numbers	
Tractor Convenience Outlet Voltage . . . . .	65-98	Baler . . . . .	80-5
Liquid Crystal Display (LCD) Panel . . . . .	65-99	Net Wrap (If Equipped) . . . . .	80-5
Adjusting Switches		Bolt and Cap Screw Torque Values	
Oversize Bale . . . . .	65-100	Metric . . . . .	80-6
Gate Latch . . . . .	65-101	Inified Inch . . . . .	80-7
Checking Microswitches . . . . .	65-102	<b>Crime Prevention Tips</b>	
Raising Gate With Hoist . . . . .	65-102	Help Prevent Crime . . . . .	85-1
Checking Belt Pins . . . . .	65-103	Record Ag Identification Numbers . . . . .	85-1
Belt Lacing and Pin Installation		Keep Proof of Ownership . . . . .	85-1
Correct . . . . .	65-104	Park Indoors Out of Sight . . . . .	85-1
Incorrect . . . . .	65-105	When Parking Outdoors . . . . .	85-2
Belts		Reduce Vandalism . . . . .	85-2
Installing . . . . .	65-106	Report Thefts Immediately . . . . .	85-3
Repairing . . . . .	65-107	<b>John Deere Service Literature Available . . . . .</b>	<b>1</b>
Eligible for Warranty Replacement . . . . .	65-113	<b>John Deere Service Keeps You On The Job . . . . .</b>	<b>3</b>
Not Eligible for Warranty Replacement . . . . .	65-113		
<b>Service—Net Wrap</b>			
Detailed Service Information—Use TM1874 . . . . .	70-1		
Practice Safe Service Procedures . . . . .	70-1		
Releasing Feed Roll Brake . . . . .	70-2		
Correcting Net Wrap Feeding Problems . . . . .	70-2		
Repairing Cuts on Rubber Feed Roll . . . . .	70-4		
Adjusting Counterknife . . . . .	70-5		
Checking and Adjusting Feed Roll Brake . . . . .	70-8		
Adjusting Feed Roll Pressure . . . . .	70-11		
Net Wrap Switch			
Monitor-Controller Assisted Test			
(Channel 10) . . . . .	70-12		
Checking and Adjusting . . . . .	70-14		
Net Wrap Cutoff Knife			
Removing and Installing . . . . .	70-17		
Sharpening . . . . .	70-20		
Actuator			
Testing Current (Channel 14) . . . . .	70-21		
Removing . . . . .	70-22		
Installing . . . . .	70-24		
Removing and Installing Net Wrap V-Belt . . . . .	70-26		
Checking and Adjusting Lower Net Wrap			
Guide . . . . .	70-27		
Adjusting Net Wrap Stretch . . . . .	70-29		
<b>Storage</b>			
Storing Baler (End of Season) . . . . .	75-1		
Removing Baler from Storage (Beginning of Season) . . . . .	75-2		

# Safety

## Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX.ALERT -19-29SEP98-1/1

T81389 -UN-07DEC88

## Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX.SIGNAL -19-03MAR93-1/1

TS187 -19-30SEP88


## Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

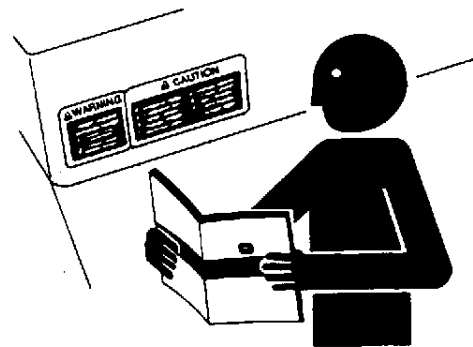


AG.OUO6059,152 -19-21JUN00-1/1

TS201 -UN-23AUG88

### Protect Bystanders

To prevent crushing injury be sure bystanders stand clear before operating gate, and/or push bar (if equipped) and unloading bale.

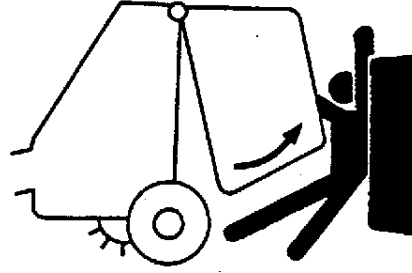


E32162 -UN-12SEP88

AG,OUO6059,153 -19-21JUN00-1/1

### Operate Baler Safely

To avoid injury or death by being pulled into the machine:


- DO NOT attempt to feed crop or twine into baler or unplug feed area WHILE BALER IS RUNNING. The baler feeds material faster than you can release it.
- Disengage PTO and shut off engine.
- Stand clear of baler at all times when machine is operating.

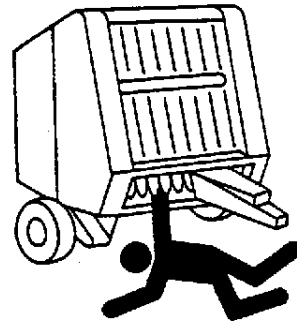

E32161 -UN-12SEP88

EX,435C,B -19-01SEP88-1/2

If baler plugs during twine arm cycle, it is recommended that twine arms be manually positioned to release any "hold" they may have on the crop plug. Turn off power to twine arms. This will help to make the unplugging operation easier and prevent twine arms from moving unexpectedly while your hands may be in the path of the twine arms. Stay out of the path of twine arms at all times when power to the arms is ON.

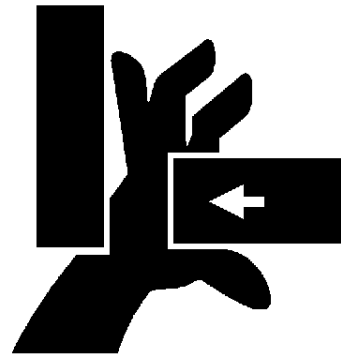


E47598 -UN-07JAN00

EX,435C,B -19-01SEP88-2/2

### Operate Safely on Slopes

Be especially careful when operating on hillsides. The baler may tip sideways if it strikes a hole, ditch, or other irregularity.

To prevent injury or damage from a rolling bale, discharge bales on level ground or in such a manner that the bale will not roll.

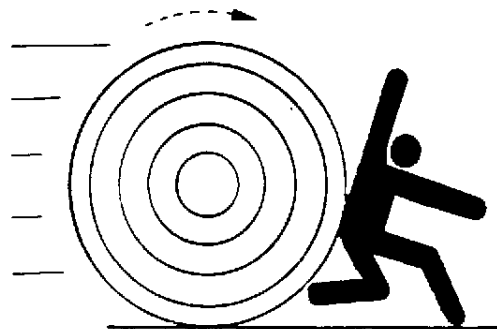

E36666 -UN-30APR92

EX,435C,C -19-14JUL92-1/1




### Handle Round Bales Safely

To help prevent personal injury, do not handle round bales without approved John Deere Round Bale Handling attachments.

Improper use of loaders to handle round bales can result in serious injury or death to the tractor/loader operator. This could be caused by the bale rolling back down the loader into the operator's station.

To attain optimum stability and visibility:

- Do not handle bales that exceed the bale weight limitations of the loader.
- Carry the bale slowly and as low as possible to the ground.
- Operate the loader controls smoothly, avoiding jerky operation.
- When handling round bales on a slope, always approach the bale with the tractor facing uphill.
- Never use the tractor/loader to stop a rolling bale.

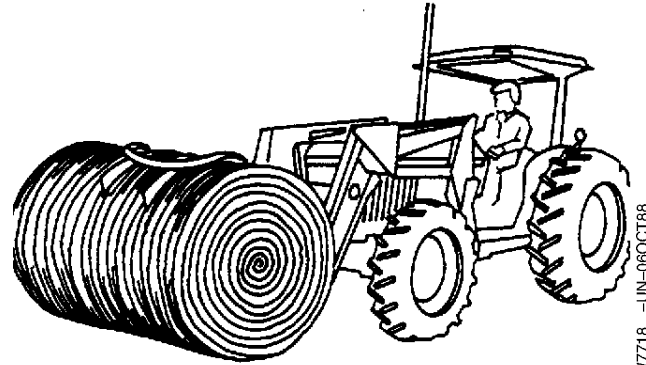

W7718 -UN-06OCT88

EX,435C,D -19-01SEP88-1/1

### Keep Riders Off Machine

Keep riders off.

Riders are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



T5249 -UN-23AUG88

EX,945IC,H -19-13FEB97-1/1

## Prepare for Emergencies


Be prepared if a fire starts.

1. Eject bale immediately.
2. Move tractor and baler upwind 9 m (30 ft) away from flammable material.
3. Raise gate and engage gate lock valve.
4. Use fire extinguisher or other water supply to put out fire.

A 9.5 L (2-1/2 gal) pressurized-water fire extinguisher is recommended. See manufacturers recommendation for inspection and maintenance.

Keep first aid kit handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

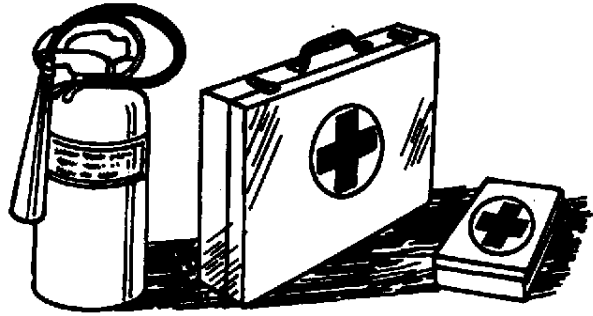

TS291 -UN-23AUG88

EX,435C,J -19-25OCT96-1/1

## Fire Prevention

To reduce the risk of fire, follow these guidelines, especially in dry crop conditions:

- Equip the baler with a water-type fire extinguisher. Large capacity water fire extinguishers are recommended because application of water can cool hot parts to prevent a fire. (See Attachments section.)
- Keep foreign material (crop, chaff, twine, net wrap material, etc.) from building up on the machine near potentially hot areas, such as bearings on ends of baler rolls and slip clutch. Remove this buildup as part of the regular service operations.
- Avoid high pressure power-washing adjacent to the bearings on ends of baler rolls to prevent damaging seals.
- Check bearings on ends of baler rolls regularly for early signs of failure replace as necessary. (See Lubrication and Maintenance section or see your John Deere dealer.)
- If noticeable changes in machine performance occur which might indicate a part is beginning to fail, stop baling immediately and investigate the cause of any sounds, smells, or sights which are unusual.
- Promptly eject bales after they have been tied or wrapped. Do not use the baler to transport bales from the field. Do not bring a baler, with a bale inside it, into a building. Never leave a baler unattended with a bale inside the chamber.
- Use extreme care if it is necessary to park a baler in a field of dry crop or stubble. Whenever possible, park baler on bare ground or in an area surrounded by bare ground. Before leaving a baler which has been operating, verify there are no areas which are hot enough to start a fire. Do not leave the baler unattended near bales which have been baled wet, because spontaneous combustion can occur.
- If service operations require using a welder, cutting torch or grinder on the baler, refer to FIRE PREVENTION in Service—Baler section for guidelines which may prove useful in preventing a fire.
- Use extreme care when smoking around the baler.



### In Case of Fire

Stop baling immediately at the first sign of trouble. This may be a scorched smell, an unusual sound, or the sight of smoke or flame.

**Do not risk personal injury. If a fire is too far advanced, do not try to extinguish it.**

If you can safely extinguish the fire, proceed carefully and follow these guidelines:

- Position the tractor upwind from the baler to avoid the fire from overtaking the tractor.
- Open the baler gate to eject any crop material from the bale chamber, and drive away from this material.
- Use a fire extinguisher or other source to spray water at the base of the flame, and to cool adjacent parts. Do not position yourself under an open baler gate. It may fall if baler is on fire.



TS227 -UN-23AUG88

EX,566C,O -19-05SEP97-1/1


### Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

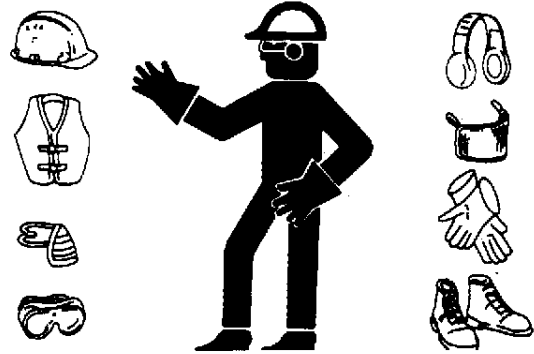

TS206 -UN-23AUG88

DX,WEAR -19-10SEP90-1/1

### Handle Chemical Products Safely

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



TS1132 -UN-26NOV90

DX,MSDS,NA -19-03MAR93-1/1

### Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




TS1644 -UN-22AUG95

DX,PTO -19-12SEP95-1/1

### Use Safety Lights and Devices

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost.

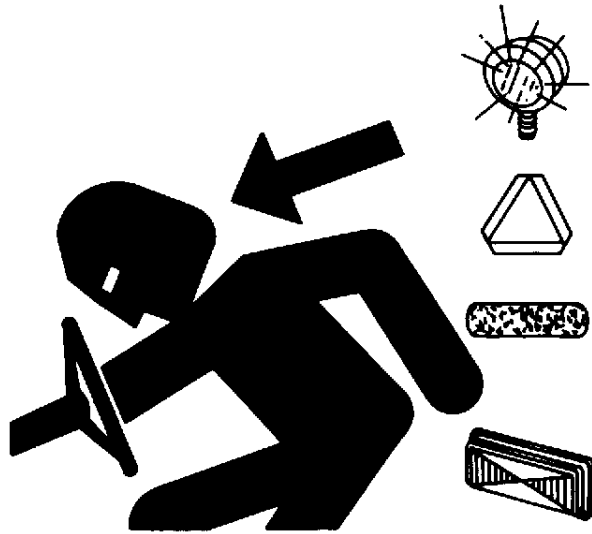

TS951 -UN-12APR80


DX,FLASH -19-17FEB99-1/1

### Use a Safety Chain

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

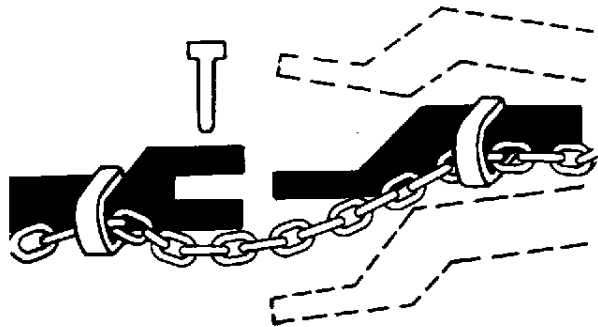

TS217 -UN-23AUG88

DX,CHAIN -19-03MAR93-1/1


## Tow Loads Safely

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

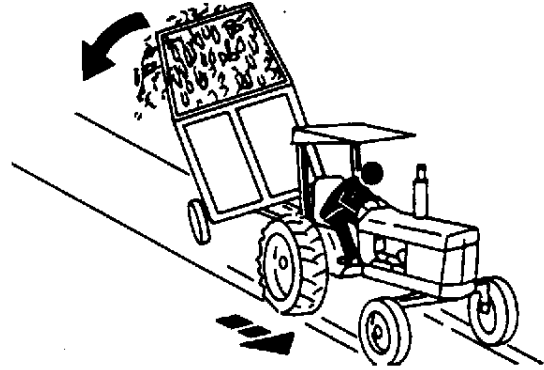

TS216 -UN-23AUG88

DX.TOW -19-02OCT95-1/1

## Practice Safe Maintenance

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.



TS218 -UN-23AUG88

DX.SERV -19-17FEB99-1/1



### Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.


Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 76 mm (3 in.) from area to be affected by heating.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do all work in an area that is ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

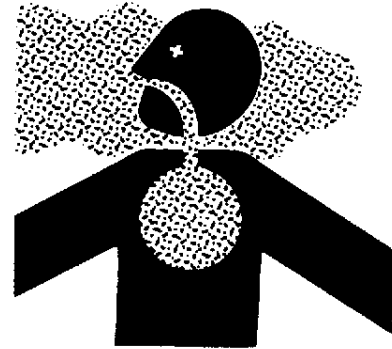

TS220 -UN-23AUG88

DX,PAINT -19-22OCT99-1/1

### Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



TS953 -UN-15MAY90

DX,TORCH -19-03MAR93-1/1


## Avoid High-Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

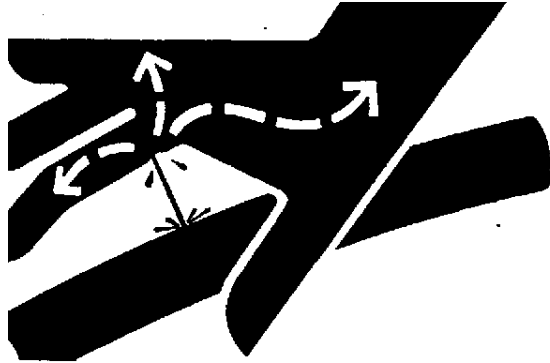

X9811 -JUN-23AUG88

DX.FLUID -19-03MAR93-1/1

## Dispose of Waste Properly


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

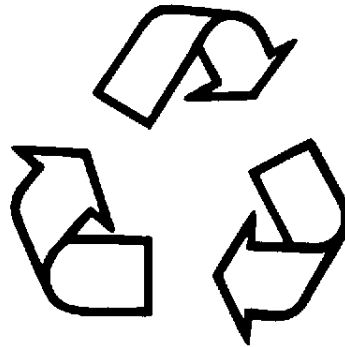

TS1133 -JUN-26NOV90

DX.DRAIN -19-03MAR93-1/1

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)