

# **5300N, 5400N and 5500N Tractors, SuperNarrow Version**

**John Deere Werke Mannheim**  
**OMER360095 Issue K0**  
European Version

Printed in Germany  
**ENGLISCH**

# Introduction

## How To Use This Supplement

THIS SUPPLEMENT **DOES NOT** REPLACE THE OPERATOR'S MANUAL. It gives specific information related to the SuperNarrow versions. Use this supplement together with the Operator's Manual only. Pay special attention to the safety information, given in the Operator's Manual.

READ THIS SUPPLEMENT carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This supplement and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS SUPPLEMENT SHOULD BE CONSIDERED a permanent part of your machine and your Operator's Manual. It should remain with the machine when you sell it.

MEASUREMENTS in this supplement are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench. The specifications relate to the SuperNarrow versions only. For the remaining specifications refer to relevant Section of the Operator's Manual.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section of the Operator's Manual. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

OULXBER,000039C -19-02NOV00-1/1

# Contents

	Page		Page
<b>Identification Views</b>		<b>Service—1500 Hours or Every 2 Years</b>	
5000N Series - SuperNarrow Version . . . . .	00-1	Change Oil In SuperNarrow MFWD Axle . . . . .	115-1
<b>Safety Decals</b>		<b>Specifications</b>	
Pictorial Safety Signs . . . . .	10-1	Machine Specifications <sup>1</sup> . . . . .	140-1
<b>Break-In Period</b>		Load Capacities Of Tires . . . . .	140-2
After The First 4 And 8 Hours Of Operation . . . . .	30-1	Sound Level . . . . .	140-3
After The First 100 Hours Of Operation . . . . .	30-2		
<b>Operating the Tractor</b>			
Travel Speeds, SuperNarrow Tractors			
With 30 km/h (18.5 mph) Transmission . . . . .	45-1		
Forward Travel Speeds, SuperNarrow			
Tractors With 40 km/h (25 mph)			
Transmission . . . . .	45-2		
Reverse Travel Speeds, SuperNarrow			
Tractors With 40 km/h (25 mph)			
Transmission . . . . .	45-3		
<b>Remote Hydraulic Cylinders</b>			
Control Lever And Coupler Identification			
(Optional Version) . . . . .	55-1		
<b>Additional Equipment</b>			
Height Adjustable Trailer Hitch (Sliding Type) . . . . .	61-1		
Hydraulic Adjusting Of Sway Blocks . . . . .	61-2		
<b>Wheels, Tires and Treads</b>			
Service Tires Safely . . . . .	70-1		
Check Implement-To-Tire Clearance . . . . .	70-1		
Tighten Bolts—Adjustable Front Axle . . . . .	70-2		
Tighten Hardware—MFWD Axle . . . . .	70-2		
Tighten Bolts—Rear Axle . . . . .	70-3		
Observe Rear Wheel Tread Width Limitations . . . . .	70-3		
Adjusting Rear Wheel Tread . . . . .	70-4		
Adjusting Front Wheel Tread . . . . .	70-5		
Tread Settings (Tractors With			
Two-Wheel Drive) . . . . .	70-6		
Tire Combinations . . . . .	70-7		
Tire Pressures . . . . .	70-7		

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2000  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)