

**9450, 9550
and 9650
Combines**

**John Deere Harvester Works
OMH161677 Issue H9**

LITHO IN U.S.A.
ENGLISH

Introduction

INTRODUCTION



9650 Combine

H51903 -UN-04FEB99

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer

also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

Contents

| | Page | | Page |
|--|-------|---|-------|
| Safety Features | | | |
| Combine Safety Features | 05-1 | Using the Radio | 25-18 |
| Safety | 10-1 | Weatherband | 25-19 |
| Safety Decal Location | | | |
| Controls and Instruments | | | |
| General View of Controls and Instruments | 20-2 | Cassette Player | 25-20 |
| Overhead Control Panel | | | |
| Overhead Control Panel | 25-1 | Deere-Delco AM/FM Radio with Weatherband and CD Player | 25-23 |
| Overhead Warning Display Panel | 25-2 | Using the Radio | 25-26 |
| Unload Auger On | 25-3 | Weatherband | 25-28 |
| Low Fuel | 25-3 | Compact Disc (CD) Player | 25-29 |
| Park Brake On | 25-3 | Using the CD Player | 25-30 |
| Main Gearcase Drive Filter | 25-4 | Theft Deterrent Feature | 25-31 |
| Main Gearcase Temp | 25-4 | Operating Tips About Your Audio System | 25-32 |
| Hydraulic Oil Temp | 25-4 | Understanding Radio Reception | 25-33 |
| Voltage | 25-5 | COMMANDTOUCH Armrest Console | |
| ENG (Engine) Air Filter | 25-5 | Switch and Knob Colors | 30-1 |
| Separator Plugged | 25-6 | Drive Engagement Switches (Yellow) | 30-2 |
| Grain Tank Full | 25-6 | Header Engage Switch (Yellow) | 30-3 |
| Hydro Charge Pressure | 25-6 | Separator Engage Switch (Yellow) | 30-4 |
| Main Gearcase Lube | 25-7 | Operating Adjustments and Control (Black) | 30-5 |
| ENG (Engine) Temperature | 25-7 | Active Header Control (AHC) [™] | 30-5 |
| ENG (Engine) Oil Pressure | 25-7 | DIAL-A-SPEED [™] (Optional) | 30-6 |
| Straw Chopper (Optional) | 25-8 | CommandTouch [™] Armrest Console | 30-8 |
| Grain Separator | 25-8 | Road Transport Disconnect Switch (Black) | 30-9 |
| Auger Conveyor | 25-8 | Draper Belt Speed Switch (optional) (Black) | 30-9 |
| Grain Elevator | 25-8 | Manual Reel Speed Switch (Black) | 30-10 |
| Tailings Elevator | 25-9 | Concave Clearance Switch (Black) | 30-10 |
| Cylinder Speed | 25-9 | Cylinder Speed Switch (Black) | 30-10 |
| Engine Speed | 25-9 | Cleaning Fan Switch (Black) | 30-11 |
| ClimaTrak [™] Automatic Temperature Control | 25-10 | Ground Drive and Engine Speed Switches | 30-11 |
| Windshield Wiper and Windshield Washer (Optional) | 25-11 | Engine Speed Switches (Orange) | 30-12 |
| Deere-Delco Radios (Optional) | 25-12 | Four Wheel Drive (Orange) (Optional) | 30-13 |
| Deere-Delco AM/FM Stereo Radio with Weatherband | 25-13 | Multi-Function Handle | 30-14 |
| Weatherband | 25-15 | Quick Stop Switch | 30-16 |
| Deere-Delco AM/FM Stereo Radio with Weatherband and Cassette Player | 25-16 | Unloading Auger Swing Switch (Black) | 30-17 |
| | | Unloading Auger Drive Switch (Yellow) | 30-18 |
| | | Header Lift Switch | 30-19 |
| | | CONTOURMASTER [™] Manual Tilt Switch | 30-20 |
| | | Reel Lift/Reel Fore and Aft Switch | 30-21 |
| | | Activation Buttons (Black) | 30-22 |
| | | COMMANDTOUCH Cab Corner Post | |
| | | COMMANDTOUCH [™] Cab Corner Post | 35-2 |

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1999
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

| | Page | | Page |
|--|-------------|---|-------------|
| Active Header Control (AHC) [™] Display (Optional) | 35-3 | Seat Belts | 45-7 |
| Header Height Resume | 35-4 | Power Strip Electrical Outlets | 45-7 |
| Header Height Sensing (Optional) | 35-6 | GREENSTAR [™] (Attachment) | 45-8 |
| CONTOURMASTER [™] (Optional) | 35-8 | Cab Ladder | 45-8 |
| VISIONTRAK [™] Display | 35-10 | Cab Ladder Positions | 45-9 |
| VISIONTRAK [™] Display Control Switches | 35-11 | Cab Landing Safety Chains | 45-9 |
| Adjustable Deck Plate Position (Optional on 90 Series Corn Head) | 35-13 | Fire Extinguisher Recommendations | 45-10 |
| Tailings Sensor Display | 35-14 | Front Fire Extinguisher Mounting | 45-10 |
| Tailings Sensor Display Operational Check | 35-15 | Rear Fire Extinguisher Mounting | 45-11 |
| VISIONTRAK [™] Performance Monitor | 35-17 | Washing Cab Windows, Servicing Head Lights and Wiper | 45-12 |
| Shoe Loss | 35-18 | Right-Hand Side Cab Access | 45-13 |
| Separator Loss | 35-18 | Grain Tank Window/Rear Cab Window Cleaning | 45-13 |
| Total Loss | 35-19 | Horn | 45-14 |
| VISIONTRAK [™] Performance Monitor (General Information) | 35-19 | Shifting Feeder House/Header Reverser | 45-15 |
| Preliminary Adjustments on Combine | 35-20 | Steering Column | 45-16 |
| Operating VISIONTRAK [™] Performance Monitor | 35-21 | Steering Wheel Height Adjusting | 45-17 |
| Triple Display Tachometer | 35-23 | Steering Column Tilt Adjusting | 45-17 |
| Control Switches | 35-24 | Gear Shift Lever | 45-18 |
| Fuel Gauge | 35-24 | Manual Parking Brake | 45-18 |
| Coolant Temperature Gauge | 35-25 | Brake Pedals | 45-19 |
| Digital Display Lines | 35-26 | Sun Visor | 45-19 |
| | | Lights and Signals | |
| Calibration Procedures | | Light Switches | 50-1 |
| When to Calibrate | 40-1 | Warning Lights | 50-2 |
| Concave Sensor Zero Calibration | 40-1 | Road Lights | 50-3 |
| Header Calibration | 40-5 | Field Lights | 50-4 |
| CONTOURMASTER [™] Angle Sensor Calibration | 40-10 | Turn Signals | 50-5 |
| Deck Plate Sensor Zero Calibration | 40-17 | Cab Interior Lights | 50-5 |
| Calibration Codes | 40-22 | Side Finder Lights | 50-6 |
| Error Codes | 40-23 | Unloading Auger Light | 50-6 |
| | | Work Lights (Optional) | 50-7 |
| Operators Station | | Rear Residue Discharge Lights | 50-8 |
| Filling Windshield Washer Reservoir (Attachment) | 45-1 | Cleaning Shoe Lights | 50-9 |
| Tool Box | 45-1 | Service Power Receptacles (Optional) | 50-10 |
| Armrest Storage Box | 45-1 | | |
| Combine Video | 45-2 | Prestarting Checks | |
| Storage Tray/Recirculator Filter | 45-2 | Daily Checks | 55-1 |
| Manual Storage | 45-2 | Engine Oil Level | 55-1 |
| Emergency Exit | 45-3 | Hydrostatic/Hydraulic Oil Levels | 55-2 |
| Cup Holder | 45-3 | Coolant Level | 55-2 |
| Ash Tray | 45-3 | Fuel Level | 55-3 |
| COMFORTCOMMAND [™] Operators Seat | 45-4 | Fuel System | 55-3 |
| Seat Suspension and Forward and Rearward Adjustment | 45-5 | Tires | 55-3 |
| Adjusting Left-Hand Armrest and Seat Back | 45-6 | After Long Storage Period | 55-4 |
| Adjusting Right-Hand Armrest and Control Console | 45-6 | Start Switch | 55-4 |
| | | | |
| | | Operating the Engine | |
| | | Safety Rules for Starting Engine | 60-1 |

Continued on next page

Contents

| | Page | | Page |
|---|-------------|---|-------------|
| Starting the Engine | 60-1 | Cylinder Top Access Door | 80-2 |
| Warming up Engine | 60-3 | Bottom Feeder House Door and Feedplate Seal Support | 80-2 |
| Stopping the Engine | 60-4 | Raised Feed Plate Adapter Kit (for Small Grain Only) | 80-3 |
| Breaking-In Engine | 60-5 | Stone Trap | 80-4 |
| Hot Weather Operation | 60-7 | Leveling Header (without CONTOURMASTER™) | 80-5 |
| Handle Starting Fluid Safely | 60-8 | Feeder House Strippers | 80-6 |
| Using Starting Fluid | 60-8 | Adjusting Feeder Conveyor Chain | 80-7 |
| Cold Weather Operation | 60-9 | Removing Conveyor Chain Links | 80-8 |
| Coolant Heater | 60-10 | Checking Feeder Conveyor "Float" | 80-8 |
| Transporting | | Adjusting Conveyor "Float" | 80-9 |
| Driving the Combine on Roads | 65-1 | Changing Feeder Conveyor Speed | 80-10 |
| Transporting Combine on a Trailer | 65-7 | Adjusting Feeder Conveyor Drive Chain | 80-12 |
| Towing | 65-13 | Slip Clutch | 80-12 |
| Crop Settings and Seed Loss Charts | | Feeder House Top Shaft Stripper Adjustment | 80-13 |
| Harvesting Hints | 70-1 | Feeder House Top Shaft Sprockets | 80-13 |
| Crop Settings | 70-3 | Header Harness Connector Storage | 80-20 |
| Alfalfa | 70-4 | Adjusting Variable Speed Feeder House Belt | 80-21 |
| Barley (Feed and Malting) | 70-4 | Replacing Variable Speed Feeder House Belt | 80-22 |
| Beans (Edible) and Black-Eyed Peas | 70-4 | Adjusting Air Flow Drive Belt | 80-23 |
| Beans (Soy) | 70-4 | Replace Air Flow Drive Belt | 80-23 |
| Canola (Canadian Spring) | 70-5 | Adjusting Fixed Speed Feeder House Belt | 80-24 |
| Canola (U.S. Winter) | 70-5 | Replacing Fixed Speed Feeder House Belt | 80-25 |
| Corn (Shelled) | 70-5 | Left-Hand Hose Storage | 80-25 |
| Corncob Mix | 70-6 | Right-Hand Hose Storage | 80-26 |
| Flax | 70-6 | Adjusting Reverser Shifter Fork and Control Cable | 80-27 |
| Grass Seeds | 70-6 | Manual Tilt Indicator | 80-29 |
| Guar (Cluster Bean) | 70-6 | Removing Header from Feeder House | 80-29 |
| Millet (Proso) | 70-7 | Shields | |
| Mustard | 70-7 | Left- and Right-Hand Gull Wing Doors | 85-1 |
| Oats | 70-7 | Right-Hand Rear Shield | 85-2 |
| Peas (Field) | 70-7 | Left-Hand Side Separator Side Shields | 85-3 |
| Popcorn | 70-8 | Right-Hand Side Separator Side Shield | 85-4 |
| Rice | 70-8 | Cleaning Composite Panels | 85-5 |
| Rye | 70-8 | Separator | |
| Safflower | 70-9 | Left-Hand Drives and Part Numbers | 90-1 |
| Sorghum | 70-9 | Right-Hand Drives and Part Numbers | 90-3 |
| Sunflowers | 70-9 | Single-Range POSI-TORQ™ Cylinder Drive (9450 Corn Combine Only) | 90-4 |
| Wheat | 70-9 | Dual-Range POSI-TORQ™ Cylinder Drive (9450 Corn Combine) | 90-5 |
| Seed Loss Chart (Platforms) | 70-10 | Dual-Range POSI-TORQ™ Cylinder Drives (9550 and 9650 Corn Combines) | 90-5 |
| Soybean Loss Chart (Row-Crop Heads) | 70-11 | | |
| Combine and Corn Head Check List | 70-12 | | |
| High-Moisture and Dry Corn Flow Chart | 70-13 | | |
| Corn Kernel Loss Chart | 70-15 | | |
| Power Shutdown Procedure | 70-16 | | |
| Combine Cleanout | | | |
| Cleaning Out the Combine | 75-1 | | |
| Feeder House | | | |
| Hydraulic Cylinder Safety Stop | 80-1 | | |
| Feeder House Doors | 80-1 | | |

Continued on next page

Contents

| Page | Page | | |
|--|-------|---|-------|
| Single-Range Cylinder Drive (9450, 9550 and 9650 Grain Combines Only) | 90-6 | Adjusting Precleaner | 90-37 |
| Slow-Speed Drive (Dual-Range Only) (Attachment) | 90-6 | Adjusting Chaffer, Chaffer Extension and Sieve | 90-38 |
| Dual Range Cylinder Drive Shear Bolts | 90-7 | Removing Chaffer, Sieve or Precleaner | 90-39 |
| High-Range Direct Drive (480-980 RPM) | 90-8 | General Purpose Chaffer, 29 mm (1-1/8 in.) | 90-39 |
| Low Range (Reduced-Drive) (240-480 RPM) | 90-8 | Non-Adjustable Chaffer | 90-40 |
| Unplugging Cylinder with Breaker Bar | 90-9 | Semi-Deep Tooth Chaffer | 90-40 |
| Power Unplugging of Cylinder | 90-11 | Sieve | 90-41 |
| Setting Cylinder Access Door to Cylinder | 90-12 | General Purpose Precleaner | 90-41 |
| Cylinder Vibration | 90-12 | Deep-Tooth Precleaner | 90-41 |
| Adjusting Cylinder Drive Gap | 90-13 | Chaffer, Sieve or Precleaner Repair | 90-42 |
| Aligning Cylinder Drive | 90-14 | Chaffer Finger Bar Cover (Attachment) | 90-42 |
| Adjusting Cylinder Belt Idler | 90-16 | Clean Grain Elevator Top Access Doors for Drives | 90-43 |
| Replacing Cylinder Intermediate Belt | 90-17 | Replacing Clean Grain Elevator Belt | 90-44 |
| Replacing Cylinder Belt | 90-17 | Adjust Clean Grain Elevator Drive Belt | 90-45 |
| When to Use What Rasp Bar | 90-18 | Adjusting Clean Grain Elevator Chain | 90-45 |
| Hardened and Non-Chromed (Black) Rasp Bar | 90-18 | Perforated Screens (Attachment) | 90-46 |
| Hardened and Chromed Rasp Bar | 90-19 | Tailings Sample | 90-46 |
| Smooth Rasp Bar | 90-19 | Replacing Tailings Auger and Elevator Drive Belt | 90-47 |
| Replacing Rasp Bars and Filler Plate | 90-20 | Tailings Elevator Paddles | 90-47 |
| Rear Concave Inserts (Corn Combines) | 90-21 | Separator Countershaft Strips | 90-48 |
| Front Concave Closure Plates (Attachment) | 90-22 | Adjusting Tailings Elevator Belt | 90-48 |
| Rear Concave Closure Plates (Attachment) | 90-22 | Adjusting Tailings Elevator Drive Chain | 90-49 |
| Beater Grate Curtain (Attachment) | 90-23 | Adjusting Tailings Elevator Paddle Chain | 90-49 |
| Adjusting Beater Grate (Rasp Bar Cylinder) | 90-24 | Adjusting Upper Tailings Auger Drive Chain | 90-50 |
| Adjusting Finger Bar (Spike-Tooth Cylinder) | 90-25 | Tailings Elevator Slip Clutch | 90-50 |
| Straw Walkers Access Door | 90-25 | | |
| Adjusting Beater Belt Idler | 90-26 | Chopper and Spreaders | |
| Replacing Beater Belt | 90-26 | Chopper (General Information) | 95-1 |
| 75 Per Cent Beater Speed (Optional) | 90-27 | Adjusting Tailboard Angle | 95-5 |
| Adjusting Secondary Countershaft Belt | 90-27 | Adjusting Chopper Vanes | 95-5 |
| Replacing Secondary Countershaft Belt | 90-28 | Adjusting Knives | 95-6 |
| Adjusting Reel/Belt Pickup Pump Belt | 90-28 | Replacing Knife Sections | 95-7 |
| Replacing Header/Reel/Belt Pickup Pump Belt | 90-29 | Replacing Chopper Blades (Regular Chopper) | 95-8 |
| Separator Curtains | 90-30 | Replacing Fine Cut Chopper Blades (Optional) | 95-10 |
| Adjusting Straw Walker Gearcase Belt | 90-30 | Moving Chopper to Windrow Position | 95-12 |
| Straw Walker Extension Pans | 90-31 | Installing Short Windrow Drive Belt (Optional) (Regular Straw Chopper) | 95-14 |
| Straw Walker Sunflower Flaps | 90-31 | Installing Short Windrow Belt (Optional) (Fine Cut Chopper) | 95-16 |
| Adjusting Straw Walker Plugging Switch | 90-32 | Adjusting Chopper Drive Belt Idler | 95-17 |
| Adjusting Cleaning Shoe Auger Gears | 90-32 | Changing Chopper Speeds | 95-18 |
| Cleaning Shoe Augers Slip Clutch | 90-33 | Replacing Chopper Belts | 95-20 |
| Replacing Cleaning Shoe Belt | 90-33 | Straw Spreader (General Information) | 95-20 |
| Replacing Cleaning Fan Belt | 90-34 | Replacing and Adjusting Straw Spreader Belt | 95-20 |
| Fan Bottom and Clean Grain Auger Protection Shields | 90-35 | Chaff Spreader (Optional) | 95-21 |
| Slow Speed Cleaning Fan Drive (Attachment) | 90-36 | | |
| Chaffer Fingers Storage | 90-36 | | |
| Using Chaffer Fingers | 90-36 | | |
| Precleaner Tool Storage | 90-37 | | |

Continued on next page

Contents

| Page | Page | | |
|--|--------|---|--------|
| Operating the Chaff Spreader | 95-22 | Service Intervals | 110-1 |
| Removing the Chaff Spreader | 95-24 | Lubrication Symbols | 110-4 |
| Grain Tank and Unloading System | | After 100 Hours of Engine Operation | 110-5 |
| Grain Tank/Engine Ladder | 100-1 | 10 Hours or Daily | 110-6 |
| Grain Tank Drain Holes | 100-2 | 50 Hours or Weekly | 110-9 |
| Grain Tank Sample Trough | 100-2 | 100 Hours | 110-13 |
| Grain Tank Full Indicator | 100-3 | 200 Hours | 110-14 |
| Grain Tank Full Indicator (Optional for Hilly Conditions) | 100-3 | 400 Hours or Yearly | 110-16 |
| Grain Tank Unloading Auger Covers (Optional) (Standard on Rice Combines) . . . | 100-4 | 800 Hours or Every Two Years | 110-27 |
| Cross Auger Drive Shear Bolt | 100-5 | 2000 Hours | 110-28 |
| Grain Tank Loading Auger Deflector | 100-6 | As Required | 110-31 |
| Folding Grain Tank Loading Auger | 100-7 | Cleaning Combine | 110-32 |
| Adjusting Grain Tank Cross Auger Drive | 100-7 | Engine Service | |
| Reduced Speed Unloading System (Optional) | 100-8 | Rear Ladder and Landing | 115-1 |
| Replacing Unloading Auger Drive Belt | 100-9 | Engine Compartment Door | 115-1 |
| Aligning Unloading Auger Drive | 100-10 | Cleaning Engine Compartment | 115-2 |
| Adjusting Unloading Auger Drive Cylinder . . . | 100-11 | Changing Starting Fluid Cans | 115-2 |
| Replacing Unloading Auger Drive Cylinder . . . | 100-12 | Belt Shield | 115-3 |
| Removing Unloading Auger | 100-12 | Engine Access Panel | 115-3 |
| Installing and Timing Unloading Auger (All Augers) | 100-13 | Fuel System | 115-4 |
| Adjusting Auger Swing | 100-13 | Do Not Modify Fuel System | 115-4 |
| Fuels and Lubricants | | Handle Fuel Safely—Avoid Fires | 115-5 |
| Diesel Fuel | 105-1 | Check Engine Oil | 115-6 |
| Fuel Storage | 105-2 | Fuel Tank and Cap | 115-7 |
| Fill Fuel Tank | 105-3 | Electric Fuel Pump | 115-7 |
| Liquid Coolant Conditioner | 105-3 | Draining Water Separator | 115-8 |
| Engine Break-In Oil | 105-4 | Water Separator Filter Replacement | 115-8 |
| Diesel Engine Oil | 105-5 | Draining Fuel Tank | 115-9 |
| Extended Diesel Engine Oil Service Intervals | 105-6 | Draining Water from Fuel Filter (9550 and 9650 Combines) | 115-9 |
| Hydrostatic Drive System, Main Hydraulic System and Main Engine Gear Case Oils | 105-6 | Fuel Filter Replacement (9550 and 9650 Combines) | 115-10 |
| Transmission, Final Drives, Feeder House Reverser, Dual-Range Cylinder Drive, Primary Countershaft, Loading Auger Elevator and Straw Walker Drive Gear Cases | 105-7 | Bleeding Engine Fuel Filter (9450 Combines) | 115-11 |
| Grease | 105-8 | Replacing Fuel Filter (9450 Combines) | 115-11 |
| Brakes | 105-8 | Bleeding Engine Fuel Filter (9550 and 9650 Combines) | 115-12 |
| Lubricant Storage | 105-9 | Bleeding Fuel Lines | 115-12 |
| Alternative and Synthetic Lubricants | 105-9 | Drain Cooling System | 115-13 |
| Filter Part Numbers | 105-10 | Filling Radiator | 115-15 |
| Capacities | 105-10 | Winterize Cooling System | 115-15 |
| Lubrication and Maintenance | | Thermostat Replacement | 115-16 |
| Servicing During the Break-In Period (First 100 Hours) | 110-1 | Replacing Engine Fan Belt (9650 Combines) | 115-16 |
| | | Replacing Engine Fan Belt (9450 and 9550 Combines) | 115-17 |
| | | Engine Accessory Drive Belt Routing | 115-17 |
| | | Rotary Screen Belt Routing | 115-18 |
| | | Replacing Rotary Screen Drive Belt (9650 Combines) | 115-19 |

Continued on next page

Contents

| Page | Page |
|--|--------|
| Replacing Rotary Screen Drive Belt (9450 and 9550 Combines) | 115-19 |
| Cleaning Rotary Screen, Oil Cooler, Condenser, Radiator and Charge Air Cooler | 115-20 |
| Adjust Rotary Screen Knife Comb | 115-21 |
| Replacing Rotary Screen Rake Bar | 115-21 |
| Removing Air Cleaner Filters (9550 and 9650 Combines) | 115-23 |
| Inspecting Element | 115-23 |
| Cleaning Element | 115-24 |
| Washing Element | 115-25 |
| Removing Air Cleaner Filters (9450 Combines) | 115-26 |
| Inspecting Element | 115-27 |
| Cleaning Element | 115-27 |
| Washing Element | 115-28 |
| Electrical System Service | |
| Circuit Breakers and Relays (Engine Compartment) | 120-1 |
| Fuses and Relays (Central Electronics Box) . . | 120-2 |
| Fuses and Relays | 120-2 |
| Power Distribution Board | 120-3 |
| Power Distribution Board Relay Identification . . | 120-4 |
| Power Distribution Board Fuse Identification . . | 120-4 |
| Safety Rules When Replacing Halogen Bulbs | 120-5 |
| Replacing Bulbs | 120-5 |
| Bulb Part Numbers | 120-6 |
| Cab Head Light Bulb Replacement and Adjustment | 120-7 |
| Auxiliary Field Light Bulb Replacement | 120-8 |
| Side Finder Light Bulb Replacement | 120-8 |
| Grain Tank Light Bulb Replacement | 120-9 |
| Replacing Cleaning Shoe Light Bulb | 120-9 |
| Warning Light Bulb Replacement | 120-10 |
| Front Turn Signal, Tail Light, Warning (Flasher) Light and Side Light Bulb Replacement | 120-10 |
| Turn Signal Indicator Bulb Replacement | 120-11 |
| Dome and Console Light Bulb Replacement | 120-11 |
| CommandTouch™ Corner Post Monitor Light Bulb Replacement | 120-12 |
| Accumulator Gauge (Optional) Bulb Replacement | 120-13 |
| Warning Display Panel Light Bulb Replacement | 120-14 |
| Observe Electrical Precautions | 120-15 |
| Electrical Connector Handling | 120-16 |
| Prevent Damage to Electrical Systems | 120-17 |
| Battery Replacement | 120-17 |
| Connecting Battery Cables | 120-18 |
| Charging Batteries | 120-19 |
| Prevent Battery Explosions | 120-19 |
| Checking Specific Gravity | 120-20 |
| Connecting Booster Batteries | 120-20 |
| Starter | 120-21 |
| Alternator and Voltage Regulator | 120-21 |
| Engine Accessory Drive Belt Routing | 120-22 |
| Alternator Belt Adjustment or Replacement . . | 120-23 |
| Header Drive Electromagnetic Clutch | 120-24 |
| Communications/CB Radio Outlet | 120-24 |
| Communications/CB Radio Mounting | 120-25 |
| FM Radio Installation | 120-27 |
| Hydraulic System | |
| Hydraulic System (General Information) | 125-1 |
| Hydraulic System Cleanliness | 125-2 |
| Left-Hand Hose Storage | 125-2 |
| Right-Hand Hose Storage | 125-3 |
| Adjusting Header Drop Rate (With Active Header Control™) | 125-3 |
| Accumulator (General Information) | 125-4 |
| One Gallon Accumulator System (Optional) . . | 125-4 |
| Accumulator Precharge | 125-4 |
| Header Flotation Gauge | 125-6 |
| Accumulator Adjustment | 125-6 |
| Reel/Belt Pickup Pump Belt Adjustment | 125-7 |
| Header/Reel/Belt Pickup Pump Belt Replacement | 125-7 |
| Ground Drive and Rear Axle Service | |
| Service Tires Safely | 130-1 |
| Care and Service of Tires | 130-2 |
| Using Liquid Weight | 130-3 |
| Tire Loading Decal | 130-3 |
| Allowable Carrying Capacity of Tires (9450 Combine) | 130-4 |
| Allowable Carrying Capacity of Tires (9550 Combine) | 130-4 |
| Allowable Carrying Capacity of Tires (9650 Combine) | 130-5 |
| Transporting | 130-5 |
| Drive Wheel Starter Stud | 130-6 |
| Rear Wheel Bolt Torque | 130-6 |
| Drive Wheel Bolt Torque | 130-7 |
| Dual Wheels Bolt Torque | 130-7 |
| Drive Tire Spacing (9450 and 9550 Combines) | 130-8 |
| Drive Tire Spacing (9650 Combines with Heavy Duty Final Drives) | 130-8 |

Continued on next page

Contents

| Page | Page | | |
|---|--------|--|--------|
| Drive Tire Spacing (9650 Combines with Regular Duty Final Drives) | 130-9 | Separator | 145-3 |
| Axle Spacers and Wheel Spacers (Optional) | 130-10 | Hydrostatic Ground Drive | 145-7 |
| Dual Wheels (Optional) (9550 and 9650 Combines) | 130-10 | 4-Wheel Drive (Optional) | 145-10 |
| Single Attach Wide Spaced Dual Wheels (Optional) | 130-11 | Steering | 145-11 |
| High Flotation Tires | 130-11 | Brakes | 145-11 |
| Rubber Belted Tracks (Optional) | 130-12 | Engine | 145-12 |
| Hydro Linkage Adjustment | 130-12 | Heater | 145-16 |
| Cleaning Hydrostatic Oil Cooler | 130-13 | Air Conditioning | 145-17 |
| Brake Fluid Reservoir | 130-14 | Storage | |
| Brake System | 130-14 | Preparing Air Conditioner for Storage | 150-1 |
| Adjusting Gearshift Linkage | 130-15 | Preparing Engine for Storage | 150-1 |
| Rear Axle Adjustment | 130-16 | Preparing Combine for Storage | 150-2 |
| All Combines Except Those Equipped with 68 X 50-32 Drive Tires, 35.5L-32 Drive Tires, Duals or Tracks | 130-18 | Removing Combine from Storage | 150-2 |
| Combines Equipped with 68 X 50-32 Tires, 35.5L-32 Tires, 18.4, 28L-26 Duals or Tracks | 130-19 | Feeder House Adjustments | 150-3 |
| Pulling Combine Out of the Mud | 130-20 | Combine Adjustments | 150-4 |
| Jacking Locations | 130-20 | Specifications | |
| Ballast Requirements (Normal Conditions) | 130-21 | Emissions Control System Certification Label | 155-1 |
| Ballast Requirements (Extremely Hilly Conditions) | 130-22 | U.S. Emissions Control Warranty Statement (United States Only) | 155-2 |
| Air Conditioning and Heater Service | | Operating Speeds | 155-2 |
| Observe Air Conditioning Precautions | 135-1 | Ground Speeds (Fast Idle) | 155-4 |
| ClimaTrak™ Air Conditioning System (General Information) | 135-1 | Turning Radius | 155-5 |
| Removing Recirculating Filter | 135-2 | Specifications - 9450 Combines | 155-6 |
| Cleaning Fresh Air Filter and Recirculating Filter | 135-2 | Specifications - 9550 Combines | 155-7 |
| Removing Fresh Air Filter and Tray | 135-3 | Specifications - 9650 Combines | 155-8 |
| Cleaning Precleaner | 135-3 | Dimensions | 155-9 |
| Removing Evaporator Filter | 135-4 | Dimension Reference Points | 155-10 |
| Cleaning Cab Roof Inlet Panel | 135-4 | Metric Bolt and Cap Screw Torque Values | 155-11 |
| Cleaning Condenser | 135-5 | Unified Inch Bolt and Cap Screw Torque Values | 155-12 |
| Engine Accessory Drive Belt Routing | 135-6 | Machine Identification Numbers | |
| Removing Compressor Drive Belt | 135-7 | Identification Plates | 160-1 |
| Checking Refrigerant Level | 135-8 | Combine Identification Number | 160-1 |
| High Pressure Switch | 135-8 | Engine Serial Number for 9450 Combines | 160-1 |
| Low Pressure Switch | 135-9 | Engine Serial Number for 9550 and 9650 Combines | 160-2 |
| Diagnostic Trouble Codes | | Hydrostatic Drive Unit Pump | 160-2 |
| Diagnostic Trouble Code Priorities | 140-1 | Hydrostatic Drive Unit Motor | 160-2 |
| Accessing Diagnostic Trouble Codes | 140-2 | Cam Lobe 4-Wheel Drive Motor | 160-2 |
| Trouble Shooting | | Engine Gearcase | 160-3 |
| Troubleshooting | 145-1 | Transmission | 160-3 |
| Feeder House | 145-2 | Crime Prevention Tips | |
| | | Help Prevent Crime | 165-1 |
| | | Record Identification Numbers | 165-1 |
| | | Keep Proof of Ownership | 165-1 |
| | | Park Indoors Out of Sight | 165-2 |

Continued on next page

Contents

Page



When Parking Outdoors 165-2
Reduce Vandalism 165-3
Report Thefts Immediately 165-3

John Deere Service Literature Available 1

John Deere Service Keeps You On The Job 2

Safety Features

COMBINE SAFETY FEATURES

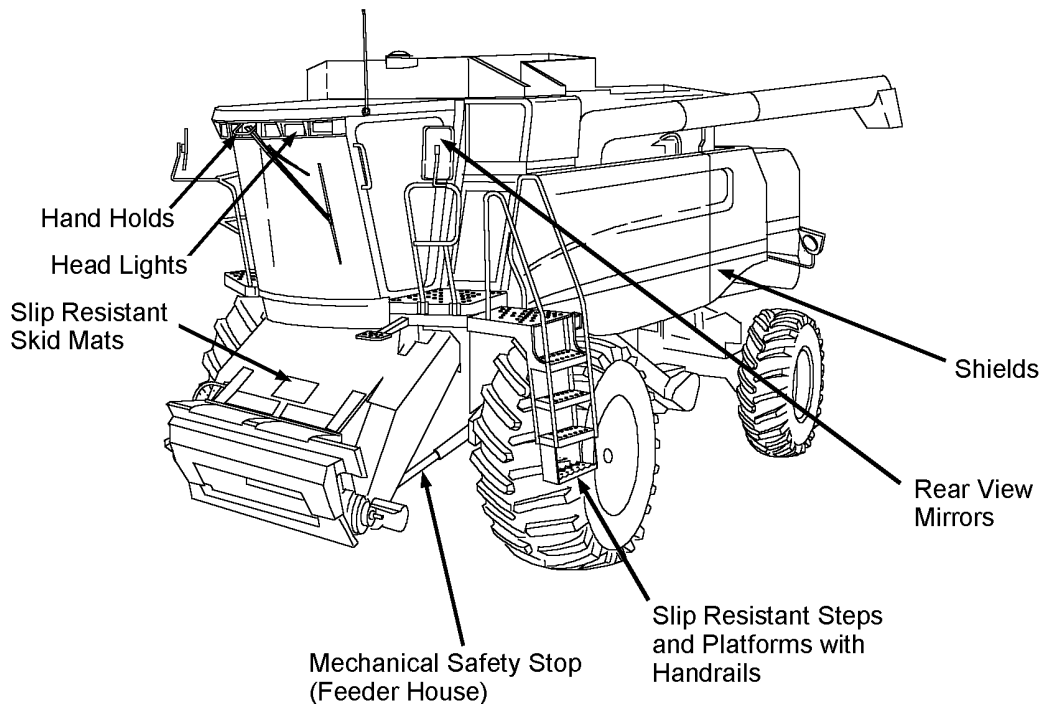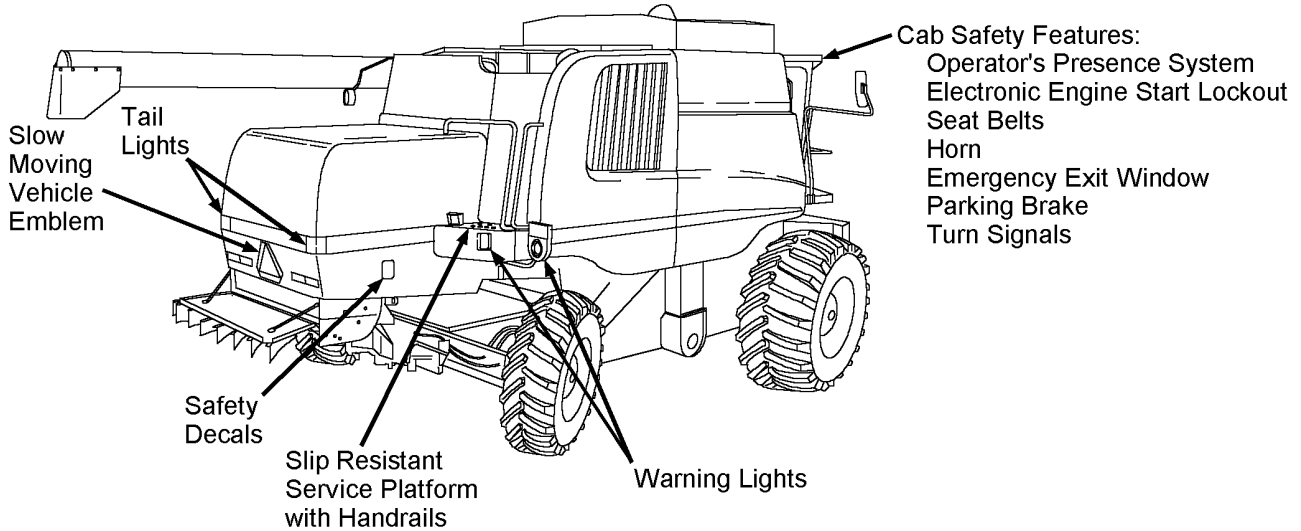

In addition to the safety features shown here, other components and systems, safety signs on the machine, and safety messages and instructions in the operator's manual contribute to the safe operation of this combine when combined with the care and concern of a capable operator.

H51746 -19-09.JUL.99


AG, OOU1035,265 -19-05JAN99-1/1

Safety

RECOGNIZE SAFETY INFORMATION

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

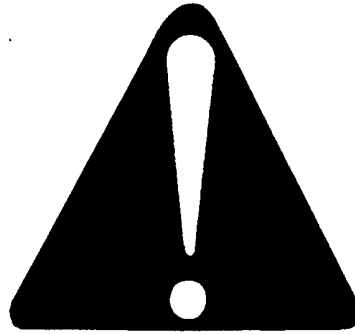

DX,ALERT -19-07DEC88-1/1

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93-1/1

TS187 -19-30SEP88

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



TS201 -UN-23AUG88

DX,READ -19-03MAR93-1/1

DRIVING THE COMBINE

Operate combine only when all guards are fitted and in their correct position.

Before driving away, check immediate vicinity of machine for bystanders. Use the horn as a warning immediately before driving away.

Follow instructions in header Operator's Manual when attaching or detaching the header.

AG,OUO1035,791 -19-08JUL99-1/1

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders are subject to injury such as being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

Extra seat should only be used for training purposes or short period of observation.



TS253 -UN-23AUG88


DX,RIDER -19-03MAR93-1/1

BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of combine can be considerably affected by heavy front end attachments which alter the center of gravity of the combine.

To maintain the necessary ground contact, ballast the combine at the rear end as necessary.

Observe the maximum permissible axle loads and total weights.

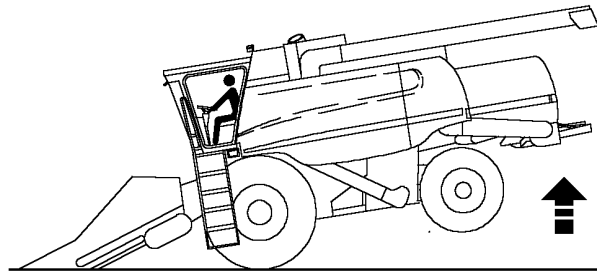


H51907 -UN-10FEB89

AG,OUO1035,310 -19-05FEB99-1/1

AVOID ELECTRICAL POWER LINES

Put the grain tank unloading auger in transport position before driving on public roads.

Secure radio aerial in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

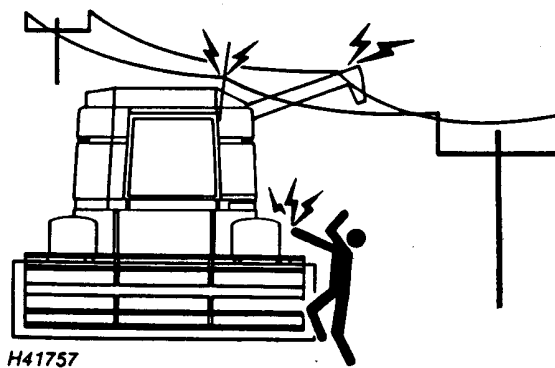


H41757

H41757 -UN-10MARS90

H01,9000SA,H -19-09OCT91-1/1

PARK THE COMBINE SAFELY

Lower headers or other equipment to the ground before leaving the combine. Set park brake, turn off engine and remove keys.

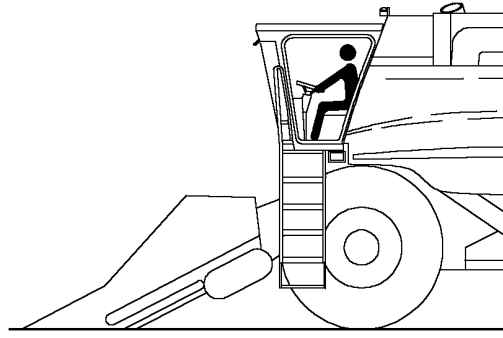


H51908 -UN-10FEB99

AG,OUO1035,311 -19-05FEB99-1/1

OPERATE THE ENGINE OUTDOORS

Never operate the engine in a closed building.

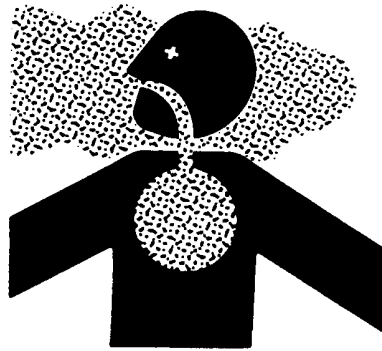

TS220 -UN-23AUG88

H01,9000SA,J -19-09OCT91-1/1

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



TS202 -UN-23AUG88


DX,FIRE1 -19-03MAR93-1/1

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

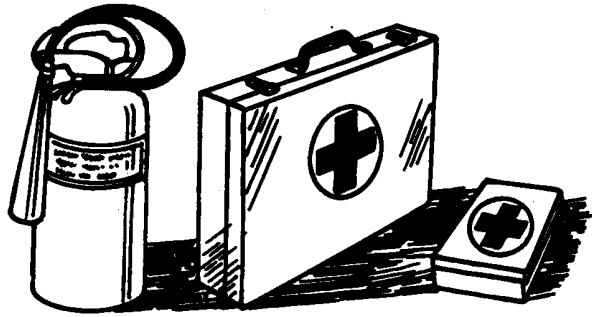

TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93-1/1

HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.




TS1356 -UN-18MAR92

DX,FIRE3 -19-16APR92-1/1

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

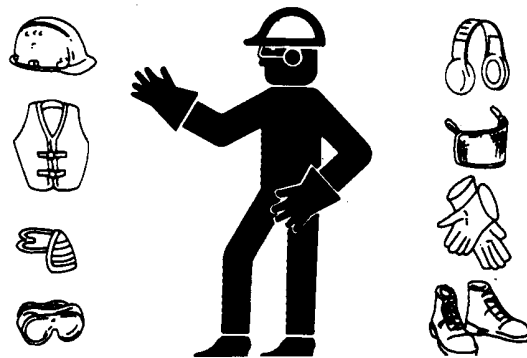

TS206 -UN-23AUG88

DX,WEAR2 -19-03MAR93-1/1


HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

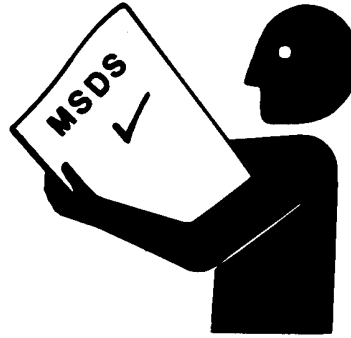

TS1132 -UN-26NOV90

DX,MSDS,NA -19-03MAR93-1/1

STAY CLEAR OF HEADER

Many moving parts such as the cutting platform auger, reel, gatherer chain and stalk rolls of the corn head, cannot be completely shielded due to their function. Stay clear of these moving elements during operation! Always disengage header drive, shut off the engine and remove key before servicing or unclogging header.



H42442

H42442 -UN-10JAN91

H01,9000SA,C -19-11SEP92-1/1

KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on header unless separator is disengaged, engine shut off and key removed.

Everyone must be clear of the combine before starting the engine




TS254 -UN-23AUG88

H01,9000SA,D -19-20MAR90-1/1

USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

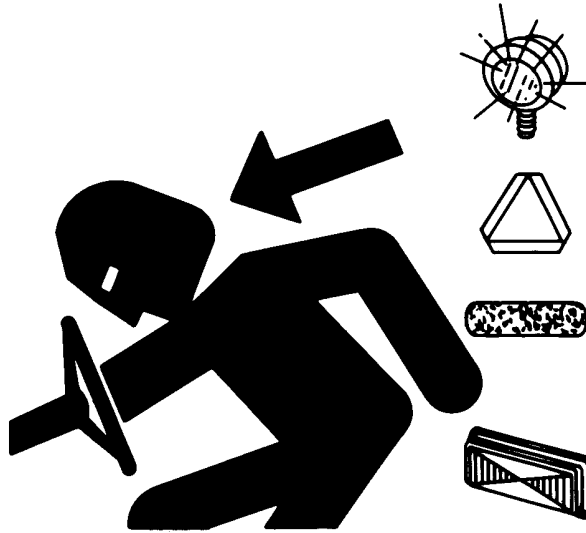


TS951 -UN-12APR90

DX,FLASH -19-12SEP95-1/1

USE SEAT BELTS

Use the seat belt whenever you operate the combine or ride as an observer.

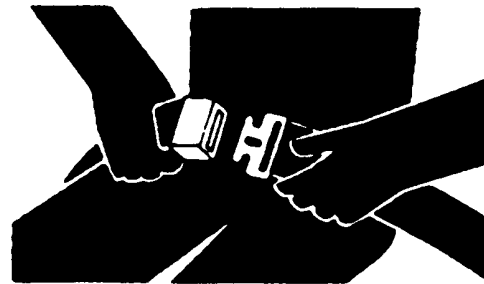

H47137

H47137 -UN-25OCT95

HX,9000SA,K -19-25OCT95-1/1


TRANSPORT COMBINE WITH HEADER SAFELY

Whenever possible avoid transporting on public roadways with the header attached.

If the combine must be transported with the header attached, make sure that the flashing warning lights on the header are operating and the reflective material is clean and visible.

The use of a spotter or pilot vehicle is recommended on busy, narrow or hilly roads and when crossing bridges.

Drive at a speed that is safe for conditions.

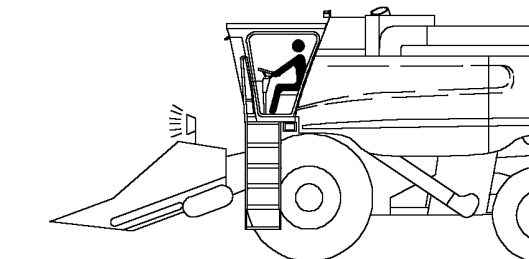


H51909 -UN-07MAY99

AG,OUO1035,312 -19-05FEB99-1/1

PREVENT MACHINE RUNAWAY OR UNEXPECTED MOVEMENT

Avoid injury or death from unexpected movement of machine or components.

Do not start engine by shorting across starter or solenoid terminals. Machine or components may move if the normal circuitry is bypassed.

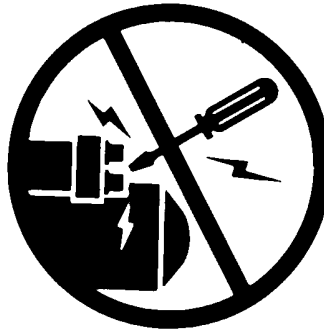

H68737 -UN-08JUL99

AG,OUO1035,792 -19-08JUL99-1/1

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key and set the parking brake. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



TS218 -UN-23AUG88

AG,OUO1035,508 -19-05MAY99-1/1

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

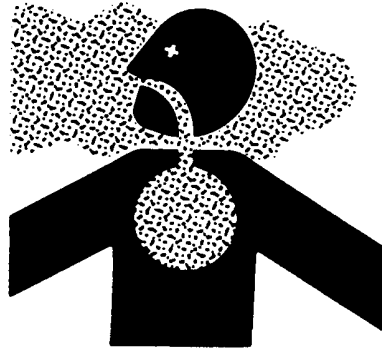

TS220 -UN-23AUG88

DX,PAINT -19-03MAR93-1/1

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



TS953 -UN-15MAY90

DX,TORCH -19-03MAR93-1/1

AVOID CONTACT WITH MOVING PARTS

Keep hands, feet and clothing away from power driven parts. Never clean, lubricate or adjust machine when it is running.



H01,9000SA,E -19-15JUN90-1/1

TS256 -UN-23AUG88

CLEANING THE GRAIN TANK AND REMOVAL OF BLOCKAGES

Avoid serious injury or death from entanglement in the grain tank cross augers. For functional purposes the cross augers cannot be completely covered. Do not enter the grain tank when the engine is running. Before entering the tank to clean out residual grain, always shut off the engine and remove the key

If grain bridges and fails to flow into the cross augers, shut off the engine, remove the key and from a position on the engine compartment door use a rod, broom or shovel to break the bridge and restore grain flow.



HX,9010SA,C -19-09SEP97-1/1

TS256 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com