

9400
Press Wheel
Hoe Drill
(PIN:N09400D003668—)

John Deere Des Moines Works
OMN200296 Issue F0
(Mark old manual OMN200122 for
machines up to Serial No. N09400D003668)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are metric with the customary U.S. measurement following.

 
RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

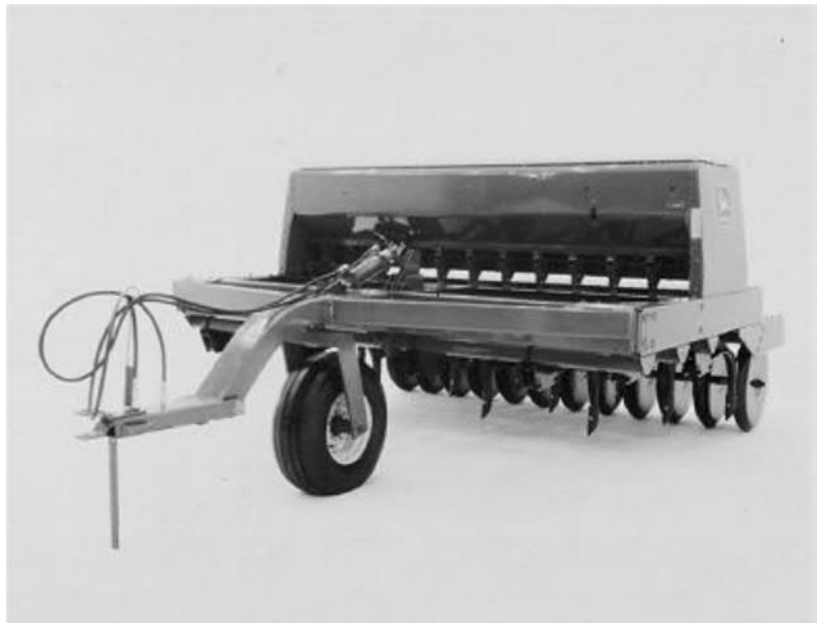

N87194C1
-UN-22SEP88

Contents

| Page | Page |
|--|-------|
| Safety | 05-1 |
| Identification View | 10-1 |
| Preparing The Tractor | 15-1 |
| Preparing The Grain Drill | |
| Install Lift Cylinder | 20-1 |
| Tire Air Pressure | 20-1 |
| Attach SMV Emblem | 20-2 |
| Attaching and Detaching | |
| Attaching Drill To Tractor | 25-1 |
| Detaching Drill From Tractor | 25-2 |
| Transporting The Grain Drill | |
| Towing Drill Behind Tractor | 30-1 |
| Operating The Grain Drill | |
| Guidelines For Use | 35-1 |
| Check Openers | 35-2 |
| Adjust Drilling Depth of Front Rank | 35-2 |
| Adjust Drilling Depth of Rear Rank | 35-2 |
| Adjust Drilling Depth | 35-3 |
| Down Pressure Adjustment | 35-3 |
| Spill Shield | 35-4 |
| Press Wheels | 35-4 |
| Slow-Speed Drive Sprocket | 35-7 |
| Checking Grain Feeds | 35-7 |
| Setting Grain Shifter | 35-8 |
| Using Mixtures | 35-8 |
| Grain Seeding Charts | 35-9 |
| Checking Grass Seeding Feeds | 35-12 |
| Grass Seeding Charts | 35-13 |
| Adjust Box Partition | 35-16 |
| Fertilizer Feed Shaft Speed | 35-17 |
| Fertilizer Drive Settings | 35-17 |
| Checking Fertilizer Feeds | 35-18 |
| Fertilizer Charts | 35-19 |
| Cleaning Grain Drill Box | 35-20 |
| Using Density Meter | 35-22 |
| Checking Quantities Drilled-Method 1 | 35-25 |
| Checking Quantities Drilled-Method 2 | 35-25 |
| Attachments | |
| Row Markers | 40-3 |
| Row Marker Selector Control | 40-4 |
| Shovels | 40-5 |
| Limited Castering Wheels—Endwise | |
| Transport Hitch | 40-8 |
| Lubrication and Maintenance | 45-1 |
| Troubleshooting | 50-1 |
| Service | |
| Replace Fertilizer Feed Wheels | 55-4 |
| Caster Wheel Brake Adjustment | 55-4 |
| Press Wheel Spacers | 55-5 |
| Check Openers | 55-5 |
| Leveling Planting Depth—Multiple Drill | |
| Hitch | 55-6 |
| Installing Repair Rings | 55-8 |
| Constructing Installation Band | 55-8 |
| Attaching Repair Ring To Wheel | 55-9 |
| Storage | |
| Preparing Drill For Storage | 60-1 |
| Removing Drill From Storage | 60-2 |
| Crime Prevention Tips | 65-1 |
| Specifications | 70-1 |
| Index | |

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200296 F0-19-14MAY90

COPYRIGHT© 1990
 DEERE & COMPANY
 Moline, Illinois
 All rights reserved
 A John Deere ILLUSTRATION™ Manual

 
Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

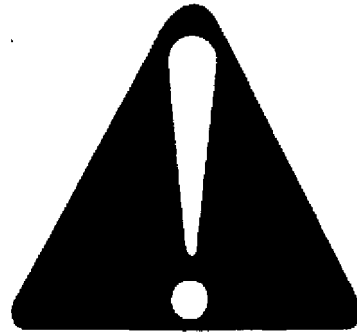

O53,ALERT -19-26JAN90

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



O53,SIGNAL -19-26JAN90

-19-30SEP88


TS187

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

 Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

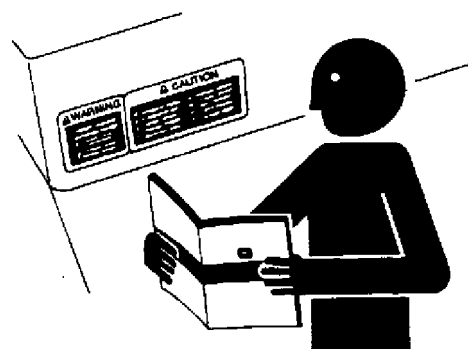

O53,READ -19-26JAN90

-UN-23AUG88


TS201



KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

 Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

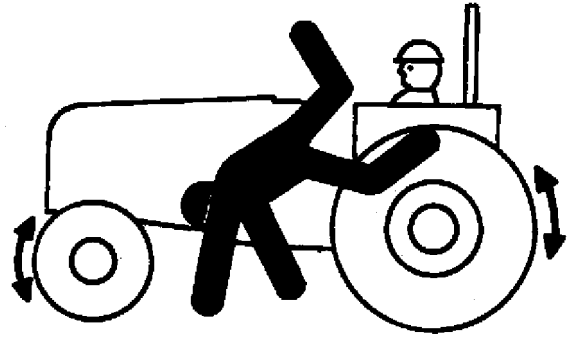

O53,RIDER -19-26JAN90


TS290
-UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

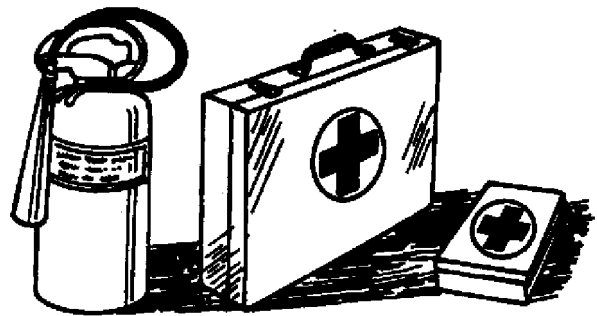


O53,FIRE2 -19-26JAN90

TS291
-UN-23AUG88

WEAR PROTECTIVE CLOTHING

 Wear close fitting clothing and safety equipment appropriate to the job.

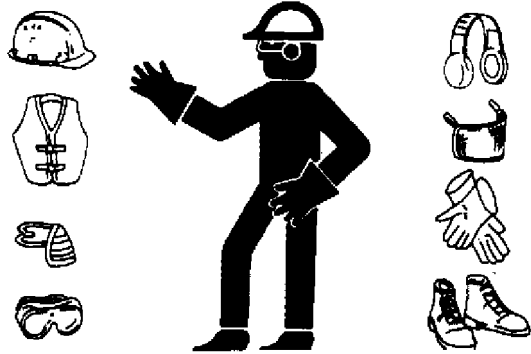

O53,WEAR2 -19-26JAN90

TS206
-UN-23AUG88



HANDLE PESTICIDES AND FERTILIZERS CAREFULLY

Keep dust away from skin and hair.

Keep containers low when pouring.

Let the wind blow fumes away from you when mixing with seed or when filling tank.

Wear a filtered respirator if you cannot avoid dust.

Wear goggles to protect your eyes.

Wash exposed skin areas frequently—do not leave pesticide on your skin.

Do not smoke while handling pesticides.

Properly dispose of pesticide container, unused pesticide and left-over treated seed and fertilizer.

Read and observe manufacturers recommendations.

Store pesticides in a separate, plainly marked LOCKED building.

Store pesticides in original containers with labels intact.



N35988 -UN-04OCT88

N35988

N35989 -UN-04OCT88

N35989

N33983 -19-31JAN89

N33983

N04.655C.A -19-05APR84

 


USE SAFETY LIGHTS AND DEVICES

When transporting your machine on a road or highway at night or during the day, use necessary safety lights. Check local governmental regulations. A safety lighting kit is available from your John Deere dealer.

Keep safety items in good condition. Replace missing or damaged items.

- A—Lights
- B—Slow Moving Vehicle Emblem
- C—Reflector Tape
- D—Reflectors

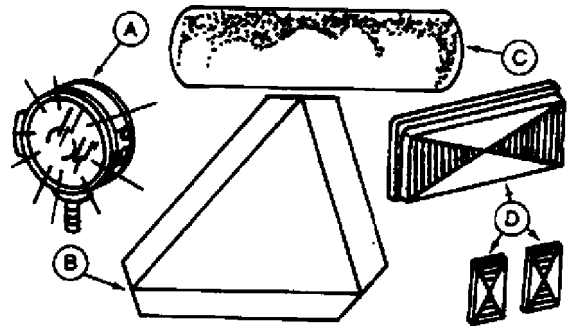

N36564 -UN-10FEB89

 
O53_WARN -19-26JAN90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

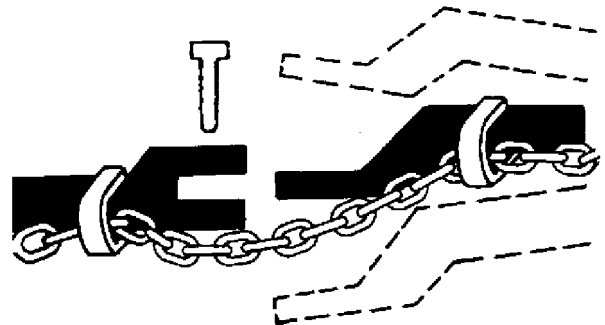

T5217 -UN-23AUG88

O53_CHAIN -19-26JAN90

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com