

9930
Cotton Picker
(PIN:N09930X014001-)

John Deere Des Moines Works
OMN200310 Issue D4
(Mark old manual OMN200310 C2 for
machines up to Serial No. N09930X014000-)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



N8630302 -UN-27SEP88

NX,9930,3 -19-13FEB92

Contents

Page	Page		
Safety	05-1	Preparing the Machine	20-1
Operator's Station		Prestarting Checks	
Operator's Platform Controls and Instruments	10-1	Engine Oil Level	25-1
Cab Roof Controls	10-2	Hydraulic Oil Level	25-1
Blower Usage	10-3	Hydrostatic Oil Level	25-1
Heater Usage	10-3	Coolant Level	25-2
Air Conditioner Usage	10-3	Fuel Filter, Draining	25-2
Windshield Wiper Usage	10-4	Fuel Tank, Filling	25-3
Air Outlet Adjustment	10-4	Windows, Mirrors, and Lights	25-3
Dome Light Usage	10-4	Operating the Machine	
Window, Opening	10-5	Engine, Starting	30-1
Indicators, Gauges, Switches	10-5	Engine, Starting in Cold Weather	30-3
Hydraulic Oil Temperature Indicator	10-5	Starting Fluid Cans	30-3
Air Filter Indicator	10-6	Cold Weather Operation	30-4
Voltmeter	10-6	Engine, Warm Up	30-4
Engine Oil Pressure Gauge	10-6	Engine, Idling	30-5
Engine Coolant Temperature Gauge	10-6	Stopping Engine	30-5
Fuel Gauge	10-7	Cooling System Protection	30-6
Tachometer/Hour Meter	10-7	Preparing to Drive	30-7
Monitor	10-7	Brakes, Setting and Releasing	30-7
Basket Dump, Vane Dump Control, and Auger Compactor Lever Usage	10-8	Brake Latch Usage	30-8
Steering Pedestal Tilt Adjustment	10-8	Transmission	30-8
Steering Wheel Height Adjustment	10-8	Throttle Lever	30-9
Guide Wheel Position Light	10-9	Forward Driving	30-9
Rear View Mirrors	10-9	Stopping	30-9
Seat Adjustment	10-10	Backing Up	30-10
Radio Controls	10-11	Parking	30-10
Picker Unit and Drum Identification	10-13	Field and Highway Lights	30-11
Break-In		Extra Field Lighting (Attachment)	30-12
Fan Control Lever	15-1	Driving/Transporting on Public Roads	30-12
Engine	15-1	Towing, Short Distances	30-14
After One-Hour of Operation	15-4	Towing, Long Distances	30-15
After 5 Hours of Operation	15-5	Pushing	30-15
After 20 Hours	15-6	Fan and Unit, Starting	30-16
After 100 Hours	15-6	Picking Units, Lowering	30-16
		Rows, Starting	30-17
		Picking Cotton	30-17

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200310 D4-19-01MAR94

COPYRIGHT© 1994
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1992, 1991 Deere & Company

Contents

	Page		Page
Dumping the Basket (Standard)	30-18	Moistener Flush System	50-10
Basket System Operations	30-19	Strainers and Nozzles, Cleaning	50-11
Operator Presence System		Water Tank Air Vent, Cleaning	50-12
Operator Presence System Description	35-1	Moistener Pad, Replacement	50-12
Bypass System, Preparation	35-2	Water Control Valve	50-13
Bypass System, Checking	35-2	Reacting To Spindle Buildup	50-14
Bypass System, Operating	35-3		
Inspection Bypass, Deactivation	35-3	Picking Units	
Lubrication and Maintenance		Row Spacing Changing	55-1
Fuels	40-1	Stabilizer Bar Adjustment	55-3
Hydraulic and Hydrostatic Oils	40-3	Lift Cylinder Adjustment	55-3
Transmission and Final Drives	40-4	Stalk Lifter Adjustment	55-3
Picker Bar and Spindle Lubricants	40-4	Tunnel Grates, Plant Guides and Grass Chain	55-4
Spindle Cleaner and Wetting Agent	40-5	Stalk Lifter Rod Adjustment	55-4
Extreme Pressure Grease	40-6	Grid Bar Adjustment	55-5
Alternative Lubricants	40-7	Pressure Plate Clearance Adjusting	55-6
Cold Weather Operation	40-7	Pressure Plate Spring Tension Adjusting	55-7
Lubricant Storage	40-8	Pressure Plate Rib Sections (Attachment)	55-7
Lubrication Symbols	40-8	Doffer Column Height Adjustment	55-8
Waste Oil	40-9	Picking Unit Belt Adjusting	55-11
Discarded Tires	40-9	Unit Drive Slip Clutch Adjusting	55-11
Every Basket Dump	40-11	Plugged Picking Unit	55-12
Every 10 Hours of Operation	40-12	Unplugging Picking Unit	55-13
Every 50 Hours of Operation	40-15	Spindle Identification	55-14
Every 100 Hours of Operation	40-16	Spindle Replacement	55-14
Every 200 and 500 Hours of Operation	40-21	Picker Bar Replacement	55-15
Every 1000 Hours of Operation	40-24	Doffer Column Removal	55-16
Every Year	40-26	Doffer Column Installation	55-17
Every Two Years	40-27	Doffer Column Alignment	55-19
		Front Doffer Drive Chain Adjustment	55-21
		Rear Doffer Drive Chain Adjustment	55-21
Height Sensing		Monitor System	
Height Sensing Shoes	45-1	Monitor Usage	60-1
Automatic Height Control Sensing Valve	45-2	Drum Clutch Slippage	60-1
Automatic Height Control-Operating Height	45-3	Clutch Monitor Adjustment	60-2
		Indicator Light Check	60-2
Moistener System		Monitor Adjustment	60-5
Moistener System Preparation	50-1	Light Bulb Replacement	60-6
Water Pump Belt	50-1	Air System and Basket	
Spindle Moistener Column Height	50-2	Cotton Fan Drive Belt Tension	65-1
Spindle Moistener Column Alignment	50-4	Cotton Fan Belt	65-2
Moistener Column Rotation Check	50-5	Cotton Fan Drive Belt Idler Sheave	65-3
Moistener Column Rotation Adjustment	50-6	Upper Cotton Fan Drive Belt Keeper	65-3
Water Tank, Filling	50-7	Lower Cotton Fan Drive Belt Keeper and Guides	65-4
Spindle Cleaner, Usage	50-8	Fan Belt, Seating	65-4
Storing John Deere Spindle Cleaner	50-9	Air Duct	65-5
Wetting Agent, Usage	50-9		
Water Pressure, Adjustment	50-10		

Continued on next page

Contents

	Page		Page
Basket Cylinder Lock Valve	65-5	Cooling System, Flushing	85-15
Basket Lid Opening	65-6	Cooling System, Winterizing	85-17
Basket Cylinders	65-6	Engine Coolant Thermostat Replacement	85-17
 Onboard Lubrication System		 Wheels and Tires	
Lubrication Reservoir	70-1	Servicing Safely	90-1
Pump Drive Belt Adjusting	70-3	Checking Tires	90-1
Onboard Lube System Failure	70-4	Wheel Bolt Torque	90-2
Filter Replacement	70-4	Liquid Ballast	90-3
 Chassis		Mud Scrapers	90-4
Brake Adjustment	75-1	Guide Wheels Toe-In	90-5
Lamp Bulbs	75-1	Toe-In Adjustment	90-5
Head or Flood Lamp Bulb Replacement	75-2	 Batteries	
Tail or Warning Light Replacement	75-2	Precautions	95-2
Headlights	75-3	Preventing Damage	95-2
 Cab and Air Conditioning		Servicing	95-3
Air Conditioner Belt	80-1	Charging	95-4
Refrigerant Charge	80-1	Booster Battery Usage	95-5
Air Conditioning Low Pressure, Correction	80-1	 Troubleshooting 100-1	
Console Cover, Removal	80-2	 Storage 105-1	
Console Light Bulbs	80-2	 Crime Prevention Tips 110-1	
Dome and Console Bulbs	80-2	 Specifications	
Signal Indicator Light Bulbs	80-2	Metric Torque Chart	115-1
Radio Fuse	80-3	Inch Series Torque Chart	115-2
Primary Filter Element	80-3	O-Ring Boss Fitting Torque Chart	115-3
Recirculating Air Filter	80-3	Flat Face O-Ring Seal Fitting Torque Chart	115-4
Cab Filters	80-4	Machine Specifications	115-5
Fire Extinguishers	80-5	Machine Dimensions	115-9
 Engine and Drive Train		Identification Numbers	115-11
Hydraulic and Hydrostatic Filters	85-1	Battery Warranty	115-15
Alternator Drive Belts	85-1	 Index	
Hydraulic Pump Drive Belt	85-2		
Alternator and Regulator, Safeguarding	85-2		
Circuit Breakers	85-3		
Engine Oil and Filter, Changing	85-4		
Fuel Filter Element Replacement	85-5		
Fuel System, Bleeding	85-5		
Engine Fast Idle	85-8		
Engine Slow Idle	85-9		
Air Cleaner, Servicing	85-9		
Air Cleaner Element, Replacement	85-10		
Element, Cleaning	85-11		
Element, Washing	85-11		
Element, Inspecting	85-12		
Side Access Screens and Grates	85-12		
Radiator Compartment	85-12		
Coolant Level	85-13		

Contents

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

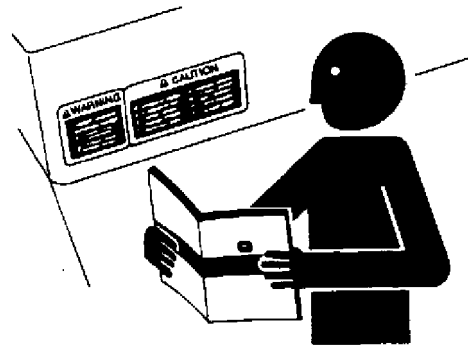

DX,READ -19-03MAR93

TS201 -UN-23AUG88




PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

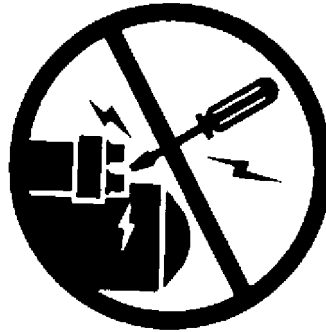

DX,BYPAS1 -19-03MAR93

TS177 -UN-11JAN89

OPERATE SAFELY

Do not operate with more than one person in cab.

Do not start engine with gears or levers engaged.

Come to a complete stop before reversing direction.

Be sure area behind picker is clear before backing up.

Do not dump or lower basket or lid when someone is near picker.

Do not operate close to a ditch or creek.

Drive slowly over rough ground.

Do not dump on a slope or grade.

Do not dump near overhead wires.

Do not drive picker with basket raised.

Do not overload basket.

Slow down when turning.



N8630301 -UN-27SEP88


NX,9930,C1 -19-28FEB94



KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

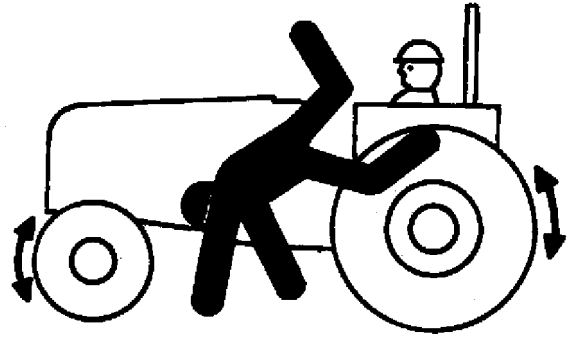

DX,RIDER -19-03MAR93

TS290
-UN-23AUG68

AVOID TIP-OVERS

Use a seat belt under almost all operating conditions.

Avoid holes, ditches, and obstructions which may cause the machine to tip, especially on hillsides.

Never drive near the edge of a gully or steep embankment—it might cave in.

Slow down for hillsides, rough ground, and sharp turns.

Do not turn with basket raised.

Do not dump basket toward a down slope.



NX.9930,C2 -19-16FEB94

N39084
-UN-30MAR89




AVOID CONTACT WITH MOVING PARTS

Shut off engine and remove key before unplugging picker.

Keep hands, feet, and clothing away from moving parts.



N62334K2 -UN-05OCT88

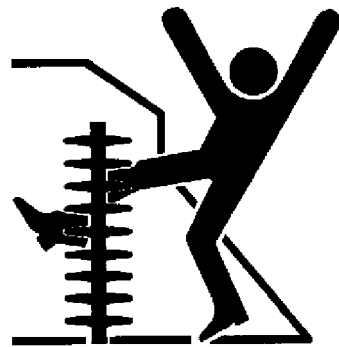

N42153B -UN-16FEB94

NX.9930.C3 -19-16FEB94

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



TS202 -UN-23AUG88


DX,FIRE1 -19-03MAR93

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

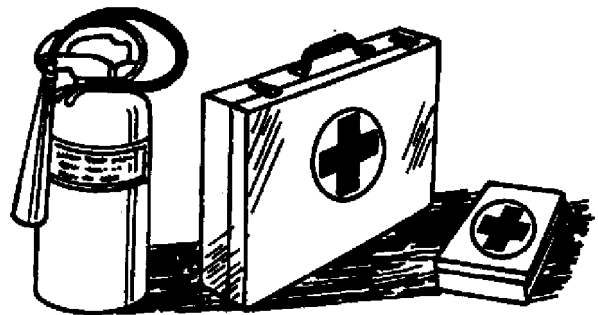

TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93



HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-16APR92

TS1356 -UN-18MAR92



AVOID FIRES

In case cotton ignites in basket, DUMP cotton. DO NOT dump into the wind, DO NOT attempt to extinguish burning cotton in basket.

DO NOT operate picker without two fire extinguishers near by. Fire extinguishers and mounting brackets are available. Order AT81764, T80932, and AT75387 from your John Deere dealer.

To prevent plugging, engage fan before engaging picking units.


DO NOT dump basket near electrical wires.

DO NOT dump into the wind. Wind could blow lint into a hot engine.

DO NOT refuel with the engine running.

DO NOT smoke or use a lantern when refueling.

Keep units free from trash.

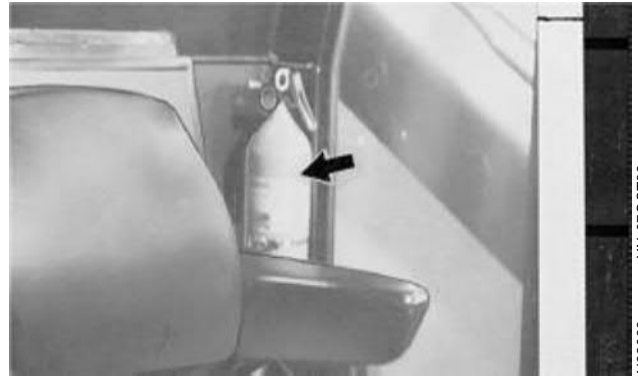

Cab Mounted

N36039 -UN-07OCT88



Chassis Mounted

N82340J1 -UN-30SEP88




TS227 -UN-23AUG88

NX.9930,C4 -19-16FEB94

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

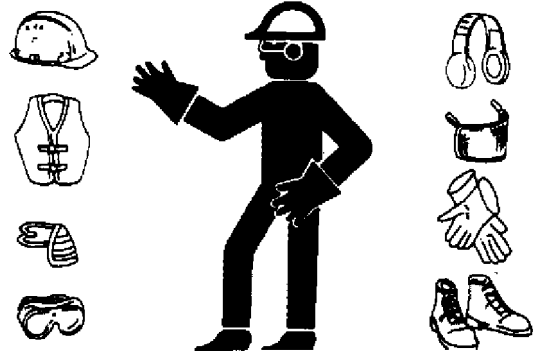

DX.WEAR2 -19-03MAR93

TS206 -UN-23AUG88



HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



DX.MSDS.NA -19-03MAR93

TS1132 -UN-26NOV90

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX.NOISE -19-03MAR93

TS207 -UN-23AUG88



TRANSPORT SAFELY

DO NOT transport without first raising the picking units. Lower picking unit lock-up brackets.

Know the height of your picker and beware of overhead wires and obstacles.

Remove or lower radio antenna, if equipped.


Latch brakes together.

Stop slowly to avoid "nose-diving".

DO NOT transport without first raising the picking units and lowering picking unit lock-up brackets.

Keep the SMV emblem and reflectors clean and in place.

Always disengage picker units before road transport. Transporting with units engaged will cause machine to stop if operator leaves seat for more than 5 seconds.

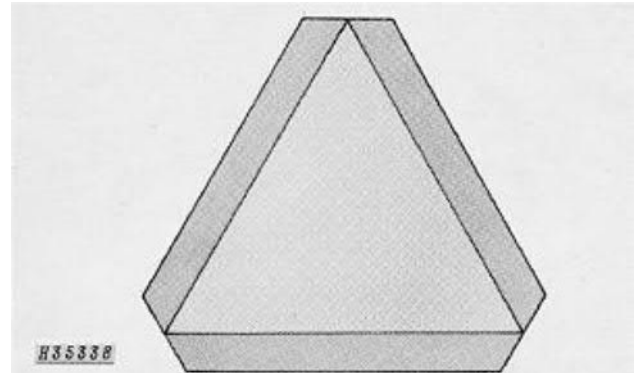

H35338 -UN-02FEB89



N42153A -UN-16FEB94


NX,9930,C5X -19-16FEB94

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

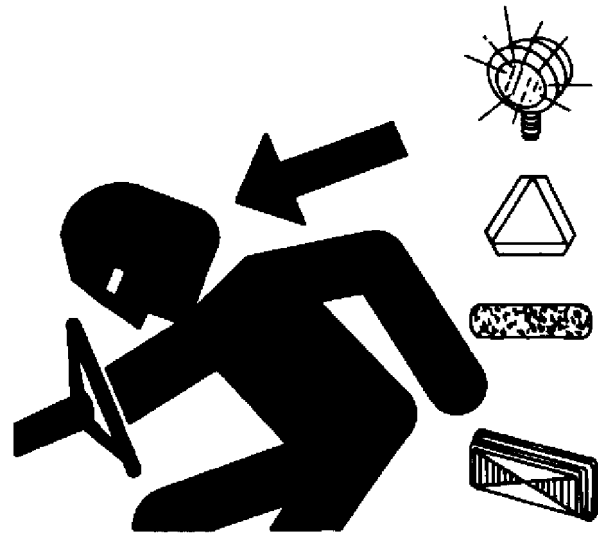

TS951 -UN-12APR90

DX,FLASH -19-15MAR93



SAFE MAINTENANCE

Shut off engine and remove key when working on picker unless specifically told to leave engine running.

Before getting under picking units, raise units, shut off engine, set brakes, and set safety stops on both lift cylinder rods (bold arrow).


When basket is in the raised position, engage basket cylinder lock valve (A) to lock BEFORE working under the basket. When lowering basket, stand clear; then turn valve to unlock. Basket will not lower unless valve is unlocked.

DO NOT oil or adjust picker when it is in motion.


DO NOT loosen radiator cap on a hot radiator.

Replace any guards or shields removed for servicing.


Unauthorized modification to the machine may impair the function and/or safety and affect machine life.

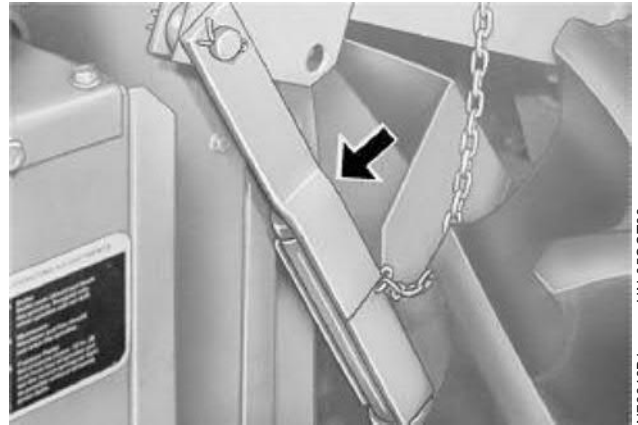

N78346B1 -UN-05OCT88

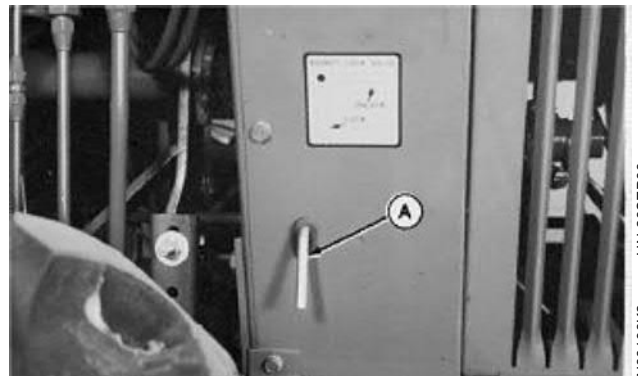

N86198K2 -UN-28SEP88

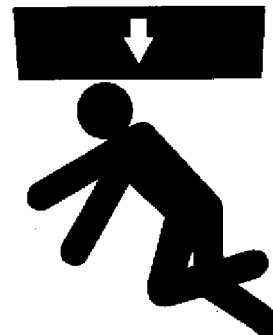

N42153C -UN-16FEB94

NX.9930,C6 -19-16FEB94



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

-UN-23AUG88
TS218


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

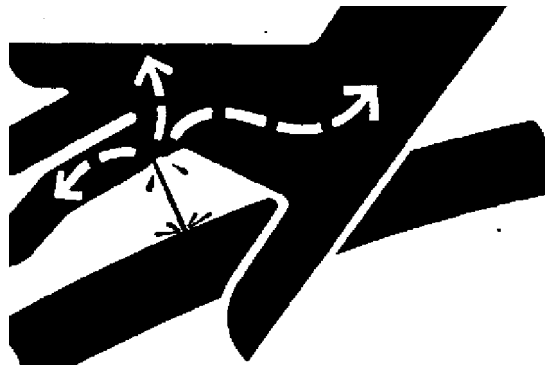

DX,FLUID -19-03MAR93

-UN-23AUG88
X9811




CHECK HYDRAULIC HOSES

Hydraulic hoses can fail due to physical damage, kinks, age, and exposure. Check hoses regularly. Replace damaged hoses.

Escaping fluid under pressure can penetrate the skin causing serious injury. Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere and Company Medical Department in Moline, Illinois, U.S.A.

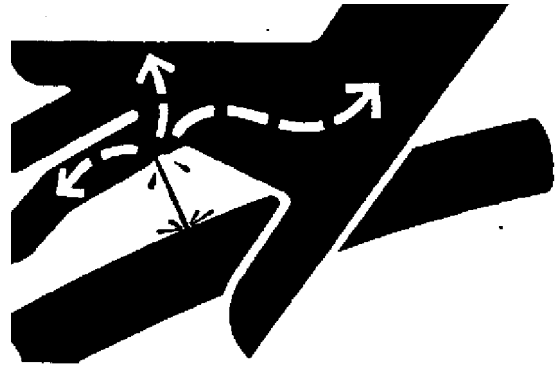


NXN.9930,HYD -19-28FEB94

X9811 -UN-23AUG88

REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

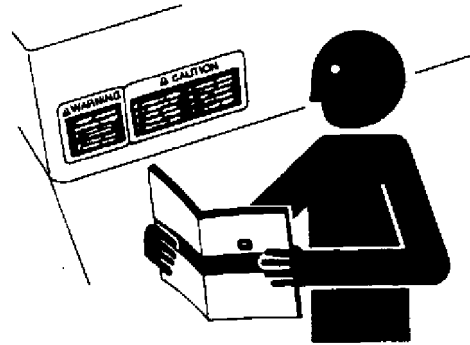


DX,SIGNS1 -19-04JUN90

TS201 -UN-23AUG88



OPERATING BASKET CYLINDER LOCK VALVE

When basket is in the raised position, engage valve to lock position (A) BEFORE working under the basket. When lowering basket, stand clear; then turn valve to unlock position. Basket will not lower unless valve is unlocked.

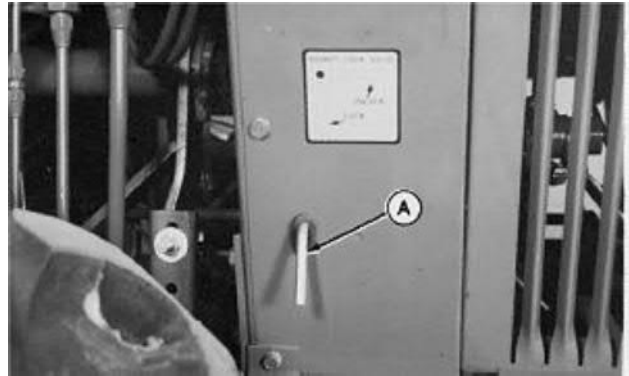

N66198K2 -UN-28SEP88


N42153C -UN-16FEB94

NX.9930_C9 -19-16FEB94



⚠ DANGER

TO AVOID INJURY OR DEATH DO NOT CONTACT ELECTRIC LINES WHEN MOVING OR OPERATING THIS MACHINE.

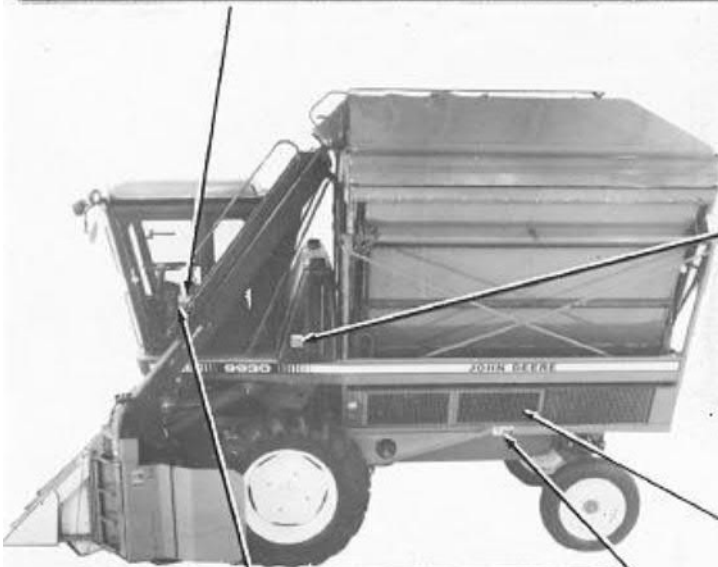

⚠ WARNING

A fire hazard exists when flammable moistening agents are used. Use John Deere Spindle Cleaner, John Deere Wetting Agent or Equivalent.

⚠ CAUTION

Refrigerant under pressure. Improper servicing may cause refrigerant to penetrate eyes and skin or cause burns. Wear goggles and protect skin. For use with R134a refrigerant only.

⚠ CAUTION

1. Reduce engine speed before turning quickly or applying brakes.
2. Uneven application of brakes will draw picker to one side. Apply brakes evenly at transport speeds.
3. "Quick" stops can result in machine nosing forward. Drive with the care necessary to allow controlled application of brakes at all times.



⚠ WARNING

DO NOT GET UNDER BASKET WITHOUT LOCKING BASKET CYLINDER LOCK VALVE. STAND CLEAR WHILE UNLOCKING BASKET CYLINDER LOCK VALVE.

N42153D
-19-12FEB94

NX,9930,C11 -19-16FEB94



⚠ CAUTION

1. Keep all shields in place.
2. Disengage and shut off all engine and/or motor power before servicing or unclogging machine.
3. Keep hands, feet, and clothing away from power-driven parts.

⚠ WARNING

To avoid bodily injury from fall of raised picking units. Raise the picking units and shut off engine. Set safety stops on both lift cylinder rods before getting under the picking units.

⚠ DANGER



Start only from seat in park or neutral. Starting in gear kills.

⚠ DANGER



Disengage harvesting unit drive and shut off engine before unclogging machine.



N42153E -19-12FEB94

NX,9930,C12X -19-16FEB94



⚠ WARNING
Pressurized cooling system.
To avoid burns from escaping
coolant, do not remove
radiator cap when coolant
is hot.

⚠ WARNING



DO NOT GET UNDER BASKET
WITHOUT LOCKING BASKET
CYLINDER LOCK VALVE.
STAND CLEAR WHILE
UNLOCKING BASKET
CYLINDER LOCK VALVE.

NX,9930,C13X -19-16FEB94

N42153F -19-12FEB94

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com