

# **610 Series Drawn Chisel Plow**

**John Deere Des Moines Works  
OMN200322 Issue H2  
(This manual replaces OMN200322 I1)**

LITHO IN U.S.A.  
ENGLISH

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



N38962 -UN-28SEP88

# Contents

	Page		Page
<b>Safety</b>			
Safety Signs . . . . .	05-10	Adjusting	
<b>Preparing the Tractor</b>			
Preparing Hydraulic System . . . . .	10-1	Folding Cylinder Linkage . . . . .	30-9
Securing 3-Point Hitch . . . . .	10-1	Wing Fold Operation . . . . .	30-10
Positioning Drawbar . . . . .	10-2	Replacing	
<b>Preparing the Machine</b>			
Tire Pressures . . . . .	15-1	Tools . . . . .	30-10
Checking Wheel Bolts and Bearings . . . . .	15-1	Twisted Shovels . . . . .	30-10
<b>Attaching and Detaching</b>			
Attaching		Adjusting	
Hitch and Hydraulic Hoses . . . . .	20-2	Stabilizer Wheels . . . . .	30-11
Safety Chain . . . . .	20-3	Sweep Pitch Angle . . . . .	30-11
Checking		<b>Lubrication and Maintenance . . . . . 35-1</b>	
Depth Control Operation . . . . .	20-4	<b>Troubleshooting . . . . . 40-1</b>	
Wing Fold Operation . . . . .	20-5	Recommendations for Working Hard Soils . . . . .	40-4
Detaching . . . . .	20-7	<b>Service</b>	
<b>Transporting . . . . . 25-1</b>			
Raising Storage Stand . . . . .	25-3	Using Safe Service Procedures . . . . .	45-1
<b>Operating the Machine</b>			
Tightening Hardware . . . . .	30-1	Metric Series Torque Chart . . . . .	45-3
Adjusting Spring-Reset Standards . . . . .	30-1	Inch Series Torque Chart . . . . .	45-4
Operating Guidelines . . . . .	30-2	Checking Wheel Bolts and Bearings . . . . .	45-5
Preparing to Operate Machine In Field . . . . .	30-3	Twisted Rockshaft Check . . . . .	45-5
Balanced Hydraulic Depth Control System		Service Tires Safely . . . . .	45-6
(Parallel Series) . . . . .	30-3	Tire Pressures . . . . .	45-6
Adjusting		Preventing Contamination . . . . .	45-7
Mechanical Depth Control . . . . .	30-4	Standard Spacing and Hose Routing	
Single Point Depth Stop Control . . . . .	30-6	Rigid, Single Wheel-3.4 m (11 ft) and	
Machine Leveling Procedure . . . . .	30-7	5.2 m (17 ft) . . . . .	45-8
Horizontal Fold in Field . . . . .	30-8	Rigid, Tandem Wheel-3.4 m (11 ft) and	
Leveling		5.2 m (17 ft) . . . . .	45-9
Wings-Rigid Horizontal Fold . . . . .	30-8	Horizontal Fold-5.8 m (19 ft) and 7.0 m	
		(23 ft) . . . . .	45-10
		Horizontal or Over-Center Fold-7 m (23	
		ft) & 8.2 m (27 ft) . . . . .	45-12
		305 mm (12-in.) Spacing-8.8 m (29 ft)	
		& 10.7 m (35 ft) . . . . .	45-14

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMN200322 H2-19-25JUN92

COPYRIGHT© 1992  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1991, 1990, 1989, 1986 Deere & Company

Contents


	<b>Page</b>
<i>Standard Spacing and Hose Routing—Continued</i>	
406 mm (16-in.) Spacing, Spring-Trip Standards . . . . .	45-16
406 mm (16-in.) Spacing, Rigid Standards . . . . .	45-18
305 mm (12-in.) Spacing, 11.3 m (37 ft) & 12.5 m (41 ft) . . . . .	45-20
406 mm (16-in.) Spacing, Spring-Trip Standards . . . . .	45-22
406 mm (16-in.) Spacing, Rigid Standards . . . . .	45-24
Installing Tools . . . . .	45-25
Installing and Bleeding Wing Fold Cylinders . . . . .	45-27
Bleeding Depth Control Cylinders . . . . .	45-28
Removing Hydraulic Cylinders . . . . .	45-29
Checking For Depth Control Cylinder Leakage . . . . .	45-30
<b>Storage . . . . .</b>	<b>50-1</b>
<b>Crime Prevention Tips . . . . .</b>	<b>55-1</b>
<b>Specifications</b>	
Rigid Models . . . . .	60-1
Flexible Models . . . . .	60-3
Serial Number . . . . .	60-5
<b>Index</b>	

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

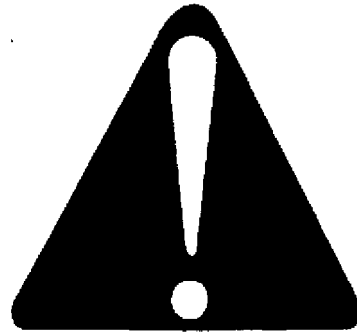

DX,ALERT -19-04JUN90

T81389 -UN-07DEC88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

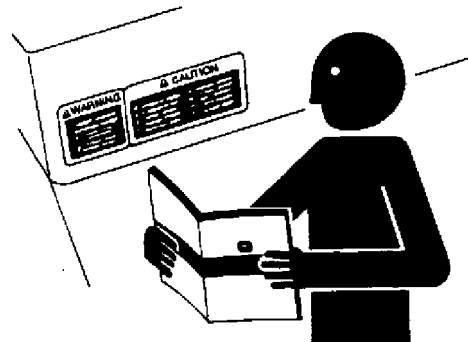

DX,READ -19-04JUN90

TS201 -UN-23AUG88



## OPERATE CHISEL PLOW SAFELY

Clear area around machine when raising or lowering machine or wings.

Stop tractor on level ground when raising or lowering wings.


Operate the chisel plow from the tractor seat only.

Do not operate with wings raised.

Do not operate close to a ditch or creek.

Slow down when turning or traveling over rough ground.

Shut off tractor and shift to "Park" or set brakes when leaving tractor. Remove key when leaving tractor unattended.

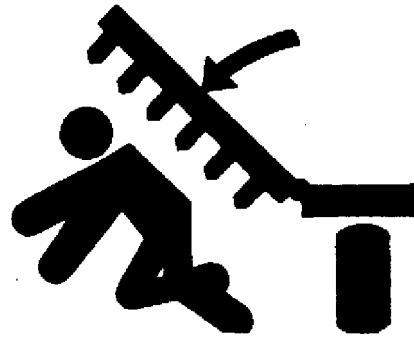

N39547 -UN-06OCT88

NX,610C,D -19-06JUL88

## PARK CHISEL PLOW SAFELY

Park chisel plow on a level surface and block wheels.

Secure hitch jack with pin.

Lower storage stand (if equipped) to ground and secure with pin and spring-locking pin.



N86212A1 -UN-28SEP88

NX,610C,A1 -19-21JUN88



## HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



DX,MSDS,NA -19-15MAR91

TS1132 -UN-26NOV90

## KEEP RIDERS OFF MACHINE

Keep riders off.

Riders are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



NX,610C,A2 -19-21JUN88


N40002 -UN-28SEP88

## USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

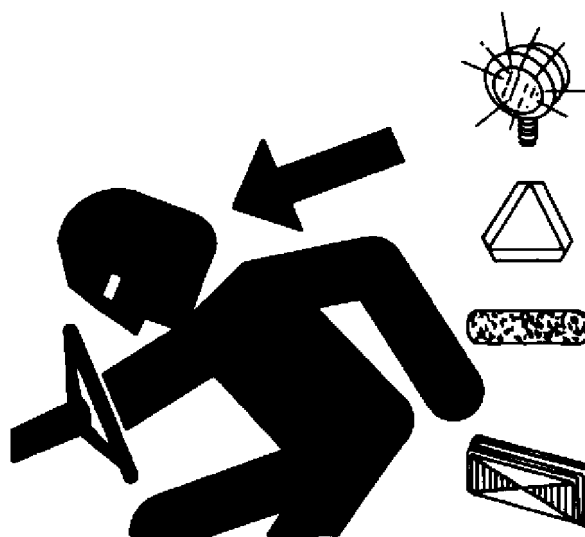

DX,FLASH -19-04JUN90

TS951 -UN-12APR90




## USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

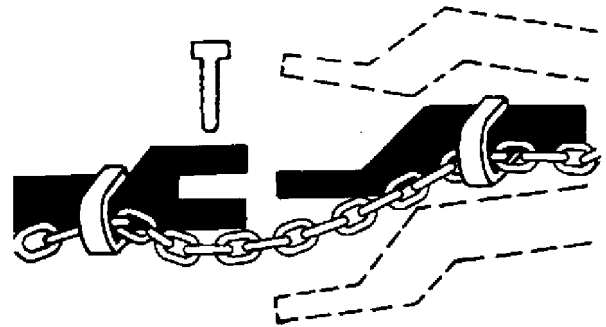

-UN-23AUG68

TS217

DX,CHAIN -19-04JUN90

## TRANSPORT CHISEL PLOW SAFELY

Keep away from overhead power lines. Serious injury or death may result. Know the transport height of your machine.

Always fold wings fully. If wing fold cylinders are removed, chain wings together to prevent accidental lowering.

Install transport lockups on depth control cylinders.

Travel at a reasonable and safe speed.

Shift the tractor into a lower gear when transporting down steep slopes or hills.

Latch the tractor brakes together.

Stop slowly.

Upward force on hitch may cause instability when transporting. Add ballast to tractor as required.



-UN-06OCT88

N39394

NX,610C,E -19-21JUN88






## REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 32 km/h (20 mph) when towing load equal to or less in weight than the tractor.
- Reduce speed to 16 km/h (10 mph) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

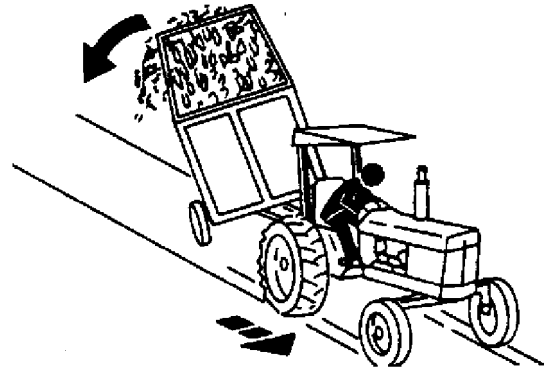

DX,TOW -19-27MAY92


TS216 -UN-23AUG68

## SERVICE CHISEL PLOW SAFELY

To help prevent personal injury caused by unexpected movement, be sure to service chisel plow on level surface.

If chisel plow is connected to tractor, engage parking brake and/or place transmission in "PARK", shut off engine and remove key.

If chisel plow is detached from tractor, block wheels and use safety stands to prevent movement.

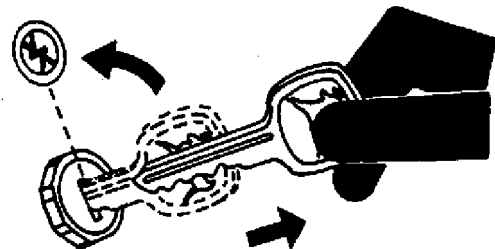

NX,610C,A3 -19-21JUN88

-UN-28SEP88

N40000

-UN-24MAY89

TS230



## SUPPORT RAISED EQUIPMENT

Put a support under all raised equipment. Never work under raised equipment without a support. If there is a failure in the hydraulic system, unsupported raised equipment could suddenly lower, causing serious personal injury or death.

If a support is not available, completely lower the wings and install transport lock-ups.



NX,610C,A4 -19-21JUN88

N39087 -UN-30MAR89

## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-04JUN90

TS218 -UN-23AUG88




## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

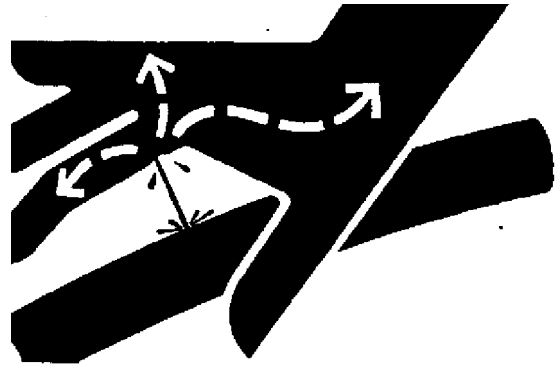

X9811 -UN-23AUG88

DX,FLUID -19-09AUG91

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)