

**750 Series
20 Ft
Grain Drill**

**John Deere Des Moines Works
OMN200420 Issue K4**

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



N42142ST
-UN-01DEC93

Contents

| | Page | | Page |
|---|-------|--|-------|
| Safety | 05-1 | Cleaning/Setting Fluted Feed Cups | 35-10 |
| Identification | 10-1 | Checking Grain Feeds | 35-10 |
| Preparing the Tractor | | Setting Grain Shifter | 35-11 |
| Safety Chain | 15-2 | Half-Speed Drive-Seed Rates | 35-11 |
| Lever Lock Clip | 15-4 | Using Mixtures | 35-12 |
| Preparing the Machine | | Grain Seeding Charts | 35-12 |
| Checking Tire Air Pressure | 20-1 | Half-Speed Drive Attachment-Fluted Feed ... | 35-13 |
| Installing Tractor Front End Weights | 20-2 | Seeding Chart for Fluted Feed Drills | 35-13 |
| Lubricate Drill | 20-2 | Density Meter w/Grain and Grass Seed Charts | 35-15 |
| Attaching and Detaching | | Standard Densities | 35-16 |
| Attaching Drill to Tractor | 25-1 | Pounds of Seed Per Acre Chart | 35-17 |
| Attaching Machine to Tractor | | Checking Quantities Drilled | 35-19 |
| With Quick-Coupler (Two-Point Hitch Only) | 25-7 | Quantities Drilled-Method 1 | 35-20 |
| Without Quick-Coupler (Two-Point Hitch Only) | 25-8 | Quantities Drilled-Method 2 | 35-21 |
| Detaching Drill from Tractor | 25-10 | Grass Seeding Feeds | 35-22 |
| Transporting Drill | | Setting Feed Shifter-Drills w/Grass Seed Attachment | 35-22 |
| Empty Drill | 30-1 | Mixtures with Grass Seed Attachment | 35-23 |
| Drill Transport Weights | 30-1 | Grain Seeding Chart | 35-23 |
| Transporting Drill | 30-1 | Fertilizer Feed Shaft Seed | 35-25 |
| Operating the Machine | | Fertilizer Drive Settings | 35-25 |
| Guidelines for Use | 35-1 | Density Meter and Fertilizer Charts | 35-26 |
| Adjusting Opener Depth | 35-2 | Fertilizer Charts | 35-27 |
| Adjusting Active Down-Pressure-Closed | | Changing Partition-Fertilizer Box | 35-27 |
| Center Hydraulics | 35-3 | Changing to Grain Only Partition Position ... | 35-28 |
| Locking SCV Lever | 35-4 | Changing to 40% Grain and 60% Fertilizer | 35-32 |
| Adjusting Opener Down-Pressure-Open | | Cleaning Fertilizer Box | 35-32 |
| Center Hydraulics | 35-6 | Attachments | |
| Adjusting Spring Pressure-Press Wheels ... | 35-7 | Grass Seed Attachment | 40-1 |
| Adjusting Seed Boots | 35-8 | Single Point Hydraulic Down-Pressure System | 40-1 |
| Installing Boot Spring | 35-8 | Front Rank Lock-Ups | 40-2 |
| Lateral Adjustment of Closing Wheel | 35-9 | Grass Seed Feed Stop | 40-5 |
| Spill Shield | 35-9 | Fertilizer Feed Stop | 40-5 |
| | | Grain Feed Stop-Fluted Feeds | 40-5 |
| | | Grain Agitator | 40-6 |

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200420 K4-19-28SEP94

COPYRIGHT© 1994
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1993 Deere & Company

Contents

| | Page | | Page |
|---|-------------|--|-------------|
| Attaching Safety Chain-Caster Hitch | 40-6 | Hydraulic Diagram-Active Down-Pressure . . . | 55-19 |
| Attaching Half-Speed Drive | 40-6 | Single Point Hydraulic Diagram | 55-21 |
| Installing 750 No-Till Drill Monitor Kit | 40-9 | Storage | 60-1 |
| Installing Monitor SensoR | 40-10 | Specifications | |
| Installing Wiring Harness | 40-12 | Tractor Recommendations | 65-1 |
| Preparing Computer Trak 150 Monitor | 40-14 | Machine Dimensions | 65-1 |
| Turning Console On | 40-14 | Transport Weights | 65-2 |
| Distance Calibration | 40-15 | General Information | 65-2 |
| Implement Width | 40-16 | Serial Number | 65-3 |
| Number of Rows | 40-16 | Crime Prevention Tips | 70-1 |
| Row Spacing | 40-17 | John Deere Service Literature Available . . . | 75-1 |
| Alternate Opener Pattern | 40-17 | Index | |
| Installing Grass Seed Attachment | 40-19 | | |
| Lubrication and Maintenance | | | |
| Grease | 45-1 | | |
| Alternative and Synthetic Lubricants | 45-1 | | |
| Lubrication Symbol | 45-2 | | |
| Lock-Up Openers | 45-2 | | |
| Support Wheel Hub | 45-3 | | |
| Caster Wheel Hubs | 45-3 | | |
| Caster Wheel Pivot | 45-3 | | |
| Rockshaft Bearings | 45-4 | | |
| Opener Disk Hubs | 45-4 | | |
| Fertilizer Feed Shaft Bearings | 45-4 | | |
| Grass Seed Drive Shaft | 45-4 | | |
| Fertilizer Gear Case Oil Check | 45-5 | | |
| Troubleshooting | 50-1 | | |
| Service | | | |
| Metric Series Torque Chart | 55-2 | | |
| Inch Series Torque Chart | 55-3 | | |
| Preventing Contamination | 55-4 | | |
| Removing and Repairing Cylinders | 55-4 | | |
| Bleeding Trapped Air From Cylinders | 55-5 | | |
| Lock-Up Openers | 55-6 | | |
| Reset Fluted Feed Cups | 55-6 | | |
| Replacing Fertilizer Feed Wheels | 55-7 | | |
| Installing Gauge Wheels | 55-8 | | |
| Opener Disk Bearing Replacement | 55-9 | | |
| Opener Disk Replacement | 55-11 | | |
| Gauge Wheel Bearing and Tire Replacement | 55-12 | | |
| Press Wheel Bearing Replacement | 55-13 | | |
| Closing Wheel Bearing Replacement | 55-14 | | |
| Replacing Opener Arm, Pivot Pin, Bushing | 55-15 | | |
| Boot Replacement | 55-16 | | |
| Boot Strap Replacement | 55-18 | | |

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

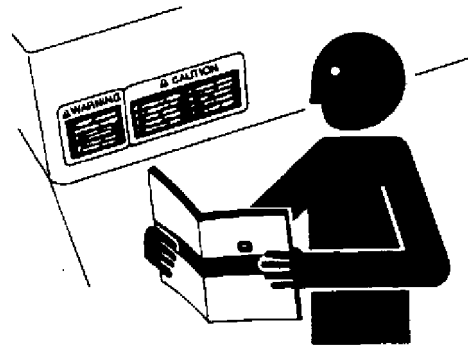

DX,READ -19-03MAR93


TS201 -UN-23AUG88



OPERATE SAFELY

Always keep hands away from opener blades during opener adjustment.

 Always lock-up opener lift cylinder(s) before performing any maintenance or adjustments under machine.

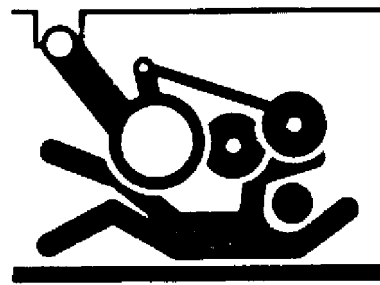

N39627 -UN-22SEP88

 
N39645 -UN-06OCT88

NX,750,C4 -19-21MAR89

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

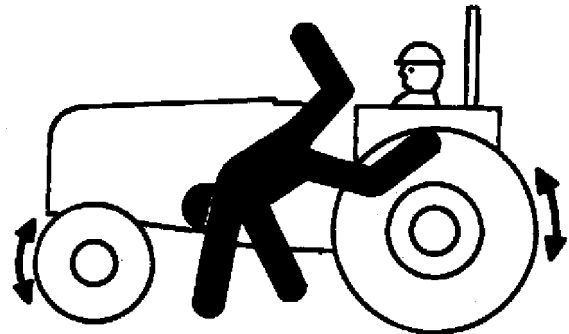

TS290 -UN-23AUG88

 
DX,RIDER -19-03MAR93

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

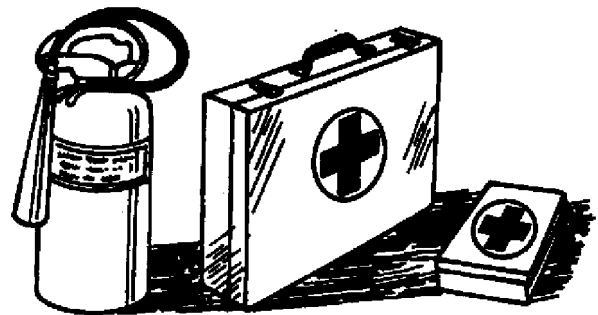

TS291 -UN-23AUG88

 
DX,FIRE2 -19-03MAR93



WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

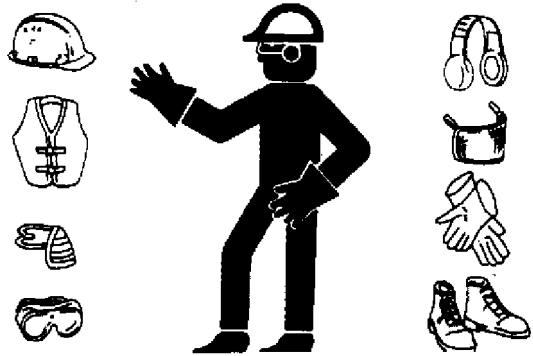

DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG68

 
HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

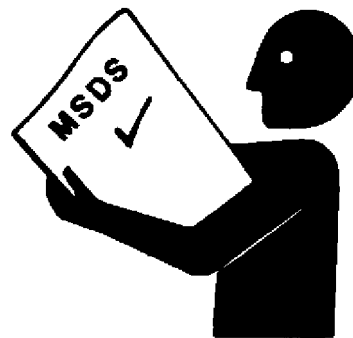

DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

 


USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

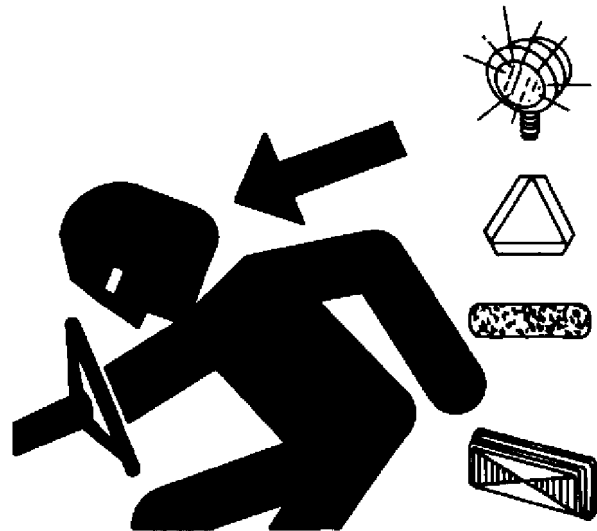

DX,FLASH -19-15MAR93


TS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

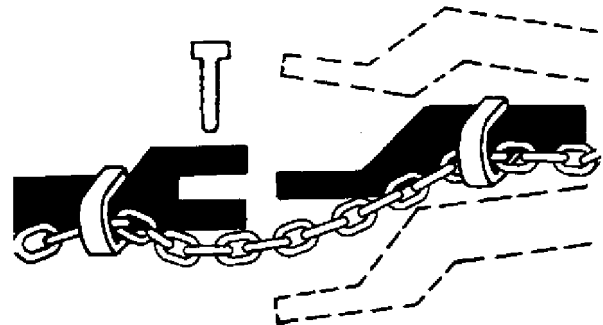

DX,CHAIN -19-03MAR93

TS217 -UN-23AUG88



TRANSPORT SAFELY

Shift tractor into lower gear when transporting down steep slopes or hills.

Make sure reflectors and SMV emblem are easily visible from rear.

Stop slowly.

Remember transport width for 6.1 m (20 ft) models is 6.4 m (20 ft 7 in.).

Always empty all seed and/or fertilizer before transporting drill. DO NOT exceed 16 km/h (10 mph) if drill is not empty.

When transporting two unit hitch, DO NOT exceed 16 km/h (10 mph).

Always lock-up opener lift cylinder(s) before transporting drill. Hydraulic failure can allow openers to fall rapidly.



NXN,750M,C1 -19-07DEC93

 
N39084 -UN-30MAR89

REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 32 km/h (20 mph) when towing load equal to or less in weight than the tractor.
- Reduce speed to 16 km/h (10 mph) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

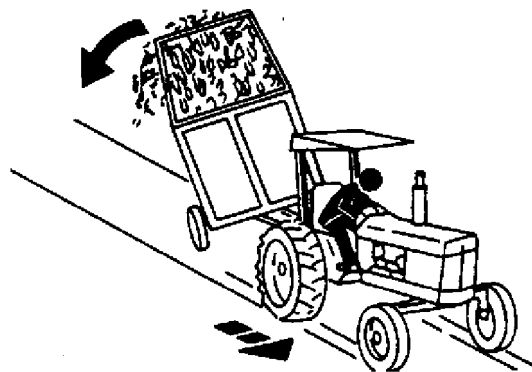

DX,TOW -19-03MAR93

TS216 -UN-23AUG88



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

-UN-23AUG88
TS218

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

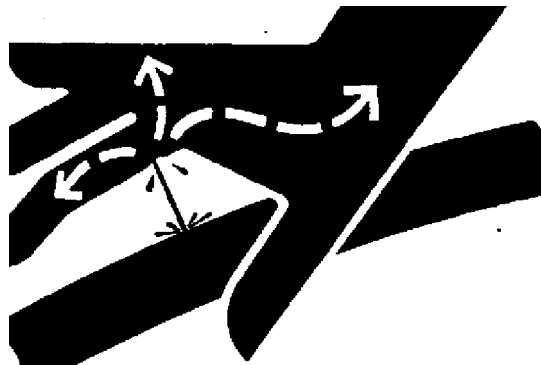

DX,FLUID -19-03MAR93

-UN-23AUG88
X9811



HANDLE PESTICIDES AND FERTILIZERS CAREFULLY

Keep dust away from skin and hair.

Keep containers low when pouring.

Let the wind blow fumes away from you when mixing with seed or when filling tank.

Wear a filtered respirator if you cannot avoid dust.

Wear goggles to protect your eyes.

Wash exposed skin areas frequently—do not leave pesticide on your skin.

 
 
Do not smoke while handling pesticides.

Properly dispose of pesticide container, unused pesticide and left-over treated seed and fertilizer.

Read and observe manufacturers recommendations.

Store pesticides in a separate, plainly marked LOCKED building.

Store pesticides in original containers with labels intact.

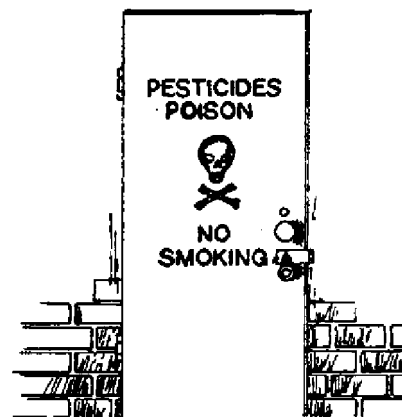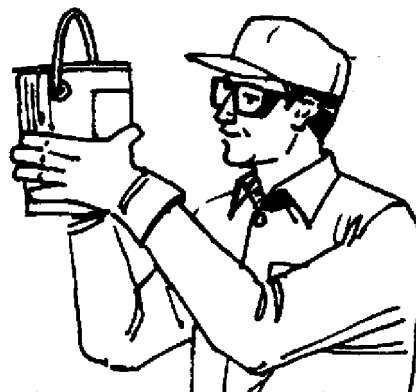

N35988 -UN-04OCT88

N35988

N35989 -UN-04OCT88

N35989

-19-31JAN89

N33983

NX,750,C7 -19-21MAR89

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com