

680 Series Drawn Chisel Plow

**John Deere Des Moines Works
OMN200613 Issue K7
(This manual replaces OMN200419 K6)**

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



-UN-12APR94

N42150HR

Contents

	Page		Page
Safety			
Recognize Safety Information	05-1	Attaching and Detaching	
Understand Signal Words	05-1	Attaching Machine Safely	30-1
Follow Safety Instructions	05-1	Marking Hose Connections	30-2
Operate Safely	05-2	Attach	
Keep Riders Off Machine	05-2	Chisel Plow to 8000 and 9000 Series	
Prepare for Emergencies	05-2	Tractor	30-3
Wear Protective Clothing	05-3	Safety Chain to Tractor	30-4
Handle Chemical Products Safely	05-3	Warning Light Plug	30-4
Use Safety Lights and Devices	05-4	Checking	
Use a Safety Chain	05-4	Wing Fold Operation	30-5
Transport Safely	05-5	Depth Control Operation	30-5
Tow Loads Safely	05-6	Detaching Machine from Tractor	30-6
Service Chisel Plow Safely	05-7	Detaching Hydraulic Hoses-8000/9000	
Practice Safe Maintenance	05-7	Series Tractors	30-8
Remove Paint Before Welding or Heating	05-8	Restoring Hitch Control	30-9
Avoid Heating Near Pressurized Fluid		Transporting	
Lines	05-8	Attach Safety Chain to Tractor	35-1
Avoid High-Pressure Fluids	05-9	Using Warning Lights	35-1
Support Raised Equipment	05-9	Attaching Warning Light Plug	35-2
Store Attachments Safely	05-10	Keep Riders Off Machine	35-2
Safety Signs	10-1	Positioning Tractor Drawbar for Transport	35-2
Identification	15-1	Positioning Jack for Transport	35-3
Preparing the Tractor		Locking Up Depth Control	35-3
Determining Tractor Requirements	20-1	Transporting the Machine	35-4
Preparing Hydraulic System	20-1	Operating the Machine	
Preparing Hydraulic System (8000 and		Keep Riders Off Machine	40-1
9000 Series Tractors)	20-2	Follow Safe Operating Procedures	40-1
Securing Three-Point Hitch	20-3	Tightening Hardware	40-2
Positioning Drawbar	20-3	Adjusting Spring-Reset Standards	40-2
Use a Safety Chain	20-3	Operating Guidelines	40-3
Preparing the Machine		Understanding the Hydraulic Depth	
Checking and Lubricating Chisel Plow	25-1	Control System (Series)	40-4
Checking		Operating Depth Consistency—Flexible	
Tire Pressure	25-1	Fold Machines	40-6
Wheel Bolts and Bearings	25-2	Understanding TOUCHSET Depth Control	
Tightening Hardware	25-2	(8000 and 9000 Series Tractors)	40-7
		Preparing to Operate Machine in Field	40-9

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200613 K7-19-29SEP97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996, 1995, 1994 Deere & Company

Contents

	Page		Page
Setting Single Point Depth Control	40-12	Troubleshooting TOUCHSET Depth	
Setting and Operating TOUCHSET Depth		Control System	
Control-8000/9000 Tractors	40-14	8000 and 9000 Series Tractors	50-5
Adjusting		Troubleshooting Flow Chart	50-7
Single Point Depth Control and		TOUCHSET	50-8
Indicator	40-15	Service	
TOUCHSET Depth Control		Using Safe Service Procedures	55-1
Potentiometer and Indicator	40-16	Replacing Ground Engaging Tools	55-1
Level		Keep Service Area Clean	55-2
Adjustment Wrench	40-16	Service Tires Safely	55-3
Machines with Rigid Hitch	40-17	Torque Charts	
Frame Front-to-Rear with Level Lift		Metric Series	55-4
Hitch	40-18	Inch Series	55-5
Frame Front-to-Rear with Floating Hitch . . .	40-19	Checking	
Wings—Flexible Fold Models	40-20	Wheel Bolts and Bearings	55-6
Wings—Rigid Horizontal Fold Models	40-21	Tire Pressure	55-6
Wings—Floating Hitch	40-21	Adjusting Spring-Reset Standards	55-7
Adjusting Folding Cylinder		Standard Spacing Diagrams	
Linkage—Horizontal Fold Models	40-22	3.4 m (11 ft) to 4.6 m (15 ft)—305 mm	
Setting Wing Stops—3.3 m (11 ft)	40-23	(12 in.)	55-8
Adjusting		3.2 m (10 ft 8 in.) to 4.1 m (13 ft 4	
Wing Fold Operation—3.3 m (11 ft)	40-23	in.)—406 mm (16 in.)	55-9
Stabilizer Wheels	40-24	5.2 m (17 ft) to 6.4 m (21 ft)—305 mm	
Replacing Tools	40-24	(12 in.)	55-10
Replacing Twisted Shovels	40-24	5.6 m (18 ft 4 in.) to 6.4 m (21	
Tightening Hardware	40-25	ft)—406 mm (16 in.)	55-11
Adjusting Sweep Pitch Angle	40-25	7.0 m (23 ft) to 8.2 m (27 ft)—305 mm	
Adjusting and Folding Coil Tine Harrow	40-25	(12 in.)	55-12
		7.4 m (24 ft 2 in.) to 8.2 m (27	
Lubrication and Maintenance		ft)—406 mm (16 in.)	55-13
Grease	45-1	8.8 m (29 ft) to 10.1 m (33 ft)—305	
Alternative and Synthetic Lubricants	45-2	mm (12 in.)	55-14
Lubricant Storage	45-2	9.0 m (29 ft 4 in.) to 10.5 m (34 ft 4	
Beginning and End of Season	45-2	in.)—406 mm (16 in.)	55-15
Lubrication Symbols	45-3	9.4 m (31 ft) to 10.7 m (35 ft)—305	
Lubricate		mm (12 in.)	55-16
Hitch Jack	45-3	9.3 m (30 ft 8 in.) to 11.0 m (35 ft 10	
Rockshaft Bearings	45-3	in.)—406 mm (16 in.)	55-17
Wheel Bearings	45-4	11.3 m (37 ft) to 12.5 m (41 ft)—305	
Level Lift Hitch Turnbuckle	45-4	mm (12 in.)	55-18
Stabilizer Wheels and Adjustment		11.2 m (36 ft 8 in.) to 12.8 m (42	
Ratchets (If Equipped)	45-4	ft)—406 mm (16 in.)	55-19
Wing Depth Adjusting Screws	45-5	Floating Hitch Standard Spacing	
Wheel Pivots of Floating Hitch (If		Diagrams	
Equipped)	45-5	7.0 m to 8.2 m (23 ft to 27 ft)—305	
		mm (12 in. Spacing)	55-20
Troubleshooting			
Recommendations for Working Hard Soils	50-4		

Continued on next page

Contents

	Page	Page
Floating Hitch Standard Spacing		
Diagrams—Continued		
7.3 m to 8.2 m (24 ft 2 in. to 27 ft)—406 mm (16 in. Spacing)	55-21	
8.8 m to 10.1 m (29 ft to 33 ft)—305 mm (12 in. Spacing)	55-22	
9.0 m to 10.5 m (29 ft 4 in. to 34 ft. 4 in.)—406 mm (16 in. Spacing)	55-23	
9.4 m to 10.7 m (31 ft to 35 ft)—305 mm (12 in. Spacing)	55-24	
9.4 m to 11 m (30 ft 8 in. to 35 ft 10 in.)—406 mm (16 in. Spacing)	55-25	
11.3 m to 12.5 m (37 ft to 41 ft)—305 mm (12 in. Spacing)	55-26	
11.2 m to 12.8 m (36 ft 8 in. to 42 ft)—406 mm (16 in. Spacing)	55-27	
Preventing Contamination	55-28	
Removing Hydraulic Cylinders	55-29	
Installing and Bleeding Wing Fold Cylinders	55-30	
Depth Control and Wing Fold Hydraulic Diagrams		
3.4 m to 6.4 m (11 ft to 21 ft)—Depth Control	55-31	
5.2 m to 6.4 m (17 ft to 21 ft)—Wing Fold	55-32	
7 m to 10.4 m (23 ft to 34 ft 4 in.)—Depth Control	55-33	
7 m to 10.4 m (23 ft to 34 ft 4 in.)—Wing Fold	55-35	
9.3 m to 12.8 m (30 ft 8 in. to 42 ft)	55-36	
9.3 m to 12.8 m (30 ft 8 in. to 42 ft)—Wing Fold	55-38	
Checking Depth Control		
Hydraulic System	55-39	
Cylinder Leakage	55-40	
Diagnosis Chart for 3 Cylinder Depth Control System	55-41	
Analyzing Test Results-Depth Control		
Internal Leakage Check	55-42	
Depth Control Cylinders		
Installing	55-43	
Bleeding	55-44	
Storage		
Preparing for Storage	60-1	
Removing from Storage	60-1	
Specifications	65-1	
		Crime Prevention Tips 70-1
		Index

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com