

# **3955 Integral Reversible Moldboard Plow**

**Industrias John Deere, S.A. de C.V.  
OMP57319 Issue D4**

LITHO IN U.S.A.  
INGLES

# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

# Contents

	Page		Page
<b>Safety</b> .....	05-1	Adjusting Rate of Cylinder Operation .....	35-3
General Safety Rules .....	05-2	Depth of Plow .....	35-4
Operator Manual .....	05-5	Reversing the Bottoms .....	35-5
<b>Safety Signs</b>		Landsides for Side draft Control .....	35-5
Read Safety Signs Carefully .....	10-1	Shear-Bolt Standards .....	35-6
Detaching Caution Decal .....	10-1	Crank and Lift Alignment .....	35-6
Remote Cylinder Caution Decal .....	10-1	Shear bolt Storing Holes .....	35-7
Gauge Wheel Caution Decal .....	10-2		
Shear bolt Caution Decals .....	10-2	<b>Attachments</b>	
<b>Preparing the Tractor</b>		Gauge Wheel Installation .....	40-1
Tractor Size .....	15-1	Service and Operating Instructions .....	40-3
Tire Pressure .....	15-1		
Rear Wheel Weighting .....	15-1	<b>Lubrication and Maintenance</b>	
Importance of proper Adjustment .....	15-2		
Rear and Front wheel setting .....	15-2	<b>Trouble Shooting</b>	
Hydraulics .....	15-2		
Sway Blocks .....	15-3	<b>Service</b>	
Lateral Float .....	15-3	Bottoms .....	55-1
Lift Link and center link .....	15-4	Shear bolt storing .....	55-2
		Landside .....	55-3
<b>Preparing the Plow</b>		Service at the beginning of the season .....	55-4
Lubrication .....	20-1	Wheel Bearings .....	55-5
Bolts and set Screws .....	20-1	Reversing Mechanism .....	55-6
Before going to field .....	20-2	Verification .....	55-7
<b>Attaching and Detaching</b>		<b>Storage</b>	
Attaching Plow to Tractor .....	25-1	Keep your Plow prepared .....	60-1
Use Correct Hose Tips .....	25-2	Removing the Plow from Storage .....	60-1
Hydraulic Cylinder Hose installation .....	25-3		
Detaching Plow from Tractor .....	25-4	<b>Assembly</b>	
		General Information .....	65-1
<b>Transporting</b>		Safety Reflector .....	65-1
		Frame with Standards .....	65-2
<b>Operation</b>		Bottoms Installation .....	65-2
Before operating the Plow .....	35-1		
Leveling Mechanism .....	35-1	<b>Specifications</b>	
Field adjusting Plow .....	35-1		
Leveling fore-and-aft .....	35-2	<b>Serial Numbers</b>	
Raising and Lowering .....	35-3		

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMP57319 D4-19-23MAR94

COPYRIGHT© 1993  
INDUSTRIAS JOHN DEERE S.A de C.V.  
Monterrey, N.L.  
All right reserved  
A John Deere ILLUSTRATION™ Manual

*Contents*

	<b>Page</b>
<b>Crime Prevention Tips</b> . . . . .	80-1
<b>Index</b>	

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

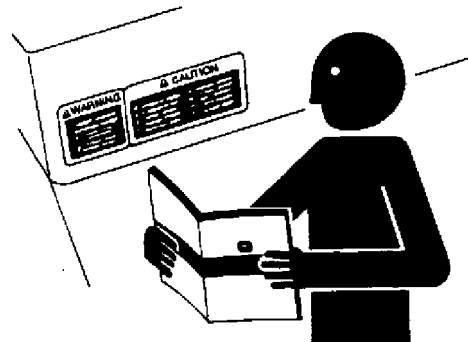

DX,READ -19-03MAR93

TS201 -UN-23AUG88



## GENERAL SAFETY RULES


- 1.- To avoid injury, always be careful while operating a tractor and plow.
- 2.- For tractor stability and operator safety, tractor front end weights are required.
- 3.- Always lower the plow to the ground when not in use.
- 4.- Always lower the support stand to help support the plow before unhitching from the tractor.
- 5.- Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.
- 6.- Always park plow on flat level ground.
- 7.- Do not grease, oil, or adjust the plow while it is in motion.
- 8.- Drive slowly through gates and doors.
- 9.- Avoid traveling over loose field, rocks and holes.
- 10.- To avoid accidents, be sure no one is near plow when reversing.

PX.3955B.03 -19-25MAR94

## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

 Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

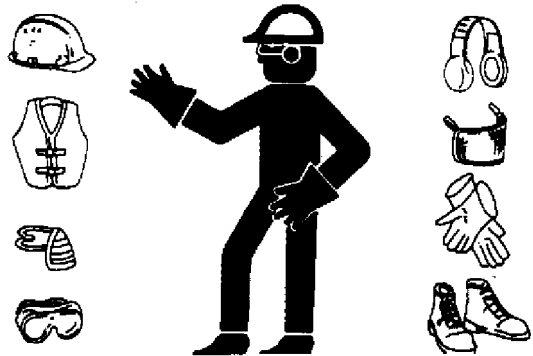

DX.WEAR2 -19-03MAR93


TS206 -UN-23AUG88



## KEEP RIDERS OFF MACHINE

 Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

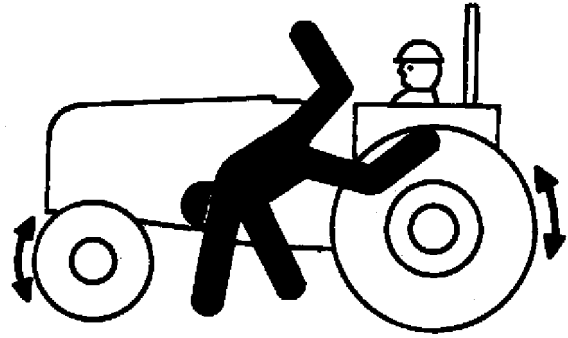

DX,RIDER -19-03MAR93


TS290  
-UN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

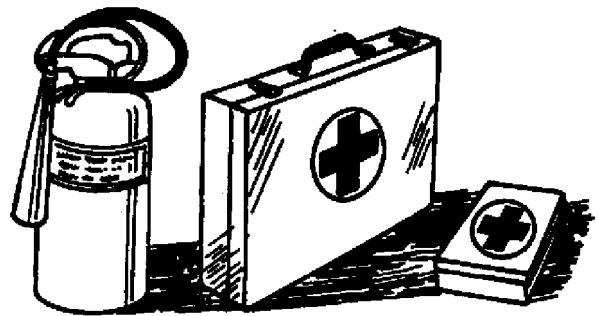

DX,FIRE2 -19-03MAR93

TS291  
-UN-23AUG88


## AVOID HIGH-PRESSURE FLUIDS

 Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

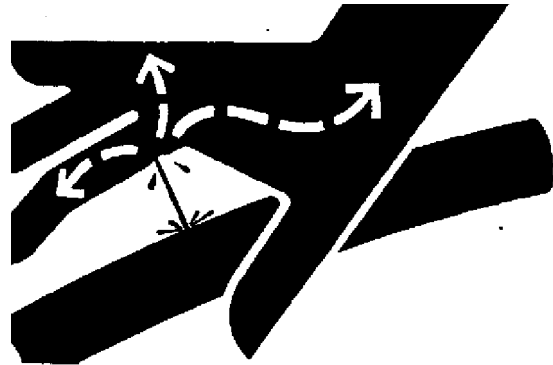

DX,FLUID -19-03MAR93

X9811  
-UN-23AUG88




## USE SAFETY LIGHTS AND DEVICES

 Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

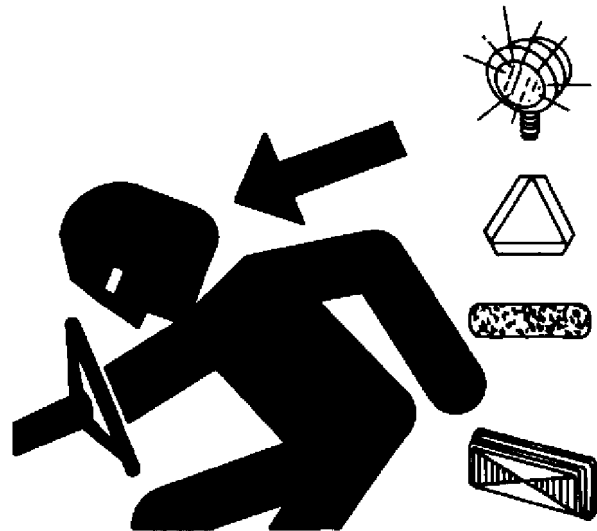

DX,FLASH -19-15MAR93

TS951 -UN-12APR90

## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88





## REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

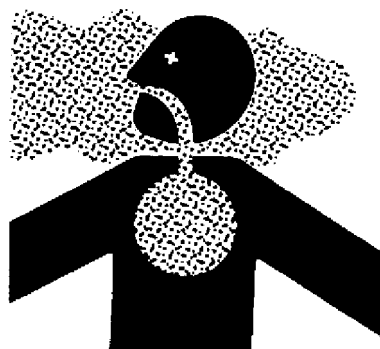

TS220 -UN-23AUG68

DX,PAINT -19-03MAR93

## OPERATOR'S MANUAL

Do not put this operator's manual away unread. Read the manual carefully regardless of your previous experience. Allow yourself this time, it will save you time and labor later on.

**IMPORTANT: Keep an extra copy of the operator's manual in your office or in the garage in case one copy gets lost.**

An extra copy may be acquired from your John Deere dealer.

PX,3955B,02 -19-25MAR94

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)