

25A Flail Mower

**Industrias John Deere, S.A. de C.V.
OMP58341 Issue B4**

LITHO IN U.S.A.
INGLES

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should


it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

Identification View

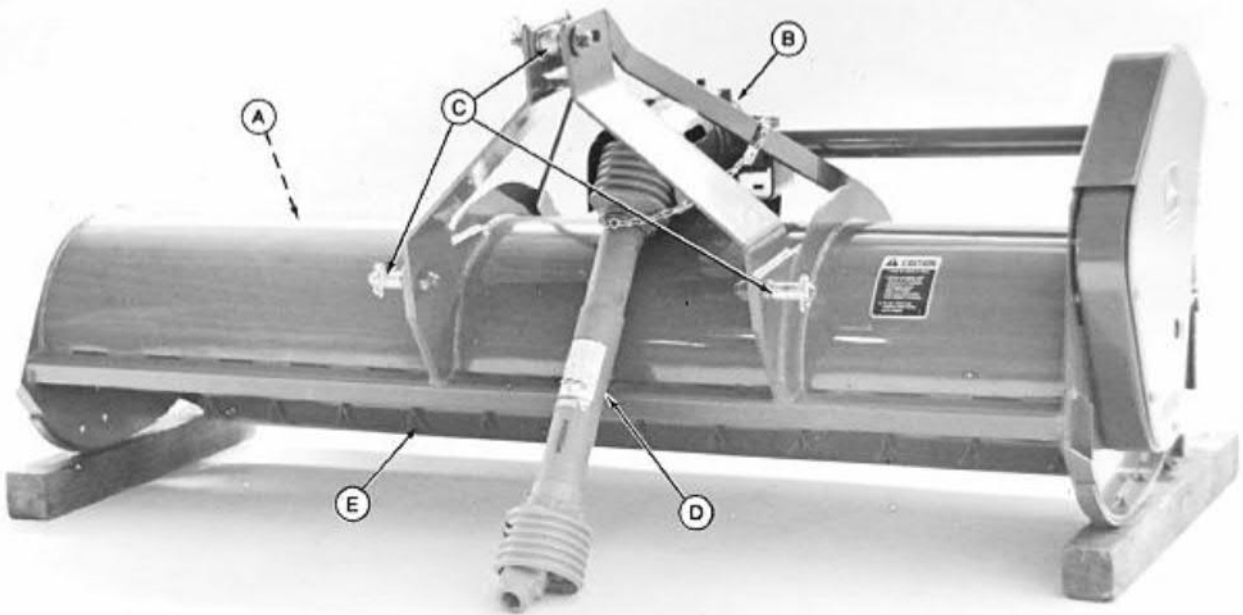

A—Floating Deflector
B—Gear Case

C—3-Point Hitch

D—Tractor Hookup

E—Rotor Knife

25A Flail Mower

P4856 -UN-22MAR93

PX,25AA,02 -19-26FEB94

290101
PN=3

Contents

	Page		Page
Safety	05-1	Every 100 Hours	45-4
Safety Signs		Every 8 and 16 Hours	45-4
Preparing the tractor		Every 100 Hours	45-4
Tractor size	15-1	Trouble Shooting	
Tire Pressure	15-1	Service	
Rockshaft Control Lever	15-2	Rotor Knives	55-3
Drawbar	15-3	Replacing Knives	55-3
Rear Wheel Weighting	15-3	Inspecting Knives	55-4
Front End Weighting	15-3	Inspecting Knives Fasteners	55-4
Brakes	15-4	Gear case	55-5
Stabilizer Chains	15-4	Adjusting Drive Belt	55-6
Sway Blocks	15-4	Pulley Alignment	55-6
Lateral Float	15-5	Belt Installation	55-7
Preparing the Mower		Bearing Locking Collars	55-7
Before Operation	20-1	Crop Deflector	55-7
Bolts and Set Screws	20-1	Storage	
Attaching and Detaching		Assembly	
Attaching Mower to Tractor	25-1	Specification	
Detaching Mower from Tractor	25-3	Serial Number	
Transporting		Crime Prevention Tips	80-1
Operation		Index	
Break-in the New Mower	35-1		
Operating Speed	35-2		
Operating	35-3		
Adjusting Cutting Height	35-3		
Hitch Mast Slot	35-3		
Attachments			
Lubrication and Maintenance			
Lubrication Symbols	45-1		
Perform Lubrication and Maintenance	45-1		
Gear Case Lubricant	45-2		
General Purpose Grease	45-3		
Gear Case	45-3		

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMP58341 B4-19-07MAR94

COPYRIGHT© 1993
INDUSTRIAS JOHN DEERE S.A de C.V.
Monterrey, N.L.
All right reserved
A John Deere ILLUSTRATION™ Manual

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com