

# 146 Farm Loader



## OPERATORS MANUAL 146 Farm Loader

OMW37920 Issue B6 English

**John Deere Welland Works  
OMW37920 Issue B6**

LITHO IN U.S.A.  
ENGLISH



# Introduction

**Read this manual** carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

**This manual should be considered** a permanent part of your machine and should remain with the machine when you sell it.

**Measurements** in this manual are U.S. customary units and their metric equivalents.

**Right-hand and left-hand** sides of the implement are determined by facing in the direction the implement will travel when going forward.

**Warranty** appears on your copy of the purchase order which you should have received from your dealer.

**Write serial numbers** in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the serial numbers in a secure place off the machine.



*All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.*

# Contents

	Page		Page
<b>Safety</b> . . . . .	<b>05-1</b>	<b>Operating the Loader</b>	
<b>Preparing the Tractor</b>		Preoperating Checks . . . . .	35-1
Approved Tractors . . . . .	10-1	Understanding Round Bale Handling Hazards . . . . .	35-1
Using Roll-Over Protective Structure (ROPS) . . . . .	10-1	Avoid Tractor Roll-Over When Handling	
Approved Front Tires . . . . .	10-2	Round Bales . . . . .	35-2
Checking Front Wheel Hardware . . . . .	10-3	Picking Up a Round Bale . . . . .	35-2
Selecting Front Tread . . . . .	10-3	Handling Round Bales on a Slope . . . . .	35-3
Selecting Rear Tread . . . . .	10-3	Transporting Round Bales . . . . .	35-3
Adding Rear Ballast . . . . .	10-4	Storing Round Bales . . . . .	35-3
Locking Out PTO Clutch . . . . .	10-5	Removing Material From a Pile . . . . .	35-4
Operating With Remote Cylinder		Removing Material From a Pile With	
Control Valve (RCCV) . . . . .	10-5	Silage Grapple . . . . .	35-4
Setting Hydraulic Speed . . . . .	10-5	Carrying Material . . . . .	35-5
Using RCCV Lockout Stops . . . . .	10-6	Loading Operations . . . . .	35-5
Operating with Independent		Leveling and Scraping Forward . . . . .	35-5
Control Valve (ICV) . . . . .	10-6	Leveling in Reverse . . . . .	35-6
<b>Controls</b>		Digging . . . . .	35-6
Using Float . . . . .	15-1	Backfilling . . . . .	35-6
Using RCCV Lockouts . . . . .	15-1	<b>Attachments</b>	
Operating Loader With RCCV . . . . .	15-2	Materials Buckets . . . . .	40-1
Operating Loader with ICV . . . . .	15-2	Cutting Edges . . . . .	40-1
Operating Grapple Cylinder ICV . . . . .	15-3	Bucket Tines . . . . .	40-2
Using Regenerative Dump Position ICV . . . . .	15-3	Extensions for 1524 mm (60 in.) Bucket . . . . .	40-2
Relieving Hydraulic Pressure ICV		Bucket Level Indicator . . . . .	40-3
Loader Attached . . . . .	15-4	Forklift . . . . .	40-3
Loader Not Attached . . . . .	15-4	Round Bale Grapple . . . . .	40-4
<b>Detaching the Loader</b>		Silage Grapple . . . . .	40-4
Relieving Hydraulic Pressure RCCV . . . . .	20-1	<b>Lubrication and Maintenance</b>	
Relieving Hydraulic Pressure ICV . . . . .	20-2	Selecting Grease . . . . .	45-1
Disconnecting Hoses RCCV . . . . .	20-1	Lubricating Loader . . . . .	45-2
Disconnecting Hose ICV . . . . .	20-3	Checking Transmission/Hydraulic Oil Level . . . . .	45-3
Detaching the Loader . . . . .	20-3	Tightening Mounting Frame Hardware . . . . .	45-3
<b>Attaching the Loader</b>		<b>Troubleshooting</b> . . . . .	<b>50-1</b>
Attaching the Loader . . . . .	25-1	<b>Service</b>	
Relieving Hydraulic Pressure RCCV . . . . .	25-2	Checking Bolt Torque . . . . .	55-2
Relieving Hydraulic Pressure ICV . . . . .	25-3	Tightening Hydraulic Fittings . . . . .	55-3
Connecting Hoses RCCV . . . . .	25-3	Installing Packing Correctly . . . . .	55-5
Connecting Hoses ICV . . . . .	25-4	Installing Rod Seals Correctly . . . . .	55-5
Check Hydraulic Connections . . . . .	25-4	Cylinder Components . . . . .	55-6
<b>Transporting</b> . . . . .	<b>30-1</b>	Changing Control Lever Position . . . . .	55-7
		<b>Storage</b> . . . . .	<b>60-1</b>
		<b>Crime Prevention</b> . . . . .	<b>65-1</b>
		<b>Specifications</b> . . . . .	<b>70-1</b>
		<b>Alpha Index</b> . . . . .	<b>75-1</b>

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



AB6;T81389 053;ALERT 071085

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



AB6;TS187 053;SIGNAL 071085

## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Follow recommended precautions and safe operating practices.

Keep safety signs in good condition. Replace missing or damaged safety signs.



AB6;TS188 053;SIGNS 071085

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)