

AMT 600 ALL MATERIAL TRANSPORTER



 
JOHN DEERE

OPERATORS MANUAL AMT 600 ALL MATERIAL TRANSPORTER

OMW38914 E7 English

JOHN DEERE WELLAND WORKS
OMW38914 E7

LITHO IN THE U.S.A.
ENGLISH

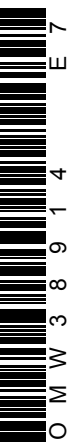

Introduction

Thank you for purchasing a John Deere product.

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.

Right-hand and left-hand sides are determined by facing in the direction of forward travel.

Write product identification numbers in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

Warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual.

The warranty does not cover:


A—Products which have been altered or modified in ways not approved by John Deere, including setting fuel delivery above specifications or otherwise over-powering of products.

B—Depreciation or damage caused by normal wear, accident, lack of reasonable and necessary maintenance as specified in this manual, improper maintenance, improper protection in storage, or improper use or abuse.

C—Normal maintenance and replacement of service items such as filters, spark plugs, belts, and brake linings, unless such items are defective.

D—Transportation, mailing and service call charges for warranty service.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.

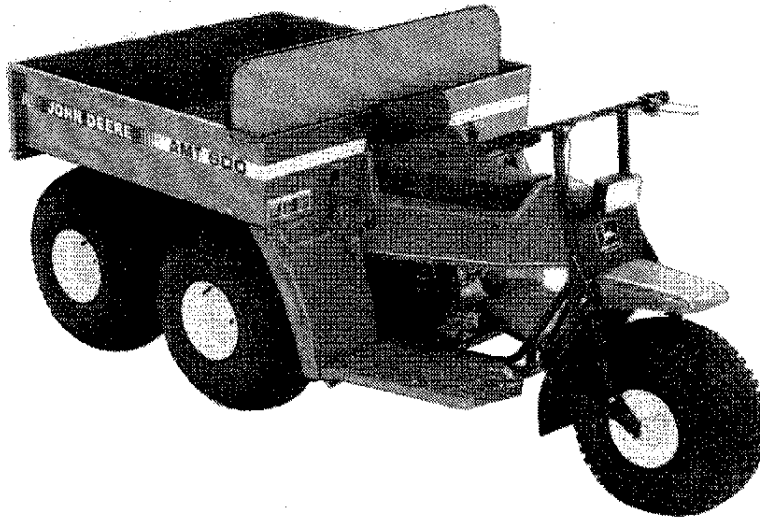

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

U18;W38899 IFC 240387

U19;JFC 4 240387

Contents

	Page		Page
Safety	1	Service/Before Each Use	
Controls	11	Check Engine Oil Level	37
Prestarting Checks	12	Cleaning Blower Screen	38
Operating the Engine		Service/Break-In	
Starting the Engine	13	Changing Engine Oil	39
Warming and Idling Engine	14	Checking Belt Tension	39
Stopping Engine	15	Checking Drive Chain Tension	39
Driving the Transporter		Tightening Lug Nuts	40
Before Driving	16	Service/10 Hours	41
Operating Brake Lever	16	Service/25 Hours	
Using Park Brake	17	Checking Tire Pressure	42
Using Gear Shift Lever	17	Checking and Cleaning Pre-Cleaner and Air Cleaner Element	42
Using Differential Lock Pedal	18	Service/50 Hours	
Using Throttle Lever	18	Cleaning Drive Clutch	44
Using Headlight Switch	18	Checking Drive Chain Tension	44
No Driving on Roads	19	Checking Belt Tension	45
Operating Tips	19	Adjusting Belt Tension	45
Using Correct Tires and Inflation	20	Checking and Cleaning Battery	46
Reading Terrain	20	Checking Electrolyte Level	47
Climbing or Descending a Hill	21	Service/100 Hours	
Traversing a Slope	22	Changing Engine Oil	48
Riding Through Water	22	Checking Transaxle Oil	48
Carrying a Load	23	Lubricating Driven Pulley	49
Distributing a Load	23	Lubricating Drive Chain	50
Towing a Load	23	Checking Spark Plug	50
Transporting	24	Service/Yearly	
Fuels and Lubricants	25	Cleaning Battery	51
Checkout Procedure	28	Cleaning Engine Fins	52
Machine Diagnosis	30	Testing Safety Systems	53
Periodic Service		Service/As Necessary	
Additional Service Information	34	Charging Battery	54
Servicing Transporter Safely	34	Jump-Starting Engine	55
Maintaining Transporter Regularly	34	Replacing Headlight	56
Using Service Records	35	Adjusting Headlight	56
Before Each Use	35	Replacing Drive Belt	57
Break-In	35	Adjusting Drive Chain Tension	58
10 Hours	35	Service Tires Safely	59
25 Hours	36	Storage	60
50 Hours	36	Crime Prevention Tips	62
100 Hours	36	Assembly	64
Yearly	36	Specifications	68

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



AB6;T81389 053;ALERT 071085

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



AB6;TS187 053;SIGNAL 071085

FOLLOW SAFETY INSTRUCTIONS


Carefully read all safety messages in this manual and on your machine safety signs. Follow recommended precautions and safe operating practices.

Keep safety signs in good condition. Replace missing or damaged safety signs.



AB6;TS188 053;SIGNS 071085

TRANSPORTER SAFETY SIGNS

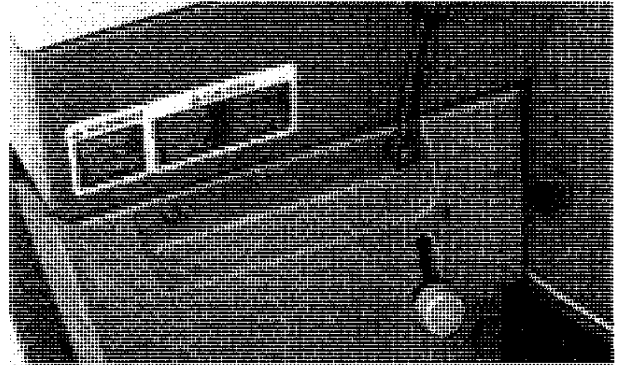

⚠ WARNING


HELP PREVENT INJURY OR DEATH FROM MACHINE OVERTURN


1. Reduce load when operating over rough or hilly terrain.
2. Reduce speed when turning or when operating around obstacles, on rough ground, or on slopes.
3. Use of a helmet is recommended when operating in rough terrain.

⚠ CAUTION

1. Read Operators Manual before operating vehicle.
2. Keep all riders off.
3. This machine intended for off road use only.
4. Keep loadguard and all shields in place.
5. Inflate tires to 5 PSI (35 kPa). Overinflation or underinflation could adversely affect control of machine.
6. The maximum pay load capacity is 600 lb. (272 kg).
7. Securely anchor all loads.
8. Stop engine before refueling.
9. Stop engine, set parking brake, and shift to neutral before dismounting.
10. Remove key if leaving vehicle unattended.

AP9;RW1218 1,RW1272 3 U18;WARN DECAL 040587

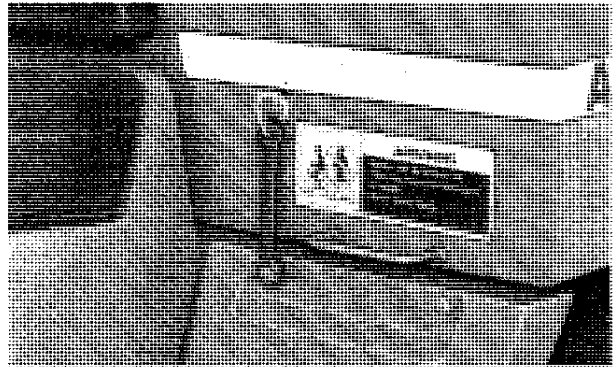




⚠ WARNING

- Riders can be thrown off. This can cause serious injury or death.
- Never carry riders.

AP9;RW1237 6,RW1237 7 U18;RIDER DECAL 080587

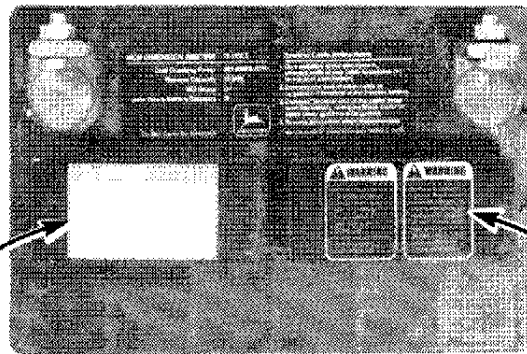

⚠ DANGER

Explosive gases. Keep sparks, flames and cigarettes away. Shield eyes and face. Follow recommended charging and jump-starting procedures. Keep vent caps tight and level. Blindness or serious injury could result from an exploding battery.

⚠ WARNING

SPARKS AND FLAMES CAN CAUSE BATTERY PACK OVERHEATING. KEEP BATTERY PACK AWAY FROM CHILDREN. DO NOT OPEN BATTERY PACK. CONTACT YOUR LOCAL FIRE DEPARTMENT FOR BATTERY PACK DISPOSAL. READ AND FOLLOW ALL INSTRUCTIONS ON BATTERY PACK LABEL.

⚠ WARNING

EXPLOSIVE GASES CAN BE RELEASED FROM BATTERY PACK. SHIELD EYES AND FACE. FOLLOW RECOMMENDED CHARGING AND JUMP-STARTING PROCEDURES. KEEP VENT CAPS TIGHT AND LEVEL. BLINDNESS OR SERIOUS INJURY COULD RESULT FROM AN EXPLODING BATTERY.


AP9;M40269 U18;ACID WARN 240387

LEARN MACHINE SAFETY

Carefully read this manual. Learn how to operate the machine and how to use the controls properly.

Do not let anyone operate this machine without proper instruction.

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

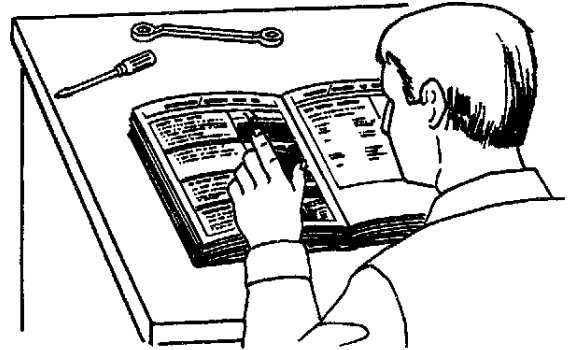


AB6;TS183 053;READ2 080785

KEEP OFF ROADWAYS

This machine intended for off road use only.

Do not operate transporter on a roadway.

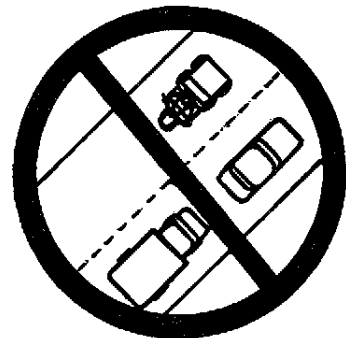

AP9;RW1218 4 U18;SAFE OPER 060187

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



AB6;TS173 053;RIDER 261184


PROTECT CHILDREN

The transporter is NOT a toy. It should be used only by operators mature enough to read, understand, and follow the instructions in this manual.

NEVER carry children in cargo area. Do NOT let children ride on transporter or any attachment.

Keep children and others away when you operate machine.

Before you back up or turn, look behind and around transporter for children.

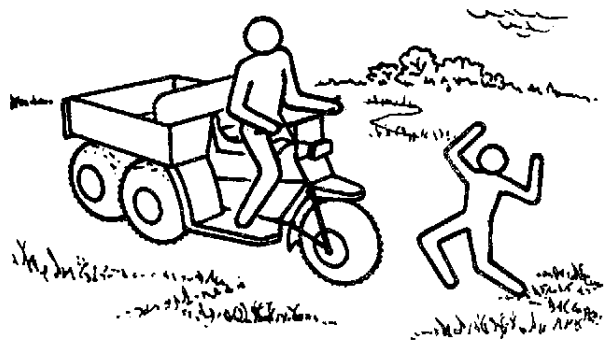

AP9;RW1218 8 U18;KEEP CHILD 060187

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com