

1518 Flex-Wing Rotary Cutter

**John Deere Welland Works
OMW40678 Issue G3
(This manual replaces OMW40678 Issue C2)**

LITHO IN U.S.A.
ENGLISH

Contents

	Page		Page
Safety	05-1		
Preparing The Tractor		Operating The Cutter	
Choosing Correct PTO Speed	10-1	Operating Safely	35-1
Matching PTO Driveline And PTO Shaft	10-1	Controls	35-2
Selecting Tractor	10-2	Check Before Operating	35-3
Positioning Drawbar	10-3	Using Safety Shields	35-4
Removing Quick-Coupler	10-3	Keeping Cutter Clean	35-5
Selecting Hydraulic Flow	10-4	Using Correct PTO Speed	35-5
Selecting Wheel Tread	10-4	Cutting Applications	35-6
		Wing Floatation	35-6
Preparing The Cutter		Checking The Slip Clutch	35-7
Inspecting Blades And Blade Holder	15-1	Using Correct Blades	35-8
Lubricating The Machine	15-2	Turning Cutter	35-8
Check Wing Blade Bolts	15-2	Adjust Cutting Height	35-9
Check Center Body Blade Bolts	15-3	Leveling the Cutter Front to Rear	35-9
Check Gear Case Oil Level	15-3	Leveling the Cutter Side to Side	35-10
Checking The Clutch	15-4	Wings	
Tightening Wheel And Wheel Support		Raising Both	35-11
Hardware	15-4	Lowering Both	35-12
Checking Tires	15-5	Raising One	35-13
Wide Drawbar Clevis	15-5	Lowering One	35-14
		Attachments	
Attaching The Cutter		Shields	
Choosing Correct PTO Speed	20-1	Front Rubber	40-1
Matching PTO Driveline And PTO Shaft		Front Chain	40-2
For 1000 RPM	20-1	Rear Rubber	40-3
Connect Independent Control Valve	20-2	Rear Chain	40-4
Attaching To Drawbar	20-3	Tires	
Connecting Hydraulic Hoses	20-4	Pneumatic	40-5
Attaching Driveline	20-5	Laminated	40-5
Connect Warning Lights	20-5	Axle Supports	40-5
		Axles	40-6
Detaching The Cutter		Pan For Blade Holder	40-7
Detaching From Drawbar	25-1	Blades	40-7
Detaching Driveline	25-2	Wide Drawbar Clevis	40-7
Disconnect Warning Lights	25-2	Storage Jack	40-8
Disconnect Independent Control Valve	25-3	Safety Chain	40-9
		Wear Shoes	40-9
Transporting	30-1	Warning Light Kit	40-10

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMW40678 G3-19-07SEP93

COPYRIGHT© 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright1993 Deere & Company

Contents

	Page		Page
Independent Control Valve	40-13	Hydraulic Cylinder Requirement	55-17
Three Function Remote Hoses	40-18	Removing Blades	55-18
Lubrication And Maintenance		Replacing Flat Blades	55-19
Lubricating Safely	45-1	Replacing Suction Blades	55-19
Observing Intervals	45-1	Install Single Blade With Pan	55-19
Alternative Lubricants	45-2	Install Single Blade Without Pan	55-20
Selecting Grease	45-2	Install Dual Blades	55-20
Selecting Gear Case Oil	45-3	Replacing Blades	55-21
Checking Gear Case Oil Level	45-3	Removing Blade Holder	55-22
Lubricating		Installing Blade Holder	55-24
Clevis	45-4	Check Gear Case Hardware	55-25
Wheel Hubs	45-4	Replacing Wear Shoes	55-26
Rear Axle Bushings	45-4	Replacing Springs Heavy Duty Suspension	55-26
Axle Support to Frame	45-4	Storage	60-1
Hitch to Mast	45-5	Crime Prevention	65-1
Wing Drivelines	45-5	Assembly	70-1
Constant Velocity Driveline	45-6	Specifications	75-1
Conventional Driveline	45-8	Index	
Checking Wing Blade Hardware	45-9		
Checking Center Body Blade Hardware	45-10		
Tightening Blade Holder Hardware	45-11		
Checking Gear Case Hardware	45-12		
Troubleshooting			
Blades	50-1		
Clutch	50-1		
Gear Case	50-2		
Driveline	50-2		
Operating	50-3		
Service			
Servicing Safely	55-1		
Inflate Tires Safely	55-2		
Inflate Tires	55-2		
Checking Bolt Torque	55-3		
Removing Splitter to Center Gear Case			
Shaft	55-4		
Driveline Lengths			
Constant Velocity Driveline	55-4		
Conventional Driveline	55-5		
Wing Driveline	55-6		
Disassemble Shielded Driveline	55-7		
Assemble Shielded Driveline	55-7		
Disassemble C/V Driveline	55-9		
Assemble C/V Driveline	55-10		
Adjusting Slip Clutch	55-11		
Clutch Components	55-12		
Disassemble Clutch	55-12		
Assemble Clutch	55-14		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

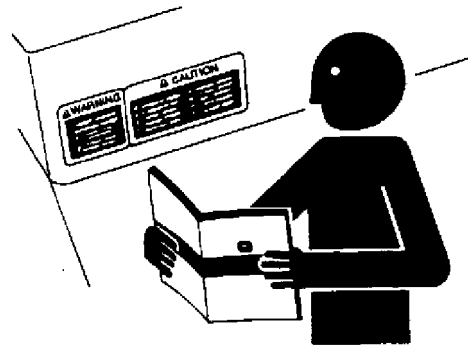

DX,READ -19-03MAR93


TS201 -UN-23AUG88



STAY CLEAR OF ROTATING BLADES

Rotating blades can cut or dismember, causing personal injury or death. Keep hands and feet from under cutter deck.

 Lower wings, disconnect PTO driveline and hydraulic hoses from tractor before performing adjustments or service work.

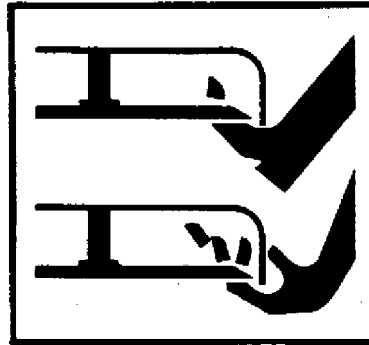

-UN-07OCT88

 
W14334

WX,3SY,L -19-30MAY89

USE FRONT AND REAR SAFETY SHIELDS


Use both front and rear safety shields to reduce the possibility of objects being thrown by the blades.

Adjustable rear shields should be kept in lowest possible position.

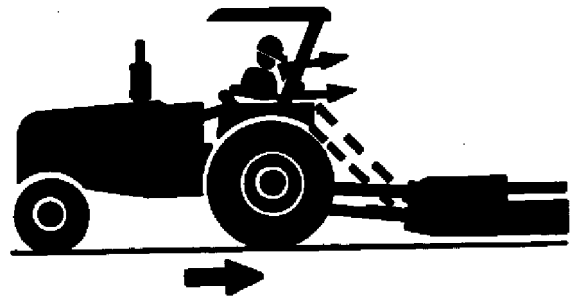

-UN-06NOV91

 W00067

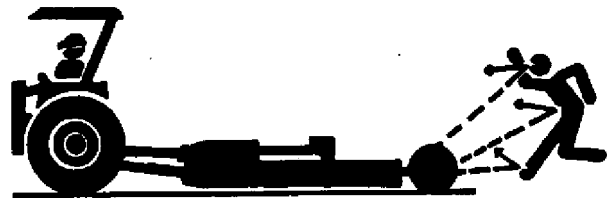

-UN-06NOV91

W00068

 
WX,1518SY,A -19-02DEC91

PROTECT BYSTANDERS

Never operate the cutter near people. Do not stand near the cutter while blades are in motion. Debris can be thrown hundreds of feet.

DO NOT allow children to operate tractor or cutter.

Operate the cutter from tractor seat only.

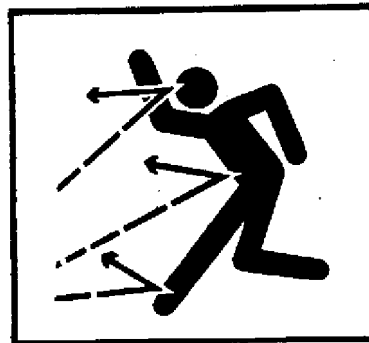

-UN-07OCT88

 
W14335

WX,3SY,F -19-12JAN88



RAISE WINGS SAFELY

Do not allow bystanders in area of machine whenever transport locks are removed.

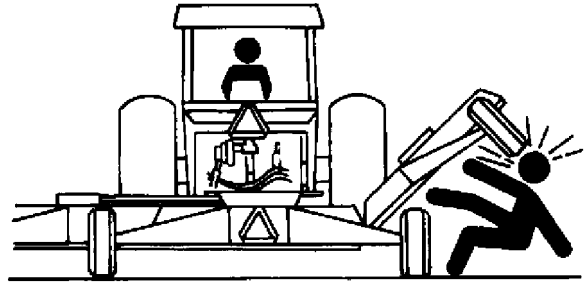


WX,1518SY,B -19-02DEC91

W14564 -UN-20MAR89

OPERATE TRACTOR AND CUTTER SAFELY

All rotary cutters are potentially dangerous machines. This rotary cutter has been designed to minimize the chance of accidents but there is no substitute for a careful operator.

 Flywheel effect of blade holder will drive tractors with transmission driven PTO's forward, even when tractor clutch is disengaged. Travel slowly near ditches, trees, or large objects. To stop, slow engine speed and apply brakes before disengaging clutch.

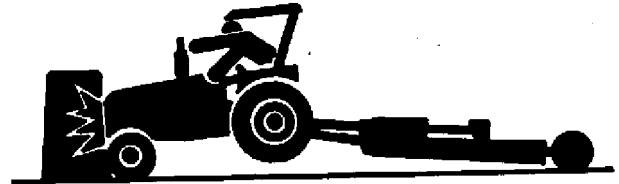


WX,1518SY,C1 -19-24JAN92

W00069 -UN-06NOV91

OPERATE WINGS SAFELY WHEN CUTTING

DO NOT operate wing section(s) when in the raised position.

 Rotating blades or objects thrown by blades may injure people or livestock.

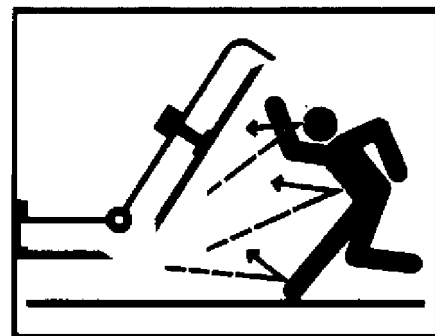

WX,1518SY,C2 -19-24JAN92

W00126 -UN-15NOV91

 


BACK UP SAFELY

First look carefully behind the cutter.

Do not operate the cutter in reverse.

With the PTO engaged, material can be discharged from the front of the cutter. This increases risk of injury to the operator from thrown objects.

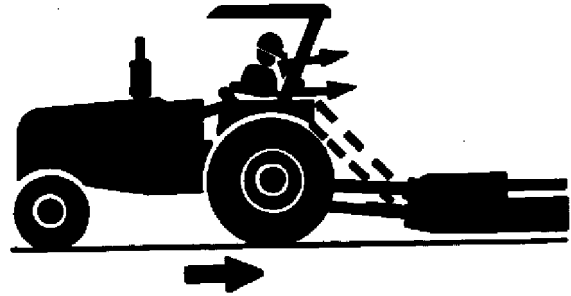

WX,1518SY,D1 -19-03FEB92

W00067 -UN-06NOV91

KEEP RIDERS OFF MACHINE

KEEP RIDERS OFF.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



WX,1518SY,E -19-02DEC91

 
W00005 -UN-06NOV91

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

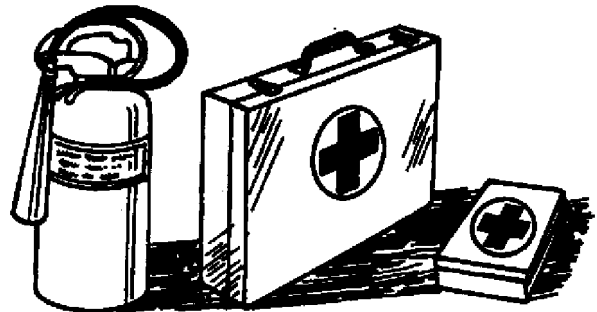

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88



 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

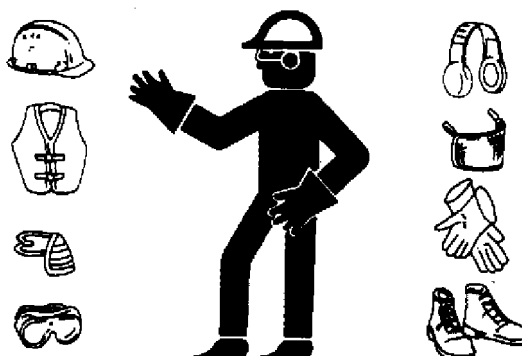

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-03MAR93


TS198 -UN-23AUG88

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

 Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

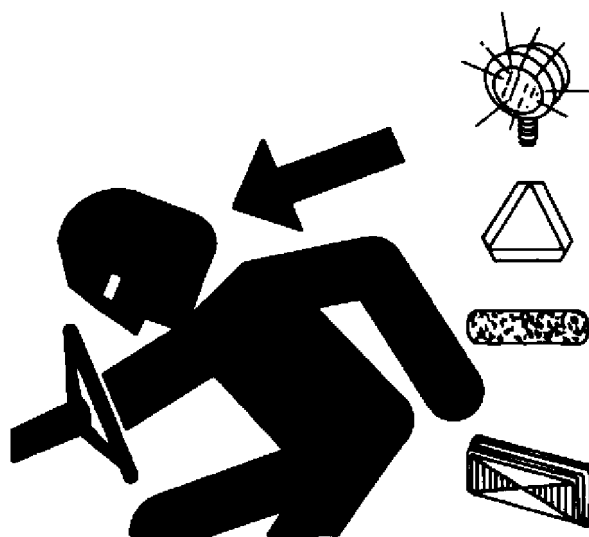

DX,FLASH -19-15MAR93

TS951 -UN-12APR90

 


USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

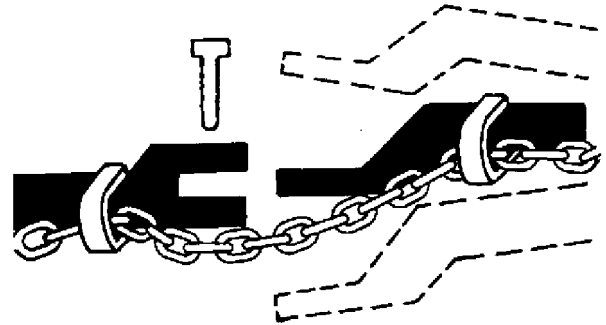

-UN-23AUG68

TS217

DX,CHAIN -19-03MAR93

TRANSPORT SAFELY

Disengage PTO driveline.

To prevent accidental lowering or falling of wings, raise wings and lock in place.

 
Raise cutter and engage transport lock.

Reflectors must be clean and in good condition.

Be aware of oncoming traffic and roadside obstructions.


Travel slowly over rough terrain to help prevent machine roll-over.

Reduce ground speed when making turns.

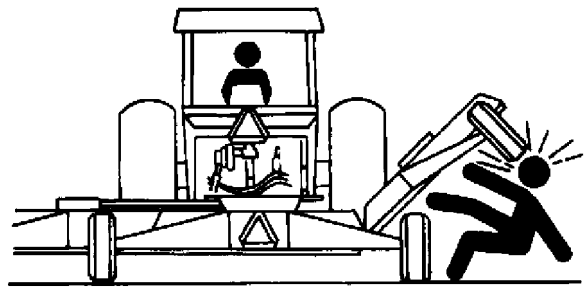

-UN-20MAR89

 W14564

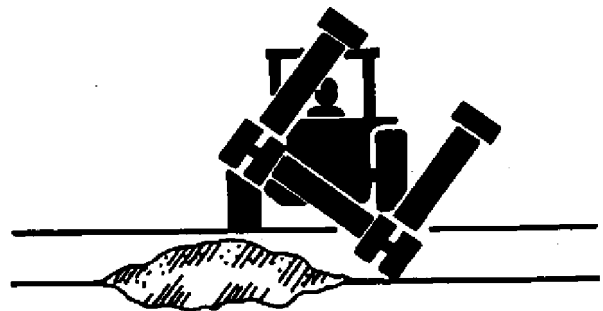

-UN-06NOV91

W00070

WX,1518SY,F1 -19-07SEP93



 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

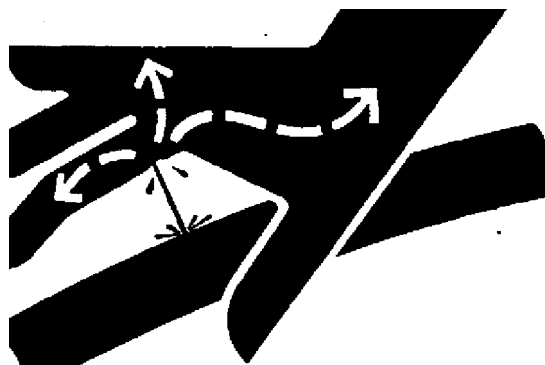

-UN-23AUG88

X9811

DX,FLUID -19-03MAR93

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com