 


430 and 460 Loaders

OPERATORS MANUAL

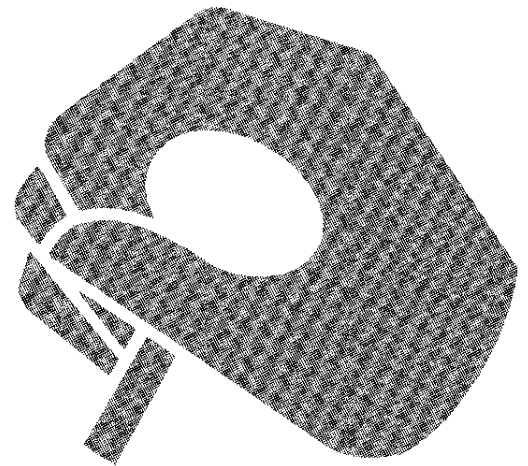

John Deere Welland Works
OMW44980 F8

LITHO IN U.S.A.
ENGLISH

Contents

	Page		Page
Safety	05-1	Avoid Injury or Death From Falling	
		Round or Large Square Bales	35-4
Prepare the Tractor		Picking up a Round Bale	35-5
Approved Tractors	10-1	Picking up a Round Bale on a Slope	35-5
Using Roll-Over Protective Structure (ROPS) ..	10-2	Transporting a Round Bale	35-6
Keep ROPS Installed Properly	10-2	Using Bucket Level Indicator	35-6
Removing Front Weights	10-3	Storing Round Bale Spear	35-7
Approved Front Tires	10-4	Leveling and Scraping Forward	35-7
Setting Front Tread Width	10-5	Leveling in Reverse	35-7
Inflating Front Tires	10-5	Carrying Material	35-8
Checking Front Wheel Hardware	10-6	Removing Material from a Pile	35-8
Approved Rear Tires	10-7	Loading Operations	35-9
Selecting Rear Tread	10-8	Digging	35-10
Tractor Ballast Requirements	10-9	Backfilling	35-10
430 Loader Required Minimum		Attaching and Detaching Attachment	35-11
Ballasting For 4300 and 4400 Tractors	10-10		
430 Loader Required Minimum		Attachments	
Ballasting For 970 and 1070 Tractors	10-11	Buckets Materials, Heavy Duty and High	
460 Loader Required Minimum		Volume	40-1
Ballasting For 4500 and 4600 Tractors	10-12	Prepare Bucket for Tines	40-2
Adding Ballast to Rear Wheels	10-12	Attach Bucket Tines	40-2
Adding Ballast to 3-Point Hitch	10-13	Assemble Forklift	40-3
		Install Backstops on Forklift	40-4
Controls		Assemble Bale Fork	40-5
Operating Control Levers	15-1	Installing Long Bale Fork Tine	40-5
Using Float	15-1	Installing Lower Tines	40-6
		4 in 1 Bucket	40-6
Detaching the Loader		Ballast Box	40-7
Prepare to Remove Loader	20-1	Ballast Box Extension	40-7
Remove Loader	20-2	Bucket Level Indicator	40-9
		Assemble Bucket Level Indicator	40-10
Attaching the Loader		Install Hood Guard Tractors without Mower ...	40-11
Prepare to Attach Loader	25-1	Install Hood Guard Tractors with Mower	40-12
Attach Loader	25-2		
Check Loader Operation	25-7		
		Lubrication and Maintenance	
Transporting		Lubricating and Maintaining Loader Safely	45-1
Carrying Loads	30-1	Observing Intervals	45-1
		Selecting Grease	45-2
Operating the Loader		Alternative and Synthetic Lubricants	45-2
Preoperating Checks	35-1	Lubricating Loader	45-3
Using Ballast Box	35-3		
Avoid Rollover Accidents	35-4		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1998
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

	Page		Page
Checking Transmission/Hydraulic Oil Level After Every 50 Hours of Use	45-3	460 Loader Specifications on 4500 and 4600 Tractors	70-5
Tighten Mounting Frame Hardware After First 10 and Every 50 Hours of Use	45-4	Record Serial Number	70-6
Check Front Weight Bracket Hardware 430 Loader on 70 Series Tractors.	45-4	CE Approval Specifications	
Troubleshooting		Declaration of Conformity	75-1
Service		CE Label	75-1
Servicing Loader Safely	55-1	Decal Locations	75-2
Keep Service Area Clean	55-2	John Deere Service Keeps You On The Job	1
Metric Bolt and Cap Screw Torque Values	55-3		
Servicing Tractor	55-4		
Avoid High-Pressure Fluids	55-6		
O-Ring Installation	55-6		
Torque Procedure for Fittings	55-7		
Hose Identification for Loader on 4000 Tractors	55-8		
Hose Identification for Loader on 4000 Tractors with Optional Third Function	55-9		
Hose Identification for Loader on 70 Series Tractor	55-10		
Check Latch Plate and Locking Lever	55-11		
Storage			
Removing the Loader	60-1		
Lubricating the Loader	60-1		
Storing the Loader	60-2		
Storing Round Bale Spear	60-2		
Crime Prevention			
Help Prevent Crime	65-1		
Record Identification Numbers	65-1		
Keep Proof of Ownership	65-1		
Park Indoors Out of Sight.	65-2		
When Parking Outdoors	65-2		
Reduce Vandalism	65-3		
Report Thefts Immediately	65-3		
Specifications			
Specifications Parameters	70-1		
Performance Chart 430 Loader/4300 and 4400 Tractors	70-1		
Performance Chart 430 Loader/970 and 1070 Tractors.	70-2		
Performance Chart 460 Loader/4500 and 4600 Tractors	70-2		
430 Loader Specifications on 4300 and 4400 Tractors	70-3		
430 Loader Specifications on 970 and 1070 Tractors	70-4		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX.ALERT -19-03MAR93-1/1

T81389 -JUN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



▲ WARNING

▲ CAUTION

DX.SIGNAL -19-03MAR93-1/1

T5187 -19-30SEP88

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

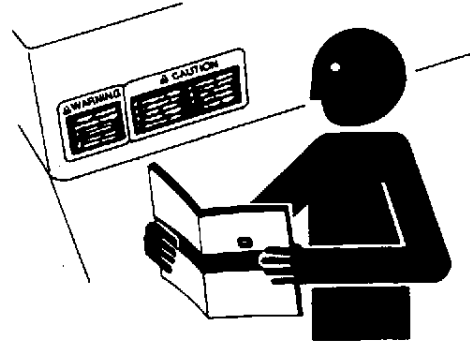

TS201 -UN-23AUG88

DX,READ -19-03MAR93-1/1


PROTECT PEOPLE AND ANIMALS

Never allow anyone to walk or work under a raised loader.


Be sure that people, livestock, or pets are not standing near the machine while in operation.

Do not use the loader as a work platform.

Do not lift or carry anyone on loader, in bucket or on any attachment.

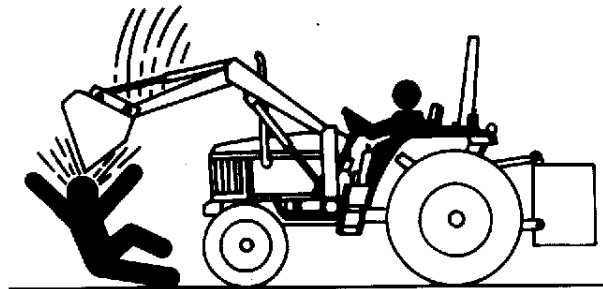

W01140 -UN-12AUG93

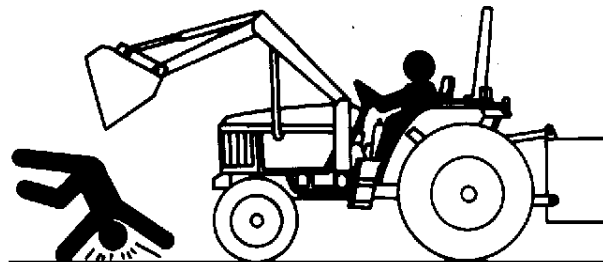 


W01150 -UN-12AUG93

WX,440,SY,5 -19-23AUG93-1/1

HELP PREVENT ROLL-OVERS

Install required rear ballast on tractor for stability.

 Use widest rear wheel tread setting (A) to maximize stability.

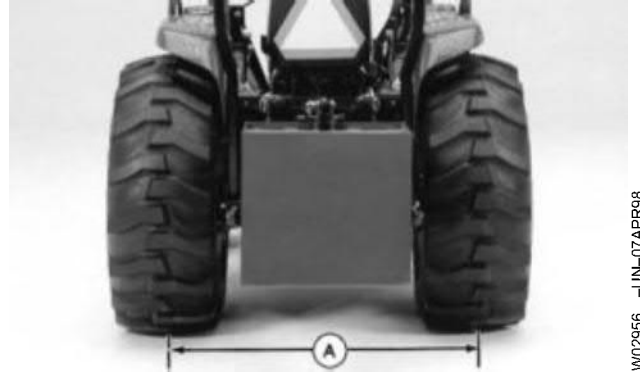


W02956 -UN-07APR98

WX,05,WX86 -19-17DEC97-1/1

AVOID INJURY OR DEATH FROM ROLLOVER ACCIDENTS

To help prevent rollovers:

- Be careful when operating on a slope.
- Avoid holes, ditches and obstructions which may cause tractor and loader to tip over.
- Balance loads so weight is evenly distributed and load is stable.
- Carry loads close to the ground to aid visibility and lower center of gravity.
- Know capacity of loader. Do not overload.
- Reduce speed before turning. Avoid sharp turns.

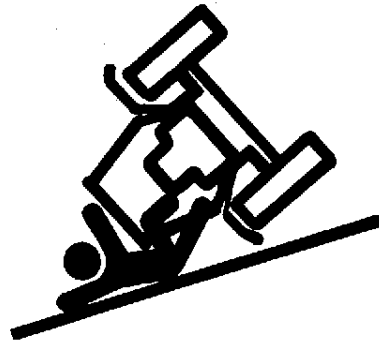

RW13093 -UN-07DEC88

 
WX,520,SY,2 -19-21FEB92-1/1

AVOID POWER LINES

Serious injury or death can result if tractor or loader contacts electrical lines.

Check lift height clearance before raising loader.

Do not leave the operator's seat if any part of tractor or loader contacts lines.

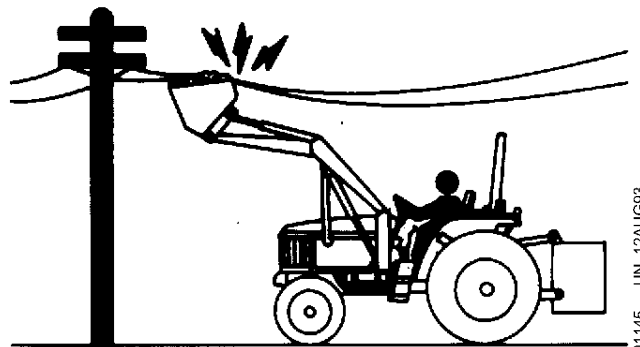


W01145 -UN-12AUG93

WX,440,SY,6 -19-23AUG93-1/1

DIG SAFELY

Before digging, check for location of underground cables, gas lines and water mains.

Do not leave the operator's seat if any part of tractor or loader contacts lines.

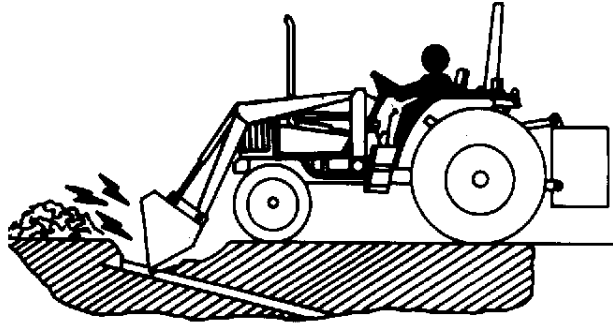

W01149 -UN-12AUG93

WX,440,SY,7 -19-23AUG93-1/1

DETACH LOADER SAFELY

Detach loader on a hard level surface.

Before disconnecting hydraulic hoses relieve all hydraulic pressure.




W14000 -UN-05OCT88

WX,80,SY,I -19-30MAY89-1/1

KEEP RIDERS OFF MACHINE

Only allow the operator on the tractor. Keep all riders off.

Riders on tractor or machine are subject to injury such as being struck by foreign objects and/or being thrown off. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

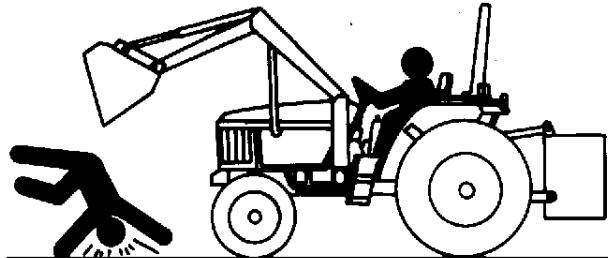

W01150 -UN-12AUG93

 
WX,440,SY,2 -19-23AUG93-1/1

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

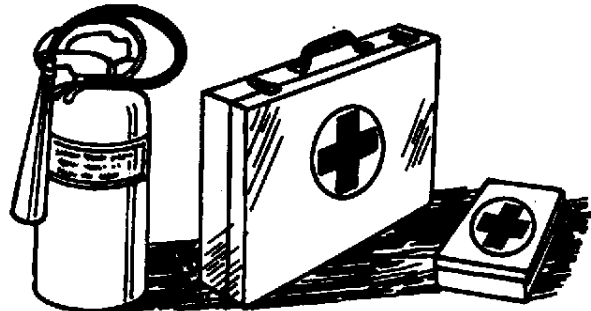


TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93-1/1

USE SEAT BELT PROPERLY

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS or cab.

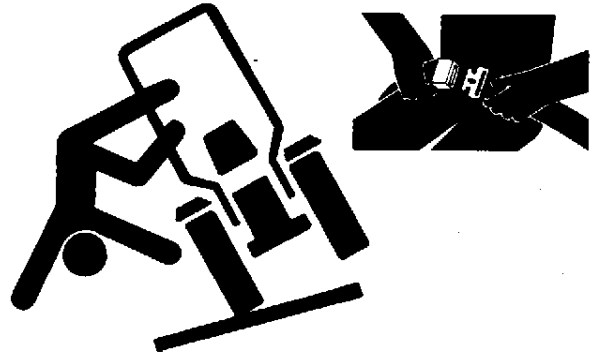

DX,ROPS1 -19-03MAR93-1/1

TS205 -UN-23AUG88

CARRY MATERIALS SAFELY

Be sure anyone operating the loader is aware of safe operation and potential hazards.

Refer to the tractor Operator's Manual for safe operational practices.

Do not exceed lift capacity of loader.

Be sure tractor is ballasted correctly.

Carry load low at all times.

If tractor is equipped with 4-WD, be sure it is engaged during loader operation.

Stop loader gradually when lowering or lifting loads.


To help prevent loss of control, do not use "FLOAT" position to lower loader.

DO NOT HANDLE round or large square bales unless the loader is equipped with approved bale handling attachment and tractor has required rear ballast to handle bales.

Avoid handling loose or shiftable loads.

Reduce tractor ground speed when traveling over rough ground or when making turns.

Drive slowly through gates and doors.

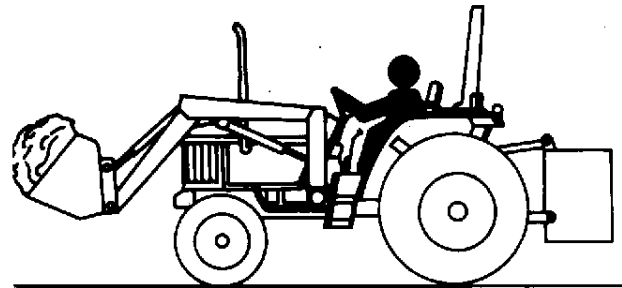

W01146 -UN-12AUG93

WX,05,WX87 -19-17DEC97-1/1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com