

**6610, 6710,
6810 and 6910
Self-Propelled
Forage Harvesters**

**John Deere Werke Zweibrücken
OMZ92152 Issue C3**

North American Edition

Printed in Germany

ENGLISCH

Contents

	Page		Page
Identification View	00-1	Manual Kernel Processor Roll Clearance . . .	20-20
Safety	05-1	Lighting System and Signals	
Safety Decals	10-1	Parking Lights/Low Beam Headlights	25-1
Controls and Instruments		High Beam Headlights	25-1
General View	15-1	Turn Signals	25-2
Switch Console	15-2	Work Lights	25-4
Multi-Function Lever	15-5	Hazard Warning Lights	25-4
Corner Post	15-6	Indicator Light Test	25-5
Roof Switch Console	15-7	Operator's Cab	
Roof Console	15-8	Cab Door	30-1
Automatic Function Control	15-9	Operator's Seat	30-1
Steering Column	15-10	Lumbar Support	30-2
Switch Console — Functions	15-11	Operator's Seat Safety Switch	30-2
Multi-Function Lever — Functions	15-16	Left-Hand Armrest	30-2
Roof Switch Console — Functions	15-18	Right-Hand Armrest	30-3
Steering — Functions	15-19	Ashtray	30-4
Warning Devices and Monitors		Passenger Seat	30-4
Indicator Lights I	20-1	Storage Compartment for Operator's	
Indicator Lights II	20-4	Manuals	30-5
Fuel Gauge	20-7	Cooling Compartment	30-5
Coolant Temperature Gauge	20-7	Steering Column	30-6
Automatic Functions Control Lights	20-7	Foot Brakes	30-7
Infotrak Monitor	20-8	Parking Brake	30-7
Cutterhead Alarm Speed	20-10	Cab Side Window	30-7
SERVICE Information	20-10	Sun Visor	30-8
Automatic Function Control	20-11	Inside Mirror	30-8
Burnishing Electromagnetic Clutch	20-12	Outside Mirror	30-8
Sharpening Cycles	20-13	Heater	30-9
Automatic Knife Sharpening	20-14	Adjustable Air Louvers	30-10
Sharpening Stone Home Position		Interior Lighting	30-11
(Manual)	20-16	Digital Clock	30-11
Automatic Stationary Knife Adjustment	20-16	Radio and Citizen Band	30-12
Manual Stationary Knife Adjustment	20-18	Pre-Starting Checks	
Kernel Processor Roll Clearance	20-19	Daily Checks	35-1
Automatic Kernel Processor Roll		Engine Oil Level	35-1
Clearance	20-20	Hydraulic Oil Level	35-1
		In Winter	35-2
		Fuel Level	35-2

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMZ92152 C3-19-16APR93

COPYRIGHT© 1993
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Tires	35-2	Cold Weather Starting Aids	55-5
Hydrostatic Oil Level	35-3	Side Window Wipers	55-5
Fuel System	35-3	Wheel Spacer	55-6
Lubricating Forage Harvester	35-3	Second Spout Work Light	55-6
Checks in Operator's Cab	35-4	Muffler Extension	55-6
		Recirculating Screens	55-7
		Lateral Augers	55-7
Operating the Engine		Attaching and Detaching Harvesting Units	
Engine Break-In	40-1	Attaching Sequence	60-1
Starting the Engine	40-2	Connecting Harvesting Unit Drive Shaft	60-3
Engine Oil Pressure Indicator Light	40-4		
Warming up Engine	40-4	Preparations and Field Operation	
Engine Idle	40-4	Preparations for Harvesting Grass	65-1
Ether Starting Aid	40-5	Preparations for Harvesting Corn	65-1
Coolant Heater	40-8	Preparations for Harvesting Ear Corn	
Slave Battery	40-9	Silage	65-1
Operating in Tropical Conditions	40-9	Preparations for Harvesting Alfalfa	65-1
Stopping the Engine	40-10	Optimum Harvesting Performance	65-2
Cold Weather Operation	40-10	Field Operation of Forage Harvester	65-2
		Reverser Operation	65-6
		Harvesting Unit Float System	65-7
Driving and Transporting Forage Harvester		Feeding System	
Driving the Forage Harvester	45-1	Electromagnetic Clutch	70-1
Releasing Parking Brake	45-1	Cutterhead Speed Sending Unit	70-3
Operating Foot Brakes	45-2	Length-of-Cut Transmission	70-3
Engaging a Gear	45-2	Adjusting Length of Cut	70-4
Adjusting Engine Speed	45-2	Harvesting Unit Speed	70-4
Raising Harvesting Unit	45-3	Feed Roll Slip Clutch	70-5
Forward and Reverse Travel	45-3	Length-of-Cut Transmission Service	70-5
Travel Speed	45-4	Feed Roll Drive	70-6
Hydrostatic System	45-5	Wear Plates	70-7
Four Wheel Drive	45-6	Adjusting Feed Roll Springs	70-8
Transport Information	45-6	Opening Feed Roll Channel	70-8
		Smooth Roll Scraper	70-9
		Feed Roll Channel Safety Switch	70-10
		Hydraulic Reverser Motor	70-11
		Troubleshooting — Feeding System	70-12
Wheels and Ballast		Metal Detector	
Tire Maintenance	50-1	Metal Detector Operation	75-1
Wheel Bolts and Nuts	50-2	Operating Metal Detector	75-2
Mounting Tires	50-3	Operating Forage Harvester without Metal	
Tires	50-4	Detector	75-3
Changing Tires	50-4	When Ferrous Metal is Detected	75-4
Tire Pressures	50-5	Adjusting Locking Pawl	75-5
Ballast	50-5	Metal Detector Test	75-6
Front Wheel Tread	50-8	Relay and Electronic Box	75-8
		Test Charts	75-12
Harvesting Units			
Pickup	55-1		
Row-Crop Units	55-1		
Corn Heads	55-3		
Kernel Processor	55-3		
Power Chute	55-4		
Power Rear Wheel Drive	55-4		
Hydraulic Outlet	55-4		

Continued on next page

Contents

	Page		Page
Troubleshooting — Metal Detector	75-14	Service and Operation	86-4
Cutterhead and Drive		Discharge	
Main Clutch	80-2	Blower and Discharge Spout	90-1
Main Drive Belt	80-4	Blower Bottom	90-1
Replacing Main Drive Belt	80-5	Replacing Wear Plate	90-1
Cutterhead Knives	80-8	Adjusting Blower Paddles	90-6
Replacing Partial Set of Knives	80-9	Adjusting Deflecting Edge	90-6
Replacing Complete Set of Knives	80-10	Spout Base Service Covers	90-6
Replacing Clamping Bar	80-12	Spout Service Opening	90-7
Replacing Threaded Bar	80-12	Spout Worm Gear and Ring Gear	90-8
Removing/Sliding Back Knife	80-13		
Knife Torque	80-13	Fuel, Lubricants, Coolant and Capacities	
Preparations for Sharpening Procedure	80-13	Fuel	95-1
Manual Knife Sharpening	80-14	Engine Oil	95-2
Automatic Knife Sharpening Device	80-18	Engine Coolant	95-4
Replacing Sharpening Stone	80-20	Coolant Conditioner	95-4
Stationary Knife	80-24	Gear Case Oil	95-5
Manual Stationary Knife Adjustment	80-24	Brake Fluid	95-9
Checking Stationary Knife	80-29	Grease	95-9
Removing Stationary Knife	80-30		
Installing Stationary Knife	80-31	Lubrication, Periodic Service	
Eliminating End Play of Adjusting Spindle	80-33	Break-In Service	100-8
Adjusting Bottom Band	80-34	Service Intervals	100-8
Adjusting Outlet Band	80-36	Every 10 Operating Hours	100-9
Cutterhead Service Cover	80-37	After the First 100 Operating Hours	100-9
Transition Chute	80-38	Every 250 Operating Hours	100-10
Recirculating Screens	80-39	Every 500 Operating Hours	100-10
Removing Cutterhead with Harvesting Unit	80-43	Every 1000 Operating Hours	100-11
Installing Cutterhead with Harvesting Unit	80-47	Every 1500 Operating Hours	100-11
Troubleshooting — Main Drive	80-48	Every 2000 Operating Hours	100-11
Troubleshooting — Cutterhead	80-49	As Required	100-11
Troubleshooting — Knife Sharpener	80-50	Every Year	100-12
Troubleshooting — Stationary Knife	80-52	Every 2 Years	100-12
		V-Belts	100-12
Kernel Processor			
Installing Kernel Processor	85-1	Service — Engine	
Preparing Kernel Processor	85-4	Engine Access	105-1
Attaching Kernel Processor	85-5	Engine Compartment	105-1
Drive Belt	85-7	Adjusting Engine Valve Tappets	105-2
Breaking-In Kernel Processor	85-9	Rocker Arm Cover Ventilation	105-2
Field Operation	85-10	Checking Engine Crankcase Oil Level	105-4
Kernel Processor Service	85-10	Changing Engine Oil and Filter	105-5
Troubleshooting — Kernel Processor	85-15	Service — Fuel System	105-9
		Fuel Tank Filler Neck	105-10
Power Chute		Fuel Tank Water Trap	105-11
Installing Power Chute	86-1	Fuel System, John Deere Engine	105-12
Preparing Power Chute	86-2	Fuel System, Cummins Engine	105-13
Attaching Power Chute	86-2	Fuel Shut-Off Valve	105-13
Drive Belts	86-4	Water Trap, John Deere Engine	105-14
		Fuel Filter, John Deere Engine	105-15

Continued on next page

Contents

	Page		Page
Checking Fuel Injection Nozzles	105-15	Temperature and Pressure Sending Units . . .	115-8
Bleeding Fuel System	105-16	Service — Ground Speed Drive	
Fuel Filter, Cummins Engine	105-18	Brake System	120-1
Bleed Line and Valve	105-19	Brake Fluid Reservoir	120-2
Fuel Shut-Off Valve	105-19	Adjusting Foot Brakes	120-2
Rotary/Stationary Radiator Screen	105-19	Parking Brake	120-2
Flushing Cooling System	105-23	Hydrostatic Drive Components	120-3
Replacing Coolant Conditioner	105-28	Oil Cooler	120-4
Drive Belts	105-30	Oil and Filter Change	120-4
Air Intake System	105-33	Hydrostatic Drive Adjusting Cable	120-4
Air Intake Prefilter Screen	105-35	Transmission	120-5
Air Cleaner	105-35	Final Drives	120-5
Turbocharger	105-40	Front Axle	120-7
Vibration Damper	105-41	Rear Axle Toe-In	120-7
		Rear Wheel Tread	120-8
		Steering System Components	120-10
Service — Electrical System		Service — Air Conditioning System, Heater	
Specifications	110-1	Air Conditioning System Components	125-1
Batteries	110-1	Heater Components	125-2
Alternators	110-4	Operating Air Conditioning System	125-4
Starting Motor	110-5	Compressor	125-5
Access to Fuse Board	110-6	Refrigerant Level	125-5
Fuse Tester	110-7	Low Pressure Switch	125-6
Access to Circuit Boards	110-8	High Pressure Switch	125-6
Access to Electronic Control Unit	110-9	Cleaning Condenser	125-7
Access to Relay and Diode Board	110-10	Cab Filter	125-7
Sockets	110-10	Air Intake Opening	125-9
Electronic System Boards	110-11	Condensed Water Drain Hose	125-9
Fuse Board — Fuses	110-12		
Fuse Board — Relays	110-14	Storage	
Relay and Diode Board	110-15	After the Season	130-1
Solenoids	110-16	Removing Harvester from Storage	130-3
Electronic System Operation	110-20		
Error Codes	110-27	Crime Prevention Tips	135-1
Work Lights	110-35		
Headlights	110-37	Specifications	
Clearance and Turn Signal Lights, Front . . .	110-37	Engine	140-3
Tail, Stop and Turn Signal Lights, Rear . . .	110-38	Dimensions	140-8
Dome Light	110-38	Torques	140-9
Switch Lighting	110-38		
Indicator Light Bulbs	110-39	Serial Numbers	
		Serial Number Plates	145-1
Service — Hydraulic System		Product Identification Number	145-1
Pressure Relief Valve	115-1	Limited Battery Warranty	145-5
System Operation	115-2		
Accumulator	115-3	John Deere Service Literature Available	
Hydraulic Components — Neutral Oil			
Flow	115-4	Index	
Draining Hydraulic Oil	115-7		
Replacing Hydraulic Oil Filter	115-7		
Refilling Hydraulic Oil	115-8		

Identification View



ZX004524 -UN-24MAR95

ZX 004524

ZX.OMUSFH,TYP -19-01JAN93

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

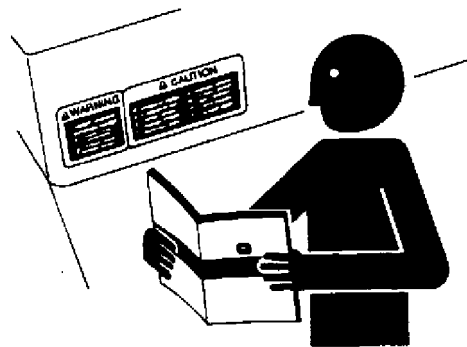

DX,READ -19-03MAR93

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88




PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

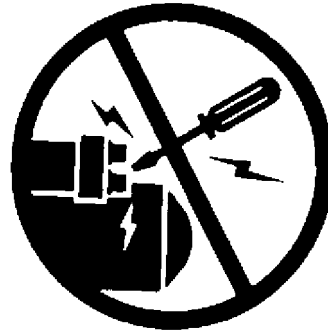

DX,BYPAS1 -19-03MAR93


TS177 -UN-11JAN89

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

 Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

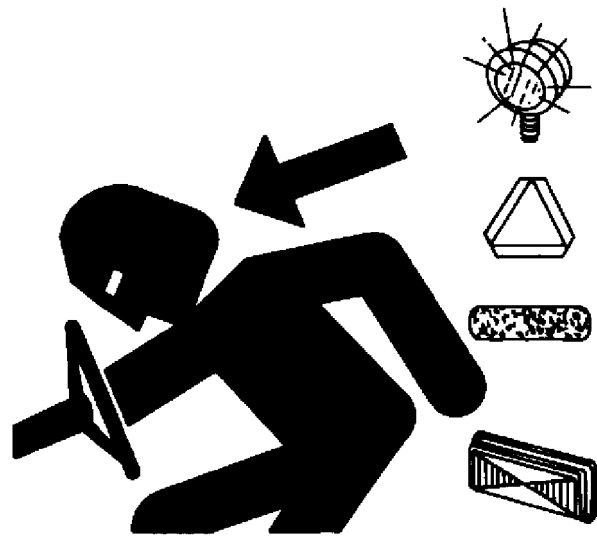

DX,FLASH -19-15MAR93

TS951 -UN-12APR90

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



DX,FIRE1 -19-03MAR93

TS202 -UN-23AUG88

 


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

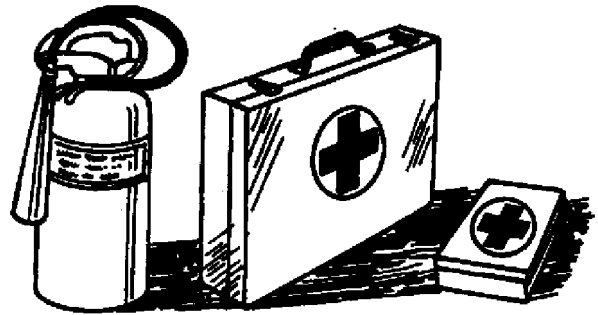

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88

HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-16APR92

TS1356 -UN-18MAR92

 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

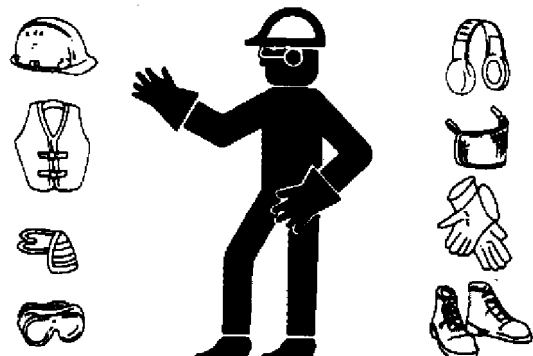

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88



STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.




DX,STORE -19-03MAR93

TS219 -UN-23AUG68

MOUNT AND DISMOUNT SAFELY

 Use handrail when mounting or dismounting the harvester.

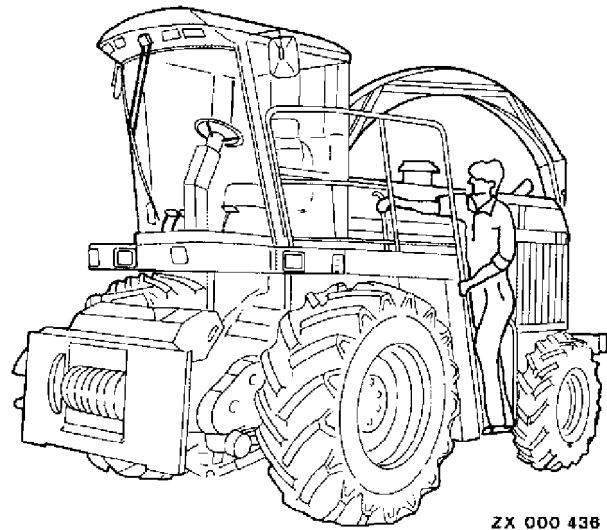

ZX 000 436

ZX,HANDLE -19-01OCT91

ZX000436 -UN-06APR95

OPERATE FORAGE HARVESTER SAFELY

All machinery should only be operated by persons who have been properly instructed.

Never stand in the path of discharge spout while cutterhead and fan are turning.

Never open cutterhead or fan housing doors while cutterhead is turning.

Always operate machine at rated engine speed.



ZX,CAUTIONUS -19-01MAR93

TS263 -UN-23AUG68



KEEP RIDERS OFF THE MACHINE

Only allow the operator and one rider in the operator's station.

Other riders are subject to injury such as being thrown off the machine and obstruct the operator's view resulting in the machine being operated in an unsafe manner.

One rider is permitted, since the machine is equipped with a factory-approved passenger seat.



-UN-23AUG68
TS253

ZX,PASSENGERUS -19-01MAR93



DRIVING THE FORAGE HARVESTER

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.

 
Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope.

Attach harvesting units and other implements to forage harvester with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the forage harvester swings out. Attachments and ground conditions affect the driving characteristics of the harvester.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the forage harvester to tip, particularly on hillsides.

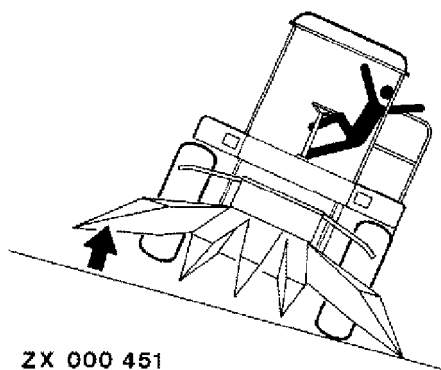

ZX 000 451

ZX000451 -JUN-05APR95

 
ZX,DRIVE -19-02OCT91

GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

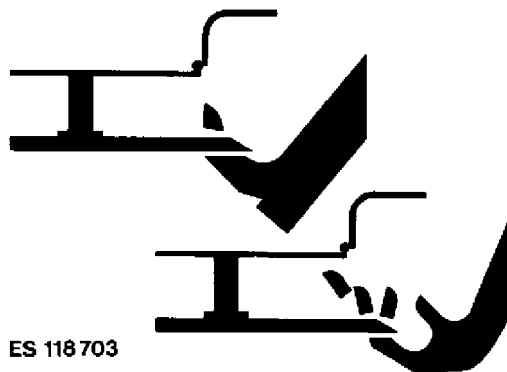

ES 118 703

ES118703 -JUN-21MAR95

 
FX,DEVICE -19-04DEC90



STAY CLEAR OF HARVESTING UNIT

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation.

Before servicing or unclogging machine, always disengage main clutch, shut off engine and remove ignition key. Wait until all moving parts have stopped.



ZX,CUT -19-01JAN93

ES118704 -UN-

KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on harvesting unit unless main clutch is disengaged, engine shut off and key removed.

Everyone must be clear of the forage harvester before starting the engine.




FX,KNIFE -19-21DEC90

-UN-23AUG88

TS254

AVOID ENTANGLEMENT

 To avoid entanglement, do not feed crop into machine by hand or attempt to manually unplug machine while it is running. The feed rolls can feed crop material in faster than you can release your grip on the material.

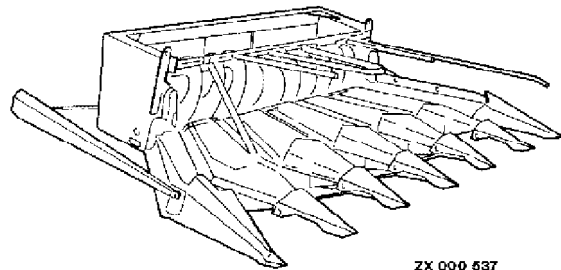

ZX 000 537


ZX,FEEDROLL -19-04DEC90

-UN-03APR95

ZX000637

TRANSPORT WITH HARVESTING UNIT INSTALLED

 Before driving forage harvester on public roads, harvesting unit must be raised. It must not, however, obstruct the operator's view of the road.

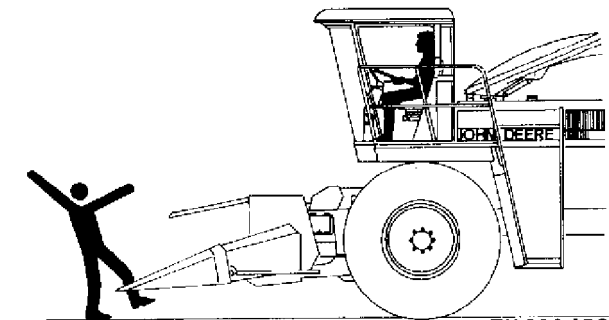

ZX 000452

ZX,HEADERUS -19-01MAR93


-UN-03APR95

ZX000452



BALLASTING FOR SAFE GROUND CONTACT

 Operating, steering and braking performance of forage harvester can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the harvester at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

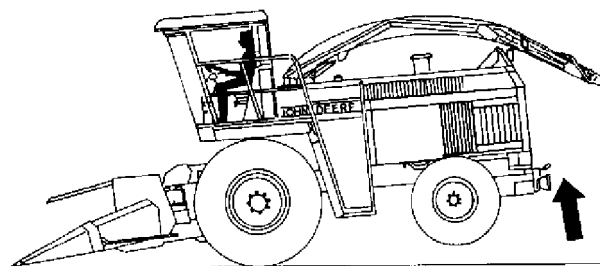

ZX 000 453

ZX,WEIGHT -19-02OCT91


ZX000453 -JUN-03APR95

AVOID POWER LINES

If radio aerial and CB aerial (optional) are not secured in transport position before driving on public roads, they may come into contact with low-hanging electrical cables. This could result in the operator suffering a severe electrical shock.

To avoid electrical shock, no portion of the machine should be higher than 4 m (13 ft).

 Before transporting machine, lower aerial or remove it.

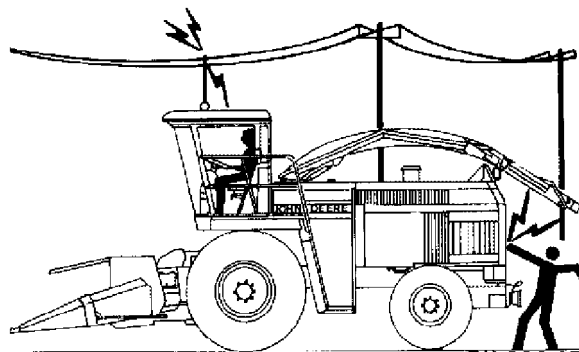

ZX 000 454

ZX,ANTENNAUS -19-01MAR93

ZX000454 -JUN-03APR95



 
PARKING AND LEAVING THE FORAGE HARVESTER

Lower harvesting unit to the ground.

Before leaving the forage harvester, disengage main clutch and shut off engine. Move gear shift lever to neutral, apply parking brake, remove key and lock the operator's cab.


Never leave forage harvester unattended as long as engine is running.

Never leave the operator's cab when driving.

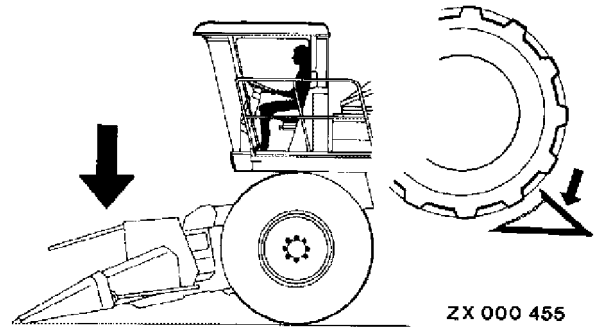

-UN-03APR95

 ZX000455

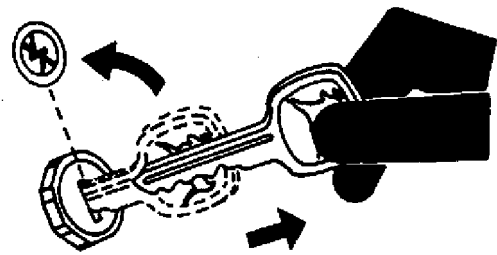

-UN-24MAY89


TS230

ZX_PARKUS -19-01JAN93

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

 If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

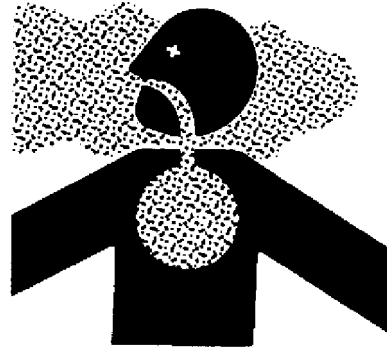

-UN-23AUG88

TS220

DX,AIR -19-04JUN90



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.




DX,SERV -19-03MAR93

TS218 -UN-23AUG88

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

 Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

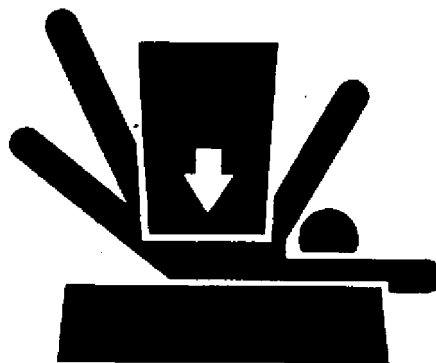


DX,LOWER -19-04JUN90

TS229 -UN-23AUG88



RETORQUE WHEEL NUTS

 Retorque wheel nuts as specified in Sections "Wheels and Ballast" and "Lubrication, Periodic Services". Failure to do this could result in a wheel falling off during operation, causing the machine to tip over with serious injury to the operator and extensive damage to the machine.

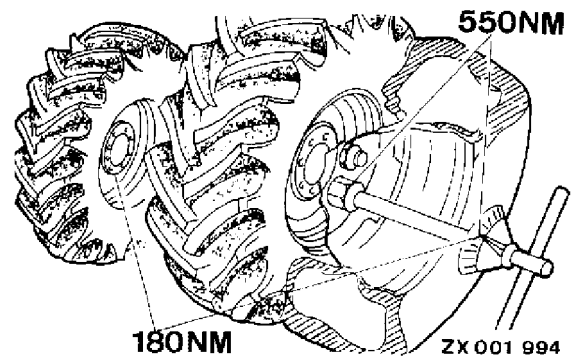

ZX,NUTS -19-11MAY92

-UN-03APR95
ZX001994

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

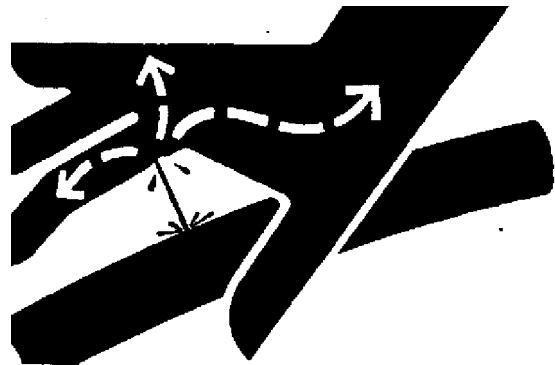

DX,FLUID -19-03MAR93

-UN-23AUG88
X9811

SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



DX,RCAP -19-04JUN90

-UN-23AUG88
T5281



DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

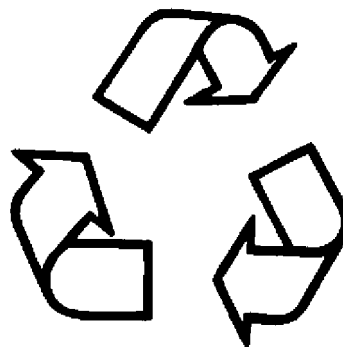

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com